




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THOMSON 28DG16ET. You'll find the answers to all your questions on the THOMSON 28DG16ET in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual THOMSON 28DG16ET
User guide THOMSON 28DG16ET
Operating instructions THOMSON 28DG16ET
Instructions for use THOMSON 28DG16ET
Instruction manual THOMSON 28DG16ET

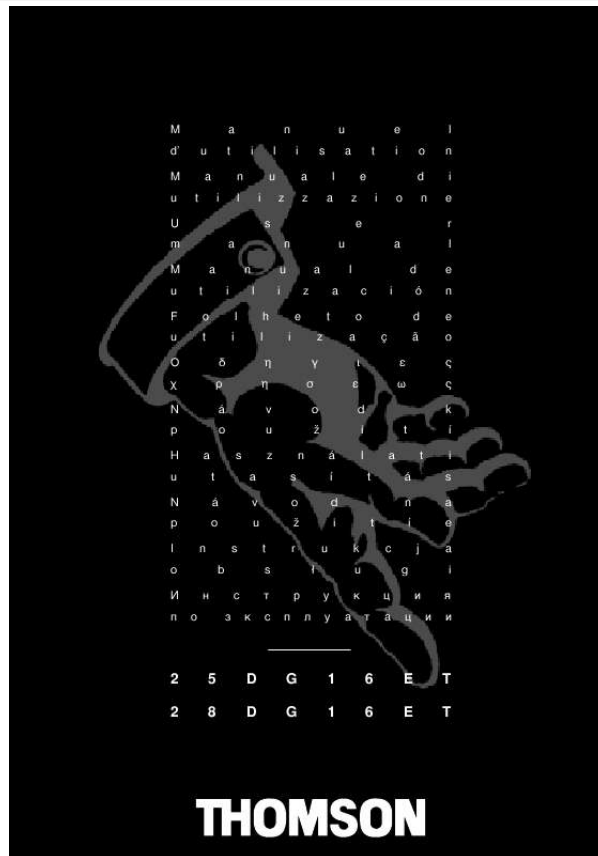

[You're reading an excerpt. Click here to read official THOMSON 28DG16ET user guide](http://yourpdfguides.com/dref/2178376)
<http://yourpdfguides.com/dref/2178376>

Manual abstract:

If you place your TV set in a special piece of furniture, make sure there is enough space for unhindered air circulation. Do not place the TV set in the close vicinity of a heater. The TV set has been designed for use in dry rooms. Should you use it, in exceptional circumstances in the open air (example: on the balcony, in the veranda or tent), you must absolutely protect it against moisture (dew, rain, splash water). Before switching on a cold TV set in a warm room, you should wait until any condensation in the screen has dried by itself. Maximum ambient temperature: 35°C Maximum humidity: 85% By the end of your TV evening or when away from home for a longer period, we recommend that you turn off the TV set with the On/Off-switch. The mains plug must be easily accessible. In the following cases, we recommend that you pull out the mains connector: 1. During a thunderstorm. In such a case, it is advisable that you also disconnect the TV set from the aerial socket.

2. When odour or smoke emanates from the set. Never attempt to open your TV set yourself. Further information: The TV set shielding is sufficient to prevent X-radiation to the exterior. Any operation performed by a non skilled person, change of high voltage or replacement of the picture tube by a model not complying with the manufacturer specification are likely to cause considerable increase in X-radiation.

A TV set modified in such a way no longer complies with the manufacturers' specification and must not be used. About cleaning The screen is to be cleaned with liquid glass cleaners. : Never use abrasive products. : Clean the cabinet with a soft cloth soaked with neutral cleaner. Do not use solvents, such as white spirit or alcohol-based cleaning products since they may damage your television.

: At regular intervals, clean the ventilation grids at the rear of the TV set. About degaussing The terrestrial magnetic field may have an influence on your TV set. This influence is revealed by the coloured spots, which appear on the screen. Should this be the case: : Turn the equipment off by means of the On/Off-switch. : Wait about one hour before switching the set on again. This procedure performs automatic degaussing of the screen. Should there still be coloured spots on the screen, repeat the operation. The pages of this publication are printed on recycled paper. 1 GB About the switch Contents Using the remote control and fitting the batteries. GB How to call up a menu and how to select a function, a setting or an option.

Page 4 Page 5 About the switch

.
.

. 1 About safety

.
.

1 About cleaning

.

. 1 About degaussing

.
.

. 1 Basic connections

.
.

. 3 Remote control

.

. 4 Navigation principles

.
.

. 5 Calling up the INSTALLATION MAIN MENU

.
.

5 Calling up the SUMMARY

. . . 5 Calling up a Menu

.
.

. . 5 Navigating within the Menus

. . . 5 Installing your television for the first time

.
.

. 6 Automatic installation

.
.

7 Programme organisation

. 8 Manual programming

.

.....	. 9 Personal settings
.....
..... 10 Preferences
.....
..... 11 Instructions for Use Installation About this manual .
.....
.....
.....	... 1 Daily viewing . .
.....
.....
.....	. 12 Picture Adjustment
.....
..... 12 Sound Settings
.....
.....
.....	.. 12 List of Channels
.....
..... 12 Time
.....
.....
..... 12 Time
.....
.....
..... 13 Selecting Programmes
.....
.....	... 14 Scrolling the Programmes . .
..... 14 Audio-visual (AV) Programmes .
.....
..... 14 Volume Control
.....
..... 14 Muting the Sound
.....
.....	... 14 Displaying Information . .
.....
..... 14 Television Lock
.....
.....
.....	.. 14 Switching Off the Television . . .
..... 14 Teletext
.....
.....
..... 15 Standard Functions

15 2 C17 / MONO / 100 / GB-TBA / I 6.3 / B Basic connections Basic connections The aerial socket (2), located on the rear of the television, can be used to connect an external aerial or other appliance equipped with a modulator such as a VCR, satellite receiver, etc. United Kingdom The plug is fitted with a fuse which protects your television. If your television does not work, the fuse may be blown. In this case, replace it with an identical 5 Amp ASTA or 1r BSI (BS 1362) certified fuse.

If you connect an appliance to the aerial jack, you must give it a channel number. To do this, switch on the appliance, then use the television to find the modulator channel (see the appliance manual). Now give it a programme number and memorise it (see Manual Programming of channels). Then, when you wish to use the appliance, simply select its programme number on the television. This procedure is not required for VCR's not equipped with a modulator.

\$ Note: the mains lead of your television is fitted with a moulded plug. This lead contains all the safety equipment, so you are advised when replacing it not to use a non-specific commercially-available model. The SCART socket AV1 (2), located on the rear of the television, is intended to connect a VCR or a camcorder (VHS, 8 mm), a Canal+ decoder, a video games console or RGB-signal emitting appliances. We strongly recommend the use of this type of connection, which gives a better picture quality. To use the peripheral appliance that you have connected, press the AV key on your remote control to select AV1. This selection is automatic for some appliances. Pressing ""play"" on a VCR, or switching on a satellite receiver connected to AV1 will automatically

switch on your television. When you stop the VCR, if you have not changed channels while watching the VCR, the television automatically switches back to the channel you were watching beforehand. If the television has been switched on from the VCR, it switches to standby when the VCR is switched off. The television automatically switches to 16/9 format if the connected appliance delivers the corresponding signal.

The headphone socket (3)* is provided to connect a headphone or earphones. Connecting headphones mute the sound from the television loudspeakers. Your TV is provided with a headphone socket for stereo headphones, do not use a mono headphone or plug. * on models equipped with this function 3 GB The mains plug (1) supplies power to the television. The television must only be plugged in to a 220-240 V - 50 Hz power supply. It must never be plugged in to a DC source. Should the plug become separated from the lead, never attempt to plug it in to a mains socket. This could cause electrocution. Continental Europe Remote control Remote control Display of channel and time (yellow button) This key is active only when using the Teletext (blue key) GB Call up programme list (green button) Standby Call up Teletext / Toptext / Fastext function (purple button) Right/Left Selection within menus Reminder of picture preferences (red button) Confirm an action or validate a menu option To leave a menu or Teletext Volume adjustment Go to adjustment function MENU Move Up/Down in menus Change programme Sound mute 8 Go to programmes and enter numerical values in menus Selecting appliances connected to the television (AVI) The red, green, yellow and blue keys are also used for the Teletext.



[You're reading an excerpt. Click here to read official THOMSON
28DG16ET user guide
http://yourpdfguides.com/dref/2178376](http://yourpdfguides.com/dref/2178376)

For programme numbers higher than 10, press the 0 key on the remote control: "- -" appears on the screen.

Please respect the environment! Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling. 4 Navigation principles Navigation principles Calling up the INSTALLATION MAIN MENU If there is no menu displayed on the screen, key on the remote press and hold the control. The settings SUMMARY is displayed first, followed by the INSTALLATION MAIN MENU which you can use to operate your television. INSTALLATION MAIN MENU Exit Auto installation Programme organisation Personal settings Calling up the SUMMARY SUMMARY key on the Press and release the remote control to display the list of menus available for using your television functions or adjusting your television Exit Teletext Picture Sound List Time Preferences Calling up a Menu Select the menu you wish using the Up/Down key to validate..

keys. Press the Navigating within the Menus Use the Up/Down keys 1 to select a line. Use the Left/Right keys 2 to: - Increase or decrease a value: for example: Fine tuning - Select an option: Aerial for example: Reception Cable Reception - Activate or deactivate an option: for example: Decoder - Access a sub-menu: for example: Picture preferences You can use the 3 key to: Return Standard Reception Autosearch Fine tuning Store on PR number Name Decoder External sound path Enter channel number or start autosearch with < or >. EURO BG Aerial CH- ----MANUAL PROGRAMMING - Activate or deactivate an option: for example: Decoder - Access a sub-menu: for example: Picture preferences - Validate an action: for example: Store on PR number Use the 4 key to exit a menu. 5 GB Manual programming Installing your television for the first time Installing your television for the first time First plug the television into a mains power outlet and to the external aerial or a cable network, then switch on using located on the front or the side of your set. the ON/OFF switch When you switch on your television for the first time, the language selection menu* is displayed (Fig. 1). If this does key on the television until this menu appears. not happen, set the television to standby then press and hold the GB Installation Instructions (start) 1. Use the Up/Down keys to select the language in which you wish the menus to be displayed. . 2. Then validate using 3. A list of countries* is now displayed (Fig. 2).

Select the country in which you live, or the country from which you wish to receive the broadcasts if you live in a border area. . 4. Then validate using 5. A welcome message is displayed. 6. Run the automatic installation sequence . using 7. A message appears to inform you that automatic installation has started (Fig. 3).

Wait for a few minutes. A new message will inform you when automatic installation is completed. 8. If you wish to check or modify the channel and see the organisation, press Programme organisation chapter. If you do not wish to modify the channel organisation, you can exit the menu by then watch the channel of pressing your choice.

Choose the desired channel using the number keys (1, 2, 3, ...) and the / keys. If you have a decoder, see the Manual programming chapter.

(Fig. 1) English Français Deutsch Italiano Español Português Nederlands Svenska Dansk Norwisch (Fig. 2) COUNTRY SELECTION OK Exit United Kingdom Eire France Germany Italy Spain Portugal Holland Belgium and Luxembourg Se letter you require. The name you have entered will be memorised when you move to another line or exit the menu. GB INSTALLATION MAIN MENU Exit Manual programming Auto installation Programme organisation Personal settings PROGRAMME ORGANISATION Return Select program. Swap with PR. Change pr. name Delete program. 13 -EURO 13 10 11 12 13 14 15 16 17 18 19 MTV FR2 TF1 EURO CH40 CC01 ARTE CART ---ARD Select programme number using PR-/PR+ or </> or 0 to 9 keys. Select the line marked Return to return to the previous menu.

If you wish to change the order in which your programmes are displayed or if you wish to name other programmes, repeat the procedures described above. When you have finished organizing the . programmes, exit the menu using 8 Manual programming Manual programming The manual installation function is useful if some programmes have not been installed even after AUTOMATIC INSTALLATION. , the SUMMARY is 1. Press and hold displayed first, followed by the INSTALLATION MAIN MENU. 2. Select the line marked Manual programming. . 3. Display the menu using 4.

Now continue by following the messages at the bottom of the screen. For further details, read the information below. @@@@France for France and Luxemburg DKK' eg. @@autosearch with < or >. Certain cable networks use the same frequencies as the RF channels.

If this is the case, you must select Aerial instead of Cable. Select the line marked Return to return to the previous menu. Autosearch : Enter the programme number if you know it. If not, search using the Left/Right keys. Your television will stop at the first channel it tunes into.

If you wish to memorize it, go to the line marked Store on PR number. If not, resume the search using the Left/Right keys. @@@@Store on PR number : . @@@@Select the character you wish to modify using the Left/Right keys. Use the or keys to display the character you desire. @@External sound path : Switch on your decoder. @@@@2. Select the line marked Personal settings. . 3.

Display the menu using 4. Continue by following the messages at the bottom of the screen. For further details, read the information below.

@@@@@AV name : Used to give a name to the audiovisual programme. Select the character you wish to modify using the Left/Right keys. Use the or keys to display the desired character. Prog. @@Select the line marked Prog. @@@@Exit the menu using . Auto volume level AV name Prog.

@@Select the line marked Return to return to the previous menu. @@Use the information below to help you. Show program. @@Press the Left/Right keys again to deactivate this function. PREFERENCES Return Show program.

number Format control Picture preferences Auto Format control : Use the Left/Right keys to select the desired picture format: Auto : if the appliance connected to the SCART socket provides the switching signal, the television adjusts automatically to the picture format transmitted. 16/9 : manually selects widescreen picture format. 4/3 : manually selects this picture format. If you have selected 16/9 or 4/3, the television will switch back to Auto when you change channels or you switch off. Picture preferences : To access the PICTURE PREFERENCES .

menu, press PICTURE PREFERENCES Return Settings Brightness Colour Contrast Personal If you wish, you can personalize certain picture settings. Select and set the proposed options. Use the information below to help you. Settings : Select Standard or Personal.



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/2178376)

[28DG16ET user guide](http://yourpdfguides.com/dref/2178376)

<http://yourpdfguides.com/dref/2178376>

Standard corresponds to the factory settings. Personal corresponds to the settings that you have entered yourself. The lines Brightness, Colour and Contrast are displayed only if you have selected Personal on the Settings line. Select each line one after the other and enter your required settings. You can recall these picture settings by pressing the red key on the remote control .

Exit the menu using Select the line marked Return to return to the previous menu. 11 GB 1. Display the SUMMARY by pressing and releasing the key on the remote control . 2. Select the line marked Preferences. . 3. Display the menu using Daily viewing Daily viewing Picture Adjustment Display the SUMMARY using the key on the remote control. Select Picture. Validate .

The PICTURE menu is displayed. using PICTURE Return Brightness Colour Contrast Sharpness Contrast expand Tone Neutral Cold GB Select and set the proposed options. Use the information below to help you. Brightness, Colour, Contrast, Sharpness: Select each of these lines one after the other and set as required. Contrast expand : Select this line then choose the desired Contrast expand setting (High or Low).

Tone : Select this line then choose the desired colour tone (Warm, Neutral or Cold). Exit the menu using . Select the line marked Return to return to the previous menu. Sound Settings Display the SUMMARY using the key on the remote control. Select the line marked .

The SOUND menu Sound. Validate using is displayed. SOUND Return Treble Bass Select and set the proposed options. Use the information below to help you. Treble, Bass : Select each of these lines and adjust to suit you. . Exit the menu using List of Channels This list contains up to 10 pages. The number of pages depends on the number of programmes memorized. For each programme, the list indicates the station name or type and the programme number. Page 11 describes the AV programme.

To display the list, press the key on the remote control or key on the remote control. Select the Display the SUMMARY using the . line marked List. Validate using The page displayed is the page containing the programme you are watching. It is identified in the list by the symbol TV. To display the next page, press the Right key. To display the previous page, press the Left key. If you wish to watch one of the programmes on the page displayed: Enter the last digit of the programme number (e.g. for 25 simply enter 5) on the remote control.

The list disappears and your programme is selected. Or, - Select the programme using the Up/Down keys. . - Validate using . - Exit the menu using Exit 01 02 03 04 05 06 07 08 09 LIST BBC 1 BBC 2 FR 3 CC19 ARTE M6 CNN PREM EURO TV Page -/+ Programme: 0 - 9 12 Daily viewing Time You can use this menu to switch your television on or off automatically at a set time.

Display the SUMMARY using the key on the remote control. Select the line marked . The TIME menu is Time. Validate using displayed. Sleep timer : Use the Left/Right keys to choose how long you wish to view before the television switches off.

The television will switch off automatically at the end of this period. To cancel, set to 00:00. TIME Return Sleep timer Current time Wake-up timer Wake-up time Programme number Daily 00 : 00 11 : 28 07 : 07 01 BBC1 One minute before switching off, a message will inform you that the television is about to go off. If you wish to keep it on, press any key on the remote control or the local keyboard. The television switches to Child lock mode after an automatic stop. It can only be switched on again from the remote control. Select the line marked Return to return to the previous menu. Current time : The current time is given by the Teletext (see PERSONAL SETTINGS menu). You can also set the time manually using the number keys (0 to 9) on your remote control. Wake-up timer : If you wish to be woken up by your television on the channel of your choice, you must first set the television clock to the correct time (see above).

Use the Left/Right keys to tick the box and display the Wake-up timer menu. The lines Wake-up time, Programme number and Daily only appear if you have ticked the box on the line marked Wake-up timer. Wake-up time : Use the number keys (0 to 9) on the remote control to set the time at which you wish to be woken. Programme number : Select the programme you wish to be woken by. Daily : Tick this box if you wish to be awakened at this time every day. . Exit the menu using Set the television to standby using the key on the remote control. The red indicator light on the television flashes. @@@@ Press again to restore the sound. Displaying Information Press the key to display the following information on the screen: channel number and name, time.

Television Lock You can use this function to prevent anyone from switching on the television using the buttons on the television set. The buttons on the television set are locked in the following cases: - If you switch off the set by pressing and holding the key on the remote control for more than 3 seconds, - After a programmed stop, - If the television is set to standby when the alarm has been set. When the television is locked the red power will be light flashing. The television can now only be operated from the remote control. To release the lock, press any number key on the remote control.

Switching Off the Television To switch off the television, press the Standby key on the remote control or press the ON/OFF switch on the television set. 14 Teletext Teletext Certain channels broadcast an electronic news page service with a range of different information services. The presentation and use of the Teletext differ from one country to another and from one programme to another (Teletext, Fastext or Toptext). Press the key to display the Teletext Index (page 100). A message will inform you if the programme you are watching has no Teletext service.

To call up a page: Enter the 3 digits of the page number you wish to consult (for example, 150 or 170). After a moment, the page appears. Use the Left/Right keys to consult the next or the previous page. Standard Functions Rolling pages: Some information is displayed over several sub-pages. It is scrolled on your screen as it is received. . Press again to continue To stop scrolling, select STOP using the Up/Down keys and validate using scrolling. Masked text: To reveal a hidden answer (for example in a quiz programme), select ??? using the Up/Down keys and validate using . Press again to hide the answers. Zoom : Select ZOOM using the Up/Down keys then press the key once to magnify the top of the screen, twice to magnify the bottom of the screen (the page will scroll from top to bottom) and a third time to return to the normal display.

Display: You can superpose the Teletext page over the TV picture. To do this, select MIX using the Up/Down keys then validate by pressing the key. Press again to return to the normal display. Sub-code: You can use this to access a sub-page directly.



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/2178376)

[28DG16ET user guide](http://yourpdfguides.com/dref/2178376)

<http://yourpdfguides.com/dref/2178376>

Select "-" using the Up/Down keys. Then enter the four digits of the required sub-page number. Certain programmes have Alarm pages that you can set to appear at the time you require. For example: . You must of course leave the television for 15h30 enter 1530 as the sub-page number then press on the programme which is to transmit the Alarm page. Index: .

To call up the index page, select 100 using the Up/Down keys then validate using Direct access: You can use the yellow and blue keys to directly access the pages indicated in the bar at the bottom of the screen. Fastext functions: If the Teletext you receive is Fastext, a sub-menu at the bottom of the screen appears which you can use to select from the 4 headings according to its colour. To select a heading, press the key of the corresponding colour. Toptext functions: If the Teletext you receive is TOPtext, the pages are arranged into headings and sub-headings by subject. You can select the first page of a heading directly by pressing the blue key, or the first page of a sub-heading by pressing the yellow key.

Other functions: With certain Teletext channels, it is possible to have sub-titles overlaid on the screen for certain broadcasts as well as certain news flash updates. The corresponding page number is indicated in the Teletext index. Once you have found the page, the sub-title or the news flash will be overlaid onto the TV picture. key. The navigation status bar disappears after a few seconds.

To display it again, press the or . To exit Teletext, press 15 GB THOMSON multimedia 46 / 47 Quai A. Le Gallo 92648 Boulogne Cedex France RCS Nanterre B 322019464 253 763 10 .



[You're reading an excerpt. Click here to read official THOMSON 28DG16ET user guide](#)
<http://yourpdfguides.com/dref/2178376>