



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THOMSON 29DH55N. You'll find the answers to all your questions on the THOMSON 29DH55N in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual THOMSON 29DH55N**  
**User guide THOMSON 29DH55N**  
**Operating instructions THOMSON 29DH55N**  
**Instructions for use THOMSON 29DH55N**  
**Instruction manual THOMSON 29DH55N**

B e d i e n u n g s -  
a n l e i t u n g  
M a n u a l e d i  
u t i l i z z a z i o n e  
M a n u e l  
d ' u t i l i s a t i o n  
U s e r  
m a n u a l  
G e b r u i k s -  
a a n w i j z i n g  
B r u k s -  
a n v i s n i n g  
B e t j e n i n g s  
v e j l e d n i n g  
2 5 D H 5 5 N  
2 9 D H 5 5 N  
2 9 D F 5 5 N

**THOMSON**



[You're reading an excerpt. Click here to read official THOMSON 29DH55N user guide](http://yourpdfguides.com/dref/2178733)  
<http://yourpdfguides.com/dref/2178733>

**Manual abstract:**

The ventilation slots at the back of the set should not be covered up by curtains, small covers, newspapers, etc... There must be enough room in built-in cabinets to allow for the cooling air to circulate. The set should not be placed directly next to heating. This appliance is designed for use in dry areas. If occasionally you should wish to operate it outdoors (for example, on the balcony or veranda), you must insure that it is protected against all forms of moisture (dew, rain, splashed water). A cold set may be switched on in a warm room only after any condensation which may happen to be on the screen has evaporated. Never remove the cabinet back. Have your aerial installed by an authorised dealer or service technician.

**LEAVE ROOM FOR VENTILATION AVOID HEAT, WATER, DIRECT SUNLIGHT.** In the evenings, after the TV programmes, or in case of a prolonged absence, it is recommended that the appliance be switched off using the main power switch. Remove the power plug from the wall outlet under the following conditions : 1. During a thunderstorm. It is also recommended that you disconnect the aerial plug.

2. If you find a burning smell or smoke emerging from the set. Additional information : Your TV set is adequately shielded to prevent emission of X-rays. The acceleration voltage does not exceed the maximum value of 33 kV. Work by non-qualified technicians, modification of the high voltage setting or the replacement of the tube with a model that does not comply with the manufacturer's specifications may lead to a considerable increase in X-ray radiation.

A set changed in any of the above ways no longer satisfies the initial specifications and should not be put back into service. GB Do not place audio loudspeakers near to television. The magnets in the speakers could cause patches of colour to appear on the screen. 2. CARE OF THE EQUIPMENT The screen should be cleaned with liquid glass cleaner. · Never use abrasive cleaners. · To clean the front and the cabinet of your equipment use a soft cloth dipped in mild detergent. The use of strong solvents such as white spirits or alcohol based products could damage your equipment. · Clean the vents on the rear panel of your set regularly. 3.

**DEMAGNETISATION** The earth's magnetic field may have an effect on your television by causing patches of colour to appear on the screen. If this happens : · Switch off the television with the on-off button ; · Wait a few minutes and then press again to switch on. This allows the screen to be demagnetised automatically. If patches of colour are still visible repeat the procedure. The pages of this publication are printed on recycled paper. 3 P. remote control remote control functions using PROGRAMME Set-up - Preferences Browse - Clock - Lock Tuning - AV1 - AV2 - AV3. SOUND Loudspeakers - Headphone - AV (Audiovisual). PICTURE Picture - PIP - Format. TELETEXT / TOPTXT / FASTEXT When a red, green or yellow button is pressed for the first time, the contents of the menu are displayed at the top of the screen and the menu of the function selected is displayed at the bottom of the screen.

Moving horizontally along in the menus selects the required function on the contents line if it has not been already selected. - The selected function is displayed in the same colour as the button pressed (red, green, yellow). - The line selected in the menus is displayed in the same colour as the button pressed (red, green, yellow). Press the coloured button repeatedly to move down through the menus selecting different lines. Make any adjustments.

PERSONAL ADJUSTMENTS and scrolling back through the menus. TO REMOVE THE MENU DISPLAY or to display programme information, the type of sound transmission (MONO, STEREO or DUAL), the programme name and number, the time. PICTURE FREEZE Changes are saved when you quit the menus, except in the PROGRAMME menu. VT contents CONNECTIONS AND COMMANDS AUTO-PROGRAMMING Switching on - Automatic station search Programme organiser - New region 5 6/8 ZOOM + ZOOM FUNCTION TO CALL UP PREVIOUSLY VIEWED PROGRAMME INSTALLATION 8/9 Volume limitation - Menu language Programme number display - Time reference - Preferred Settings PICTURE ADJUSTMENTS PIP - Format SOUND ADJUSTMENTS Loudspeakers - Headphone - AV DAY TO DAY OPERATION Switching on/Selecting programmes - Browse OTHER FUNCTIONS - EXTRAS Clock - Child lock - Lock 10/13 13/15 16/17 18/21 PR- PR+ TO CALL UP ALL PROGRAMMES IN TURN VOLUME - Horizontal movement in the menus - +/- adjustments of other functions. a 1 4 7 zz 2 5 8 0 a 3 6 9 Keys 1 to 0 are used to : - Select the programmes (from 1 to 99) - Enter the channels numbers - The 0 key is used to call AV inputs 1, 2 and 3.

CONNECTIONS 22/24 Units connected - Calling up audiovisual programmes TELETEXT 25/27 Calling up Teletext - Options - Alarm - How to select Subtitles - New flash MANUAL PROGRAMMING 28/29 Norm - Decoder - Channel/Cable - Programme - Fine Tuning - Station name - Store/Erase - Access to the organiser. BATTERIES : Refer to page 24 for the fitting of the batteries. MUTE .....

..... STAND-BY television set connections and commands ON THE FRONT OF THE SET For further details, see page 22. On/Standby light : Green : On Red : Standby On/Off Switch AV3 Socket VIDEO and audio AV3 SOUND (red key) PICTURE (green key) PROGRAMME (yellow key) Socket S-VIDEO Programme Volume adjustments and audio Selection PR + Pr + AV PR - - VIDEO L AUDIO R Headphone socket Display Audiovisual Installation-menu access button AT THE BACK OF THE SET HiFi Amplifier Aerial\* AV2 S-VHS Hi-8 mm Camcorder or VHS 8 mm GB (OUT L) (OUT R) Surround loudspeakers (IN) 75 S-Video Video Audio (OUT) AV 1 Main loudspeakers AV 2 AV2 AV1 Camcorder Video recorder Camcorder Satellite receiver CDV player Decoder Video games console Video recorder \* We recommend that you use an aerial cable with double isolation.

5 television set auto-programming This set is equipped with an automatic station search system which is used for : · Searching for all the stations received in your region and storing them in memory · Automatically searching for the name of the station · Automatically allocating a programme number. WELCOME Turn on the television set main power. The WELCOME menu is displayed. If it is not, Press the INSTAL button on the television control panel. Briefly press the remote control button corresponding to the number of the language you require for the menus.

A list of countries appears (on two pages). To go to the next or previous page, press Briefly press the remote-control button corresponding to the country in which you are located, for example: for England INSTAL WELCOME BIENVENUE WILLKOMMEN BIENVENIDO BENVENUTO VÄLKOMMEN WELKOM ENGLISH FRANÇAIS DEUTSCH ESPAÑOL ITALIANO SVENSKA NEDERLANDS Press Appuyer Drücken Pulse Premere Tryck Druk op key number sur la touche Sie die Taste tecla numero il tasto knapp nummer knop nummer [1] [2] [3] [4] [5] [6] [7] CHOOSE YOUR COUNTRY : a 1 z UK : FRANCE : GERMANY : ITALY : SPAIN : PORTUGAL : SWISS : AUTRIA : [1] [2] [3] [4] [5] [6] [7] [8] [9] 9 Next page : NETHERLANDS : [1] [2] [3] [4] [5] [6] [7] [8] [9] a 1 z BELGIUM : LUXEMBOURG : SWEDEN : DANMARK : FINLAND : NORWAY : OTHERS : Previous page : The menu which then appears permits the user to : · start an automatic search, · search for new channels, · access channel organisation.



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/2178733)

[29DH55N user guide](http://yourpdfguides.com/dref/2178733)

<http://yourpdfguides.com/dref/2178733>

You can leave the menus at any time by pressing TV the button. AUTO - PROGRAMMING For the first time or after a change of region, start automatic channel search by pressing the key Searching for stations and storing them in the memory depends on the language chosen from the WELCOME menu. The previously memorised stations are erased.

AUTO-PROGRAMMING is completed when the cursor is at the extreme right. To interrupt the search, press briefly on the This displays the channel management menu. TV a 1 z 2 3 z AERIAL INSTALLATION Make sure that the aerial cable and decoder (if any) are connected to this TV set. a [ 1 ] Launch terrestrial installation [ 2 ] Update the terrest. installation [ 3 ] Access to the organiser To help you, follow the instructions at the bottom of the menu (grey background). a 1 z AUTO - PROGRAMMING Searching for stations 10 stations found key. 6 television set auto-programming Programme Organiser When the automatic search is completed, the Programme Organiser menu appears. This menu is used to : · change the programme number, · change the station number, · delete a programme. Programme Organiser PR.PR.

+ Scan through to check that the stations found are correctly numbered and named as you want than: · IF YES ⇨ press briefly the menu disappears and is replaced by the picture of the programme selected. · IF NO ⇨ you make changes as follows TV 01 02 03 04 05 06 07 08 09 PR+, PR- Select the station +, -, 0..9 Move this programme Blue Change the name Yellow Erase this station To exit, press the (TV) key - The programme number Select the programme number to be changed. Bring the cursor to the new programme number. You may also use the number buttons 0 to 9. Confirm the change (green button). PR.PR. + 01 02 03 04 05 06 07 08 09 Moving PR 06 CANAL+ to PR 04 +, -, 0.

.9 Give it another number Green Confirm change Red Cancel change - The station name VT Programme Organiser 01 02 03 04 05 06 07 08 09 United Kingdom BBC 1 BBC 2 ITV CHAN 4 CHAN 5 SKY + M-GOLD M-CHAN CHILD CNN SKYONE DISCOV UKGOLD SKYSP0 BRAVO ESPORT S-NEWS MTV EUNews ----- GB Press the blue button briefly. A list of station names per country appears United Kingdom Netherlands France Belgique Deutschland Luxembourg Italia Sverige España Danmark Portugal Finland Schweiz Norge Österreich Select the country you require. If the name appears in the list displayed, select the name Confirm the selection (green button). If the name does not appear in the list displayed, select the "- - - - -"line You have 6 characters to enter a station name To enter a station name, Press the green button briefly and the first character flashes. Select the first character of the new name. Enter the next character and repeat the pthe teletext pages of French networks (L Standard) to be reduced. To do this, On must be selected in the Teletext Fine Tuning line. This adjustment is not active for B, G, D, K, K' and I standards. PREFERENCES This menu enables you to save your preferred settings.

Press the yellow or pink key repeatedly to return to the Menu contents line. Press to display the PREFERENCES menu. Select the line required with the yellow key. Set with the key. Erase the menu. To return to your preferred settings at any time, press the pink key. 9 TV P. Teletext Fine Tuning Off On PREFERENCES or SET-UP P. Volume Brightness Colour Contrast Resets to these preferences PREFERENCES SET-UP Volume Brightness Colour Contrast Resets to these preferences television set picture adjustments You may adjust the picture settings at any times. PICTURE Press the green key.

The PICTURE menu is displayed : PICTURE is selected. If this is not the case, select the Contents line using the green key and Picture with the key. Select the Brightness line (green key). Adjust the brightness. Repeat the same procedure to select and adjust the Colour, and Contrast. The TINT line only appears if the source is NTSC from an AV1, AV2 or AV3 audio-visual programme. Brightness Colour Contrast Digital Mastering PICTURE PIP FORMAT Brightness Colour Contrast Digital Mastering Off On PICTURE PIP FORMAT Off On Brightness Colour Contrast Digital Mastering Tint Off On Digital Mastering Select the Digital Mastering line (green key). Select the option required. When changing channels, Digital Mastering automatically returns to On. This process suppresses flicker from the TV image.

In addition, Digital Mastering improves image quality with a further reduction of the trembling effect. The images are more stable, sharper and less straining to the eyes. Finally, image noise is reduced automatically according to reception quality (INR system : Intelligent Noise Reduction). PIP (Picture-in-picture) 29 DH 55 N / 29 DF 55 N You use this function to : · inlay in one of the corners of the screen (P I P) : images from the input connectors (AV1, AV2, AV3 or RGB), while viewing a channel ; or one of the channels, while viewing a programme from one of the audiovisual input connectors (AV). · inlay on the screen in groups of 9, all the channels in memory (Channel guide).

Press the green button once or several times to select the Contents line. Select P I P. The PIP menu appears. 10 PIP Source Channel Guide Change Corner Off On (-) 03 (+) (+) 1234 PICTURE PIP FORMAT Brightness Colour Contrast Digital Mastering Off On Gives you several possibilities for programmes inlays. PICTURE PIP FORMAT television set picture adjustments Image inlay (PIP) Use the green button to select the PIP line.

Press briefly to select : Off : no picture-in-picture On : picture-in-picture PICTURE PIP FORMAT Use the green button to select the Source line. As required select: the AV1, AV2, AV3 or RGB picture, or a channel in memory. Picture in picture is in 4/3 or 16/9 format depending on the format of the AV image. 0/AV PR.- PR.+ PIP Source Channel Guide Change corner (-) Off 03 (+) 12 On (+) 3 4 Inlaid image position Use the green button to select the Change corner line. PICTURE PIP FORMAT Select position 1, 2, 3 or 4. 4 3 1 2 TV GB PIP Source Channel Guide Change corner Off (-) 1 03 (+) 23 On (+) 4 Press to erase the menu. Picture swap Press the button, to swap the image being viewed and the PIP image. Scanning all inlaid image programmes Select an AV image on the screen.

Repeatedly press the PR +/- button on the remote control to scroll through PIP displays of all stored programmes and the other AV programmes. Press a long time to remove the PIP. 0/AV PR.PR.+ TV 11 television set picture adjustments Mosaic Press the green button once To select the Contents line. Select P I P. Press the green button repeatedly to select Channel Guide. Press the key. The screen goes grey and the channels become inlaid With the corresponding programmes numbers superimposed.



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/2178733)

[29DH55N user guide](http://yourpdfguides.com/dref/2178733)

<http://yourpdfguides.com/dref/2178733>

The Channel Guide programmes change every 3 seconds.

When the Channel Guide appears, the sound goes off. To display the programme you want on screen, press the button when the image of that programme is animated. Activating the Channel Guide feature cancels any inlays. TV You can display on the screen, in group of 9, all the channels stored in memory.

PICTURE PIP FORMAT PIP Source Channel Guide Change corner Off (-) (+) 1 03 On (+) 2 3 4 To clear the Channel Guide, press the button. FORMAT

PICTURE PIP FORMAT Press the green button once or several times to select the Contents line.

Select FORMAT. The following menu is displayed. Format Subtitles Zoom 4/3 Off 16/9 On Format Select the Format line (green key). Select 4/3 or 16/9 depending on the picture format. The Subtitles Zoom line appears only when 4/3 is selected.

The format can also be selected automatically when the source is one of the two Euro-AV sockets AV1 or AV2. In this case, select AUTO which is only displayed for sources AV1 and AV2. The format is stored in memory for AV1, AV2 and AV3. PICTURE PIP FORMAT Format Subtitles Zoom 4/3 Off 16/9 On PICTURE PIP FORMAT Format 4/3 16/9 Auto 12 television set picture adjustments Subtitles Zoom Select the Subtitles Zoom line (green key). You may select

Off On : Programme without Subtitles : Sub-titled programmes Format Subtitles Zoom 4/3 Off 16/9 On PICTURE PIP FORMAT In this case, a supplementary line (Subtitles position) appears. You may choose between a higher or lower framing, for example, for sub-titled programmes. Select Subtitles position (green key), then set your picture lift. Format Subtitles Zoom Subtitles position 4/3 Off Down (-) 16/9 On up (+) PICTURE PIP FORMAT Remove the menu from the screen. TV GB sound adjustments LOUDSPEAKERS Press the red key. LOUDSPEAKERS HEADPHONES AV The Sound menu is displayed, LOUDSPEAKERS is selected.

Sound Effect Balance Bass Treble Auto/Stereo Normal Mono Wide If this is not the case, select the Contents line with the red key and LOUDSPEAKERS with . LOUDSPEAKERS HEADPHONES AV Select the Sound line (red key). Sound Effect Balance Bass Treble Auto/Stereo Normal Mono Wide 13 television set sound adjustments TThis varies depending on the sound type received: SOUND SOUND SOUND SOUND MONO/STEREO/NICAM\* DUAL (2 languages) NICAM 3\* AV Sound Auto/Stereo Mono Sound Sound 1 Sound 2 Sound Sound 1 Sound 2 Sound 3 Source Stereo Sound 1 Sound 2 Select the required sound for the loudspeakers. AUTO/STEREO position enables you obtain MONO sound for mono broadcasts and STEREO for stereo broadcasts. \*NICAM is a digital sound transmission system, it enables you to receive broadcasts in high quality STEREO or DUAL SOUND, Analogue MONO sound is transmitted simultaneously (MONO in NICAM STEREO or SOUND 3 in NICAM 3). Effect Select the Effect line (red key). LOUDSPEAKERS HEADPHONES AV Select : Normal = normal sound Wide = stereo-effect sound for mono broadcasts wide stereo sound for stereo broadcasts. Sound Effect Balance Bass Treble Auto/Stereo Normal Mono Wide Balance Select the Balance line (red key). Balance the sound between the left and right channels. Repeat the same procedure to select and successively adjust the Bass and Treble.

LOUDSPEAKERS HEADPHONES AV Sound Effect Balance Bass Treble Auto/Stereo Normal Mono Wide 14 television set sound adjustments HEADPHONES Press briefly The following menu is displayed : HEADPHONES is selected. If this is not the case, select the Contents line with the red button and HEADPHONES with . Select the Headphones line (red key). You can then adjust the volume for the headphone. This operation also sets the output level of the HIFI jacks (CINCH).

Note : When the transmission is multilingual (DUAL) or an AV programme, the following menu appears. It is possible to select SOUND 1 or SOUND 2 in the headset. Select the Source line: then select or Sound 1 Sound 2 Source Headphones Sound 1 Sound 2 LOUDSPEAKERS HEADPHONES AV Headphones Headphones GB AV The sound available at the AV1 and AV2 outputs must be adjusted according to the type of device connected. Press briefly. AV Device Stereo Mono LOUDSPEAKERS HEADPHONES AV The following menu is displayed : AV is selected.

If this is not the case, select the Contents line with the red key and AV with . Select the AV Device line (red key). Then select Stereo Mono = stereo VCR = mono VCR LOUDSPEAKERS HEADPHONES AV AV Device Stereo Mono Selecting Stereo permits simultaneous recording of both languages of a bilingual programme on a stereo video recorder. Sound 1 on the left track and Sound 2 on the right track. Press to remove the menu from the screen. TV 15 television set day to day operation SWITCHING ON / SELECTING PROGRAMMES Switch on the television set with the mains switch if the standby light is off. If the standby light is on, select the programme required by the remote control or the PR-/ + buttons on the front of the set. For the programmes 1 to 9 : Press the corresponding number briefly. For programmes 10 to 99 : Hold on to display the tens. Press briefly to display the units.

BROWSE This comprises 10 pages of 10 programmes each, giving for each programme number : the station name (if it has been programmed). P. PR.- PR.+ PR 02 BBC 2 a 1 z 0/AV PR 1 a 1 4 z PR 14 BROWSE CLOCK PR 02 BBC 2 05 BBC 1 06 BBC 2 07 ITV 08 CHAN 4 09 Next / Previous page Select a programme LOCK The BROWSE menu is displayed. +,0..9 00 01 02 03 04 MOVIES S-NEWS M-GOLD M-CHAN CHILD P. BROWSE CLOCK PR 02 BBC 2 05 BBC 1 06 BBC 2 07 ITV 08 CHAN 4 09 Next / Previous page Select a programme LOCK To select the directory page displayed. To select the other pages, press repeatedly.

Example : Page 6 (programmes 50 to 59) To select a programme from the page displayed, press only the unit digits of the programme selected (example for 53: press 3). Programme PR 00 corresponds to the last audiovisual programme (AV1, AV2 or AV3). Press briefly to select BROWSE again. Press briefly to remove the directory from the screen. P.

Press 5 times 00 01 02 03 04 +,0..9 S-NEWS MOVIES M-GOLD M-CHAN CHILD +,0..9 TV PR 53 50/AV 55 51 56 52 57 53 58 54 59 Next / Previous page Select a programme Volume Set the volume as desired.

Volume When the headphones are plugged in, you can adjust the volume of the headphones or loudspeakers : Select the line you wish to adjust. Headphones Loudspeakers Sound mute Pressing once turns the sound off. The sound returns if the button is pressed once more. Mute 16 television set day to day operation RETURN TO PREFERRED SETTINGS Press briefly to return to personal adjustments (PREFERRED SETTINGS menu) DISPLAY / ZAPPING Displays details of the station being watched (programme name and number, time). Press repeatedly to scroll through the programmes.



[You're reading an excerpt. Click here to read official THOMSON](#)

[29DH55N user guide](#)

<http://yourpdfguides.com/dref/2178733>



*EURO AV 2 VIDEO Automatic selection VIDEO Automatic selection VIDEO/S-VIDEO Automatic selection VIDEO/S-VIDEO Call AV 2 0/AV VIDEO/S-VIDEO Call AV 3 0/AV AUDIO/VIDEO/ AUDIO/VIDEO/ S-VIDEO AV 2 SOCKETS S-VIDEO AV 3 SOCKETS Name You may give each piece of equipment connected a name.*



[You're reading an excerpt. Click here to read official THOMSON  
29DH55N user guide](#)

<http://yourpdfguides.com/dref/2178733>

Call up the AV 1, AV 2 or AV 3 menu. Select the Signal line (yellow key). Check the type of signal or select as necessary. P. AV 1 AV 2 AV 3 GB P. Signal Name Video RGB Select the Name line. The first dash flashes. You may enter the name of the channel using 6 characters. Continue to press, the signs, figures and letters are displayed in alphabetical order. Continue to press : the letters are shown in reverse order. When the required character appears, go to next character. To leave a space look for the blank character (between ? and A). CALLING UP AUDIOVISUAL PROGRAMMES Press AV to call AV1, AV2 or AV3 programmes in sequence.

In most cases, the television set changes automatically to AV1 or AV2, when the VCR connected is in play back mode. When the VCR is stopped, the TV set returns to the station previously watched. The TV set changes automatically to 16/9 format if the unit connected supplies the control voltage and if you have selected AUTO from the FORMAT menu. 23 0/AV a 1 z Signal Name S-Video RGB Signal Name Video - RGB z 2 a television set connections COPYING VIDEO TAPES It is necessary to have 2 VCRs with the same specifications : 2 VHS/8 mm or 2 S-VHS/Hi-8 mm. Connect the playback VCR to the Euro-AVI socket in playback mode. Connect the recording VCR to the Euro-AV2 socket in recording mode. During the copying of the tape, you can watch the station you are copying. PLAY EQUIPMENT VHS or S-VHS Camcorder Audio/Video/S-Video (Front side) SOCKET Euro-AV 1 CALL UP PROGRAMME AV 1 AV 3 RECORD EQUIPMENT SOCKET Video recorder Video recorder or Camcorder Euro-AV 2 Audio/S-Video AV 2 Euro-AV 2 Audio/S-Video AV 2 Video recorder or Camcorder MAIN/SURROUND SPEAKERS CONNECTIONS MAINS SPEAKERS MAIN SPEAKERS : These replace the speakers in the TV set. The volume of the speakers is adjusted in the same way as for the set. SURROUND SPEAKERS : These must be used in parallel with the set speakers in order to obtain the surround effect.

SURROUND SPEAKERS MAIN SPEAKERS SURROUND SPEAKERS FITTING BATTERIES Remove the cover at the back of the remote control and insert 2 1.5V LR03 (AAA) type batteries. For a cleaner environment, please dispose of used batteries in the containers for this purpose. 24 television set teletext Your television set is equipped to receive teletext. There are 3 types of teletext : · Teletexte (France-Europe), · Fasttext (UK, Spain), · Toptext (Germany) If you notice writing errors (missing letters) on the teletext pages of French networks (L Standards), check : · That you have good reception · That On is selected in the Teletext Fine Tuning line of the SET-UP menu (see page 9).

CALLING UP TELETEXT Select a station on which there is Teletext (for France, TF 1, FR2). a 1 z 0/AV S100 SKYTEXT 100 Tue 18 Oct 1544:10 VT A-Z INDEX ON 199 Briefly press the blue key. The contents page (Page 100) appears automatically. You may enter the page number required (3 figures).

Example: page 170, enter 1, 7, 0 (the number is displayed at the top left of the screen).

When the page is found, it appears on the screen. You can move through the pages to select them. While the teletext is displayed, you may adjust or turn off the volume. TV To quit Teletext, press . WHAT'S ON YOUR TV GUIDE.....

110 TV GUIDE.....110 FINANCE.....

.200 CABLE....

....140 SHARES.

.....220 RADIO....

....145 LOANS.....

..288 SUSCRIBE...

..150 WEATHER...

...300 NEWS FLASHES: SPORT 104 FINANCE 239 ON SKYSPORTS: SPORT, FOOTBALL, RACING HENNESSY GOLD CUP BREAK SkyOne p 365 GUIDE << FAVORITE >> DISPLAY 110 SUBCODE 200 ZOOM + PR.- PR.+ GB GUIDE << FAVORITE >> DISPLAY 110 SUBCODE 200 OPTIONS See next page. The two menu lines, under the Teletext page, are different, depending on the type of Teletext received (Teletext, Fasttext, Toptext) and your selection (see page 26). You may select different options using the top line of this menu. These are shown in colour. Briefly press the corresponding colour key (red, green, yellow, blue).

The menu bottom line is then activated. To select options from the bottom line, press the equivalent colour button. To return to the first line of the menu, press the pink key. GUIDE << FAVORITE >> DISPLAY 110 SUBCODE 200 GUIDE P. FAVORITE DISPLAY SUBCODE >> << 100 200 300 400 500 600 VT GUIDE HOLD FAVORITE ? DISPLAY ZOOM SUBCODE MIX GUIDE CLEAR FAVORITE Subpage No DISPLAY SUBCODE ALARM ON - --- ALARM If the teletext transmits an alarm page, you can make it come up at a set time. While entering the number of the alarm page (E. G. TVE : 697, ORF : 784). Then enter the digits to choose the time ( e.g.

for 20.45, type 2, 0, 4, 5) and hold down the last digit until the teletext is removed. At the chosen time, the alarm page will appear on the screen. VT To erase the alarm page, first press the blue key then the key TV . 25 television set teletext Key Type Name MENU DIRECT TOPTTEXT PREVIEW GUIDE Displays Topttext menu (red key).

When the red and green rectangles are displayed in these menus, pressing the red key displays the previous page, pressing the green key displays te next page.

<< << Functions MENU Menus SUBPAGES TOP-Overview DIRECT << SUBPAGES P 100 ARD 11:25:49 UEBERSICHT 2 DIE AKTUELLE DOLLARKURS WOHENSCHAU TOP - Menu NACHRICHTEN FINANZ-INFOS SPORT WETTER LOTTO/SPIELE A-Z/ADRESSEN FERNSEHEN DISPLAY TV HEUTE SUBCODE TV-MORGEN UEBERSICHT 1 UEBERSICHT 2 DIE AKTUELLE Directly displays the priority pages determined by the station (red and green keys). Displays TV programme page (red and green keys) DIRECT DISPLAY retour THEME SUBCODECHAPITRE Direct page : ÜBERSICHT 2 >> TV PROG << SUBPAGES DISPLAY SUBCODE >> SUBCODE TV-MORGEN SUBCODE TV PROG : TV HEUTE GUIDE SUBPAGE >> INDEX SUBPAGES DISPLAY TV-TIPS DISPLAY Displays subject (yellow key) or field (blue key) << Red FASTEXT INDEX GUIDE INDEX GUIDE TELETEXT Calls up Contents page (red key). Selects different heading (red, green, yellow, blue keys) Displays Contents page (red key). You may call : · The previous page (red key) · The next page · The first page of the next ten after the page displayed (yellow key) · The first page of the next hundred after the page displayed (blue key).

Eg : page displayed : 135 -> page called up : 140 or 200 >> << 200 110 INDEX PA 100 GUIDE TV INDEX SUBPAGES FIN INDEX DISPLAY HEADLINES SUBCODE SHARES INDEX SUBPAGES DISPLAY SUBCODE INDEX PA 100 GUIDE << SUBPAGES >> DISPLAY 110 SUBCODE 200 SUBPAGES Green TOPTTEXT FASTEXT TELETEXT FAVORITE Used to display subpages if any. The number of the subpage displayed is underlined. Select subpages with red or green keys. Allows you to store up to 6 of your favourite teletext pages.



[You're reading an excerpt. Click here to read official THOMSON 29DH55N user guide](#)





To store your favourite pages, select one of the 6 locations by using either the red or green keys (the selected location will have its 3-digit number underlined). Then enter the number of the required page. Repeat the process for each favourite page. (There are 6 favourite page locations for each PR number). The colour of the buttons depends on the option required. GUIDE << SUBPAGES DISPLAY SUBCODE >> 01 02 03 04 05 06 07 08 GUIDE << FAVORITE 231 240 .

.. DISPLAY ... ..

SUBCODE >> DISPLAY GUIDE HOLD SUBPAGES ? DISPLAY ZOOM SUBCODE MIX Option selection. For games : Briefly press the green key to see a hidden answer. TOPTXT To enlarge the text : yellow key Press once : top half of screen doubled in height. Press twice : bottom half of screen doubled in height.

Press three times : return to normal Teletext. Mix mode : Briefly press the blue key to overlay the Teletext page on the TV picture. TELETEXT If you wish to stop page scrolling (eg : 4/7) Briefly press the red key, the page number replaces «HOLD». Press the red key again to continue scrolling. UPDATE Automatic renewal of the page displayed.

Press the yellow key, you can watch your TV programme while waiting for page search to complete. When the page is found, the message «PAGE XXX RECEIVED» appears on the screen. Press the blue button to display the page. GUIDE HOLD SUBPAGES ? DISPLAY ZOOM GUIDE HOLD SUBPAGES ? DISPLAY ZOOM SUBCODE MIX GUIDE HOLD SUBPAGES ? DISPLAY ZOOM SUBCODE MIX Yellow FASTEXT P. GUIDE HOLD SUBPAGES ? DISPLAY ZOOM SUBCODE MIX SUBCODE MIX GUIDE SUBPAGES UPDATE SUBCODE Back to TV until new page received Blue TOPTXT SUBCODE VT FASTEXT TELETEXT Enter the subpage number (eg : 0009). Press the green key. The TV picture is displayed and as soon as the subpage is found, it is displayed. GUIDE CLEAR FAVORITE Subpage No UPDATE SUBCODE ALARM ON - --- 26 television set teletext HOW TO SELECT Repeatedly press the pink key to select the possible options under the required colour. Red key : MENU, DIRECT, PREVIEW, GUIDE (Toptext) INDEX, GUIDE (Teletext or Fastext) Green key Yellow key Blue key : FAVORITE, SUBPAGE P. OVERVIEW STORE (+) GUIDE TV PROG DIRECT OVERVIEW STORE (+) GUIDE INDEX FAVORITE DISPLAY SUBCODE TOP-Menu FAVORITE DISPLAY SUBCODE TOP-Menu FAVORITE STORE (+) SUBPAGES FAVORITE DISPLAY SUBCODE INDEX PAGE 100 INDEX << DISPLAY STORE(+) UPDATE DISPLAY ZOOM SUBCODE >> : DISPLAY, UPDATE VT INDEX HOLD FAVORITE ? SUBCODE MIX : SUBCODE.

P. VT MENU CLEAR FAVORITE Sous-Pages DISPLAY SUBCODE ALARM ON - --- Briefly press the same colour key (red, green, yellow or blue) to select. To save your choice, briefly press the (+) button. SUBTITLES Some programmes are transmitted with subtitles for the hard of hearing. These subtitles are received via Teletext on a special page number. They can be superimposed on the screen by selecting that page in Teletext mode. Find the appropriate page number from the Teletext Index page. Enter the number and once the page has been found, you will see the normal TV programme with the subtitles superimposed on it. To erase the subtitles, press twice the key NEWS FLASH The latest news can be superimposed on the television picture. Look up the teletext index to find the page number and enter it.

Once the page has been found, you can watch the normal television programme. When the latest news page is updated it will be superimposed on the picture. The remote control can be used for sound and picture settings again. If you switch to another station, the «Latest news» function is disabled. If after having seen these news you wish to remove the display from the screen, press the blue key VT GB TV.

followed by the key TV. 27 television set manual programming You may use this channel adjustment menu if you do not wish to restart auto programming (where there are only few channels in your area or if a new channel is transmitting). PROGRAMME PROGRAMME P. The following menu is displayed :

TUNING is selected If this is not the case, select the contents line using the yellow key and TUNING with the key . P.

TUNING AV1 AV2 AV3 AV2 If the menu is not in English, refer to the INSTALLATION chapter, page 9. Norm P. Norm (-/+) PAL I (UK) Decoder None AV1 Search Channel CH 22 Cable CC -Programme 02 Fine Tuning Station name BBC 2 Erase (-) Store (+) Access to the organiser (+) Select the Norm (-/+) line (yellow key). Select the broadcasting standard : PAL/SECAM BG (Euro) : Western Europe (BG) FRANCE LL' : France and Luxembourg (LL') PAL BG+ : Special standards (Switzerland) SECAM DKK' : Eastern Europe, Middle East (DKK') PAL I (UK) : United Kingdom, Ireland (I) TUNING AV1 AV2 AV3 AV2 Norm (-/+) PAL I (UK) Decoder None AV1 Search Channel CH 22 Cable CC -Programme 02 Fine Tuning Station name BBC 2 Erase (-) Store (+) Access to the organiser (+) Decoder This function allows you to access programmes using the PR \_ and + keys (zapping). Select Decoder line (yellow key). Select one of the options : None = no decoder AV1 = Decoder connected to Euro-AV1 socket AV2 = Decoder connected to Euro-AV2 socket. P. Norm (-/+) PAL I (UK) Decoder None AV1 Search Channel CH 22 Cable CC -Programme 02 Fine Tuning Station name BBC 2 Erase (-) Store (+) Access to the organiser (+) AV2 Channel/Cable If you do not know the channel numbers. Select the Search line (yellow key). Start the search by pressing : + : for forward channel search \_ : for backward channel search.

The cursor indicates the part of the range in which it is performing the search. The channel numbers are displayed on . Channel line when received via an aerial or . Cable line for cable networks. Once a station has been received, the picture appears on the screen. If the picture, corresponds to the station required, go to the Programme line, otherwise continue the search, with (+). If you already know the channel numbers. P. P. TUNING AV1 AV2 AV3 AV2 Norm (-/+) PAL I (UK) Decoder None AV1 Search Channel CH 22 Cable CC -Programme 02 Fine Tuning Station name BBC 2 Erase (-) Store (+) Access to the organiser (+) TUNING AV1 AV2 AV3 AV2 Norm (-/+) PAL I (UK) Decoder None AV1 Search Channel CH 22 Cable CC -Programme 02 Fine Tuning Station name BBC 2 Erase (-) Store (+) Access to the organiser (+) Select the line . Channel for TV channels (aerial) or . Cable for cable networks. Enter the channel number (it must have 2 digits) e.g.

: for channel 6, enter 0 and then 6. 0/AV 28 6 television set manual programming Programme P. Select the Programme line (yellow key). Enter the station number. Programme 1 to 9 : Press the corresponding digit briefly (eg: 03, press 3).

Programme 10 to 99 (eg : 52) : Briefly press 5 to display the tens: 5 Briefly press 2 to display the units: 5 2 z 2 3 5 a TUNING AV1 AV2 AV3 AV2 Norm (-/+) PAL I (UK) Decoder None AV1 Search Channel CH 22 Cable CC -Programme 02 Fine Tuning Station name BBC 2 Erase (-) Store (+) Access to the organiser (+) Fine Tuning Select Fine Tuning line (yellow key).



[You're reading an excerpt. Click here to read official THOMSON 29DH55N user guide](http://yourpdfguides.com/dref/2178733)  
<http://yourpdfguides.com/dref/2178733>

Optional : To be used if the picture is not clear or for searching for a specific source, for example, a video recorder channel P. + : sharper picture contours or search higher in the range \_ : softer picture contours or search lower in the range. Channel CH 22 Cable CC -Programme 02 Fine Tuning Station name BBC 2 Erase (-) Store (+) Access to the organiser (+) Station name P. Select the Station name line (yellow key).

The station name can be written in 6 characters. Hold down the button : the characters are displayed in ascending order. Hold down the button : the characters are displayed in the descending order. When the required character appears, press these buttons to go the next or previous character. To leave a space look for the blank character (between ? and A). TUNING a 1 z 2 a z AV1 AV2 AV3 Norm (-/+) PAL I (UK) Decoder None AV1 Search Channel CH 22

Cable CC -Programme 02 Fine Tuning Station name BBC 2 Erase (-) Store (+) Access to the organiser (+) GB AV2 Erase / Store P. Press yellow key to select Erase (-) Store (+) line. Briefly press, your channel is stored in the memory. If you wish to Erase, press Continue the search for a different station. Search and store all the stations by repeating the above procedure starting from Search, Channel or Cable.

Repeat the process for the next programme/station starting from NORM. P. TUNING AV1 AV2 AV3 AV2 Norm (-/+) PAL I (UK) Decoder None AV1 Search Channel CH 22 Cable CC -Programme 02 Fine Tuning Station name BBC 2 Erase (-) Store (+) Access to the organiser (+) Access to the organiser When all the channels or the new channel have been retrieved, you can access the channels management menu. @@@@To return to the TUNING menu TV press once on the key . @@@@PR+ Drücken Sie gleichzeitig die entsprechende Taste und + am Fernsehgerät. Die frühere PIN-Nr ist nun gelöscht und Sie können einen neuen Code eingeben. Nach dem Ändern der PIN-Nummer brauchen die vorher gesperrten Programme nicht nochmals gesperrt werden. Vi consigliamo di staccare questo tagliando per evitare che i bambini ne prendano conoscenza. P. P.

£ P. SE NON RICORDATE PIÙ IL CODICE SEGRETO Premere il tasto giallo per selezionare le riga Sommario del menu,, poi il tasto (+) per selezionare BLOCCO PROG. Premere il tasto giallo per selezionare la riga Inserire il codice segreto. Premere simultaneamente i tasti PR+ e + del televisore. Il codice precedente viene cancellato e potete quindi inserire un nuovo codice segreto.

Dopo aver cambiato il codice, non è necessario di ribloccare i programmi che erano bloccati. Nous vous recommandons de découper cette vignette pour qu'un enfant ne puisse pas en prendre connaissance. P. £ P. SI VOUS NE VOUS SOUVENEZ PLUS DE VOTRE CODE PERSONNEL Appuyez sur la touche jaune pour sélectionner le ligne Sommaire du menu, puis sur la touche (+) pour sélectionner VERROUILLAGE.

Appuyer sur la touche jaune pour sélectionner+la ligne Entrer votre numéro de code. PR+ Appuyez simultanément sur les touches et du téléviseur. L'ancien code se trouve alors effacé et vous pouvez en entrer un nouveau. Après le changement de code, il n'est pas nécessaire de reverrouiller les programmes qui étaient verrouillés. We recommend you cut out this sticker to keep it hidden from the children. P. £ P. IF YOU NO LONGER REMEMBER YOUR PERSONAL CODE Press the yellow button to select the menu Contents line, then the (+) button to select LOCK. Press the yellow button to + select the line Enter your PIN number. Press simultaneously the PR and + buttons on the TV.

The old code is then erased and you may enter a new one. After changing code, it is not necessary to relock the programs which were already locked. Wij raden u aan deze sticker uit te knippen om te voorkomen dat een kind hem in handen krijgt P. £ P. ALS U UW PERSOONLIJKE CODENUMMER NIET MEER WEET Druk eerst op de gele toest om de regel Overzicht van het menu te selecteren, en dan op de (+) toest om VERGRENDELEN te selecteren. Druk op de gele toest om de regel Toest uw codenummer in te selecteren. Druk tegelijkertijd de toesten PR+ en + op de televisie in. De oude code is nu gewist en u kunt een nieuwe code invoeren. Na het veranderen van de code hoeven de programma's, die vergrendeld waren, niet opnieuw vergrendeld te worden. Vi rekommenderar att du klipper ut denna etikett så att inte ett barn får kännedom om koden.

P. £ P. OM DU HAR GLÖMT DIN PERSONLIGA KOD Tryck på den gula tangenten och markera menyraden Innehåll , och därefter på tangenten (+) för att markera LÅSA. Tryck på den gula tangenten och markera raden Slå in din kod. Tryck samtidigt på TV- apparatens tangenter PR+ och + .

Den gamla koden raderas då ut och du kan mata in en ny kod. Efter kodbyte är det inte nödvändigt att på nytt låsa de program som redan var låsta. Vi råder Dem til at Klippe denne del ud, for at børn ikke skal kunne få kendskab til indholdet. P. £ P.

HVIS DE HAR GLEMT DERES PERSONLIGE KODE Tryk på den gule tast for at vælge linien Indholdsfortegnelse i menuen, og derefter på tasten (+) for at vælge SPÆRRING. Tryk på den gule tast for at vælge linien Indtast Deres kodenummer. Tryk samtidigt et øjeblik på tasterne PR+ på + fjernsynet. Den gamle kode slettes, og De kan indtaste en ny. Efter ændring af PIN-koden er det ikke nødvendigt påny at spærre de allerede spærrede programmer. P. .



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/2178733)

[29DH55N user guide](http://yourpdfguides.com/dref/2178733)

<http://yourpdfguides.com/dref/2178733>