



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THOMSON DPL950VD-DVD. You'll find the answers to all your questions on the THOMSON DPL950VD-DVD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual THOMSON DPL950VD-DVD
User guide THOMSON DPL950VD-DVD
Operating instructions THOMSON DPL950VD-DVD
Instructions for use THOMSON DPL950VD-DVD
Instruction manual THOMSON DPL950VD-DVD


DPL950-EN DVD user 5/7/03 10:10 AM Page 1

Basic Playback Features

1. Press **SOURCE** on the main unit until "DVD/CD" appears on the display or **DVD** source key on the remote to select DVD/CD input source.



 2. Open disc tray for loading discs with label side facing up. Press again to close it.



3. Press **PLAY/PAUSE** on the unit or **PLAY** on the remote control to start playback.

- Press **PLAY/PAUSE** on the unit or **PAUSE** to pause playing during playback. Press **PLAY/PAUSE** on the main unit or **PLAY** on the remote to resume normal playback.



 
- Press **SKIP REVERSE** to go back to the previous chapter or **SKIP FORWARD** to move to the next chapter.



Note: Remote control selector must be on DVD/CD position.

DVD Player

- Press **STOP** once to stop playback and go into resume mode.



NOTE

RESUME MODE:
The next time **PLAY** is pressed, the unit will begin playback at the location where it was last stopped. Press **STOP** key again to cancel the resume mode.

Quick search

1. While playing a disc, press **REVERSE** on the remote control to scan backwards through the disc. Press **FORWARD** on the remote for scanning forward. Press repeatedly to change searching speed to 1,2 or 3 times for VCD and 1,2,3 or 4 for DVD.



2. Press **PLAY** at any time to resume normal playback.

Freeze frame, frame advance

1. Press **PAUSE** on the remote control to freeze picture during playback. Each time you press it again, the picture advances one frame.



2. Press **PAUSE** repeatedly to move forward in still frame.

3. Press **PLAY** to resume normal playback.

19



[You're reading an excerpt. Click here to read official THOMSON DPL950VD-DVD user guide](http://yourpdfguides.com/dref/1241910)
<http://yourpdfguides.com/dref/1241910>

Manual abstract:

Press SOURCE on the main unit until "DVD/CD" appears on the display or DVD source key on the remote to select DVD/CD input source. ESET + BAND/APP SOURCE BASS/TREBLE RP OPEN/CLOSE · Press STOP once to stop playback and go into resume mode. memo REV 0 FWD EN clear PLAY theater modes info stereo delay tuner up level PHONES ZOOM REC vcr PAUSE STOP RANDOM SURROUND tv dvd digital MULTI PRODUCT tape sat/cab video / vcr RDS tuner NOTE R D I G I T A L DVD PRO.LOGIC VCD CD INTRORANDOM MP3 L C LS LFE RS RESUME MODE: The next time PLAY is pressed, the unit will begin playback at the location where it was last stopped. Press STOP key again to cancel the resume mode. 2. Open disc tray for loading discs with label side facing up. Press again to close it. PHONES VOLUM Quick search 1. While playing a disc, press REVERSE on the remote control to scan backwards through the disc.

Press FORWARD on the remote for scanning forward. Press repeatedly to change searching speed to 1,2 or 3 times for VCD and 1,2,3 or 4 for DVD. 2. Press PLAY at any time to resume normal playback. memo REV 3.

Press PLAY/PAUSE on the unit or PLAY on the remote control to start playback · Press PLAY/PAUSE on the unit or PAUSE to pause playing during playback. Press PLAY/PAUSE on the main unit or PLAY on the remote to resume normal playback. 7 memo PRESET + 0 FWD PRESET + 8 0 FWD 9 clear PLAY REV clear PLAY ZOOM REC vcr PAUSE STOP PHONES PHONES ZOOM REC vcr PAUSE STOP · Press SKIP REVERSE to go back to the previous chapter or SKIP FORWARD to move to the next chapter. py tuner down tv PRESET PRESET + Freeze frame, frame advance 1. Press PAUSE on the remote control to freeze picture during playback.

Each time you press it again, the picture advances one frame. 2. Press PAUSE repeatedly to move forward in still frame. 3. Press PLAY to resume normal playback. REV vcr/sat return menu pr PHONE pr 1 2 3 clear FWD 5 7 memo 8 0 FWD 6 9 Note: Remote control selector must be on DVD/CD position. ZOOM REC vcr PAUSE STOP REV clear PLAY MULTI PRODUCT PAUSE 19 DPL950-EN DVD new 5/7/03 10:10 AM Page 2 DVD Player Slow motion playback 1. Press PLAY/PAUSE on the main unit or PAUSE in the remote control to freeze the picture during playback. memo REV On-screen banner display You can access the on-screen banner display during playback to select many playback features. Each feature is illustrated with an icon.

However, each banner display feature is available only if the disc was created with that particular feature. An invalid icon appears on the screen when you select an icon that does not function. Also, the icon is "grayed out" to tell you so. @@Advance picture in slow motion. @@@@Press INFO on the remote control during playback to show on-screen banner. OPEN/CLOSE 8 0 FWD 9 REV clear PLAY theater modes info stereo delay tuner up level PHONES tv ZOOM REC vcr PAUSE STOP dvd digital tape sat/cab video / vcr pty RDS tuner hifi dvd /cd 2. Use the LEFT or RIGHT arrows on the remote control to move cursor on the banner. Selected feature icon will be highlighted. theater modes info stereo tv dvd digital tape sat/cab video / vcr pt RDS tuner up level delay OPEN/CLOSE tuner hifi d d / d 3. Press OK to open menu under selected feature.

stereo tv dvd digital tape sat/cab video / vcr pty tuner down tv vcr/sat return delay tuner up level tuner hifi dvd /cd RDS menu 20 DPL950-EN DVD new 5/7/03 10:10 AM Page 3 DVD Player Selecting a title 1. Refer to previous page "General use" to open the title menu. 2. Enter title number using the number keys on the remote control. Add 0 in front of single-digit title number (e.

g. 9 = 09). pr 2. Press the UP/DOWN key to select the audio channel you want, then press OK to confirm. y tv dvd digital tape sat/cab video / vcr pty tuner down tv vcr/sat return digital tuner up level tape sat/cab video / vcr pty tuner up level EN tuner tuner hifi dvd /cd RDS hifi dvd /cd RDS tuner down tv vcr/sat return menu menu 1 4 7 memo REV 2 5 8 0 3 6 9 clear PLAY FWD NOTE Some discs have one title only.

NOTE This feature only works if the disc was created with multiple audio tracks. Selecting a chapter Selecting subtitle language 1. Refer to previous page "General use" to open the title menu. 2. Enter chapter number using the number keys on the remote control. Add 0 in front of single-digit chapter number (e.g. 9 = 09) pr 1. Refer to previous page "General use" to open the subtitle menu. 2.

Press the UP/DOWN key to select the audio channel you want, then press OK to confirm. y tv dvd digital tape sat/cab video / vcr pty tuner down RDS tuner up level tape sat/cab video / vcr pty tuner down menu tv vcr/sat return tv dvd digital tuner up level 1 4 7 memo REV 2 5 8 0 3 6 9 tuner tuner hifi dvd /cd hifi dvd /cd RDS clear PLAY FWD tv vcr/sat return menu NOTE The chapter feature will not work if the disc is not formatted with separate chapters. NoteL To exit the OSD banner, press the INFO key. Selecting audio language 1. Refer to previous page "General use" to open the subtitle menu. NOTE This feature only works if the disc was created with subtitles. 21 DPL950-EN DVD new 5/7/03 10:10 AM Page 4 DVD Player Selecting camera angle 1. Refer to page 20 "General use" to open the camera angle menu. Using bookmarks The bookmark feature allows you to mark a point on the disc that you can go to quickly. You can store up to 9 bookmarks.

2. Press the UP/DOWN key to select the audio channel you want, then press OK to confirm. stereo tv dvd digital tape sat/cab video tuner / vcr hifi dvd /cd Adding bookmarks 1. Refer to Page 20 "General use" to open the bookmark menu. delay tv tuner up level tape sat/cab video / vcr dvd stereo digital delay tuner up level tuner pty tuner down RDS hifi dvd /cd pty tuner down RDS tv vcr/sat return menu tv vcr/sat return menu NOTE This feature only works if the disc was created with multiple angles.

2. Use the arrows on the remote to move the cursor (yellow frame) to the "Mark" check line, then press OK to add bookmark when you reach the scene you want to do so. stereo tv dvd digital tape sat/cab video / vcr pty tuner down RDS tuner up level tape sat/cab video / vcr pty tuner down menu tv vcr/sat return delay tv dvd stereo digital delay tuner up level tuner tuner hifi dvd /cd hifi dvd /cd RDS Selecting zoom ratio 1.Press ZOOM button on the remote to select the zoom ratio. REV tv vcr/sat return menu 3.

To add another bookmark, move the cursor to the right with arrow button and then press OK when you reach another scene you want to do so.



[You're reading an excerpt. Click here to read official THOMSON](#)

[DPL950VD-DVD user guide](#)

<http://yourpdfguides.com/dref/1241910>

4. Move cursor to the door icon and then press OK to exit menu. clear PLAY FWD ZOOM REC vcr PAUSE STOP MULTI PRODUCT Recalling bookmarks
 1. @@@@NORMAL > ZOOM 1 > ZOOM 2 > NORMAL 2. @@@@3. Press OK to recall bookmarked scene. 4. @@@@2. @@Press OK to confirm setting.

2. @@@@button on the main unit to display program edit playlist. 2. @@@@disc tray is opened; 2. power is turned off; 3. STOP is pressed twice. @@Press and hold the BASS/TRE/TV OUT button for 3 seconds. 4. Repeat steps 2 and 3 to delete additional items. 5. Use the arrows to select and highlight "Play" (start program playback) or "Done" (return to normal tuner tape sat/cab RDS video / vcr pty hifi dvd /cd tuner menu hifi dvd /cd RDS For languages other than options available: 3. Move down and select "Other" and then press OK. 4. @@@@type) which are not suitable for some audience, e.g. children. Such kind of DVDs is encoded with a specific rating level. @@1. Open the rating menu. Password Set password To disable the viewing of rated DVDs, a four-digit password must be selected.

1. Open the "Set Password" menu. EN 8 7 5 6R 4 PG-13 3 PG 2 1G Set Password Change Password 2. Use the UP or DOWN arrows to highlight the rating that would require a password to play. Press OK to return to main menu. Ratings highlighted in blue require password. tv dvd digital tape sat/cab video / vcr pty tuner down tv vcr/sat return OPEN/CLOSE 2. Select "Set Password" and press OK. 3. Use the number buttons to enter password and then press OK.

theater modes info stereo delay tuner up level tuner up level tv dvd digital tuner tape sat/cab RDS video / vcr pty hifi dvd /cd tuner menu hifi dvd /cd RDS The rating systems is based on information encoded on the DVD disc being played, so movies may carry a rating symbol, the disc may or may not contain that rating in its software. In addition to the five standard (MPAA) rating symbols of "G" (level 2), "PG" (Parental Guidance, level 4), "PG13" (Parental Guidance and 13 years old, level 4), "R" (Restricted, level 6) and "NC17" (from 17 years old, level 7), the DVD will accommodate a total of 8 rating steps, as set by the DVD makers. These additional steps allows for more critical control of program playback for all audiences. Level 8: All DVDs can be played (Factory preset). Level 7 to 2: DVDs for general audiences/ children can be played. Level 1: DVDs for children can be played, DVDs for adults/ general audiences are prohibited. 4. Repeat step 3 to confirm password. Note: \ will be displayed on the VFD once password is set. 27 DPL950-EN DVD new 5/7/03 10:11 AM Page 10 DVD Player NOTE · When incorrect password is entered, new password menu appears and you can enter and confirm password again. · A lock icon shows on unit display when password is required to view rated discs. Important: keep the password in a safe place or remember it reliably as access to rated discs or rating/ password menus requires the correct password. 4. Use the number buttons to enter new password and then press OK. 5. Repeat the above step to confirm password and return to password menu. Use the LEFT arrow to return to the main menu. Clear password 1. Refer to page 25 "General use" to open the password menu. 2. Use the number buttons to enter password and then press OK. 3. Move up or down the menu using the UP or DOWN arrows and select "Clear Password". Press OK to clear password. Use the LEFT arrow to return to the main menu. Change password Current password must be entered first to change password. 1. Open the password menu. Set Password Change Password 2. Use the number buttons to enter password and then press OK.

pr stereo info delay tuner up level tv dvd digital 1 4 7 memo REV 2 5 8 0 3 6 9 tape sat/cab video / vcr pty tuner down RDS tuner clear PLAY FWD hifi dvd /cd 3. @@1. Open the TV aspect menu. Dynamic range 1. @@@@- For 16:9 movie you will get (Do not select 16:9 widescreen setting if you are using a 4:3 TV set. or the image may look distorted with some DVD disc.) - For 4:3 movie you will get 2. Use the UP or DOWN arrows to select Dynamic Range and then press OK to return to main menu. tv dvd digital tape sat/cab video / vcr pty tuner down tv vcr/sat return OPEN/CLOSE theater modes info stereo delay tuner up level tuner up level tv dvd digital tuner tape sat/cab RDS video / vcr pty hifi dvd /cd tuner menu hifi dvd /cd RDS Digital audio out 1. To select digital audio out, enter the digital audio out menu.

If you have a conventional (4:3) TV, - if you select 4:3 letterbox for 16:9 movie, you will get - if you select 4:3 Pan Scan for 16:9 movie, you will get (the left and right edges are hidden) Off Compressed PCM - for 4:3 movie, for both selections, you will get 2. Use the UP or DOWN arrows to select digital audio out and then press OK to return to main menu. tv dvd digital tape sat/cab video / vcr pty tuner down tv vcr/sat return OPEN/CLOSE theater modes info stereo delay tuner up level tuner up level tv dvd digital tuner tape sat/cab RDS video / vcr pty hifi dvd /cd tuner menu hifi dvd /cd RDS 29 .



[You're reading an excerpt. Click here to read official THOMSON DPL950VD-DVD user guide](http://yourpdfguides.com/dref/1241910)
<http://yourpdfguides.com/dref/1241910>