



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THOMSON DTH 161. You'll find the answers to all your questions on the THOMSON DTH 161 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual THOMSON DTH 161 User guide THOMSON DTH 161 Operating instructions THOMSON DTH 161 Instructions for use THOMSON DTH 161 Instruction manual THOMSON DTH 161

Safety Information

MAINT CONNECTIONS

CLASS 1 LASER PRODUCT

Basic Connections

2.1 Basic connections (DVD player + TV + video recorder)

2.2 VIDEO IN/OUT

3. AUDIO IN and AUDIO OUT (English version)

4. Coaxial digital audio output (COAXIAL)

Other Connection Options

Remote Control

Front Panel Controls

Basic Playback Operations

Operating the DVD Player

Playback

Advanced playback

Still Image

Important Information

Connections & Setup

Some points to check before you connect your TV set

THOMSON DVD 161, user manual for the DVD 161

THOMSON DVD 161, user manual for the DVD 161

EN

DVD Player DTH160E DTH161B

Basic Playback Operations

Operating the DVD Player

Playback

Advanced playback

Still Image



You're reading an excerpt. Click here to read official THOMSON DTH 161 user guide <http://yourpdfguides.com/dref/1242163>

Manual abstract:

@@@The components of this appliance are sensitive to heat. The maximum ambient temperature should not exceed 35° Celsius. @@· The humidity of the room should not exceed 75%. If you have to use the appliance outdoors, do not expose it to rain or splashing water. The appliance should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on top of it. · Moving it from a cold environment to a warm one is likely to cause condensation on some components inside the appliance. Let the condensation disappear of its own accord before turning the appliance on again. · Before moving the player, make sure the disc tray is empty. Please respect the environment. Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.

user manual CAUTION - LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM. This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste. The European Union has implemented a specific collection and recycling system for which manufacturers are responsible. This appliance has been designed and manufactured with high quality materials and components that can be recycled and reused.

Electrical and electronic appliances are liable to contain parts that are necessary in order for the system to work properly but which can become a health and environmental hazard if they are not handled or disposed of in the proper way. Consequently, please do not throw out your inoperative appliance with the household waste. If you are the owner of the appliance, you must deposit it at the appropriate local collection point or leave it with the vendor when buying a new appliance. · If you are a professional user, please follow your supplier's instructions. · If the appliance is rented to you or left in your care, please contact your service provider.

Help us protect the environment in which we live! CLASS 1 LASER PRODUCT RISK OF ELECTRIC SHOCK DO NOT OPEN THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT. CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USERS SERVICEABLE PARTS INSIDE. · REFERRING TO QUALIFIED SERVICE PERSONNEL. THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT. CAUTION SEE MARKING ON BOTTOM / BACK OF PRODUCT WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. DVD Player DTH160E DTH161B THOMSON 46, quai Alphonse Le Gallo 92648 Boulogne HELPLINE You can contact THOMSON by dialling: 0871 712 1312 (for United Kingdom, £0.10/mn inc VAT) www.thomson-europe.com Cedex FRANCE The descriptions and characteristics in this owner's manual are for the purpose of general reference only and not as a guarantee.

In order to provide you with the highest quality product, we may make changes or modifications without prior notice. The English version serves as the final reference on all product and operational details should any discrepancies arise in other languages. 5639 6410 (EN) EN It is important to read this instruction book prior to using your new product for the first time. www.thomson.net Basic Connections 1. Basic connections (DVD player + TV + video recorder) 1. Connect the DVD player Scart socket (TV AUDIO VIDEO OUT) to the television set's Scart socket (AV1, EXT1, AUX1) using a Scart lead (not provided). - OR 1. If your television set does not have two Scart sockets, connect the DVD player to the video recorder's AV2 socket using a Scart lead (not provided). If you have a satellite or cable receiver you can also connect the DVD player to the receiver's second Scart socket. Note: If your video recorder only has one Scart socket, but has a modulator, use the aerial cable to connect the video recorder to the television set, adjust the video recorder's modulator, then connect the DVD player to the video recorder's Scart socket. 2. Connect the video recorder (or satellite receiver) to the television set as shown in the video recorder's (or satellite receiver's) user guide. 3.

Connect the DVD player to the mains socket using the mains lead. 4. Switch on the devices. Note: If one of the devices is not working, check that all the cables have been inserted properly into the sockets which they should be connected to. GEFAHR EINES ELEKTRISCHEN SCHLAGS Other Connection Options 2. VIDEO OUT socket This socket (yellow) is also known as a composite video socket. The video cable (not supplied) usually comes with two audio cables (white and red). The picture quality obtained using a video connection is poorer compared to that obtained using a Scart connection. Remote Control ON/STANDBY CLEAR DISPLAY MUTE 0-9 REPEAT A-B PAUSE/STEP OPEN/CLOSE REV FWD STOP ANGLE ZOOM ON/OFF Function Clears some functions. Provides playback status. Lowers and restores the volume. Number entry. Accesses the Repeat playback mode. Accesses the A-B repeat playback mode. Freezes frame, frame advance.

Opens and closes the tray. Searches back through the disc. Searches forward through the disc. Stops playback. Accesses the camera angle. Accesses the Zoom feature (if available). Navigates through the menus. Advances to the next/preceding chapter or track. Selects item highlighted in menu. Starts playing a disc. Goes to a specific play time or track Accesses and exits the General Setup (main) menu. Turns the subtitle on and off. Accesses the title of the disc For VCD Disc, selects PBC Selects the audio language. Accesses the disc's menu (if available). To access the PBC menu for VCD disc.

Front Panel Controls Basic Playback Operations Operating the DVD player 1. Switch on your TV set. 2. Press the ON/STANDBY button on the remote control or press and hold the STOP button located on the DVD player's front panel. 3. AUDIO L (left) and AUDIO R (right) sockets These are analogue audio output sockets. The AUDIO L socket and cable are white, while the AUDIO R socket and cable are red. Connect the DVD player's AUDIO L and R sockets to the television set's AUDIO L and R sockets using audio cables (not supplied). Note: If your television set only has one audio socket connect it to the DVD player's left socket (white). Playback 2 4 31 1. Press the OPEN/CLOSE button on the front of the appliance or on the remote control to open the disc tray. 2. Put the disc in with the printed side upwards (in the case of a single-sided disc). 3. Press OPEN/CLOSE again to close the disc tray.

Play starts automatically. If a menu appears, one of its options can be selected to start playing the disc. Select it and press ENTER. 4. Press STOP to stop playback. Notes: The player stores the point where playback was interrupted.



[You're reading an excerpt. Click here to read official THOMSON DTH 161 user guide](http://yourpdfguides.com/dref/1242163)
<http://yourpdfguides.com/dref/1242163>

If you press **PLAY** again, playback resumes from this point. To stop playback completely or to start again from the beginning, press **STOP** twice. If the player is left in **STOP** mode for more than five minutes without any user interaction, a screen saver is activated. 4.

Coaxial digital audio output (COAXIAL) This socket offers a higher level of sound quality compared to that provided using an analogue audio connection. For 6-channel multichannel sound, connect the audio/video amplifier or receiver to this socket using a coaxial cable (not supplied). 1 2 3 4 **SENSOR** - Remote sensor. Point the remote control here. **OPEN/CLOSE** - To open and close the disc tray.

STOP - To stop disc playback. To switch the appliance on and off. **PLAY** - To start playing a disc. **ENTER/PLAY SEARCH SETUP** Accelerated play While the disc is playing, press the **REV** or **FWD** button one or more times to vary the speed and direction of the accelerated play. 1 Video cable (yellow) Audio cable (red and white) Coaxial cable **SUBTITLE TITLE PBC AUDIO DVD MENU** Still image While the disc is playing, press **PAUSE** once for freeze frame.

Inserting batteries in the remote control Insert a CR2025 battery in the remote control. · Observe the polarities indicated inside the battery compartment. Replace only with the type of batteries specified above. Do not dispose of them in a fire or recharge them. · If you are not using the remote control for a long period of time, remove the batteries. · Please respect the environment and prevailing regulations. Before you dispose of batteries or accumulators, ask your dealer whether they are subject to special recycling and if they will accept them for disposal. Note: After five minutes in **PAUSE** with no user interaction, the player goes into screen saver mode. 3 2 4 Basic Playback Operations Frame advance (all discs except audio CD, mp3, WMA and DivX) 1. While the disc is playing, press **PAUSE** once.

2. Press **PAUSE** a number of times to advance forward image by image. 3. Press **PLAY** to resume normal playback. Play Modes Repeat playback While the disc is playing, press the **REPEAT** button repeatedly to select a play mode: DVD: Repeat Chapter, Repeat Title, Repeat Off; VCD and audio CD: Repeat Track, Repeat All, Repeat Off; Advanced Functions Audio (DVD, VCD and audio CD) Some discs have several audio tracks used for different languages or different audio formats. @@@@It was developed in collaboration with THOMSON. @@@@JPEG files are image files. Make sure that they have a resolution of less than 5 megapixels. @@While the disc is playing, press **PAUSE** once. 2.

@@@3. Press **PLAY** to resume normal playback. @@Then press A-B again at the end of the sequence. @@@@Press Eo a previous menu using the button. @@VOD Refer to "To rent (or purchase) DivX VOD files". @@@@Set the function to PAL or NTSC and press **ENTER** to confirm. @@@@Select an option using the buttons, and press **ENTER** to confirm. Note: This function is available only on DVD discs recorded in Dolby Digital. Disc menu To change the language of the disc menus, choose the language using the and press **ENTER** to confirm. buttons Player Menus Ratings You can control access to the player and the type of discs your family can watch with the rating function.

There are eight levels of parental control. Note: The disc publisher is responsible for coding scenes according to the rating limits. In Europe, very few discs have coded scenes. 1. Select the rating level using the buttons. 2. Press **ENTER** to enter the Password Setup menu. Note: To access the Ratings submenu, you must input a four-digit password. If you have not chosen one yet, you are prompted to do so when you try to access it (see option Password). Password This option allows you to set or change the password.

1. Press **ENTER** to enter the Change Password menu. 2. To change the password, enter the current four-digit password in the "Old Password" box. Then enter the new password in the "New Password" box. You are then prompted to enter it again in the "Confirm Password" box to confirm and press **ENTER**. Note: Password is not defined until you set it. Additional Information Troubleshooting The appliance does not switch on. · Make sure it is plugged into a mains socket. · Press the button on the remote control or the **STOP** button on the front of the appliance.

It is impossible to read the disc. · Insert the disc with the printed side facing up. · Check that the disc can actually be played by this device (see below). · Check that the disc's regional code matches the player's regional code. This player's regional code is 2. · Clean the disc (see below). There is no picture. · Check you have switched on the TV set. · Check the connections. · Select the AV input assigned to the player on the TV.

The picture is of poor quality (with snow or lines). · Check the connections. There is no sound or the sound is of poor quality. · Check the connections. · Turn on the audio equipment connected to the player, if any. The remote control does not work or works only intermittently. · Check that batteries are inserted or change them. · Aim the remote control at the appliance. The infrared beam must not be blocked or interrupted. The subtitles do not appear.

· Check that the DVD disc provides subtitles. · Refer to the section on how to display subtitles. The disc menu language is not the correct one. · The disc menu language has not been set up. · The language of your choice is not available on the disc. You have forgotten your password (Parental control). · Open the disc tray, press **CLEAR** and then enter 00001 with the numeric buttons. Turn off the player and then turn it on again. Additional Information Precautions Use · If your appliance has been stored in a cool place for any length of time, during a journey for example, wait for about 2 hours before using it. · The openings located on the top and bottom are for ventilation and must not be obstructed.

· During thunderstorms, we recommend that you isolate the appliance from the electrical supply so that it is not damaged by electrical or electromagnetic surges. · This appliance is designed for continuous use. Switching off the DVD player to stand-by mode does not disconnect it from the mains supply. To completely isolate the equipment, remove the plug from the mains socket as some components remain connected to the electrical supply. · If you notice any burning or smoke, disconnect the appliance immediately to avoid any risk of electrocution.

· Do not attempt to look inside the appliance through the disk tray opening or any other opening. You may be electrocuted or exposed to laser radiation. · This appliance is for domestic use only and must not be used for industrial purposes. · Total or partial copying of recordings protected by copyright legislation, without the explicit permission of the holder of the rights, contravenes current legislation.



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/1242163)

[DTH 161 user guide](http://yourpdfguides.com/dref/1242163)

<http://yourpdfguides.com/dref/1242163>

Copying or downloading music files for sale or any other business purpose constitutes or could constitute a violation of copyright law.

Additional Information Handling and caring for discs · Handle your discs with care. Hold the disc with your fingers at the edges or through the hole. · Insert the disc with the label facing up (for a single-sided disc). · Place the disc properly into the tray in the allotted holder. · Use a soft cloth to clean discs if necessary, always wiping from the centre to the edge. · Always put discs back in their cases after use and store in a vertical position. · Do not close the tray with two discs in it or with a disc not sitting correctly in the holder. @@ · Do not write on a disc. · Do not move the player when a disc is being played.

@@@@@Keep this certificate as well as the invoice.

These documents are required in the event of claiming your guarantee rights. · All repairs during the guarantee period must be carried out by an authorised engineer for our brand. If this condition is not met, your rights will no longer be valid. · Never open the appliance yourself, since this may put you at risk or damage the equipment. THOMSON does not accept any liability if the appliance is used in any way other than in accordance with this manual. DISCLAIMER OF WARRANTIES: TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, DECLARATIONS AND WARRANTIES OF NON-INFRINGEMENT OF COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHTS RESULTING FROM THE USE OF THE PRODUCT IN CONDITIONS OTHER THAN THOSE SPECIFIED ABOVE ARE HEREBY DISCLAIMED. Cleaning · Use a soft, dry, clean cloth. Regularly dust the vents at the back or sides. · Using solvents, abrasive or alcohol-based products risks damaging the appliance. · If an object or liquid enters inside the appliance, unplug it immediately and have it checked by an authorised engineer.

Additional Information Discs and files you can play In spite of progress made to ensure playability of all discs types, it is not possible to guarantee playback of discs which are not in conformity with DVD, CD, VCD or SVCD standards. This unit may not play some recordings or files on CD-R, CD-RW, DVD-R, DVD-RW, DVD+R, DVD+RW due to differences in recording formats, software used and disc types. DVD-Video, DVD-R, DVD-RW, DVD+R, DVD+RW, VCD - Video Compact Disc, SVCD - Super Video Compact Disc, Audio CDs, CD-R, CD-RW, DivX files, mp3 files, WMA (Windows Media Audio) files, Kodak Picture CDs, JPEG files Additional Information DVD copy protection In accordance with the DVD standard, your DVD player is equipped with a Copy Protection system, which can be switched on and off by the DVD disc itself, in order to make any recording of the relevant DVD disc onto a videotape of very poor picture quality, or even impossible. "This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home use only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited." Note on DivX files DVD+Rewritable Before playing DivX or mpeg4 files, please be sure of their origin and that you have legally purchased or rented the contents. Pirate copying is illegal and may result in sanctions.

Private copies of your own material for your own use may be legal in some countries. Make sure you are aware of any applicable laws. DTS - is a digital sound compression technique developed by Digital Theater Sound Systems for digital audio multichannel signals. "DTS" and "DTS Digital Out" are registered trademarks of Digital Theater Systems inc. Regional coding Your DVD player has been designed to process regional management information that is stored on DVD discs. DVD discs that have different regional codes to that of your player cannot be played. The regional code for your player is 2 (Europe, the Middle East, South Africa, Japan). ALL means all regions. When you buy a disc check that it bears the correct logo. Technical data Power requirements: AC 230V, 50 Hz Power consumption: 15W Net Weight: 1.

1 kg Operating temperature: 5°C to 35°C (41°F to 95°F) Operating humidity: 5 % to 90 % (no condensation) THOMSON Multimedia Sales Europe 46, quai A. Le Gallo 92648 Boulogne Cedex FRANCE 322 019 464 RCS NANTERRE <http://www.thomson-europe.com> © Copyright THOMSON 2006 In case of malfunction due to electrostatic discharge, reset the apparatus by disconnecting from mains supply. .



[You're reading an excerpt. Click here to read official THOMSON DTH 161 user guide](http://yourpdfguides.com/dref/1242163)
<http://yourpdfguides.com/dref/1242163>