



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THOMSON DTH8040E. You'll find the answers to all your questions on the THOMSON DTH8040E in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual THOMSON DTH8040E**  
**User guide THOMSON DTH8040E**  
**Operating instructions THOMSON DTH8040E**  
**Instructions for use THOMSON DTH8040E**  
**Instruction manual THOMSON DTH8040E**

2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 4

Contents	
<b>Connections and initial set up</b>	
Precautions and information before connecting	3
Inserting the batteries	2
Important information regarding the batteries	2
<b>Basic connections</b>	3
About your device	4
<b>Placing the DVD recorder in service</b>	4
Using the remote control unit correctly	4
Switch on your DVD recorder and your TV set	4
<b>Automatic channel search</b>	5
Setting the channels	6
Channel setting	6
<b>Manual channel search</b>	7
Channel options	8
Channel setting	8
Setting the channels	8
<b>Other recommended connections</b>	9
Satellite or cable receiver (or decoder)	9
Video recorder	10
Satellite receiver and video recorder	10
Set-top boxes (STB)	11
Set-top boxes and cables (outputs)	12
Print sockets (print)	13
<b>The buttons on the front</b>	14
<b>The messages on the display</b>	15
TV Functions	15
With a disc	15
Other indicators	15
Display on your DVD recorder (menus and banners)	15
<b>Remote control</b>	
Description of keys in DVD mode	16
Using the remote control handset to control your television and satellite or cable receiver	17
Controlling TV set	17
Controlling a satellite or cable receiver	17
Remote control - Code A-B	17
<b>Programming the remote control</b>	18
Automatic code search	18
Manual programming	18
<b>Recording functions</b>	
To watch TV Programmes	19
To change channel	19
Record the current programme	20
Stop recording	21
Closing a DVD-R or DVD-RW disc (Finishing a disc)	21
Programming a recording	22
ShowView® Recording	24
Programming a recording	24
Recording from a connected device	25
From a satellite receiver or cable receiver (AV2 socket)	25
From a Camcorder or other device (AV1, AV4 socket)	25
<b>Library</b>	26
To find a Title (recording)	26
Sort by Title	27
Sort by Category sort by date	27
Access to the title menu	27
Assign or Change the Category of a title	28
Show discs	28
<b>Playing a disc</b>	
Discs you can record	29
Discs you can play	29
Interactive banners	30
In TELL VISION mode (Operating principle)	30
Information on the TV channel being watched	30
Recording the channel being watched	30
<b>In DISC PLAYING mode (Operating principle)</b>	31
With a DVD	31
With an audio CD	31
With a VCD (Video CD)	31
<b>Loading and playing a disc</b>	32
Advance (DVD)	32
<b>Search Options</b>	32
Quick search of an image or a track	32
Still picture and Frame advance	32
Slow motion (in Pause mode on an image)	33
Skipping a chapter or a track (DVD - VCD - CD)	33
Some Again™ (DVD)	33
Advance (DVD)	33
<b>Playback options</b>	33
Enlarge an image (zoom)	33
Title, chapter, time elapsed, audio and subtitle	33
<b>The disc information banner</b>	34
Timer (DVD, VCD, CD)	34
Title or Track (DVD, VCD, CD)	34
Chapter (DVD)	34
Subtitle and dialogue language (DVD)	35
Play modes of discs (DVD - VCD)	35
Camera angles (DVD)	36
PRC - Playback control menu (VCD)	36
Play mode for Audio CDs	36
InterScan (CD)	36
Edit Menu (DVD-RW)	36
Access to the disc menu	37
The edit menu functions	38
<b>Playing images (JPEG) and sounds (mp3) files</b>	40
Reading music files (MP3) and / or images (JPEG)	41
Image Functions	41
<b>Menus</b>	
Disc menu	42
Play Disc	42
Disc Title menu (DVD-R, DVD-RW)	42
Resume disc or a title (DVD-R, DVD-RW)	44
Player Menu	45
Pause	45
Disc options	46
Language Menu	47
Parental control menu	49
System Options Menu	51
Recording Options Menu	53
<b>Further information</b>	
Troubleshooting guide	54
Customer	57
Disclaimer of warranty	57
Conditions	57
Discs	57
For your safety	57
DVD copy protection	57
Remote control - Code A-B	58
Technical data	58



[You're reading an excerpt. Click here to read official THOMSON DTH8040E user guide](http://yourpdfguides.com/dref/2178264)  
<http://yourpdfguides.com/dref/2178264>

**Manual abstract:**

Therefore be careful not to place any object containing a liquid (vase, glass, bottle,...) on or near your appliance · The DVD recorder must not be near or exposed to a flame. For instance, do not place a candle on or near the device · Protect the DVD recorder from moisture and excess heat (e.g. fireplace) or equipment creating strong magnetic or electric fields (i. e. speakers ..

.). Before moving the device, ensure the disc tray is empty. Switching off the DVD recorder to the stand-by mode does not disconnect the electricity supply. In order to separate the device completely from the mains, it has to be disconnected by unplugging the mains plug.

When connecting, ensure that the plugs of the various cables are pushed securely into their corresponding sockets. Your DVD recorder is not intended for industrial use but for domestic purposes only. Use of this product is for personal use only. Copying CDs or downloading music files for sales or other business purpose is or may be a violation of copyright law. Important notice: Please read the recommendations given on page 57.

Inserting the batteries 1 2 3 Important information regarding the batteries · Do not mix different types of batteries or new and old batteries. Do not use rechargeable batteries. In order to avoid any risk of explosion, observe polarities indicated inside the battery compartment. Replace only with the type of batteries specified above. Do not throw them into fire, do not recharge them. Remove the batteries from the remote control unit if you are not going to use it for several weeks. Immediately remove any leaking batteries. Take care in doing this, as leaking batteries may cause burns to the skin or other physical injury. · Please respect the environment and prevailing regulations. Before you dispose of batteries ask your dealer whether they are subject to special recycling and if he accepts to take them back.

2 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 3 Connections and initial set up Basic connections Your DVD recorder has many connection possibilities to allow it to fit into a setup comprising several devices. We recommend that you follow the connection setup on this page, and then carry out the adjustments shown on the following pages. You will first need to set up the channels as explained in the following pages before the final interconnection of the devices, described on pages 9 to 12. EN 1 TV United Kingdom Ireland Europe Scart cable 3 Coaxial Cable 2 220 - 240 V 50 - 60 Hz 4 DVD recobottom of the screen. For easy channel identification, we suggest you have a TV magazine at hand. Note: Channel sorting instructions: Move: press OK (then the / keys until you reach the desired position (Pr no. on the left of the list then OK: swapping of the 2 channels). Delete: CLEAR key. / to search for a name on the Rename: INFO keys, then list.

Validate by pressing OK. Decoder adjustment : AV key (indicates that the images of the selected channel will be decrypted by a decoder, of the CANAL+ type, connected to connector AV2. The symbol of a decoder displayed alongside the name of the channel confirms the adjustment). 10. When all channels have been sorted to your liking, press the key.

11. Your DVD recorder has an automatic time (and date) setting function. In general, no setting is required on your part. If the time and date information are correct, press OK. A message appears.

It indicates that the installation of the channels are now complete. Press OK. The main menu of your DVD recorder appears. Clock setting AutoClock: If the date and time information is not correct, adjust the clock as described below, then check in the System Options menu that the automatic time setting is activated. This menu is reached from the Setup menu (see page 52). The time setting of the DVD recorder is important for the correct functioning of your programmed recordings. 1. Select Year. Enter 4 digits for the year (2, 0, 0, 4 for 2004). 2.

Then enter the 4 digits of the date (press 1, 5, 0, 5 for 15th May). 3. Enter the 4 digits of the time (press 1, 5, 5, 9 for 15:59 (03:59 PM)). 4. Then press twice on OK. The Main Menu will appear again. Channel set-up is complete. Note: You can now use your DVD recorder and take advantage of its numerous functions.

If you want to connect a satellite receiver to your DVD recorder, refer to page 9 for the recommended connection. You can also complete your installation through the settings available in the System Options menu (refer to pages 51-52).

These adjustments depend on the other devices that you are likely to connect to your DVD recorder. If you want to redo the automatic channel set-up, you will have to select Interactive setup in the Installation menu (in the Setup menu). 6 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 7 Connections and initial set up Manual channel search If you want to set up a new channel, use the manual search procedure which will enable you to add a channel to the ones already set-up on your DVD recorder. The channels already stored will not be deleted.

During the initial installation, if you carried out the automatic installation described on page 5, you do not need to carry out the steps shown on 7 and 8. 1. If the main menu is not displayed, press the MENU key. 2. Select the Setup line using the or keys, and press OK to validate. or or or keys, and press OK to validate. keys, and press OK to validate. keys on the remote control, and press 3. Select the Installation line using the 4. Select the Manual Search line using the EN 5. Select your country of residence using the OK. A set-up window will appear. The Standard line is highlighted. 6. Select your country's TV standard using the key.

Note: the standards displayed depend on the country selected in step 5. FRANCE (LL') for France, EURO BG (BGH) for Western Europe. DKK' for Eastern Europe. I for the United Kingdom. 7. Select the Reception line using the · or keys, and use the of antenna. Reception through external antenna: select Antenna (Ch). Cable reception: select Cable (Ca). or keys. key to choose the type 8.

Select the Channel line using the 9. Press PR+ to start the Manual search. The search starts. When a channel is found, the picture appears in the background. The channel number is indicated (e.

g.: Ch 06). next to the channel number. In If the channel is encoded, press AV to display the pictogram this case, plug a decoder into the blue AV2 connector of the DVD recorder. If the picture is poor, select Fine Tuning using or and adjust with PR+ or PR-.

10. When the picture and sound of the channel are good, select the line Save using or , and assign a channel number with PR+ or PR- or the number keys. Press OK to store the number that you have assigned to the channel. The Channel line is once again highlighted to start a new search. Repeat the procedure from step 9 to search for a new channel or press MENU to exit the manual set-up.



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/2178264)

[DTH8040E user guide](http://yourpdfguides.com/dref/2178264)

<http://yourpdfguides.com/dref/2178264>

7 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 8 Connections and initial set up Channel update If new channels make their way into the audiovisual scene, you will have to update your DVD recorder's list of channels. In such a case, start a new channel search from the installation menu. This set-up deletes all stored channels and resets all the channels that your DVD recorder can receive. If you only want to set-up a single channel, refer to the manual search on page 7.

1. If the main menu is not displayed, press the MENU key. 2. Select the Setup line using the or keys, and press OK to validate. or keys, and press OK to validate. or keys, and press OK to validate. 3. Select the Installation line using the 4. Select the Channel search line using the An installation window will appear. A cursor shows the progress in the set-up of the channels.

When all the channels that you can receive in your area have been stored, 100 % is indicated. Press OK to return to the Channel search line. Press MENU to return to the Main Menu. Clock setting Your DVD recorder has an automatic time setting system which recognises the time signals put out by certain channels. If your DVD recorder is not set at the right time, you can reset it by following the instructions below; 1.

If the Main Menu is not displayed, press the MENU key. 2. Select the Setup line using the or keys, and press OK to validate. or keys, and press OK to validate.

3. Select the Installation line using the 4. Select the Clock Setup line using the 5. year is highlighted. Enter the year's 4 digits (press 2, 0, 0, 4 for 2004). 6. Then enter the 4 digits of the date (press 1, 5, 0, 5 for 15th May). 7. Enter the 4 digits of the time (press 1, 5, 5, 9 for 15:59 (03:59 PM)). 8.

Press OK to confirm. Sorting the channels 1. If the Main Menu is not displayed, press the MENU key. 2. Select the Setup line using the or keys, and press OK to validate. or keys, and press OK to validate. 3. Select the Installation line using the 4. Select the Channel List line using the or keys, and press OK to validate. Refer to the Channel Sorting paragraph on page 6 to check or sort out the channels stored on your DVD recorder.

8 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 9 Connections and initial set up Other recommended connections Satellite or cable receiver (or decoder) Carry out the connection of cable 5 (not supplied). EN TV set DVD recorder 5 Satellite receiver In grey: connections already carried out (connections from page 3).

9 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 10 Connections and initial set up Video recorder TV set Video recorder DVD recorder (not supplied) Satellite receiver and video recorder Video recorder TV set Satellite receiver DVD recorder (not supplied) 10 2\_DTH8040\_42\_en.

qxd 7/07/04 9:31 Page 11 Connections and initial set up The connections proposed on page 3 permit the rapid connection of your DVD recorder and ensure optimum sound, visual quality (RGB) and standards. Depending on the sockets available on your other devices or to benefit from the maximum performance of your DVD recorder you may make other connections. The DVD recorder has other sockets for this purpose. 1 27 3 EN 6 5 4 Sockets and cables (inputs) 1 - Audio inputs (INPUT L, R) The analogue sound of an operating device (television set or amplifier) can be input via the 2 Audio sockets L and R of your DVD recorder. If you do not use the recommended connection, i.

e. the Peritel (Scart) socket, you must, as well as the video connections (CVBS or S-VIDEO) connect the outputs Audio L and R of the operating device to the Audio L and R inputs of your DVD recorder. Note: the audio sockets and cables are generally identified by a colour code (white for the left channel and red for the right). RCA sockets and cables for analogue L and R audio signal. 2 Video in - Composite (CVBS) (COMPOSITE VIDEO INPUT) RCA socket and cable for CVBS Video signal, also called Composite. The yellow video socket also known as composite video (or CVBS): the image quality provided by this socket is less than all the other video sockets. Only use this socket if all the other sockets are already in use. 3 - S-Video input (Y/C) (S-VIDEO IN) The S-Video signal is of a lesser quality than that of the RGB signal supplied by the Peritel (Scart) socket. The S-Video signal however gives a better image quality than the composite video socket (C) since black and white (Y) are separated from colour in the video signal. Note: do not forget to connect the audio cables since the S-Video cable transmits only images, not sound.

Ushiden socket and cable for Y/C Video signal, also called S-Video. 11 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 12 Connections and initial set up Sockets and cables (outputs) 4 - Optical Out socket (DIGITAL AUDIO OUT) Optical socket and cable for digital audio signal. The digital sound of a disc being played is permanently available on the optical socket of your DVD recorder. Use this socket by connecting it to a decoder or a DTS or Dolby Digital amplifier. 5 - S-Video out socket (Y/C) (S-VIDEO OUT) The S-Video cable provides a video signal of lower quality than the Peritel (Scart) socket. An S-Video signal however provides a better quality image than a composite video socket, because colour (C) is separated from black and white (Y) in the video signal. Note: do not forget to also connect the audio cables, because the S-Video cable transmits images and not sound. Ushiden socket and cable for Y/C Video signal, also called S-Video. 6 - Audio outputs (OUTPUT L, R) The digital sound output from a disc being read is permanently available at the two audio sockets, L and R, of your DVD recorder.

If you do not use the recommended Peritel (Scart) connection to the television (paragraph 3 page 3), you must, as well as one of the video connections (CVBS or SVIDEO) connect the Audio outputs, L and R, of your DVD recorder to the Audio inputs, L and R, of your television set (or amplifier). Note: audio sockets and cables are usually identified by a colour code (white for the left channel and red for the right channel). RCA sockets and cables for analogue L and R audio signal. 7 - Composite Video Out socket (CVBS) (OUTPUT COMPOSITE VIDEO) The yellow video socket is also called composite video, or CVBS. The image quality delivered by the video socket is the least good of all video connections.

Only use this socket if all other sockets are already in use. RCA socket and cable for CVBS Video signal, also called Composite. 12 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 13 Connections and initial set up The connectors on the facade allow easy connection when copying sound and images or displaying them from a video camera EN 1 The connectors 2 Press here 3 Lift the trapdoor to gain access to the connectors 1 2 Front sockets (inputs) 1 - S-Video socket For the connection of a Camcorder or other S-Video device.



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/2178264)

[DTH8040E user guide](http://yourpdfguides.com/dref/2178264)

<http://yourpdfguides.com/dref/2178264>

Note: do not forget to connect the audio cables since the S-Video socket handles only images and not sound.

2 - AV sockets (Audio/Video) The AUDIO-VIDEO connectors allow the viewing or copying of your video sequences from a camcorder or any other AV device that provides a composite video signal and analogue stereo sound. 13 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 14 Connections and initial set up The buttons on the front 10 9 1 2 3 4 5 6 7 8 1 ON/STANDBY - To switch your DVD 6 OPEN/CLOSE - To open and close the recorder on or off. 2 STOP - To stop play (press once) or to disc tray. 7 AV - To select the audiovisual sources stop recording in progress using the Channels menu (press twice). 3 PLAY / PAUSE - To play a disc placed in the disc tray (10) of the DVD recorder. - Pause during playback (audio CD or mp3) or pause on an image (DVD). 4 G REV / FWD F (channels or devices connected to the AV sockets): PR 1 ,2 ,3 - Channel 1, 2, 3. AV 1 - Device connected on AV1 (TV set). AV 2 - Device connected on AV2 (satellite receiver, decoder, .

..). AV 3 - Front AUDIO/VIDEO sockets. AV 4 - Rear AV sockets (S-VIDEO or AUDIO/VIDEO. 8 PR- / PR+ / IG SKIP FI Fast forward or reverse (page 32). 5 RECORD - To start recording a TV programme (the red indicator lights up) and if necessary to adjust recording time by pressing repeatedly. Each press on the RECORD key extends recording time by 30 minutes. 0h30 1h00 1h30 2h00 2h30 3h00 To change channels (page 19). Skips forward or backward a chapter (page 33).

9 Display panel - Displays your DVD recorder's modes of operation (page 15). Adjusting the brightness (page 52) 10 Disc tray. 14 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 15 Connections and initial set up The messages on the display TV Functions - Main menu displayed on screen (device stopped). No function selected.

- Real-time viewing. TV mode activated; channel 1 being watched. - Start of recording of TV program on selected channel. - Channel 1 currently being recorded. EN With a disc - DVD playback.  
- Playback of an Audio CD or VCD. - Pause of Audio CD or still frame (DVD,VCD). - Fast forward ( ) or reverse ( ). - Slow motion, forward (K ) or backward ( K). Other indications - Indicates the Lock function is activated. (page 49). - Indication of the selected source: · AV 2: AUDIO/VIDEO input connector at the rear. · AV 3: AUDIO/VIDEO input sockets on the front. · AV 4: AV/S-VIDEO or AUDIO/VIDEO input sockets at the rear. Displays on your DVD recorder (menus and banners) · Disc menus - Each DVD disc offers a menu, the layout and order of which depend on the editor of the disc.

The main menu of the disc is displayed on the screen when a DVD disc is loaded and play begins. You can also, at any time, display the main menu of the disc by using the MENU button. Player banners while a disc is playing back you can display or remove banners using the INFO key on the remote control unit. The banners appear in the form of a succession of icons at the top of the screen. Player menus your DVD recorder has menus enabling you to use functions that are not accessible using the remote control unit keys. The player menu is displayed when the DVD recorder is not playing a disc (in STOP mode). Note: settings will only function if the corresponding function has been provided by the editor. For instance, if you select the subtitle icon in the banner, subtitles will only appear if they actually exist on the disc. Check the sleeve to see what subtitles are provided. If a menu or icon appears in "grey" it means that the function is not available.

· · 15 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 16 Remote control The remote control handset supplied with your DVD recorder is a 3 in 1 type remote control. It allows 3 devices to be controlled: your DVD recorder, a television set and a satellite or cable receiver. Thus you have remote control of all these devices by using the 3 modes: DVD, TV or SAT. CABLE that are accessed by 3 corresponding keys.

This page describes the keys that control your DVD recorder (in DVD mode). Note: the functions described below depend on the discs and/or the files read. For description of the TV and SAT. CABLE functions, see the following page. Description of keys in DVD mode Signal lamp - this shows the status of the remote control when it is being used to program or to control another device.

It also indicates that the batteries level is low by flashing several times when a key is pressed. DVD PR RETURN MENU CLEAR OPEN. CLOSE ZOOM INFO SHOWVIEW ANGLE 0 to 9 TV. VIDEO REV PLAY FWD REC STOP PAUSE AGAIN ADVANCE Switches the DVD recorder on or off. Sets the remote control unit in DVD mode (by pressing once), enabling you to control your DVD recorder. Skips forward or backward a chapter (DVD) or track (CD). Returns to the previous menu. Displays the DVD disc menu while a disc is being played. Removes the menu or banner showing on the TV screen. Opens and closes the disc holder of the DVD recorder.

Enlarges the picture during playback, slow motion or pause mode. Displays the DVD recorder information banner on the TV screen while a disc is being played. Display programming screen with guide number. To access a choice of angles of an image if available on the disc. (JPEG) To rotate an image through 90°. Keys used to enter information such as a chapter or track number, or to make choices from menus. Passes DVD images to the television set connected to AV1. Fast backward while a disc is being played. Plays a disc. Fast forward while a disc is being played.

To record the TV program watched onto the recordable disc (DVD+R / DVD+RW). Stops disc playing or recording and displays the DVD player menu. Pause during playback (CD) or pause on an image (DVD). Skips backward each press replays the last seconds during DVD playback. To skip forward approximately 30 seconds (DVD) or to play another track (audio CD).

16 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 17 Remote control Using the remote control handset to control your television and satellite or cable receiver The DVD recorder remote control handset is a 3 in 1 device that allows you to control the operation of 3 devices: your DVD recorder, a television set, or satellite receiver. This page describes the keys that control your television set and your satellite or cable receiver if they have the same functions. Controlling a TV set TV PR AV 0 to 9 MENU RETURN CLEAR Sets the remote control unit in TV mode (by pressing once) and enables you then to control your TV set. Switches the TV set on or off.

Volume control. Switches sound off or on again. Switches channel or selects an AV socket. Selects an AV socket. Keys enter digital values or change channel. Displays main TV set menu. Returns to the previous menu. Removes menu or other information displayed on the screen. EN Note: colour keys enable one to use the teletext function on THOMSON TV sets.



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/2178264)

[DTH8040E user guide](http://yourpdfguides.com/dref/2178264)

<http://yourpdfguides.com/dref/2178264>

## Controlling a satellite or cable receiver SAT.

**CABLE** Places PR 0 to 9 MENU RETURN CLEAR the remote control in the SAT-CABLE mode (press once) and then enables you to control your satellite or cable receiver. To turn on or off the satellite or cable receiver. Switches channel. Keys enter digital values or change channel. To display the main menu of the satellite or cable receiver. Returns to the previous menu. Removes menu or other information displayed on the screen. Note: the colour keys allow access to the same functions as colour keys on the remote control. Remote control - Code A-B With certain devices (combined TV/DVD or other DVD player) it may happen that your DVD recorder controls the DVD player of the other device. In this case you can adjust your remote control and the DVD recorder on another code known as code B (adjustment shown on page 58).

17 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 18 Remote control Programming the remote control If your remote control does not control your satellite receiver (or cable) or your television set you will need to configure it using one of the two methods proposed: automatic code search or manual programming. Automatic code search This method can be used to automatically find the most appropriate code for your appliance. 1. Switch on the appliance you wish to use the remote control with.

2. Press the relevant button for this appliance on the remote control, and while holding this button down, press the standby button until the remote control light comes on. Release the two buttons. 3. Point the remote control at the appliance and press PLAY.

Wait until the light stops flashing. If the appliance has not gone into standby mode after five seconds, press the PLAY button again to continue the search for the next set of codes. Repeat this operation until the appliance goes into standby mode. There are 20 sets of codes. 4. When the appliance goes into standby mode, press the button on the front to switch it on again. Then press the REV button to put it back in standby mode, and if necessary, keep pressing until the appliance goes into standby. 5. Press the STOP button and hold it down until the remote control light goes off. Manual programming This method involves carrying out a manual search for the codes to be used for controlling your other appliances.

1. Switch on the appliance you wish to use the remote control with. 2. Press the corresponding key on the remote control, while holding it pressed down, enter one of the codes corresponding to the make of the device (Thomson Group codes on the bottom left of this page, other brands can be found in the "Related documents" leaflet). If the remote control light flashes you have entered the wrong code or it is not possible to program the remote control. 3. Point the remote control at the appliance and press the relevant button. Press the standby button. If the appliance does not go into standby mode, try another code.

Depending on the year of manufacture and the type of appliance, some functions may not be available.

Certain codes may cover more functions than others. Test the functions you can control and, if appropriate, try other codes. SAT Codes: 5000, 5001, 5031, 5037, 5043, 5064, 5065, 5066, 5058, 5084. TV Codes: 1000, 1002, 1016, 1024, 1041, 1051, 1089, 1127, 1128, 1129, 1134, 1135, 1148, 1001, 1033, 1096, 1130, 1151. Note here the code(s) which work best.

TV SAT-CABLE Note: when you change the remote control's batteries, remember to reprogram it. 18 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 19 Recording functions To watch TV Programmes 1. Turn on your television set. 2.

Turn on your DVD recorder using the ON/STANDBY key. The time displayed on your DVD recorder is replaced by the word MENU. After a few seconds the main menu of the player appears on the television screen. Watch TV function is already selected. Note: turn off non used devices to avoid problems of selecting sockets or other types. If the main menu of the player is not displayed on the television screen, check and/or select the Scart socket to which you connected your DVD recorder (see page 3 - AV1 selection). Generally the selection is carried out using the AV key on the television set remote control. If the THOMSON logo temporarily appears, it is because the screen saver has been triggered; press the OK button to display the menu EN 3. Press the OK key of the remote control or one of the PR+/PR-, keys on the front panel. The images of the last watched channel appear.

Encrusted within the image is information on the channel and programme. This disappears after several seconds. Note: when the information banner is displayed at the top of the screen you have the possibility of choosing an audio channel (if this is provided by the channel) using the key on the remote control. To display information again, press the INFO key of the remote control. To change channel Change the channel with the PR+/PR- key or the remote control number keys. To select the channel of a device connected to your DVD recorder (satellite receiver) or to view images from a video recorder, use the AV button on the remote control or press the PR+/PR- button several times to select one of the three connectors (AV1, AV2, AV3) to which the device is connected. Note: where needed, see the connection diagrams on pages 9 and 10. No. and name of the channel selected on the DVD recorder Current time (Time set).

Indications concerning the channel sound and the selection of audio channels.

Selection is possible with the key on the remote control. Note: NICAM sound is digital, compatible with analogue tv sets. It is broadcast by certain channels and relayed by certain emitters in some European countries. NICAM (Near Instantaneously Companded Audio Multiplex) is also used to broadcast Dolby Surround stereophonic programmes or for simultaneous broadcasting in two languages or for two different sounds (intended for blind and poorly sighted people). 19 2\_DTH8040\_42\_en.

7/07/04 9:31 Page 20 Recording functions Record the current programme Your DVD recorder has recording functions similar to a video recorder. It records programmes on DVD (DVD+R, DVD+RW) type discs. For the same disc, the recording time depends on the quality settings that you can adjust according to the time left on the disc. The recording may be immediate or deferred. Deferred programming is explained on page 22.

For immediate recording follow the instructions below. When using disks: Choose good quality discs. To avoid any problems use known brands such as Imation, Maxell, Philips, Ricoh, Verbatim, Sony... 4. Open the DVD tray by pressing the OPEN/CLOSE key. Put in a disc DVD+RW or DVD+R. The printed side upwards, (double-sided discs have concentric marks around the central hole on each side of the disc). Close the tray using the OPEN/CLOSE key.

Choose a recording quality in relation to the time available on the disc.



**You're reading an excerpt. Click here to read official THOMSON  
DTH8040E user guide  
<http://yourpdfguides.com/dref/2178264>**

See Recording Quality paragraph on page 53. Note: Disc Formatting - When you insert a DVD+RW disc for the first time, your DVD recorder must first format the disc. This operation may take several minutes (up to 10 minutes), however you can begin recording on the disc shortly after beginning the formatting process (after around 10 to 20 seconds). FORMAT DSC remains displayed during this operation on the display. 5. Press once on the REC key of the remote control or on the RECORD key on the façade of your DVD recorder to record the current programme until the end of the disc. To record for a short period, press the REC button several times. Each press increments the time by 30 minutes up to a maximum of 3 hours, if the recording quality and the time remaining on the disc are sufficient (see page 53). · Recording starts.

· RECORD is displayed for a few moments on the display of the DVD recorder. The red signal lamp on the façade lights and confirms that recording has started. · The information banner appears for several seconds on the screen of your television. The information that is displayed confirms the channel, the programme being recorded and the time remaining on the disc. Note: after several seconds the information banner disappears.

You can redisplay it using the INFO key on the remote control. Changing the channel during recording is not possible. To watch another channel during the recording session, select it directly on the television set, using its own remote control handset. With each recording session the name and programme parameters recorded on the disc are automatically placed in the library memory of your DVD recorder. The library can contain up to 200 programme names recorded on different discs.

To watch your recorded programmes see the Disc menu, details on page 42. To consult the library see the Disc Library menu, page 26. 20  
2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 21 Recording functions Stop recording Press the STOP button twice. · With a DVD+R disc, if you do not have another recording to make, you need to "Finalize" the disc in order that it can be read by other DVD+R compatible players. Closing a DVD+R disc is described in detail below. If you do not close a DVD+R disc, it will still be possible to make other recordings on it later on, providing there is enough disc space. You can therefore safely store it. You can also erase recordings, but you will lose the corresponding recording time which cannot be used to record other titles. With DVD+RW discs this function does not exist.

It is replaced by a function that renders the disc compatible in such cases where you have added or removed chapter bookmarks using the edit menu. For some players, it is necessary to render the disc compatible even though you haven't carried out modifications to the chapters. Note: if you only press once on the STOP key, the confirmation window appears. Press a second time to definitively stop the recording or select continue using the and OK keys. At the end of each recording, your DVD recorder takes a few seconds to prepare the start menu of the disc. This menu is formed from representative images from each title. To view a recording, see page 42. EN · Closing a DVD+R or DVD+RW disc (Finishing a disc) When a disc is full, or if you do not want to record any other programmes on the disk, you need to finish the disc so that it can be read by other players that are compatible with the disc format. However, if you do not carry out this operation you will still be able to read the disc on your DVD recorder. 1.

With the disc in the DVD recorder. 2. From the main menu, select Disc using the 3. Select Disc Title Menu using the or button and then confirm with OK. or button and confirm with OK.

The title menu is displayed. The name of the disc is selected. Press OK to display the specific functions of the disc. 4a. With a DVD+R disc: Select Finalize Disc using the or button and confirm with OK.

Your DVD recorder, closes the disc session and prepares a home screen made up from images representing each recorded title. FINALIZING remains displayed during this operation and disappears once the disc is ready. 4b. With DVD+RW discs: Select Make compatible using the or button and confirm with OK. Your DVD recorder, closes the disc session and prepares a home screen made up from images representing each recorded title. Note: you need to make a DVD+RW disc compatible if you have added or deleted chapter bookmarks in order that the disc can be played on other DVD players. 21

2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 22 Recording functions Programming a recording You can record a future programme by programming its recording time. For this you have the choice of manual programming or SHOWVIEW® programming, explained on page 24. Open the DVD tray by pressing the OPEN/CLOSE key.

Put in a disc with the printed side upwards. Close the tray using the OPEN/CLOSE or PLAY key. 1. From the main menu (MENU key or in Stop mode) select the Timers function with the key or then confirm using the OK key. · The Timers screen is displayed. It contains a list of all the deferred recordings that you have already programmed, whether carried out manually, as explained below, or using the SHOWVIEW® function explained on page 24. If nothing has been programmed the screen simply displays Add Timer. 2. Press the OK key. · The programming menu is displayed.

This menu allows you to define all the parameters necessary for a deferred recording. Select each parameter with the or key and enter the corresponding information with the number keys or the key as described below. Note: your DVD recorder can memorise the parameters of 8 different programmings. In the case of double programming, a warning message is displayed. 3.

Name Give a Name to your programme. Press the INFO key to access the keyboard table. Use the keys ,, and OK to compose the title of the recording letter by letter. When and press OK. complete, select Keep Timer with 4.

Channel a) Enter the channel number using the digit keys of the remote control (Pr -- must be displayed) or browse the list of channels in the memory of the DVD recorder using the PR+/PR- key. b) Or select one of the Audio-Video (AV2, AV3, AV4) sockets to which is connected a device (satellite receiver or other) using the key (the socket details are shown on page 14). Note: selecting the AV2 connector allows you to program the recording of a satellite receiver programme (either left switched on or also programmed) connected to this connector. The selecting of the AV2 connector is activated by default by the AV Timer function (triggering of programming via the AV connector). 5. Day (s) Using the digit keys on the remote control type in the date, if the recording is not made the same day, and / or select a period using the key. Once: to record the selected programme according to the parameters you have defined.



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/2178264)

[DTH8040E user guide](http://yourpdfguides.com/dref/2178264)

<http://yourpdfguides.com/dref/2178264>

Every Fri: to record the same programme the same day every week starting from today (supposing today is Friday). Mon-Fri: to record the same programme, everyday at the same time from Monday to Friday. 22 2\_DTH8040\_42\_en.

qxd 7/07/04 9:31 Page 23 Recording functions 6. Start time and stop time Enter the recording start time and then the stop time. To this end, and according to the features of the receivers, you must: - either program the receiver with the same beginning and end times, then switch off the DVD recorder and the receiver, - or leave the satellite receiver switched on, on the channel to record, program the DVD recorder, then switch it off. Note: if you selected AV2 during step 4, you do not need to enter the start and stop times, since it is the device that is connected that triggers the start and stop of the recording at the times set via its programming menu. 7. Recording quality Select a recording quality from the 6 proposed using the key. \*1: Best, \*2: High, \*3: Good, \*4: Normal, \*5: Basic, \*6: Low. Note: the choice of quality allows an adaptation to the remaining recording time on a DVD disc. The lower the quality is, the more space there will remain on the disc. For example the time available on a blank DVD disc of 4.

7 Gb in "Low" quality is around 8 hours, while in "Best" quality the time will only be around 60 minutes. The figure 1 to 6 is displayed in the information banner when playing the recording. The quality choice is only valid for one particular programming session. For an automatic quality setting in relation to the time remaining on the disc, activate the SmartRecord™ function (page 53). EN 8.

VPS/PDC Activate the VPS/PDC function using the key to trigger recording at the actual time of the beginning of the broadcast. If the channel broadcasts VPS/PDC signals you can avoid the consequences of any delays in broadcasting. This adjustment is only valid for this programming session and for channels received via the aerial (PR - -). 9. Keep Timer Memorise your programming by selecting Keep Timer with the key and confirming with the OK key.

The Programming screen reappears. Your programming is now displayed in the chronological list of programming already carried out. On this screen it is only possible to display 5 programming sets from the maximum 8. If you have carried out more than 5 programmings, to see the others press the or key. Note: to check (or delete) programming parameters, select a name and press OK. The programming parameters menu appears. Correct the parameters as shown in steps 1 to 9 or delete the programming by selecting Cancel Timer and confirming with the OK key. 10. Return to the main menu using the MENU key in order to continue to use your DVD recorder or turn it off using the ON/STANDBY key, after having loaded a DVD+R or DVD+RW disc with remaining time compatible with your programming. 23 2\_DTH8040\_42\_en.

qxd 7/07/04 9:31 Page 24 Recording functions SHOWVIEW® Recording Your DVD recorder allows to program SHOWVIEW® recordings by means of the numbers printed in most TV magazines (e.g. 5697841). Simply enter this number when the SHOWVIEW® screen is displayed, it contains all the necessary recording parameters (channel, date, start and end times). SHOWVIEW® is a registered trademark of Gemstar Development Corporation. The SHOWVIEW® system is manufactured under licence from Gemstar Development Corporation. Before using SHOWVIEW® ensure the channels have been properly installed, as shown on page 5, and that the clock of your DVD recorder is correctly adjusted (date and time). Programming a recording 1. Place a DVD+R or DVD+RW disc in the DVD recorder. 2.

Press the SHOWVIEW key on the remote control, or from the main menu (MENU key or in stop mode), select the SHOWVIEW function with the key or key and confirm it with OK. Note: In cases of error when inputting a number, the manual programming menu appears with the parameter to be corrected highlighted. 3. The SHOWVIEW® screen appears. Enter the number of the programme to record with the number keys on the remote control.

In case of error, delete the figures using . Confirm with OK. 4a. In certain cases one of the recording parameters must be given or corrected. In this case, the manual programming screen appears with the relevant parameter highlighted.

Make the correction then choose Keep Timer using and confirm with OK. The programming now appears in the programming screen. Press Return to return to the main menu. 4b. If the guide number is correct, the manual programming menu appears. Keep Timer is selected. Check the parameters and press the OK key. Your programming now appears in the programming screen. Press Return to return to the main menu. Your DVD recorder can memorise the parameters for 8 different programmes.

If two programmes overlap a warning message is displayed. 24 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 25 Recording functions Recording from a connected device Your DVD recorder allows you to record TV programmes (satellite or cable) or to copy video sequences from a connected device. From a satellite receiver or cable receiver (AV2 socket) 1. Place a DVD+R or DVD+RW disc in the DVD recorder. 2. From the Main Menu and with the Watch TV function selected, press OK. The images of the last channel watched appear. The information banner is displayed for several seconds. EN 3.

Select the AV2 connector of the DVD recorder using the AV button on the remote control, so that AV2 is displayed in the banner and on (LIVE AV2) display of the DVD recorder. 4. Record by pressing the REC key on the remote control or RECORD on the front panel. 5. Stop the recording by pressing twice on the STOP key.

From a Camcorder or other device (AV3, AV4 socket) Your DVD recorder has both RCA Audio-Video and Ushiden sockets for the transfer of video to a recordable disc. 1. Place a DVD+R or DVD+RW disc in the DVD recorder. 2. Place the device in its play mode.

3. From the Main Menu and with the Watch TV function selected, press OK. The images of the last channel watched appear. The information banner is displayed for several seconds. 4. Using the AV button of the remote control while the information banner is displayed, select the AV3 connector if your camcorder is connected to the front of your DVD recorder, or AV4 if it is connected to the S-VIDEO IN connectors or COMPOSITE INPUT at the rear of the machine. 5. Record by pressing the REC key on the remote control or RECORD on the front panel. 6. Stop the recording by pressing twice on the STOP key.

Note: you can copy films in a single pass without concerning yourself about the content since the Split Title function will afterwards allow you to isolate and then delete any unwanted sequences. You can also create titles of your choice. See page 37. 25 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 26 Recording functions Library You can easily find the contents of your DVD+R or DVD+RW discs thanks to the library function of your DVD recorder.



[You're reading an excerpt. Click here to read official THOMSON DTH8040E user guide](http://yourpdfguides.com/dref/2178264)  
<http://yourpdfguides.com/dref/2178264>

With each video recording the DVD recorder places in memory the name of the disc and the recording parameters. The disc library allows you to access the following information: · Identity of the disc. · Name of the recording identified by default by the channel number, date, ...

You can record television programmes as well as songs and / or images from a digital device but not on the same disc. · Type. · Recording date. Note: the library can contain the names of 200 titles located on the various discs in your "DVD Library" (DVD+R or +RW discs only). In order to help you to find a title, the library also has sorting functions to assist you (sort by title, sort by category, etc. ..). To access the library follow these instructions. To find a Title (recording) 1.

From the main menu (MENU key or in stop mode) select the Disc Library function with the **or** key, then confirm it with the **OK** key. The Disc Library screen is displayed. If you have already carried out recordings these names and titles are displayed on the left (6 titles per page). 2a. Browse the list using the **want** or key and press **OK** when you have found the title that you Note: a disc identity is displayed in front of the title when the disc that this title is on is actually present in your DVD recorder. For direct recordings or for those that you made without giving them names, these are displayed with the name of the channel and an abbreviated time and date. 2b. Select a function in the window using the **or** or one of the library management functions. key, the use **or** to select a sort criteria 26 2\_DTH8040\_42\_en.

qxd 7/07/04 9:31 Page 27 Recording functions Sort by Title This is an alphabetic sorting. The titles beginning with punctuation signs are listed first, followed by those with digits and then those with letters, beginning with the letter . Note: sorting by title displays a character chart. Using the **,** **,** **,** buttons select the first letter of the title being sought and press **OK**. EN Sort by Category, Sort by Date There is a sort by title category available if you allocated a type after each recording, or a sort by recording date. Use the **or** key to select a category and press **OK**. All the titles in the selected category are then displayed. For a sort by date, the most recent recordings appear at the top of the list. Access to the title menu This function allows you to access the menu of a particular disc, displaying all the titles on the disc and displaying the selected title in a small window. · · To view the title full-screen press **PLAY**.

To view another title, use the **or** key and then **PLAY**. · or keys. To delete the title press the **OK** key and select **Delete Title** with the key and **Confirm** with **OK**. In the confirmation screen that is displayed select **Yes** with the confirm with **OK**. Note: the deleting of a title (recording) is not immediate, it may take several seconds.

Wait until the message "Please Wait..." disappears from the bottom of the screen. 27 2\_DTH8040\_42\_en.

qxd 7/07/04 9:31 Page 28 Recording functions Assign or Change the Category of a title This function allows you to allocate a title (or to change it) to a category in the list proposed by the DVD recorder. Select **Change Genre** and press **OK**. Select the category using the **or** key and confirm with **OK**. Show discs This function allows you to display the menu of all the discs in the library and to search by sorting for available time (available space), number or name of the disc. You can also delete all the titles on a library disc or display all the titles on a disc. Use the keys and **OK** to confirm your choice. The **Delete Disc** function allows you to delete all the titles on a disc in the library . Note: if you delete a disc, it will always be possible to "reload" the titles of this disc by adding a recording that you can then later delete from the disc. 28 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 29 Playing a disc Discs you can record · DVD+R, DVD+RW - Most DVD+R discs (recordable once) and DVD+RW discs (re-recordable) of 4.

7 Gb capacity. DVD+R DVD+Rewritable Certain brands of discs have been approved for your player. Other brands can be used but the discs must be good quality to produce successful recordings. The recommended brands are Imation, Maxell, Philips, Ricoh, Verbatim, Sony, TDK DVD discs are certified for certain recording speeds. These speeds must correspond to the capabilities of your player, i.e., DVD+R 2.4x, 4x, 8x and for DVD+RW 2.4x, 4x. Note: The brands mentioned in this manual are registered trademarks EN Discs you can play · Digital video discs - 12 cm and 8 cm, single or double sided, single or dual layer.

DVDs are high density optical discs on which high quality picture and audio are recorded by means of digital signals. Region code number - Your DVD recorder responds to the regional management information recorded on DVDs. The regional code of your DVD recorder is 2. Before buying a DVD, make sure that it bears the correct logo. ALL means all regions.

Note: for your information: the other areas are - 1: USA, Canada - 3: Southeast Asia, Taiwan - 4: Central America, South America, Australia, Mexico, New Zealand - 5: Russian federation, Africa (except Egypt and Rep. of South Africa), India, Pakistan - 6: China. DVD+Rewritable · DVD+/-R, DVD+/-RW - Most DVD-R and DVD+R (one recording only), and DVD-RW and DVD+RW discs (rewritable). Recordings on DVD-R and DVD-RW discs must be made in Video DVD mode. Recordings on DVD+RW discs must be made in accordance with the specifications for the 4.

7 Gb capacity DVD+RW disc format. · Audio CDs - 8 and 12 cm audio CDs. · CD-R, CD-RW - Most CD-R (one recording only) and CD-RW discs (rewritable). Compatibility is dependent on which DVD writer, writer software and discs are used. · Video CD (VCD) - CD on which you can record up to 74 min. of VHS quality video associated with still images, audio tracks and interactive menus. · Super Video CD (S VCD) - Most S-VCD discs conform to the IEC 62107 standard. They can be used to record up to 70 minutes of digital sound and video, with MPEG-2 standard video and MPEG-1 standard audio. S-VCD disc compatibility is dependent on which MPEG coding software, disc design software and disc writer software are used, and the discs themselves. Note: in spite of progress made to ensure playability of all disc types, it is not possible to guarantee playback of discs which are not in conformity with DVD, CD, VCD or S-VCD standards.

Moreover, this unit may not play some recordings or files on CD-R, CD-RW, DVD-R, DVD-RW, DVD+R, DVD+RW due to differences in recordings formats, software used & Disc types. · MP3 files - Discs containing sound files in MP3 format. · JPEG files - Discs containing images in JPEG format. Compatibility is dependent on the disc creation software used and file sizes, stated in millions of pixels.



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/2178264)

[DTH8040E user guide](http://yourpdfguides.com/dref/2178264)

<http://yourpdfguides.com/dref/2178264>

Certain JPEG files such as Progressive JPEG files cannot be read by this equipment. 29 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 30 Playing a disc Interactive banners In addition to menus, your DVD recorder has interactive information banners with icons representing functions or information. Some banners provide access to disc playback functions (for DVDs, CDs, VCDs, etc.) while others give you information on the channels and related functions. In TELEVISION mode (Operating principle) 1.

Turn on your TV set and your DVD recorder. 2. In the Main Menu of your DVD recorder, (Watch TV line selected) press OK. The picture of the last channel selected appears. An information banner is displayed along with the picture for a few seconds.

To view it again, press the yellow INFO. Information on the TV channel being watched No. and name of the channel selected on the DVD recorder (page 19). @@@@Load a disc and press PLAY to start playback. 2.

To display the banner, press the yellow INFO key. 3. @@@@Title 3 currently being played (page 34). Time elapsed (page 33). @@@@Index currently being played. @@@@It may be necessary to turn off other appliances. 1. @@Open the disc tray by pressing OPEN/CLOSE. @@Close the disc tray by pressing the OPEN/CLOSE or PLAY. @@Select using the 4 , and keys, then confirm with the OK key.

· in the Main Menu Disc is highlighted. @@@@Press any key on the remote control unit to resume display of the image transmitted from the disc. 32 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 33 Playing a disc Slow motion (in Pause mode on an image) During playback press PAUSE once to freeze the image. Press FWD or REV to view images in slow motion forward or backward. Press once or several times for higher speeds. To resume normal playback press PLAY. Skipping a chapter or a track (DVD - VCD - CD) During playback you can access the following or previous chapter (or track) by pressing PR and/or PR on the remote control unit. Note: Forward or backward skips can also be made by using the PREV and NEXT keys on the DVD recorder. EN Scene AgainTM (DVD) During playback press AGAIN on the remote control unit.

Each touch of the key steps back 10 seconds (approximately) of play). Advance (DVD) During playing of the disc, press the ADVANCE key of the remote control to skip ahead by approximately 30 seconds. Playback options Enlarging an image (zoom) (DVD - VCD - JPEG) During playback press the ZOOM. key once or repeatedly. Move the zoomed image around using , and to view a particular spot.

If this does not work, try again after pressing PAUSE. To resume normal playback press the key several times to return to the original format. Titles, chapters, time elapsed, audio and subtitles (DVD) From the banner, you can access certain functions directly using the , keys. Choose a title or a chapter (DVD), or a track (CD, VIDEO CD). Change the language of DVD dialogues or subtitles.

For direct access to a specific scene on the disc, select the first icon with the keys. Enter the requested place in the scene (expressed in hour, minutes, seconds) with the remote control number keys. (enter 001205 to access a scene which is 12 minutes and 5 seconds away from the start of the disc (DVD) or track (Video CD)). Note: with certain discs, direct access to a scene is not possible even if the time elapsed is shown on the banner. A question mark in the counter zone indicates an input error. This symbol is sometimes displayed. It indicates that the function is not available or that the key used is incorrect. 33

2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 34 Playing a disc The disc information banner To access the information banner, press INFO on your remote control unit during playback. Use arrow keys and on the remote control unit to select the various icons.

When an icon is selected it is highlighted. The line under the banner is an information and instruction line. When small arrows appear above and below the selected icon these point to other possible options. Now use the and keys to scroll through the various options. Banner with a DVD video disc. Note: the icons displayed in the banner depend on the type of disc being played. Timer (DVD, VCD, CD) This icon shows the time elapsed since the start of playback. The time displayed is that of the title of a DVD disc during playback. The timer provides direct access to a scene or a musical passage by keying in the starting time.

Select the time elapsed icon and use the numbered keys on the remote control unit to access the place from which you want to play back.

Use two digits for each field. For instance, if you enter 01:35:12, you will access the sequence beginning 1 hour, 35 minutes and 12 seconds after the start of the title. Note: for audio VCDs, the timer refers to the track currently being played. Title or Track (DVD, VCD, CD) Most DVD discs only contain one title.

However some discs may contain several titles each of which is itself divided into several chapters.

To choose a title, select icon T then use the or keys to scroll the titles or tracks. Use the numbered keys on the remote control unit to access a particular title or track. Chapter (DVD) Most DVD discs contain several chapters. To choose a chapter, select icon C then use the or keys to scroll chapters. Use the numbered keys on the remote control unit to access a particular chapter.

Note: follow your progress below the banner. 34 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 35 Playing a disc Subtitle and dialogue language (DVD) 1. While reading a disc, press the INFO key: the information banner is displayed. 2. Use the Selecting the language of subtitles or keys to select the icon of the subtitles or dialogues as well as the sound format. using the or the banner. keys. The selected language name appears beneath 3. If available on the disc, select the language of the subtitles or dialogues Selecting the language of dialogues Note: selecting the language of subtitles only involves the disc being played.

If you remove the disc or if you switch off the DVD recorder your selection will be cancelled. In this case the default language, chosen when your DVD recorder was first installed, will be reactivated. If the preferred language is not available on the DVD disc the preferred language of the disc (default language) will be selected automatically. With some discs you can only access the dialogue or subtitle languages through the menu provided on the disc. EN Play modes of discs (DVD - VCD) The DVD recorder has several play modes that depend on the type of disc being played: standard play respects the order of the titles and chapters on the disc; repeat between 2 points or repeat a disc, a title. The icon of the play mode is accessible via the information banner during playback. During playing of a disc, press the INFO key (the information banner is displayed). Use the / and / keys. The icon changes depending on the mode selected as well as the text area in the information banner: Standard, Repeat title, Repeat A-B, Repeat disc.



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/2178264)

[DTH8040E user guide](http://yourpdfguides.com/dref/2178264)

<http://yourpdfguides.com/dref/2178264>

*Note: the standard play mode is activated every time a new disc is placed in the DVD recorder.*

*Repeat playback of a scene between two points A and B (DVD - VCD - SVCD - CD) Play modes A-B Repeat mode allows you to select exactly the sequence you wish to repeat. 1. Select the repeat playback function using the A-B Repeat appears under the banner. or keys. 2.*

*Press OK to memorise the beginning of the scene you want to repeat (point A). 3. Wait a few seconds before pressing OK again to mark the end of the scene to be repeated (point B). A-B Repeat appears to tell you that the repeat playback of the sequence is starting. To stop repeat, select another mode using the or keys, or by pressing STOP.*

*Note: repeat functions remain active until you turn them off, open the disc tray or turn off the power. Repeat play only works with discs that show the elapsed time on the display. This may not work correctly with certain discs (Video CDs in PBC mode). 35 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 36 Playing a disc Camera angles (DVD) A few DVD discs contain scenes shot from various different angles. If a disc being played back offers different camera angles the icon in the banner will show the number of the angle on the screen. With the disc in playback, press ANGLE on the remote control unit and choose the angle using the same key or the or keys. Changing camera angles PBC - Playback control menu (VCD) This function enables you to make interactive selections of some scenes or information through an on-screen menu. Moreover high resolution scenes can be viewed if they are included on the disc. During playback press INFO (the information banner appears).*

*Press or to select the PBC icon. Uses the or key to see other screens or deactivate the functions on offer Selecting a play mode Play mode for Audio CDs Your player has several play modes for Audio CDs: standard play that respects the order of the tracks; random play that reads music tracks in a random order; repeat play: Repeat A-B, Repeat track, Repeat disc, Repeat de-activated. Standard play IntroScan (CD) The IntroScan function enables you to listen to the first few seconds of each track of an audio CD. IntroScan Note: when the first few seconds of all tracks have been played the player goes into Stop. To stop IntroScan press STOP to continue play and listen to the whole track, or press PLAY . Edit Menu (DVD+RW) This icon allows you to display the edit menu when a DVD+RW disc has been inserted. See the next page for details of the functions available in this menu. Edit 36 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 37 Playing a disc Edit Menu The edit menu can be accessed from the information banner, while playing a title on a DVD+RW or +R disc. It allows you to edit the recordings made and more particularly to:*

- Insert chapter bookmarks (DVD+RW) To position marks in order to easily find your favourite passages.*

*Since it is not possible to delete a passage in title, you can use this function to mark the start and end of undesirable sequences (e.g. advertising) in order to mask it from being played using the Hide Chapter function (see further on).*

- Delete chapter bookmarks (DVD+RW) EN To delete undesirable markers in order to form longer chapters within a title, or to redefine the position of bookmarks to your own requirements.*
- Hide Chapter (DVD+RW) To mask the chapter being played (the passage between two bookmarks) in order not to play an undesirable passage (advertising, violent scenes.*

*..). If you do not wish to play the masked chapters, you must select Play Title in the title menu. If you wish to play all the chapters, including those you have masked, select Play Full Title in the title menu.*

- Create a new title image (DVD+R, DVD+RW) Replaces the title image (on the Play menu) displayed by your DVD recorder with an image of your choice.*
- Divide a title (DVD+RW) To cut a title in two in order to separate and then rename the sequences. To delete the end of a recording that is too long and thus free up space on the disc. Access to the edit menu 1. While a DVD+RW is playing, press the INFO button; the information banner is displayed. 2. Use the , buttons to select a suitable icon. 3. Press the OK button to display the edit menu. 4.*

*Carry out your searches in a title using the PLAY, PAUSE, REV, FWD, STOP keys. 5. Using the choice. , buttons and OK select a function and confirm your*

- Insert Chapter Marker Delete Chapter Marker Hide Chapter New Title Frame Split Title Note: the edit menu cannot be accessed while playing a title or chapter list. To delete the list being played, eject the disc or delete the list (page 45). 37 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 38 Playing a disc The edit menu functions Insert a Chapter Bookmark (DVD+RW only) During recording your DVD recorder automatically inserts electronic bookmarks at regular intervals. These bookmarks are invisible. They partition the recording and form chapters. Each chapter has an average length of 6 minutes (from 5 to 8 minutes depending on the disc type and the recording settings).*

*These bookmarks allow you, when playing a title, to jump forward or backwards by measured amounts by using the Pr+, Pr- buttons. You can remove predefined bookmarks or add other bookmarks according to any particular locations that you wish to jump to. Insert Chapter Marker Delete Chapter Marker Hide Chapter New Title Frame Split Title Delete Chapter Marker (DVD+RW only) If you wish to group together two consecutive chapters to form a single one, or change the position of a bookmark for the beginning of a chapter, position the disc during play on this chapter and select Delete Chapter Marker and confirm with OK. Insert Chapter Marker Delete Chapter Marker Hide Chapter New Title Frame Split Title Note: For DVD+R discs, you cannot manually create or delete chapter markers. Your DVD recorder automatically creates them every 6 minutes.*

*Hide Chapter If you wish to hide a chapter because it contains, say, violent scenes or for other reasons, position the disc during play on the chapter and select Hide Chapter and confirm with OK. The chapter will physically remain on the disc but will not be played if you simply select play (PLAY button or Play Title function). To play all the chapters, including those that are masked, select from the Disc Title menu (page 44), the Play Full Title function. Insert Chapter Marker Delete Chapter Marker Hide Chapter New Title Frame Split Title 38 2\_DTH8040\_42\_en.qxd 7/07/04 9:31 Page 39 Playing a disc View Chapter Display a previously masked chapter.*

*This function is only available if you have previously masked a chapter by having selected Play Full Title and having masked a selected chapter. Or if you have selected Hide Chapter during the playing of a title, but on condition that the chapter bookmark had not already passed or been created.*



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/2178264)

[DTH8040E user guide](http://yourpdfguides.com/dref/2178264)

<http://yourpdfguides.com/dref/2178264>