




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THOMSON DTI 1000. You'll find the answers to all your questions on the THOMSON DTI 1000 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual THOMSON DTI 1000**  
**User guide THOMSON DTI 1000**  
**Operating instructions THOMSON DTI 1000**  
**Instructions for use THOMSON DTI 1000**  
**Instruction manual THOMSON DTI 1000**

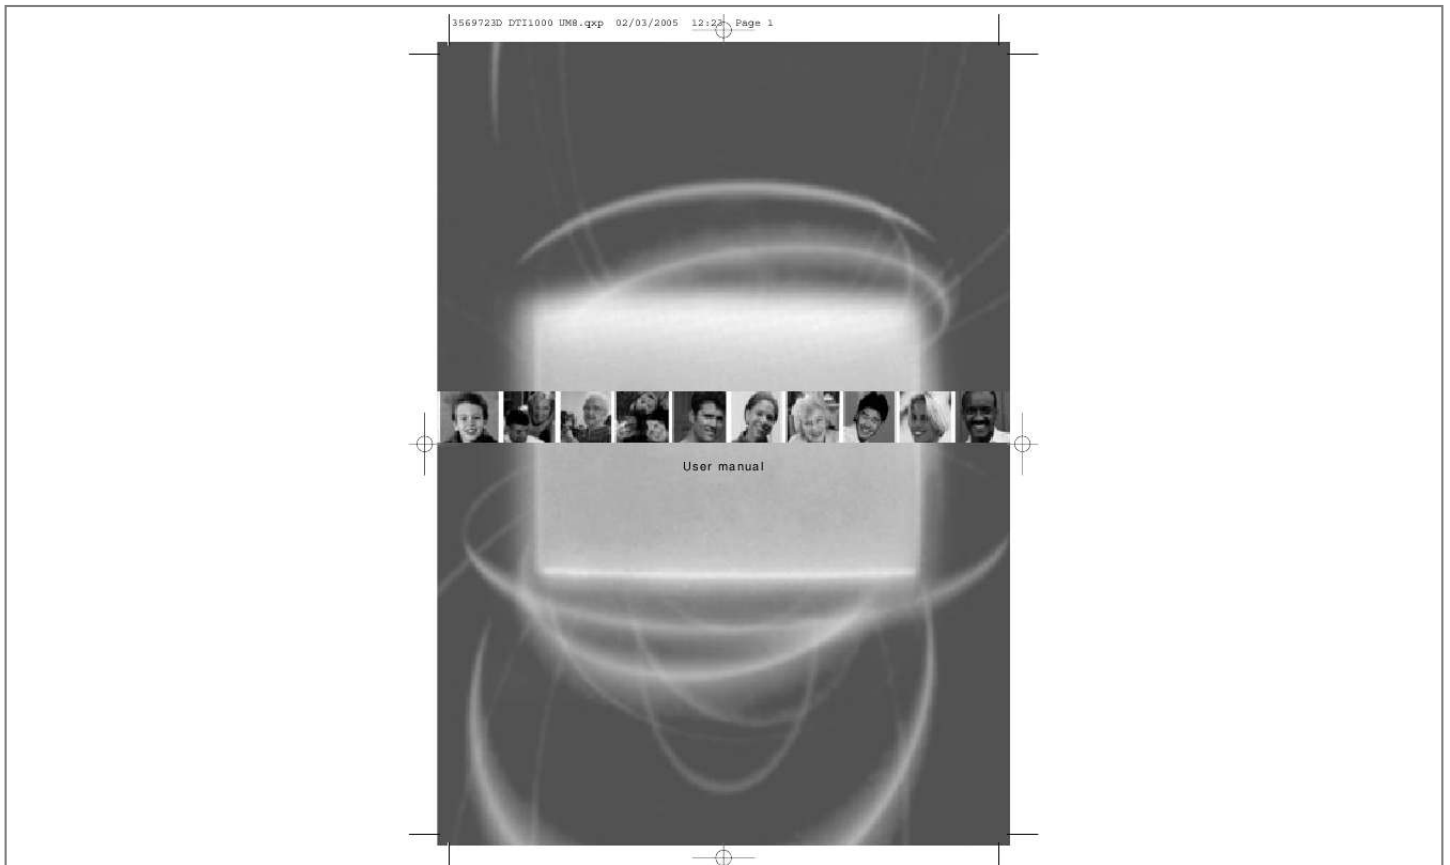

[You're reading an excerpt. Click here to read official THOMSON DTI 1000 user guide](http://yourpdfguides.com/dref/1218172)  
<http://yourpdfguides.com/dref/1218172>

**Manual abstract:**

xp 02/03/2005 12:23 Page 1 User manual 3569723D DTI1000 UM8.xp 02/03/2005 12:24 Page 2 Set-up Contents 2 3 4 5 6 7 8 9 10 11 12 13 14 15 Accessories Safety Information Connections Remote Control Handset Tuning the Receiver Advanced Setup Program Information Lists and interactive services Timer Programming and Recording Parental Controls Upgrading your Receiver Other Information Trouble Shooting and Information Your Guarantee Accessories Operation Manual 2 x AA batteries Guarantee Card DTI1000 Power Cord Remote Control Scart Lead 2 3569723D DTI1000 UM8.xp 02/03/2005 12:24 Page 3 Set-up Introduction Congratulations on your choice of this state-of-the-art Digital Free to View Receiver. We hope you will enjoy all the new features this technology brings to your home for many years. Your dealer should have checked your postcode for reception, but the availability of Digital Signals does depend on the transmitter(s) available to your receiving aerial. If you have any doubt about this availability, please contact your dealer, or check the following internet websites: [www.freeview.co.uk](http://www.freeview.co.uk) or [www.dtg.org.uk/consumer](http://www.dtg.org.uk/consumer) If you experience reception problems contact our aerial helpline on 0800 5428265 Safety information In order that you may enjoy this product for a long time it is important that you observe the following points when installing and operating your receiver This receiver is intended for the reception of TV picture and sound signals. Any other application is expressly prohibited. Avoid the long-term display of static images, e.g. menus or audio only channels. Use the Radio (Blank Screen) feature (see Advanced Setup) Do not expose the receiver to any moisture. The receiver is intended for use in dry rooms. If you wish to operate it in the open air, make absolutely sure that it is protected against moisture (rain, splashes, etc.). @@ Place the receiver on a flat and hard surface. Do not place any objects (e.g. newspapers) on the receiver. @@@@ During a thunderstorm it is recommended that you disconnect the receiver from the mains and aerial to prevent damage from lightning strikes. Never open the receiver as this will invalidate your guarantee. Do not dispose of used batteries in normal waste. Please dispose of them at appropriate collection points. @@ This saves energy. @@ This product has been constructed with the environment in mind.

@@@ Do not spray any substance on the unit. 3 3569723D DTI1000 UM8.xp 02/03/2005 12:24 Page 4 Set-up Connections How to connect the aerial, scart and co-axial cables Caution : Always disconnect the receiver from the mains supply before you connect it to any other equipment. TV Aerial Not supplied - purchase separately if required TV VCR OUT IN AV1 EXT1 AUX1 Aerial Leads Scart Leads Phono Leads (not supplied) u IN AUX VIDEO EXT AUX IN v RECEIVER OUT RF IN RF LOOP THROUGH TV Not supplied w Note : For best results connect the STB to the TV using the scart lead supplied. MAINS INPUT L R VCR x L R AV AMPLIFIER Unplug the aerial lead from your VCR (or TV) and connect it to the »RF IN« socket on the rear of the receiver. If connecting to a VCR, connect the aerial fly-lead that came with your VCR between L »LOOP THROUGH OUT« on the receiver and aerial IN on the VCR. T Connect the scart lead from the »TV SCART« socket on the receiver to the AV1/EXT1/AUX1 scart IN on your TV. M Plug the power connector into the »MAINS INPUT« socket on the receiver. If you wish to connect the audio outputs to your Hi-Fi or AV amplifier, you will need to purchase the necessary phono cables and connect them as shown above. Note: If you wish to continue watching analogue TV on your television, you must purchase an aerial fly-lead and connect it between the aerial IN on the TV and the L aerial OUT on the VCR (or the »LOOP THROUGH OUT« on the receiver) It is strongly recommended that the product be connected via scart leads to your TV and VCR.

4 3569723D DTI1000 UM8.xp 02/03/2005 12:24 Page 5 Set-up Remote Control Insert the batteries into the handset making note of the polarity shown in the picture opposite. Point the remote control at the receiver and press the STB button. @@@@ Numeric keys for various inputs. Switches to the next channel, position step by step. [MENU] Access main menu. [TEXT] Enter / Exit teletext. [GUIDE] Access TV-Guide. [INFO] Calls up the Information Banner. [QUIT] Quit the menu system. [BACK] Select previous menu. Select various functions in the menus. /// OK Select various functions in the menus. [OK] Confirms selections made from the menus. [COLOUR] Coloured keys for Teletext information. Note: Other keys not mentioned above have no function on this model. @@@@ Press [OK] when prompted. @@ 1. 2. 3.

4. 5. Press B on the handset to turn the receiver on. Press [MENU]. Select SETUP with / and press [OK]. Select AUTO TUNE with / and press [OK]. @@ The receiver will place the services in numerical order. 6. Press [OK] or [QUIT] to exit the menu. Alternatively see later in the guide how to sort your Service List. @@ 1. Select MANUAL TUNE from the SETUP menu and press [OK]. 2. Now enter the channel number to be tuned. This menu also shows the aerial signal strength.

The Level bar shows GREEN for good, YELLOW for poor, or RED for bad signals. The higher the Quality number, the better the signal is. By changing AUTO MODE to NO, it is possible to change other reception parameters. 6 3569723D DTI1000 UM8.xp 02/03/2005 12:24 Page 7 Set-up Advanced setup TV Setup You can choose how pictures are displayed on your TV.

1. Press [MENU], select the SETUP menu and press [OK]. 2. Now select TV SETUP and press [OK]. 3. Now choose your type of TV. Use / and choose 16:9 for a widescreen TV or 4:3 for a conventional one. 4. Now choose how widescreen images appear. If your TV is 4:3 use / and choose from Letterbox, Centre Cutout (centre action only) or Full Frame (stretched).

5. To avoid screen burn on radio channels choose Radio (Blank Screen) to display a blank screen. Options are Off, Immediate or Delayed (screen blanks after a delay) 6. Now choose the Video Output mode. Use / to choose from RGB (best quality pictures for TVs that support it) or PAL (suitable for all other TV sets). 7. Use / to turn the RF Modulator On or Off. 8. The Modulator Channel is set by the factory to CH22. If you wish to change the channel you tune your TV to (in order to avoid interference), use / to adjust it.

9. To exit menu press [QUIT]. Languages You can choose your desired languages for Sound, Subtitles and Interactive (data) Services (depends on broadcast). 1. Press [MENU], select the SETUP menu and press [OK].

2. Select LANGUAGES and press [OK]. 3. Select Subtitles, Data Services or Audio using / . 4.

Use / to choose the desired language or Off to suppress Subtitles. 5. To exit menu press [QUIT]. PIN number You can choose a PIN (Personal Identification Number) for use with parental controls.



**[You're reading an excerpt. Click here to read official THOMSON DTI 1000 user guide](http://yourpdfguides.com/dref/1218172)**

<http://yourpdfguides.com/dref/1218172>

The receiver was originally programmed with 1234. Change this number as follows :1. Press [MENU], select SETUP menu and press [OK]. 2. Select PARENTAL CONTROL and press [OK]. 3.

Now enter the current PIN \*\*\*\*. 4. Select CHANGE PIN and press [OK]. 5. Use 0..9 to enter a new PIN. 6. Use 0..9 to confirm new PIN. When confirmed, this number is now stored. KEEP THIS NUMBER SAFE! 7. To exit menu press [QUIT]. 7 3569723D DTI1000 UM8.qxp 02/03/2005 12:24 Page 8 Use Program information 7 Day TV guide The TV guide shows details of programs whilst allowing you to watch a smaller picture of the selected service. To access the guide press [GUIDE]. Move up and down the channel listings using / keys, you can move a page at a time by using Pr+/Pr- keys. Find out what's on later using / keys. To see a preview of the chosen program press [GREEN].

@@Press [OK] to view the selected channel. You can set a reminder for a program you wish to view later. Select the program you wish to view and press [GREEN]. The Item you chose then turns green. @@To record the chosen program press [RED]. The item will then be entered into a timer. @@Do this by pressing . You can also view details for other channels. Search through the listings using the / keys. @@@@1.

Press [MENU], select SERVICE LIST and press [OK]. 2. Select a service using / keys. 3. To delete the selected service, press [RED]. (Once deleted, you must repeat manual/auto tune to view) 4. @@5. @@6. @@@@five 2 To reorder the list, 1. Press [MENU], select FAVOURITE LIST and press [OK]. 2. Select the service you wish to move with / and press [BLUE]. (The service will be highlighted in red) / 3. @@4. Repeat this process until the list is how you wish it.

5. To exit menu, press [QUIT]. @@@@To return to normal viewing press [TEXT] again. @@@@You now have three options. To start the download immediately, press [OK].

@@ Refuse the download at this time by pressing [QUIT]. @@If there is one available, you will see the download menu as above. To check:1. Press [MENU], select SETUP and press [OK]. 2. Select CHECK FOR DOWNLOAD and press [OK]. 3. If no download is available, press [QUIT] to exit. 4. Press [OK] to start.

Alternatively, schedule the download for later. @@@@1. Press [MENU], select SETUP and press [OK]. 2. @@@@Press [MENU], select SETUP and press [OK]. 2. Select TECHNICAL INFORMATION and press [OK]. 3. @@@@The unit will now power on to the last viewed channel.

@@@@In this mode the Receiver only uses a tiny amount of energy, but it will take a little longer to switch on.

In this mode you must use the B button on the front of the unit to switch it back on. This returns the unit to normal standby and you can now use the remote control as normal or call a qualified technician. Do not try to bridge the fuse or increase its rating! E 3A N L BLUE BROWN 3A 3A ! The OFF button B on the remote control and the receiver\* does not completely disconnect the unit from the mains supply, but switches operating power on and off. \*Note: Not all receivers have control buttons. Your guarantee Dear Customer, Thank you for purchasing this THOMSON product and for your confidence in our company.

This product meets applicable safety requirements and has undergone stringent testing during manufacture. @@@@This guarantee does not apply to any of the following: 1. @@@@If you need service, whether or not under guarantee, please approach the dealer who sold you the product. In your own interest we advise you to read the instruction booklet for your THOMSON product carefully before contacting your dealer or service center. If you need service while in a country (within the named Territory) other than the one where you bought your product, please contact the nearest THOMSON InfoCenter. Should you have any questions which your dealer is unable to answer, please contact: THOMSON Technicolor Building Bath Road West Drayton Middlesex

UB7 0DB tel. +44 (0) 1788 541 970 <http://www.thomson-broadband.com> 3569723D DTI1000 UM8.qxp 02/03/2005 12:24 Page 16 Model DTI 1000 THOMSON Technicolor Building - Bath Road West Drayton - Middlesex UB7 0DB UK <http://www.thomson-broadband.com> Dealer's address 3569723D © Copyright THOMSON 2005 .



[You're reading an excerpt. Click here to read official THOMSON DTI 1000 user guide](http://yourpdfguides.com/dref/1218172)

<http://yourpdfguides.com/dref/1218172>