



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THOMSON DTI 652. You'll find the answers to all your questions on the THOMSON DTI 652 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual THOMSON DTI 652
User guide THOMSON DTI 652
Operating instructions THOMSON DTI 652
Instructions for use THOMSON DTI 652
Instruction manual THOMSON DTI 652



THOMSON
DTI series
652 / 1004

User manual

A THOMSON BRAND



[You're reading an excerpt. Click here to read official THOMSON DTI 652 user guide](http://yourpdfguides.com/dref/847742)
<http://yourpdfguides.com/dref/847742>

Manual abstract:

Precautions Never open your set yourself. It could be dangerous and you risk electric shock or damaging the set. Any noticed damage will invalidate the warranty conditions of your equipment. Installation: Ensure that the voltage from the mains in your room complies with that indicated on the back of your set (identification label, screen marking, etc.). Do not connect an AC or DC power supply other than that from the mains. Ensure that the electric plug is fully inserted into the wall socket. Leave the mains socket accessible so that you can unplug the set quickly. Place the set horizontally, away from any source of heat (sunlight, radiator, fireplace, etc.) or from equipment which produces high magnetic or electrical fields (motors, non-insulated loud speakers, etc.). If you install your set in a cabinet, ensure that it has enough ventilation. Leave 7 to 10 cm around the set, as shown in the enclosed drawing. The openings on top and underneath the set are for ventilation purposes. They must not be obstructed.

Use: The set is designed for use in a dry place. If, under exceptional circumstances, you happen to use it outdoors, (e.g. on a balcony or in a tent), make absolutely certain that it is protected from humidity (dew, rain, splashes) and from heat. @@@@ If you smell any suspicious odours or see smoke coming from the set, unplug the set immediately and have it checked by an approved technician.

Maintenance Use a dry, clean, soft cloth with no cleaning, solvent or abrasive products, etc. The openings on top of and underneath the set are for ventilation purposes and must not be obstructed. Clean the ventilation grilles regularly. If an object or liquid gets into the set, unplug the set immediately and have it checked by an approved technician. Environment friendly - Only ecologically high-grade materials are used. The packing consist of almost 100% recycled paper, its plastic parts have been reduced to a minimum. To facilitate service and optimum recycling, this receiver has been designed in a specially disassembly-friendly and recycling friendly way. The batteries supplied are free of mercury and cadmium. Do not dispose of used batteries, also those free of heavy metals, together with domestic waste. If you are not using the receiver for a lengthy period (including overnight), please switch it over to standby.

This saves energy. This symbol on your set guarantees that your product complies with the European directive 89/336/CEE, 73/23/CEE, 93/68/CEE on safety, electromagnetic compatibility and marking aspects. This symbol indicates "Dangerous voltage" in the set. It represents the risk of electric shock or bodily injury. The receiver can be upgraded by means of free updates downloaded over the air whose purpose is to improve product behaviour. You should know that the proposed update is irreversible so you are given the option of refusing it. IT IS POSSIBLE THAT THE FUNCTIONS CONTAINED IN THE SOFTWARE DO NOT CORRESPOND TO YOUR REQUIREMENTS OR FAIL TO GIVE THE RESULTS YOU ANTICIPATED. INSTALLING THIS SOFTWARE COULD MODIFY THE WAY YOUR PRODUCT WORKS. EN 1 General Information 2. Quick start: about connections and installation 2.

1 Connections Please follow figures 1 to 3 for a standard installation. Note: Before plug in the receiver, you should connect at least the aerial antenna cable and the TV scart. Others connections are optional. RF IN RF OUT Figure 1: DTI 652 Figure 2: DTI 1004 Figure 3: inserting batteries Warning If you are not sure how to connect your receiver, do not take the risk of doing it yourself. Ask your dealer to do it for you.

He is specially trained by our technicians and can get the best performance out of your receiver. Important: about DTI1004 connections If you use an indoor antenna requiring a specific powering by RF cord, please switch the value to ON in the installation menu (see Menu/Installation/Terminal/Antenna) and then launch the channels installation (see Menu/Installation/Channels). If you use the RF modulator connection, please switch the value to ON in the installation menu (see Menu/Installation/Terminal/Connection) and then switch your TV on the channel 62. Note that if the UHF Channel numbers of the receiver and the TV set are not set the same, no picture will be displayed. Disclaimer Note that the availability of digital services in your particular location is dependent on the transmitter(s) available to your receiving aerial and the configuration of your existing reception equipment.

Please check with your dealer or installer. 2 General Information 2.2 Installation Standard settings The first start is done automatically in one click : Once the decoder is ON, just choose your menu language, confirm by OK and let the decoder automatically start the installation of channels. Personal settings Pour régler vos préférences personnelles pour votre adaptateur (par exemple format TV, langue, réglages To install your receiver with your personal preferences (like TV format, language, time settings), please follow Menu/Installation/Terminal. To display and browse through the menu, press the MENU button and follow the guidelines in chapter 3. Important: Be careful when using Factory Reset, because it will erase all the data and parameters you may have set earlier on your receiver (PIN code factory setting is '0000'). Once you have made a Factory Reset you will have to re-scan your channels and re-install your preferences. EN 3. Navigation clues 3.0 Navigation through the menu 1.

Press the MENU button to open the menu entry page. 2. Use the p/q and t/u buttons to highlight your choice in a list. 3. Press OK to open the sub-menu or confirm the selection. 4. Press BACK to return to the previous screen or EXIT to return to the viewing mode. 3.1 Overview Always read the help bar displayed at the bottom of your screen. - In the menu, EPG, banner and channel list, instructions on availability of further functionalities and on active remote control buttons are given on screen.

- The TV Banner automatically displays when you tunes to another channel. To change the display duration of the TV Banner go in MENU/Installation/Terminal/Menu settings/Banner Duration. - To display the Information Banner, press the i button. - To display the extended Information Banner (with synopsis of the currently viewed program), press the i button twice. - To display the current TV list, press the OK button then EXIT to exit the list.

- For EPG (Electronic Program Guide) direct access, press the GUIDE button. - For switching between the TV or the Radio services list, press the TV/RADIO button. - If your channel has teletext features, then for teletext direct access, press the TXT button. - For DVB Subtitling see Menu/Installation/Terminal/Language or press SUB button. - For a direct access to a favourite list (if Favourite Lists have already been created), press the colour buttons.

- To display all lists (Favourite lists and the All Channels list), press the WHITE/LIST button.



[You're reading an excerpt. Click here to read official THOMSON DTI 652 user guide](http://yourpdfguides.com/dref/847742)
<http://yourpdfguides.com/dref/847742>

Select the desired list with the p/q buttons and press OK to switch to the selected channel list. To benefit from our policy of continuous improvement, note that this set-top box is upgradeable through download "over the air". Therefore we highly recommend you to try regularly to update your set using the manual activation in the menu (see Menu/Installation/Terminal/Upgrade). 3 General Information 3.2 Remote Control and behaviour - When the adapter is running, the LED is green; in standby mode the LED is red. B Turns the receiver on/off. @@In the menu allows returning to the last screen. @@@@Scrolls a list page up/down. @@SUB Switches on/off subtitles (if available).

@@@@Set up receiver output formats. Set up banner style. banner duration menu transparency Edit time. Download available software release, if on air. Erase all settings, including PIN code (0000). Set the internal antenna to on/off (off). DTI 1004 only. TV format: 4/3, 16/9,...

@@Edit lists of TV services. Edit timers. @@Lock or unlock channels based on maturity information. @@@@1. Press the MENU button.

2. Using p/q buttons, select Channels then press OK. @@@@Use the p/q, buttons to select the channel to remove from the list. 2. Press the (Red) button. A red garbage bin displays on the right of the channel name. 3. @@@Move Channels from the channel list (to modify the P+/P- order): 1. Use the p/q buttons to select the channel to reorder in the list. 2. @@3. @@@4. Press the (Green) button to insert it. @@Use the p/q buttons to select the channel to lock. 2.

@@@3. Press the OK button. 4. Enter the decoder PIN Code to lock all channels selected with a yellow lock icon. Note 1: The procedure to unlock a channel is similar. Note 2: Prior to any PIN Code change, the PIN Code factory setting is '0000'. 3. Press the EXIT button to view the highlighted channel on full screen. 4.2 Favourite lists 1.

Press the MENU button. 2. Use the p/q buttons to highlight Favourite List then press OK. The All channels list displays. 3.

Use the colour buttons to assign/unassign channels of the All channels list to one or several Favourite List(s). You can set up to 4 Favourite lists, each defined by a colour (List A uses RED color, B uses GREEN, C uses YELLOW and D uses BLUE). Note: For a direct access to all lists (favourite A to D and All channels) press the WHITE/LIST button. 4. Press the OK button to save the favourite list(s).

A pop-up message/cast program. Use the p/q buttons to highlight the option you want to modify, then use the t or u buttons to make a selection (i.e. for audio channel, you may choose between 'Stereo, Left or Right Audio'). Note 2: A second click on the i button will enable you to view the extended Information Banner. Press EXIT to exit this banner. 8 General Information 6. Main features DTI 652 and DTI 1004 · Reception of digital TV and radio DVB services. · MPEG2 - DVB-T ETSI 300 744 compliant · VHF - UHF bandwidth reception. · 2 Scart connectors: connection of the decoder to TV (CVBS/RGB) and VCR (CVBS).

· Multi lingual user friendly on screen menus (English, French, German, Swedish, Finnish, Spanish, Italian, Greek, Czech, Arabic) through 256 colors On Screen Display (OSD). · Easy to use Remote Control Unit. · EPG (Electronic Program Guide) with now & next and 7 days events ready. · Information Banner (including synopsis of the current program) · Channel organizer (including resized video window). · Embedded Teletext subtitles and Teletext magazine decoder. · DVB Subtitling - ETSI 300 473 compliant. · 2 preferred audio and 2 preferred subtitles languages selection. · Up to 4 Favourite lists. · Parental Lock by PIN code (0000 default value). · Software upgrade over the air.

· Timers available to trigger programs (recording in the VCR for instance). · Fast and easy first install. · Operating consumption power < 10W. · Main supply 230V, 50/60 Hz. DTI 1004 · Very low power consumption standby mode (<0.

3W). · 2 Audio RCA connectors (Left & Right): connection to home audio system. · SPDIF coaxial connector: connection of the decoder with a Home Cinema amplifier. · UHF modulator (Ch21-69), Pal BG, DK, I, SECAM. · Indoor active antenna powering by RF cord (5V, 30mA) and activated by software.

Disclaimer: Reception of digital channels may depend on the type and condition of existing aerial equipment and installation. THOMSON reserves the right to modify the specifications and pictures mentioned in this document at any time and without prior notice. Therefore information contained in this user manual is not contractual. For a full and updated description, see <http://www.thomson-broadband.com>. EN This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste. The European Union has implemented a specific collection and recycling system for which manufacturers' are responsible. This appliance has been designed and manufactured with high quality materials and components that can be recycled and reused. Electrical and electronic appliances are liable to contain parts that are necessary in order for the system to work properly but which can become a health and environmental hazard if they are not handled or disposed of in the proper way.

Consequently, please do not throw out your inoperative appliance with the household waste. If you are the owner of the appliance, you must deposit it at the appropriate local collection point or leave it with the vendor when buying a new appliance. - If you are a professional user, please follow your supplier's instructions. - If the appliance is rented to you or left in your care, please contact your service provider. Help us protect the environment in which we live! 9

Annexes 7. Trouble shooting If the receiver does not work properly after checking the trouble shooting section, please contact the dealer. Warning: never open your set yourself. Symptoms The green/red lights on front panel do not light up. No picture and sound. Cause The power cord is not plugged in.

TV is set to wrong channel. Solution Check that the power cord is plugged into the wall outlet. Check if the TV is switched on and set your TV to the correct EXT / AV or UHF channel. Check if the scart and/or RF cable is connected correctly to the TV and to the back of the receiver. Replace the scart cable Switch off receiver; disconnect the main power cord of the receiver from the 230V mains.

After 30 seconds reconnect to the main power and check if it is working properly. Press the MUTE key on the remote control of your receiver and/or TV. Once the weather is better the picture will appear. If not check your antenna or call your dealer. Check your connections.

Check settings in antenna and channel set up menu. Ask your dealer to check the outdoor antenna unit and antenna cable. @@@@The receiver displays the message "no signal".



[You're reading an excerpt. Click here to read official THOMSON DTI 652 user guide](http://yourpdfguides.com/dref/847742)

<http://yourpdfguides.com/dref/847742>

The receiver displays the message "no signal". The receiver displays the message "no signal". For the DTI 1004 - First installation failure. The receiver or TV is in "mute" mode. This is normal, the bad weather is interfering with the signal. Wrong reception. Wrong parameters set in the menu.

Wrong alignment of the antenna. Antenna. The remote control is not working. The remote control is not working. For the DTI 652 - The menu is in a language I don't understand. The batteries of the remote control are not inserted or exhausted. Receiver is in very low power standby. Press the Standby button on the receiver. The menu language has been changed To change the menu language, follow the steps without you knowing it. described below: 1.

Press the MENU button. 2. Press 3 times the q button. 3. Press 3 times OK.

4. Use the t / u buttons to select your preferred menu language. The menu language has now been changed. 10 Model and serial number DTI series 652 / 1004 THOMSON Sales Europe 46, quai A. Le Gallo 92648 Boulogne Cedex FRANCE 322 019 464 RCS NANTERRE <http://www.thomson-europe.com> <http://www.thomson-broadband.com> 36119220 © Copyright THOMSON 2006 Dealer's address .



[You're reading an excerpt. Click here to read official THOMSON DTI 652 user guide](#)

<http://yourpdfguides.com/dref/847742>