



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THOMSON LCD-IFC130-INTUIVA. You'll find the answers to all your questions on the THOMSON LCD-IFC130-INTUIVA in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual THOMSON LCD-IFC130-INTUIVA
User guide THOMSON LCD-IFC130-INTUIVA
Operating instructions THOMSON LCD-IFC130-INTUIVA
Instructions for use THOMSON LCD-IFC130-INTUIVA
Instruction manual THOMSON LCD-IFC130-INTUIVA

IFC130-L_EN 4/08/05 17x22 Page 3

Contents	
Getting started	Advanced functions
Important information 2	Adjusting the sound 10
Safety 2	Tone control 10
LCD panel 2	Headphone settings 11
Care 2	Adjusting the picture 11
Switching on 3	Other settings 12
Remote control TV functions 4	Setting the time 13
Playing files from memory cards 4	Setting the time and date 13
Using the remote control for other equipment 4	Using the calendar 13
Programming the remote control 4	Programming the sleep timer 13
Programming the volume control function 5	Programming the wake-up timer 14
	Parental control
Channel set-up	Defining a PIN code 14
Initial set-up 6	Locking a channel or AV programme 15
Manual channel set-up 7	Locking the buttons on the TV set 15
	Locking the Time menu 15
General operation	Locking the installation menu 15
Switching the TV set on and off 8	Operation (TV mode) 15
Accessing channels 8	Customising your television
Accessing your favourite channels 8	Preferences 16
Accessing AV programmes 8	Configuring AV sockets 17
Volume 8	Playing files from memory cards 18
Displaying status information 8	Teletext 19
Zoom 9	Accessing Teletext 19
List of channels 9	Navigator 19
Freezing picture 9	Other Teletext functions 19
Flat batteries 9	
Product information 9	Other information
	Sockets 20
	Connecting active speakers or an amplifier 21
	Connecting headphones 21
	Connecting a video recorder 21

EN

This manual applies to several TV set models. Some features may not be available on the model you purchased. Refer to the features table provided with this manual to find out the main features of the relevant model.

Optional functions are indicated by the following symbol: (O). The model number of your TV set is on a label at the back of the set and on the cover of this manual.

In the interest of improving the quality of our products, we reserve the right to modify their features. The information in this manual is, therefore, subject to change, and does not represent any kind of contract.

This product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment at their end-of-life should be disposed of separately from your household waste.

Please, dispose of this equipment at your local community waste collection/recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products.

Please, help us to conserve the environment we live in!

This publication is printed on recycled paper.



[You're reading an excerpt. Click here to read official THOMSON LCD-IFC130-INTUIVA user guide](http://yourpdfguides.com/dref/1242910)
<http://yourpdfguides.com/dref/1242910>

Manual abstract:

@@@ This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please, dispose of this equipment at your local community waste collection/recycling centre. In the European Union there are separate collection systems for used electrical and electronic product. Please, help us to conserve the environment we live in! This publication is printed on recycled paper. 1 IFC130-L_EN 4/08/05 17:22 Page 2 Getting started Important information Safety Ensure that your domestic mains supply voltage matches the voltage indicated on the identification sticker located at the back of your set. This LCD TV set is a class 1 appliance. @@ The screen of your LCD TV is protected by a glass shield. @@@@ Occasionally, a few non-active pixels may appear on the screen as a fixed point of blue, green or red. This does not affect the performance of your product. EN The TV set's components are sensitive to heat.

The maximum ambient temperature should not exceed 35° Celsius. Do not cover the vents at the back or sides of the TV set. Leave sufficient space around it to allow adequate ventilation. Install the appliance away from any source of heat (fireplace, ..

.) or appliances creating strong magnetic or electric fields. Moisture in rooms where the set is installed should not exceed 85% humidity. If you have to use the TV set outdoors, do not expose it to rain or splashing water. Do not place any object containing a liquid (vase, glass, bottle, etc.

) on or near the set. Moving the set from a cold place to a warm one can cause condensation on the screen (and on some components inside the TV set). Let the condensation evaporate before switching the TV set on again. The button at the side of the TV set can be used to switch it on and put it into standby mode.

If you are not going to be watching the TV for a lengthy period of time, switch it off completely by removing the plug from the mains power socket. During thunderstorms, we recommend that you disconnect the TV set from the mains and aerial so that it is not affected by electrical or electromagnetic surges that could damage it. For this reason, keep the mains and aerial sockets accessible so they can be disconnected, if necessary. Unplug the TV set immediately if you notice it giving off a smell of burning or smoke. You must never, under any circumstances, open the TV set yourself, as you run the risk of an electric shock in doing so. Care Use a glass-cleaning product to clean the screen and a soft cloth and mild detergent to clean the rest of the set.

Important: Using strong detergents, alcohol-based and abrasive products may damage the screen. Dust the vents at the back and sides regularly. Using solvents, abrasive or alcohol-based products could damage the TV set. If an object or liquid enters inside the appliance, unplug it immediately and have it checked by an authorised engineer. Never open the appliance yourself since this may put you at risk or damage the appliance. THOMSON disclaims any liability if the TV set is not used in accordance with this manual. **HELPLINE** You can contact THOMSON by dialling: 0871 712 1312 (for United Kingdom, £0.10/mn inc VAT) www.thomson-europe.com Before setting up your television set, make sure that the surface you want to put the set on can support its weight (see the list of specifications provided with the booklet).

Don't place the set on an unstable surface (e.g. moving shelf, very edge of a unit) and make sure that the front of the television set does not overhang the surface it is sitting on. 2 IFC130-L_EN 4/08/05 17:22 Page 3 Getting started Switching on Follow the instructions on this page on how to switch on your TV set and the remote control before going on to following pages describing how to use the remote control and the channel set-up procedure. 1.

Insert two LR06 or AA batteries in the remote control. Precautions on using batteries: - Only use the battery types specified. - Make sure you use the correct polarity. - Do not mix new and used batteries. - Do not use rechargeable batteries.

- Do not expose batteries to excessive heat, throw them in a fire, recharge them or try to open them, as this could cause them to leak or explode. - Remove the batteries from the remote control if you are not using it for a long period of time (several weeks). EN 220 - 240 V ~ 50 Hz 2. Connect the power cable FIRST to the television, THEN to a mains socket. Mains socket in continental Europe Your TV set should only be connected to a 220 - 240 V ~ 50/60 Hz AC supply. It must not be connected to a DC supply. If the plug is detached from the cable, do not, under any circumstances, connect it to a mains socket, as there is a risk of electric shock. Equipment for the UK and Ireland is supplied with a mains cable fitted with a moulded plug. 5A This plug contains safety components and must not be replaced by one sold by general retailers. It is fitted with a fuse that protects your television.

If your set has stopped working, the fuse may have blown. If it has, replace it with an identical ASTA or BSI certified (BS1362) 5-amp fuse. 3. Connect the outside aerial or cable network to the TV Antenna socket at the back of the TV set. The aerial socket (75 Ohms - VHF / UHF / cable) can be used for connecting an external aerial or other equipment fitted with a modulator (video recorder, satellite receiver, etc.). We recommend that you do not connect other equipment (video recorder, satellite receiver, etc.) to your TV set to begin with, so as not to complicate the set-up procedure with the additional steps involved. Connect them when you have finished setting up the channels by referring to page 20 of this manual. 4.

Switch the TV on by pressing the button located on the side. Note: The first time you switch on the television, the language selection menu appears. You will find a description of how to use the remote control on page 4. Then go to page 6 for information on the initial set-up, or to page 7 for information on manual set-up (if the channels have already been set up on your TV). Note: Before connecting other devices to the AV sockets, carry out the initial channel set-up (described on page 6) in order to avoid any problems with equipment selection.

Please respect the environment and the relevant regulations. Before you dispose of batteries (or accumulators), ask your dealer whether they require special recycling and if he is able to take them back. 3 IFC130-L_EN 4/08/05 17:22 Page 4 Getting started Remote control TV functions Most of your telen as many times as is required to return the appliance to standby mode. 5. Press the STOP button and hold it down until the light or the appliance buttons of the remote control go off.

Note: You can cancel the programming operation at any time by pressing the EXIT button. 4 IFC130-L_EN 4/08/05 17:22 Page 5 Getting started Manual programming This method involves carrying out a manual search for the codes to be used for controlling your other appliances.



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/1242910)

[LCD-IFC130-INTUIVA user guide](http://yourpdfguides.com/dref/1242910)

<http://yourpdfguides.com/dref/1242910>

Programming the volume control function If you have programmed the TV remote control to use with other appliances and these are connected to an amplifier you can also programme the remote control to adjust the volume when you are using one of these appliances. The example below describes the procedure for programming a DVD player. 1. Switch on the appliance you wish to use the remote control with. 2. Press the relevant button for this appliance on the remote control, and while holding this button down, enter one of the codes relevant to your make of appliance (there is a list of codes at the end of this manual). If the light or the appliance buttons of the remote control flash you have entered the wrong code or it is not possible to program the remote control.

1.

Programme the AMP button on the remote control to use with the amplifier (refer to page 4). 2. Move the remote control away from the appliances. Press the - button and while holding it down, press the relevant mode button (DVD, in this example), then the AMP button. Release the - button. EN 3. Point the remote control at the appliance and press the relevant button (VCR, DVD, etc). Press the standby button. If the appliance does not go into standby mode, try another code. Depending on the year of manufacture and the type of appliance, some functions may not be available.

Certain codes may cover more functions than others. Test the functions you can control and, if appropriate, try other codes. Note here the code(s) which work best. VCR DVD SAT AUX AMP 3. Switch on the amplifier, then the DVD player.

4. Set the remote control to DVD, play a disc and adjust the volume using the +/- buttons. Repeat this operation for the other appliances. To cancel the programmed function for any of the appliances, press - button, while holding it down and enter the code 000 the using the numeric buttons. When you change the remote control's batteries, remember to reprogram it.

MENU OK EXIT 0-9 PR+/PRAV REV PLAY FWD STOP PAUSE REC MUTE +/- Video recorder Press the VCR button. On/Standby To display the main menu Vertical scrolling in menus Horizontal scrolling in menus To confirm an action To close a menu To directly access channels or enter numeric values To change channels To select AV input Rewind Play Fast forward Stop Pause picture Record DVD player Press the DVD button. On/Standby To display the main menu Vertical scrolling in menus Horizontal scrolling in menus To confirm an action To close a menu To enter numeric values or select options in menus To change chapters To select AV input Rewind Play Fast forward Stop Pause picture Satellite receiver Press the SAT button. On/Standby To display the main menu Vertical scrolling in menus Horizontal scrolling in menus To confirm an action To close a menu To directly access channels or enter numeric values To change channels Hi-fi system Press the AMP button. On/Standby To select a station using its number To change stations To switch the sound off and back on again To set the volume level Important: If the batteries in your remote control are run down you can use the buttons on the front of your TV set.

In TV mode, they have the same functions as the corresponding buttons on the remote control. In the menus they have the following functions: PR PR VOL VOL ! MENU or OK or OK To confirm a selection 5 IFC130-L_EN 4/08/05 17:22 Page 6 Channel set-up Initial set-up Initial set-up involves selecting all the settings required to be able to search for and store all the channels you can receive. Make sure that the television is switched on and follow all the steps in turn specified hereafter. The first time you switch the television on, the language selection menu appears. 1 EN English Français Deutsch Italiano Español Nederlands Português Norsk Svenska Dansk ätina E Magyar Polski Suomi 1.

Select your language using the buttons and confirm by pressing OK. When you select a language, it is applied to the menus immediately. buttons. 2. A list of countries appears. Select the relevant country using the Press OK to confirm. Note: This is the country you are in, or the country whose channels you want to receive if you live near its borders. 3. The Automatic installation menu appears. The Automatic search option is 2 Country Return UK Germany Italy Belgium Austria Sweden Switzerland Other selected.

Start the automatic set-up by pressing OK. The message Running appears next to the Automatic search option and the Progress and Channels found options appear, informing you of the installation procedure's progress. Notes: - The automatic set-up process can take up to 10 minutes. To prevent the channel set-up process from being interrupted, wait for the message indicating that the set-up is complete before closing the menu. - The automatic set-up process deletes all the channels previously stored.

France Spain Portugal Netherlands Denmark Finland Norway Russia Poland Cz. Republic Hungary Luxembourg Australia New Zealand 4. Channels are and New Zealand for New Zealand. 2. Select the Reception option.

Select the reception method for the channels (aerial or cable network) using the buttons. 3. Select the Channel search option. Enter the number of the reception channel or use the buttons to find the channels. When a channel has been found the picture is displayed. 4. If the picture is not clear you can adjust the setting. You do this by selecting the Fine tuning option and adjusting it with the buttons. 5. Select the Channel name option and choose a name from the list using the buttons.

If none of the names available is suitable select CH _ _ _ . Use the buttons to select a character from the list made up of the letters in the standard alphabet, the numbers 0 to 9 and certain punctuation symbols. Use the buttons to go to another character. Press OK to confirm. 6. If the channel is encoded and you want to connect a decoder to the AVI socket, select the Decoder option and check the box by pressing OK. 7. Then select the Teletext char. set option and choose the character set that will be used for Teletext on this are available: 1: Western Europe 2: Eastern Europe 3: Russian and Bulgarian 4: Greek channel using the 5: Arabic 6: Ukrainian 7: Belarussian buttons. The following character sets 8.

Then select the Store on number option and enter the number to be assigned to this channel using the numeric buttons (for instance, for BBC1 type 01). Press OK. Important: Whenever you change a value in the Manual Installation menu, the Store on number option starts flashing. To confirm your change you need to select the Store on number option and press OK. If you do not confirm the change it will be cancelled when you change channels or put the TV set in standby.

Repeat this procedure to find other channels. Notes: - For cable networks, to search for missing channels, select Other instead of a country, then select Automatic update in the Automatic installation menu.



**You're reading an excerpt. Click here to read official THOMSON
LCD-IFC130-INTUIVA user guide
<http://yourpdfguides.com/dref/1242910>**

- If you wish to go through the whole initial set-up process, put the TV in standby mode, then hold down the VOL ↓ button on the television and the MENU button on the remote control until the menu displays. Proceed as for the initial set-up. - Subsequent set-ups: - The Automatic update function allows you to set up channels just launched or any channels that are missing or wrongly set up.

- The Automatic search function is used for setting up channels after the initial set-up (e.g. after moving house). This process deletes all channels previously stored. To set up a new channel, it is better to use Automatic update or Manual Installation. 7 IFC130-L_EN 4/08/05 17:23 Page 8 General operation
Switching the TV set on and off To switch the TV set on: - press the button on the side of the TV set, the or any numeric button on the remote control, or - press the TV, OK or PR+/PR- buttons to switch the television on at the last channel or AV programme you were watching, or Accessing AV programmes Press the AV button to display the last selected audio-visual programme and scan through the other audio-visual programmes. AV selection loop: AV1, AV2, AV3, CMP (= component, YPrPb or YCrCb), VGA, HDMI. EN - press the AV button to switch the television on at the last AV programme you were watching. To put the TV set into standby mode, press the button on the side of the TV set or the button on the remote control. The TV set remains powered up, but with low energy consumption.

To switch off the TV set, unplug the mains socket from the mains outlet. Volume Volume control: use the ↓ VOL buttons on the side of the TV set or press the +/- buttons on the remote control to increase or decrease the volume. Sound mute: press the button to temporarily mute the sound. @@@@ Using the PR+/PR- buttons: scroll through the channels. @@ Using the list of programmes: refer to page 9. @@@@ Press the PRESETS (red) button on the remote control. 3. Select the PR+/PR- keys option. Use the buttons to select Favourites. When you change channels using the PR+/PR- buttons on the remote control only your favourite channels will be available.

To cancel this option, select All channels under the PR+/PR- keys option. Note: The PR buttons on the TV set allow you to access all the channels set up, even if the Favourites option is selected 8 IFC130-L_EN 4/08/05 17:23 Page 9 General operation Zoom In TV mode, you have the option of changing the display format and using the zoom function via the buttons. The available formats and zoom functions are: 4/3 format - picture in centred 4:3 format 14/9 zoom - picture in centred letterbox 14:9 format 16/9 zoom - picture in centred letterbox 16:9 format 16/9 zoom up - picture in 16:9 format with subtitles.

@@@@@ Select the Contact us! @@@@ Stereo..

. Normal... Maximum.

.. @@@@ Refer to the table 2 opposite. @@ Dynamic Bass: this function is used to strengthen the bass. @@ Sound effect: this function allows you to create sound effects. @@@@ Press EXIT to close the menu. @@@@ It offers the following options: Sound preset: use the buttons to select the appropriate setting for the programme you are watching. The Personal setting stores your graphic equaliser settings. Note: The Sound preset option is not available if you have selected a sound effect under the Sound effect option. You can access the list of preset sound settings directly by pressing the PRESETS button (red) on the remote control, selecting the Sound preset option and choosing one of the preset settings from the list.

Your selection is applied to all channels and AV programmes. Frequency range: the graphic equaliser has seven frequency bands. Select each band in turn using the buttons and make the necessary adjustments using the Press OK to confirm. buttons. Note: When you are setting the graphical equaliser, Personal appears under the Sound preset option and your settings are stored as your new personal settings. 10 IFC130-L_EN 4/08/05 17:23 Page 11 Advanced functions Tone control Return Bass Treble In every other instance, the menu displayed offers the following options: Bass, Treble: you can adjust these settings to the level you want using the buttons. Press EXIT to close the menu. To return to the Sound menu, select Return and press OK to confirm. Headphone settings Headphone settings Return Headphone volume Headphone bass Headphone treble Headphone sound Select the Headphone option from the Sound menu and press OK to display the menu. The following options are available: EN Headphone volume, Headphone bass, and Headphone treble: you can adjust these settings to the level you want using the Stereo.

.. buttons. Headphone sound: select a sound type from the list using the buttons. The default sound type is Automatic for mono sources, Stereo for stereo sources and Stereo for AV sources.

Press EXIT to close the menu. To return to the Sound menu, select Return and press OK to confirm. BBE ViVA is a trademark of BBE Sound Inc. Adjusting the picture Picture Return Picture preset Brightness Colour Contrast Black expand Tone Sharpness Noise reduction Other settings Personal..

The menus for adjusting the picture are used to obtain the best picture setting according to your preference, the type of programme you are watching and the ambient lighting. When you make an adjustment only the selected option remains displayed, allowing you to see the changes taking place on screen. The entire menu is displayed again when you select another option or the time for making an adjustment has elapsed. Display the OVERVIEW menu using the MENU button. Select the Picture option and press OK to confirm. The Picture menu appears with the following options: Medium... Neutral Low.

.. ... Picture preset: use the programme you are watching. buttons to select the appropriate setting for the Personal contains the values you have defined for the settings Brightness, Colour, Contrast, Black expand, Tone, Sharpness and Noise reduction. TV mode You can access the list of preset picture settings directly by pressing the PRESETS button (red) on the remote control, selecting the Picture preset option and choosing one of the preset settings from the list. Your selection is applied to all channels. You must, however, select a preset setting for each AV programme.

Note: This function is only available in TV mode. Brightness, Colour, Contrast, Tone, Sharpness: adjust these settings as required using the buttons. buttons. Black expand: can be used to adjust the picture according to the ambient brightness.

Select an option from the list using the Select an option from the list using the below). Press EXIT to close the menu. To return to the OVERVIEW menu, select Return and press OK to confirm. Noise reduction: improves the quality of the picture in the case of poor reception. Other settings: this option provides access to the Other settings menu (see further 11 IFC130-L_EN 4/08/05 17:23 Page 12 Advanced functions Picture Return Brightness Colour Contrast Tone Auto-adjustment Phase Clock Vertical position Horizontal position In PC mode you can access a number of specific functions: Neutral .



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/1242910)

[LCD-IFC130-INTUIVA user guide](http://yourpdfguides.com/dref/1242910)

<http://yourpdfguides.com/dref/1242910>

Press EXIT to close the menu. Locking the Time menu Select the Lock TIME option from the Parental control menu and check the box by pressing OK. Notes:

- This function is only available if a code has been defined.

- When this function is active you need to enter your PIN code to be able to access the Time menu. To cancel the lock function, enter your PIN code to access the Parental control menu, select the Lock TIME option and uncheck the box by pressing OK. Press EXIT to close the menu. Locking the Installation menu Select the Lock INSTALLATION option from the Parental control menu and check the box by pressing OK. Notes: - This function is only available if a code has been defined.

- When this function is active you need to enter your PIN code to be able to access the Installation menu. To cancel the lock function, enter your PIN code to access the Parental control menu, select the Lock INSTALLATION option and uncheck the box by pressing OK. Press EXIT to close the menu. Operation (TV mode) To watch a channel or AV programme which is locked, try accessing it and follow the procedure on the screen. The lock will be applied again when you put the television in standby.

In the list of programmes, channels and/or AV programmes which are temporarily unlocked are indicated by an open padlock. If you have forgotten your PIN code you can cancel it: Put your TV set into standby mode, then press the VOL ↓ button on the TV set and the EXIT button on the remote control simultaneously for five seconds. This procedure is possible, even if you have locked the buttons on the TV set. - 15 IFC130-L_EN 4/08/05 17:23 Page 16 Advanced functions Customising your television Preferences Preferences Return Channel number Language Maximum TV volume Programme info pages Power Savings Mode Teletext adjustment You can set preferences for some features. These preferences remain in force as long as you do not change them. English... ..

. EN Display the OVERVIEW menu by pressing the MENU button. Select the Installation option and confirm by pressing OK. Select the Preferences option from the Installation menu and press OK to confirm. The Preferences menu offers the following options: Channel number: check this box using the OK button to permanently display the number of the channel being watched. Select your language using the ↓ keys. Language: select from the list the language the menus will be displayed in using the buttons. Note: When you select a language, it is applied to the menus immediately. Maximum TV volume: set the maximum volume level using the buttons. To hear the level that you have just set, press the OK button and hold it for a few seconds.

Programme info pages: if you have changed the reference page for the TV programmes in Teletext you can restore the factory-set reference pages. Press OK until the message Running appears. Once the setting is implemented the message Done appears. Power Savings Mode: when this function is active the TV set automatically goes into standby mode after five minutes if it does not receive any signal on the selected channel or AV programme. To enable this function, check the box by pressing OK.

Teletext adjustment: use this function if one of the following situations occurs: - Some channel names are missing following auto installation. Check/uncheck the box by pressing OK and run autoinstallation again. - Teletext subtitles are not visible or are frozen. Check/uncheck the box by pressing OK and access the Teletext page displaying the subtitles. - Some Teletext lines never display.

Check/uncheck the box by pressing OK and access the Teletext page again. The box is checked by default. Press EXIT to close the menu. Select the option Return and press OK to return to the Installation menu. 16 IFC130-L_EN 4/08/05 17:23 Page 17 Advanced functions Configuring AV sockets You can configure your TV set according to the equipment you connect to it. AV settings Return AV1 name AV1 video input AV2 name AV2 video input AV3 name AV3 video input CMP name HDMI name DECOD. RGB... VCRI S-Video.

.. CAMCOR Video... CMP ___ HDMI __ Display the OVERVIEW menu by pressing the MENU button. Select the Installation option and press OK to confirm. The Installation menu appears. Select the AV settings option and press OK to confirm. Follow the messages on screen and the instructions below explaining how to configure the AV sockets.

AV1 name: use the buttons to select from the list the name of the equipment connected to this socket. If the factory preset names do not suit you, select AV1 ___ and enter another one, following the screen messages. buttons to select from the list the type of video signal transmitted by the equipment connected to the AV1 socket. Note: Select RGB if no picture is displayed when you connect a games console. AV1 video input: use the Select the name of the device connected to AV1.

EN Repeat the same procedure to configure the AV2 socket. AV3 name: use the buttons to select from the list the name of the device connected to the AV3 sockets. If none of the devices in the list is appropriate, select AV3 ___ and enter the name of the device following the instructions on the screen. AV3 video input: use the CMP name: use the buttons to select from the list the type of video signal transmitted by the equipment connected to the AV3 sockets. buttons to select from the list the name of the device connected to this socket.

If none of the devices in the list is appropriate, select CMP ___ and enter another one, following the instructions on the screen. HDMI name: use the buttons to select from the list the name of the device connected to this socket. If none of the devices in the list is appropriate, select HDMI __ and enter the name of the device following the instructions on the screen. Press EXIT to close the menu. Select the option Return and press OK to return to the Installation menu. 17 IFC130-L_EN 4/08/05 17:23 Page 18 Advanced functions Playing files from memory cards Insert a card in the relevant connector or plug the USB card reader into the relevant socket on the side of the TV set. If necessary, display the OVERVIEW menu by pressing the MENU button. Select the Memory card option and press OK to confirm. The list of supported file formats is displayed. Only the file formats actually on the card are available.

1. Use the buttons to select the file format that you want to play and press OK to confirm. The relevant screen is displayed. The list of folders/files appears on the left of the screen. buttons to select a folder/file and press OK to confirm. Then press the button to access the play modes on the right of the screen. EN 2.

Use the 3. Use the buttons to select the relevant play mode and press OK to confirm. The following play modes are available: Standard Play - Folder: the device plays all the subfolders and files in this folder in the order they were recorded on the card; - File: the device starts playing from this file.



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/1242910)

[LCD-IFC130-INTUIVA user guide](http://yourpdfguides.com/dref/1242910)

<http://yourpdfguides.com/dref/1242910>

Play All mp3 Music PLAY Current folder Current file Artist Title Album Standard Play The device plays all the files in all the folders in the order they were recorded on the card. Random Folder - Folder: the device plays the files in the selected folder randomly. - File: the device plays this file, then the other files in the selected folder randomly. Rock 1 Rock 2 mp3 file 1 mp3 file 2 mp3 file 3 mp3 file 4 Random All The device plays all the files in all the folders randomly.

Repeat Folder/File (mp3,WMA) The device plays the selected folder or file again.

Repeat (JPEG, MPEG, DivX and simultaneous play of mp3 and JPEG files) The device plays the folder again. While playing, the screen displays information which varies according to the type of file (see opposite). JPEG and mp3 + JPEG NORMAL PLAY 18 File name 18/124 MPEG and DivX 00:12 PLAY Playing mp3 and JPEG files simultaneously If the card contains mp3 and JPEG files you can play both types of files simultaneously, thereby creating a musical slide show. In this case, select BOTH from the list of file formats. Only the list of JPEG folders/files appears.

The mp3 files start playing with the first file in the first folder. 18 File name 18/124 18 IFC130-L_EN 4/08/05 17:23 Page 19 Advanced functions Teletext The Teletext service is available in many countries under a variety of names (TOP Text, Fastext, FLOF text, Videotext). It is provided as a free service by television broadcasters. This service provides a real wealth of information, available at any time, on weather, sports results, news, games, etc. The information is presented in pages or organised in topics specified in colour on the screen and you can access this information by simply pressing the buttons of the relevant colour on the remote control. Other Teletext functions Newsflash When a newsflash is detected, the icon is replaced with a N in the navigator. Select it and press OK to display the newsflash. @@@@ If the particular programme does not provide a Teletext service, a message will appear to this effect. To display a page, enter its 3-digit number or use the PR+/PR buttons. The page appears after a few moments.

The entered number appears: - red if the page does not exist, - white if the page has been found, - green when a sub-page has also been found for this page, - yellow when the page exists but has not been found yet. If the current page includes subpages, the page number is displayed in green. In this mode, pressing the buttons will allow you to step through all the available subpages. @@@@ To do this, display the relevant alarm page and enter subpage mode. Enter the time instead of the subpage number (e.g. @@ Other topics accessible in the same way can also be displayed. Stop Some information is spread over several subpages which will be displayed one after the other. To stop subpage scrolling, select STOP and press OK. Press OK to allow the information to move again.

If you select STOP and the symbol changes colour, this means that there are no subpages. TOPtext TOPtext displays a bar at the bottom of the page divided into two coloured sections (yellow and blue). The blue section displays a topic you can access directly by pressing the blue button. The next topic will then appear in the blue section. The yellow section displays an article you can access directly by pressing the yellow button.

The next article will then appear in the yellow section. Hidden answers To reveal a hidden answer (for example, in games), select and press OK. Press OK once more to hide the answer again. Zoom Select and press OK: once to zoom in on the top part of the screen, twice to zoom in on the bottom part of the screen and three times to return to normal display. Storing the programme page If the broadcasting company amends the pages of its Teletext you need to save the new programme page to be able to obtain information when you press the GUIDE button (see page 8).

To do this, go to the programme page for the current day and select the function in the navigator. Press the OK button until the message "Store for programme info: OK. Reset: 0" appears at the bottom of the screen. Press OK. Press the EXIT button to quit Teletext. Mixed display Select and press the OK button to display Teletext in the right half of the screen. Use the TEXT button to toggle between full screen and mixed display modes. 19 IFC130-L_EN 4/08/05 17:23 Page 20 Other information Sockets AV1 AV1 SCART socket (input-output) at the back This socket can be used to connect a range of equipment, including video recorders, camcorders (VHS, S-VHS, 8 mm or Hi 8 format), decoders, satellite receivers, DVD players, games consoles or devices producing an RGB signal. EN AV2 SCART socket (input) at the back AV2 This socket can be used to connect equipment, such as video recorders or camcorders (VHS, S-VHS, 8 mm or Hi 8 format). AV3 RCA audio + video sockets (input) on the side These can be mainly used to connect camcorders (VHS or 8 mm format).

AV3 RCA audio + S sockets (input) on the side These can be mainly used to connect camcorders (S-VHS or Hi 8 format). CMP component sockets (Y Pb/Cb Pr/Cr) + RCA audio sockets (input) at the back These can be used to connect a DVD player. The component sockets automatically detect the type of component signal received: interlaced component (YPrPb) or progressive component (YCrCb). VGA socket (15 pin) + audio socket (input) at the back These can be used to connect a computer. stereo jack HDMI socket (or DVI socket + RCA audio sockets) (input) at the back HDMI This can be used to connect a PC with a compatible video card installed, certain DVD players or a high-definition compatible digital satellite decoder. This socket allows a very high transmission quality for the video and audio signals. To connect a device with a DVI socket, you can use the HDMI socket and the RCA audio sockets. In this instance, the HDMI socket is used for receiving the video signal and the RCA sockets for receiving the audio signal. An HDMI-DVI cable is required. Notes: -

Do not connect a device supplying analogue RGB signals to this socket.

- The HDMI socket is compatible with HDCP format. R audio (DVI) L HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC. To display images using the equipment connected, press the AV button on the remote control: once to select AV1, twice to select AV2, etc. For some equipment (connected to the SCART sockets), this selection is done automatically. 20 IFC130-L_EN 4/08/05 17:23 Page 21 Other information RCA audio sockets (output) at the back video L monitor OUT These can be used to connect a stereo amplifier, a hi-fi system or amplified speakers (see further below).

R RCA audio + video sockets (output) at the back These can be used to connect a Home Cinema amplifier.



[You're reading an excerpt. Click here to read official THOMSON LCD-IFC130-INTUIVA user guide](http://yourpdfguides.com/dref/1242910)
<http://yourpdfguides.com/dref/1242910>

USB socket (input) at the side This can be used to connect a memory card reader for cards containing mp3, WMA, JPEG, MPEG, and/or DivX files. The following USB 1.1 and USB 2.0 Mass Storage Class devices are recognised as compatible: - flash memory card readers - USB flash memory sticks - mp3 players with flash memory - mp3 players with hard disc, with their own power supply - most digital cameras - some mobile telephones - hard disc drives with their own power supply, supporting FAT12 and FAT16 file systems.

The FAT8, FAT12 and FAT16 file systems are supported. NTFS systems are not supported. EN Memory card sockets (input) on the side These can be used to connect memory cards. The following formats are supported: SM, SD, MMC, MS, MS Pro, XD, CF and MD. Connecting active speakers or an amplifier The audio RCA sockets on the side of the set can be used to connect active speakers (with a built-in amplifier) or an amplifier. Connect the left speaker to the RCA L socket and the right speaker to the RCA R socket. To connect an amplifier, you should connect the RCA left L and right R sockets to the amplifier's L and R inputs. Connecting headphones Use the relevant socket on the side of the TV set to connect headphones or stereo earphones. Refer to page 11 on how to adjust the headphone volume. Connecting a video recorder You are recommended to connect a video recorder via the SCART socket to obtain optimum picture and sound quality.

However, you can also connect a video recorder to the TV set only using the aerial socket. If you select the latter option, switch the video recorder on and play a tape. Then use the Automatic update option from the Automatic installation menu to search for the appropriate channel for the video recorder (refer to the relevant section). You should assign channel 99 to it to ensure enhanced picture quality when tapes are being played and in pause mode. 21 .



[You're reading an excerpt. Click here to read official THOMSON
LCD-IFC130-INTUIVA user guide
http://yourpdfguides.com/dref/1242910](http://yourpdfguides.com/dref/1242910)