



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THOMSON LCD. You'll find the answers to all your questions on the THOMSON LCD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual THOMSON LCD**  
**User guide THOMSON LCD**  
**Operating instructions THOMSON LCD**  
**Instructions for use THOMSON LCD**  
**Instruction manual THOMSON LCD**

TH\_090\_1072\_en 07/04/02 14:30 Page 1

## Contents

Contents	1
Precautions	2
Switching on	3
Remote control: TV	4
Remote control: other equipment	5
Initial set-up	6
Manual set-up	7
General operation	8
Switching on and off	
Volume	
Displaying status information	
Accessing channels	
Accessing AV programmes	
Setting the time – List of programmes	9
Time	
List of programmes	
Virtual Dolby Surround	10
Picture and preferences	11
Picture	
Preferences	
Other settings	12
Customizing	
Teletext	13
DVD menus	14
DVD remote control	15
Playback – types of discs	16
Playback modes	17
Locking	18
Display and sound	19
Preferred languages	20
Info menus	21-22
Connections	23

EN  
TV  
DVD



[You're reading an excerpt. Click here to read official THOMSON LCD user guide](http://yourpdfguides.com/dref/1241905)  
<http://yourpdfguides.com/dref/1241905>

**Manual abstract:**

.....  
.....  
.....  
.....

.....  
.....  
.....

.....1 Precautions .....

.....  
.....  
.....

.....  
.....  
.....

..2 Switching on .....

.....  
.....  
.....

.....  
.....

.3 Remote control:TV .....

.....  
.....

.....  
.....

..4 Remote control: other equipment .....

.....  
.....

.....5 Initial set-up .....

.....  
.....

.....  
.....

.....6 Manual set-up .....

.....  
.....

.....  
.....

..7 General operation .....

.....  
.....

..... @@.  
.....  
.....  
.....

.....9 Time List of programmes Virtual Dolby Surround .....

.....  
.....  
.....  
.....  
.....

...10 Picture and preferences ..

.....  
.....  
.....  
.....

.....11 Picture Preferences Other settings .

.....  
.....  
.....  
.....

.....  
.....  
.....

12 Customizing Teletext .....

.....  
.....  
.....  
.....

.....  
.....

..13 DVD menus ...

.....  
.....  
.....  
.....

.....  
.....

.14 DVD remote control .....

.....  
.....  
.....

.....15 Playback types of discs .....

.....  
.....  
.....  
.....

.....16 Playback modes ...

.....  
.....  
.....  
.....

.....  
.....17 Locking .....

.....  
.....  
.....

.....  
.....  
.....  
... 18 Display and sound .....

.....  
.....  
.....

.....  
.19 Preferred languages .....

.....  
.....  
.....

.....20 Info menus .....

.....  
.....  
.....

.....  
.....  
.....  
.....21-22 Connections .....

.....  
.....  
.....  
.....

..... @@@@Do not cover the vents at the back or top of the TV/DVD.

Leave sufficient space around it to allow adequate ventilation. @@If you have to use the TV/DVD outdoors, do not expose it to water from rain or splashing.

Moving it from a cold atmosphere into a warm one can cause condensation on the screen (and on some components inside the TV/DVD). Leave the condensation to evaporate before turning the TV/DVD on again. If you are away for a long period, remove the plug from the mains supply socket.

During thunder storms, we recommend that you disconnect the TV/DVD from the mains and aerial so that it is not affected by electrical or electromagnetic surges that could damage it. For this reason, keep the mains socket and aerial socket accessible so they can be disconnected. Immediately disconnect the TV/DVD if you notice it giving off a smell of burning or smoke. You must never under any circumstances open the TV/DVD yourself. You risk electrocution if you do so.

·Care Clean the screen with a glass care cleaner and the rest of the set with a soft cloth and neutral detergent. Regularly dust the vents at the back and sides.

Using solvents, abrasive or alcohol based products risks damaging the TV/DVD. THOMSON multimedia is not liable if the TV/DVD set is not used in accordance with this manual. Caution: the screen of your LCD TV/DVD may be damaged if is cleaned with strong detergents, alcohol or abrasive products. ·

Copy protection In accordance with the DVD standard, your TV/DVD is equipped with a Copy Protection Device, which can be triggered on and off by the DVD disc itself, in order to make any recording of the concerned DVD disc onto a videotape of very poor picture quality, or even impossible. "This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home use only unless otherwise authorized by Macrovision Corporation.

Reverse engineering or disassembly is prohibited." More info · Discs Always... · handle your discs with care. Hold a disc with fingers on the border or hole, Never... · never play cracked, chipped or deformed discs nor try to repair them with adhesive tape or glue, · never write on the disc, · never move the player during playback, · never scratch discs or store them in places of direct sunlight, high humidity or high temperature, · never try to play a Photo CD or CD-R in this player, · never use record cleaning sprays, benzine, static electricity liquids or any other solvent, if the disc surface is dirty. Wipe gently with a soft damp (water only) cloth, never wipe the disc in a circular motion, since circular scratches are likely to occur and could cause noise during playback.

If you hear strange noises or vibrations coming out of the unit once a disc has started to play, rapidly press the STOP key of the remote control or front of player. tv dvd aux stop eject rew play pause fwd pr standby on off · always insert them carefully in the slot located on top of your LCD screen, upwards, (for

single-sided disks), · the printed side must always be facing you, · use a soft cloth to clean discs if necessary, wipe from the centre to the border, · always put discs back into their cases after playing and store in a vertical position. 2 TV\_DVD\_LCD\_en 17/06/02 11:45 Page 3 Switching on Follow the instructions on this page on how to switch on your TV/DVD set and the remote control before going on to the channel set-up procedure described on page 6. 220 - 240 V ~ 50 Hz Power supply unit 1 Install two LR06 or AA batteries in the remote control (see below). 2 Plug the AC adapter jack into the DC IN socket at the back of your LCD TV/DVD.

It is used to supply power to your TV/DVD which must only be powered with direct current. 3 2 3 Plug one end of the power cord to the adapter and the other end to a mains socket (220 240V / 50Hz). 4 Connect the outside aerial or cable network to the g socket at the back of the TV/DVD set. The aerial socket (75 Ohms - VHF / UHF / cable) located at the back of the TV/DVD set can be used for connecting an external aerial or other equipment fitted with a modulator (video recorder, satellite receiver, etc.).

We recommend that you do not connect other equipment (VCR, decoder, etc.) to your TV/DVD set to begin with, so as not to complicate the set-up procedure with this additional equipment. Connect them when you have finished setting up the channels by referring to page 23 of the manual. NexTView-Link video recorder (see diagram at the end of this manual, on the inside of the cover). EN TV DVD 4 If you have a NexTView-Link video recorder, you must connect it to the AV1 socket of the TV/DVD set using a SCART cable (21 pins, all wired) before proceeding to the initial set-up described on page 6. 5 Switch the TV/DVD on by pressing the B button of the keyboard. The first time you switch on the TV/DVD, the language selection menu appears. 6 Now go to page 6 for information on the Initial set-up, or page 7 for information on how to update your channels if the channels have already been set up (if you have moved house, for instance). Information about connecting other equipment to the AV (Audio-Video) sockets is given on page 23.



[You're reading an excerpt. Click here to read official THOMSON](#)

[LCD user guide](#)

<http://yourpdfguides.com/dref/1241905>

Before referring to it, complete the initial channel set-up procedure on the next page to avoid any problems with equipment selection.

5 More info **INSERTING THE BATTERIES** Install two LR06 or AA batteries in the remote control as indicated below. **UK SOCKET** Equipment for the UK is supplied with a mains cable fitted with a moulded plug. **5A PRECAUTIONS ON USING BATTERIES** - Only use the battery types specified. - Make sure you use the correct polarity. - Do not mix new and used batteries. - Do not use rechargeable batteries. - Do not expose batteries to excessive heat, throw them on the fire, recharge them or try to open them, as this could cause them to leak or explode. - Remove the batteries from the remote control if you are not using it for a long period of time (several weeks). The plug contains safety components and must not be replaced by one sold by general retailers. It is fitted with a fuse that protects your television.

If your set has stopped working, the fuse may have blown. If it has, replace it with an identical ASTA certified or BSI (BS1362) 5-amp fuse. Please respect the environment and the relevant regulations. Before you dispose of batteries or accumulators, ask your dealer whether they require special recycling and if he is able to take them back. 3 TV\_DVD\_LCD\_en 17/06/02 11:45 Page 4 Remote control : TV Most of your TV/DVD's functions are available via the menus that appear on the screen.

The remote control supplied with your set can be used to navigate through the menus and to configure all the general settings. **CONTROL KEYS** To switch on and off your TV/DVD. To control your TV/DVD set, switch the selector to the tv+dvd position. To control other equipment, see page 5. To switch from TV to DVD mode or from DVD to TV mode.

**Programmes** To change channels. To select a channel by entering its number. For two-digits channels, press 0/- key first (ex. 12, type 012). **Audiovisual programmes** To select an appliance connected to an AV socket. The colour keys Red: call the sound and picture preset menu. Green: display the list of programmes. Yellow: useful status information. Purple: display Teletext. **Sound** To control the volume.

Mute and re-establish the sound. The colour keys are also used for teletext operation. **NAVIGATION KEYS** Pressing tv menu key display the SUMMARY. The Up and Down buttons are used to select options from the menus. The Left and Right buttons are used for adjusting settings, changing values, switching certain functions on and off and for using the zoom function. Press the ok button to confirm a selection. Press the exit return button to close menus. Important:

If the batteries of your remote control are flat, you can use the keys on the front of the unit : they have the same function as those of the remote control. 4 TV\_DVD\_LCD\_en 17/06/02 11:45 Page 5 Remote control : other equipment The remote control supplied with your TV/DVD may vary depending on the model you have chosen. Same remote controls can be used for other equipment, such as video recorders, DVD players, satellite receivers or Hi-fi systems. This page provides information concerning the remote control's use with these other types of equipment. **Video recorder** Satellite Receiver Hi-fi system Set the switch to vcr Standby / On Only makes of apparatus of the THOMSON group benefit from the actions of all the keys. Set the switch to sat Standby / On To display the menu Set the switch to hifi Standby / On To display the menu **EN Vertical scrolling in menus Vertical scrolling in menus TV DVD Horizontal scrolling in menus Confirmation an action Exit the menus Direct access to the programmes or enter the numeric values To change channels Select the AV input. To switch the sound off and back again To set the volume level To switch the sound off and back again To set the volume level Horizontal scrolling in menus Confirmation an action Exit the menus Direct access to the programmes or enter the numeric values To change channels To select a radio station using its number To change stations VCR functions PROGRAMMING THE REMOTE CONTROL 1. Set the selector switch to the unit you wish to use the remote control with.**

2. Holdup cable network channels. Setting up channels manually requires every setting for every channel to be entered, one at a time. Display the OVERVIEW by pressing tv menu button, select Installation line and confirm with ok. The INSTALLATION OVERVIEW is displayed.

Select the Manual installation line. Confirm with ok to display the menu. Define all the settings in turn for each channel to be stored. Follow the instructions appearing at the bottom of the screen. 1 Standard: select the standard for your country. Standard are the following: France for France and Luxembourg, DKK' for Eastern Europe and the Middle East, UK for the United Kingdom and Eire, Euro BG for Western Europe. 2 Reception: select the reception type (terrestrial aerial or cable network). Some cable networks use the same frequencies as terrestrial channels. In this case case, select Aerial instead of Cable. EN TV DVD 3 Autosearch: key in the channel number or start a search with the or keys.

Your TV/DVD will stop at the first channel found. If you want to store the corresponding channel, select the Store on PR number line. Otherwise, continue the search using the or button. 4 Fine tuning: if the picture is not sharp enough, try to improve it with the or button. Store on PR number: to confirm your settings, key in the number that you want to assign to the channel (e.g. 01 for BBC1). Store it with ok. Name: if you want enter a name, select the character to be changed with the or button. Scroll through the alphabet with the 1 and 2 buttons.

Change the character with the or button and repeat stage 5 above. **Decoder:** if the channel is encrypted and if you want to connect a decoder to the AV1 socket (see page 23), tick the box with the or button and repeat stage 5 above. When you have finalised all the settings for a particular station, select the Store on Pr number line to store them. Then go on to the next channel. 5 6 7 Leave the menu with exit.

More info **Subsequent set-ups:** display the INSTALLATION OVERVIEW and select Auto update or Auto installation as appropriate. Then follow the instructions at the bottom of the screen. · Auto update allows you to set up channels just launched or any channels that are missing or wrongly set up. · Auto installation is used for setting up channels after the initial setup (e.g.

after moving house). This process deletes all channels previously stored. To set up a new channel, it is better to use Auto update or Manual installation. 7 TV\_DVD\_LCD\_en 17/06/02 11:45 Page 8 General operation This page describe the basic features of your TV/DVD with LCD screen. Switching the TV/DVD set on and off To switch the TV/DVD set on, press the B button on the keyboard. When the set is on, the indicator on the front is green.



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/1241905)

[LCD user guide](http://yourpdfguides.com/dref/1241905)

<http://yourpdfguides.com/dref/1241905>

*Standby mode: press the B button on the keyboard or on the remote control. When the TV/DVD set is in standby mode, the indicator on the front is red. The TV/DVD set remains powered up, but with low energy consumption. To switch on from standby, you can: - press any numeric button on the remote control, - press the ok or pr+/pr-, - press the av.*

*Automatic switch off: the set automatically switch in standby mode 5 minutes after the station being watched stop broadcasting. Volume control: use the buttons to increase and decrease the volume. Sound mute ( ): press this button to temporarily mute the sound. Press again to restore it. Displaying status information Press the yellow info button on the remote control to display the number and name of the channel you are watching, the time, and the type of sound. The number and name of the channel are displayed whenever you turn on the TV/DVD set or change channels. The channel number will be displayed permanently if you have activated the function in the Preferences menu (cf. page 11). Accessing programmes - Using the numeric buttons: for programmes 1 to 9, press the corresponding button. For two-digit programmes, first press the 0/-- button, then the programme number (e.g. type 012 for channel 12). - Using the pr+/pr- buttons: scan through the programmes. You cannot access AV programmes but these are accessible using the pr+/pr- buttons on the TV/DVD set. - Using the list of programmes: see page 9.*

*Accessing AV programmes Press the av button to display the last selected AV programme, press again to access the other AV programmes. You can also access AV programmes using the list of programmes (see page 9). More info Child lock You can disable the TV/DVD buttons so that your children cannot switch the television on without your permission. The TV/DVD set can then only be switched on using the remote control. This function is activated: - after the sleep timer has been set.*

*- if a wake-up time has been set (TIME menu). - if you put the TV/DVD into Standby mode by pressing the standby button B on the remote control for 5 seconds. When the TV/DVD set is in standby and locked, the indicator on the front panel flashes red. Picture and sound preset Display the menu using the red button. Select the desired option using the / buttons and adjust as required. 8 TV\_DVD\_LCD\_en 17/06/02 11:45 Page 9 Setting the time List of programmes*

*The information on this page explains how to use the Time menu functions (Setting the time, Sleep timer, Wake-up), as well as those for the LIST of programmes menu. Time Display the OVERVIEW menu using the tv menu button and select the Time option. Press ok to confirm. The TIME menu is displayed. Return: returns to the OVERVIEW menu.*

*- Sleep timer: set an automatic shut-off time (0 to 4 hours, with 5 minute steps) using the / buttons. Set 00:00 to cancel this function. When the sleep timer is on, a message appears one minute before the TV/DVD set goes into standby mode. Press any button on the keyboard or on the remote control to cancel standby mode. - Time reference on programme: select a programme using the / or pr + / pr - buttons, or enter a programme number using the numeric buttons. This programme will be used to provide an accurate time and date, and must have a teletext service. - Time (and Date): if the time is not provided by Teletext, the Wake-up functions are not available and a message appears requesting you to change the reference channel or to enter the time manually. To do this, choose the relevant option and enter four digits using the remote control numeric buttons. Once you have set the time, you can use the Wake-up timer feature. Time entered manually will be lost in case of a power cut.*

*You must then reenter it. EN TV DVD - Wake up timer: press ok to check the box in order to enable this function and display the menu options. - Wake up time: enter the wake-up time using the numeric buttons. - Programme number: use the buttons / or numeric buttons (2 digits) to enter the number of the programme you want to wake up. - Daily: press ok to check the box if you want a daily wake-up call.*

*Press exit to close the menu. Put the TV/DVD set into standby mode using the B button on the remote control. The indicator on the front panel starts flashing slowly. The TV/DVD set will automatically switch on at the programmed time and for 1 hour duration if you do not interrupt it by using the remote control.*

*List of programmes Press the list (green) button on the remote control to display the LIST of programmes. It has a maximum of 11 pages and shows the name and the number of each programme. The last page lists units connected to the AV sockets. It opens on the page where the programme you are currently watching is listed. To watch one of the programmes on the displayed page, use the pr + / pr - or / buttons and press ok. You can also enter the last digit of the programme number (for example, 5 for 25). You can scroll through the pages using the / buttons. Leave the menu with exit. 9 TV\_DVD\_LCD\_en 27/06/02 10:58 Page 10 Virtual Dolby Surround Dolby Virtual is a technology certified Dolby Laboratories, that creates a virtualized surround sound experience from two speakers. The Virtual Dolby Surround function in works multi-channel and Dolby Surround encoded audio sources. Virtual Dolby Surround retains all of the original multichannel audio information and provides the listener with the sensation of being surrounded by additional speakers.*

*Display the OVERVIEW by pressing tv menu button. Select the Sound line. Confirm with ok. The SOUND menu appears with the following options. Return: returns to the OVERVIEW menu. Sound type: select the relevant sound type. The available options depend on the programme you are watching. Refer to the table opposite to find out about the various options available according to the type of sound transmitted by the channel. Sound Mode: select a mode. The available modes depend on the sound type selected.*

*See «More info» below. Magic and Dolby Virtual modes are only available for stereo audio sources. Surround effect: adjust the surround effect using the bargraph. This line only appears if you have selected Dolby Virtual under the Sound mode line. Balance L/R: balance the sound between the Left and Right speakers.*

*Sound preset: use the or button to select the appropriate setting (Standard, Film, Voice, Music, Flat, Personal) for the programme you are watching. The Personal setting stores your graphic equalizer settings. Sound type BROADCAST Mono Stereo Dual NICAM - 3 AV CHOICE Automatic - Mono Mono - Stereo Sound 1 - Sound 2 Sound 1 - Sound 2 - Sound 3 Stereo - Sound 1 - Sound 2 Graphic equalizer: select each band in turn using the / buttons and make the necessary adjustments. Once you have set the equalizer, the Sound Preset option goes automatically to Personal. Your settings are stored as the new personal settings.*



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/1241905)

[LCD user guide](http://yourpdfguides.com/dref/1241905)

<http://yourpdfguides.com/dref/1241905>

Leave the menu with exit. Manufactured under licence from Dolby Laboratories. "Dolby", and the double D symbol are trademarks of Dolby Laboratories. More info Sound Mode SOUND TYPE Mono Stereo Sound 1 Sound 2 Explanations Normal Wide Magic Dolby Virtual original sound (mono or stereo) stereo effect for mono sound accentuated stereo effect + surround effect Virtual Dolby Surround. MODES Normal - Wide Normal - Magic Dolby Virtual Normal - Wide Normal - Wide Nicam The NICAM process consists of sending digital stereo sound comparable to that from an audio CD via a land based transmitter in addition to its usual mono equivalent. So by means of the NICAM process, you can get digital sound with the quality of a compact disc. 10 TV\_DVD\_LCD\_en 17/06/02 11:45 Page 11 Picture and Preferences The information on this page allows you: - to adjust your TV/DVD's picture to suit better your preference, the type of programme you are watching and the ambient lighting. - to set preferences for some features of your TV/DVD with LCD screen. Picture Display the OVERVIEW with the tv menu button. Select Picture line and press ok to display PICTURE menu.

Return: returns to the OVERVIEW menu. Picture preset: use the or button to select the appropriate setting (Standard, Film, Studio, Sport, Personal) for the programme you are watching. Personal stores all your preferred settings. EN Brightness, Colour, Contrast and Sharpness: adjust the picture to your liking. These settings are automatically stored under Personal under the Picture preset option. TV DVD Tone controls colour temperature (Warm, Neutral or Cold).

Leave the menu with exit. Preferences Display the OVERVIEW with the tv menu button. Select Preferences line. Confirm with ok.

The PREFERENCES menu appears with the following options. Return: return to the OVERVIEW menu. Show PR. number: tick the box to permanently display the number of the channel you are watching. AVI video input: using the or button, state the type of video signal transmitted by the equipment connected to AVI.

Format control: choose the format for the on-screen picture. · Auto: the TV/DVD (16/9) adapts to the broadcast picture format if the broadcaster or equipment connected via a Euro-AV (scart) socket provides a control signal. · 16/9 or 4/3: choose the format if the picture is not automatically adapted. The format returns to Auto if you change channel or switch off the TV/DVD set. Ext.

amplifier: if you connected an amplifier to the cinch sockets located on the back of your set, tick the box. The left and right speakers of the TV/DVD set are thereafter disconnected and you may use the speakers connected to the amplifier. If you do not use the external amplifier, deactivate the External amplifier

function: your TV/DVD set would otherwise be muted. Leave the menu with exit. 11 TV\_DVD\_LCD\_en 17/06/02 11:45 Page 12 Other settings The explanations given on this page will enable you to access the Personal Settings menu. Customizing Display the OVERVIEW by pressing tv menu button, select Installation line and confirm with ok. The INSTALLATION OVERVIEW is displayed. Select the Personal settings line. Confirm with ok to display the menu.

Return: returns to INSTALLATION OVERVIEW menu.

Menu language: select your preferred language for menus. Country: the choice of country is important for the correct display of Teletext screens in the corresponding language. Auto volume level: tick the box if you want to keep the same sound level on all channels. Leave the menu with exit. 12

TV\_DVD\_LCD\_en 17/06/02 11:45 Page 13 Teletext Used in many countries under various names (TOP Text, Fastext, FLOF text, Videotext), Teletext is a free service offered by television channels. The service consists of information database (weather, sports results, news, games, etc.) available at all times. Press the text button to display the Teletext Index page (page 100) or the last called page. A message will tell you if there is no Teletext on the channel that you are watching. Display a page: key in the 3 figures of its page number.

After a moment the page appears. Use / or pr +/pr - buttons to display following or previous pages. The last line of the teletext page can be used in 2 ways: either in "Function" mode or in "Link" mode. To go from one mode to the other, press the tv menu key. Favourite pages: To memorise 4 of your favourite pages, use the / keys and select n n n n in the grey window on the bottom left of the page.

Press OK to tick the box. Type in the number of the page to be saved and as soon as the page is displayed, press STOP on the remote control to save it. The number memorised is displayed at the bottom of the page. You can memorise up to 4 page numbers. To return to these pages in the future, just press the colour-coded key corresponding to the page number.

If you change channel, you need to select n n n n again in the grey window at the bottom of the screen and then press twice on the OK key to call up the numbers of the pages saved. EN TV DVD Function Mode Display the Index page: using / buttons select 100 in the bottom left window of the page and confirm with ok. Rolling pages: some types of information may take several pages. They appear on the screen as become available. Using / buttons select STOP in the bottom left window of the page and confirm with ok to stop paging. To resume paging, press ok. Hidden message: to reveal a hidden answer (games), using / buttons select ? ? ? in the bottom left window of the page and press ok. Press ok, to hide it again. Zoom: using / buttons select ZOOM in the bottom left window of the page and press ok, once to enlarge the top of the screen, twice to enlarge the bottom of the screen, or three times to restore the original size.

Mixed screen: to overlay a teletext page onto the channel picture, using / buttons select MIX in the bottom left window of the page and confirm with ok.

One further press on ok returns to normal display. Sub-page: to access a sub-page directly, using / buttons select - - - - in the bottom left window of the page and confirm with ok. Key in the sub-page's 4-digit number (e.g. : 0003). With some channels, it may take several minutes to display the sub-page on the screen. Some channels transmit warming pages which may be displayed in a desired time. Example: dial 1530 as a sub-page number for 15:30, then press exit. The unit should be on, tuned at the station transmitting the warming page. Character set: if the characters on the teletext page are faulty, you can select another set of characters.

Using the / keys, select ABCDE in the grey window on the bottom left of the page. Press ok to check or uncheck the box. Link Mode The display of the last line differs according to the type of teletext received. Your TV automatically detects the type of teletext received. If however the reception conditions do not allow such automatic detection, you can manually carry out this selection.



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/1241905)

[LCD user guide](http://yourpdfguides.com/dref/1241905)

<http://yourpdfguides.com/dref/1241905>

Using the / keys, display FORCE AUTO in the grey window at the bottom left of the page. Then press OK to select FORCE FASTTEXT or FORCE TOP depending on the case. Direct access: the yellow and blue buttons allow direct access to the pages whose numbers are displayed in yellow and blue at the bottom of the screen. @@@@To recall it up, press text button. @@@@If a disc is being read, press the STOP button.

To select a menu: using button select a menu, then press ok. Sub-menus appear. @@@@Use the / buttons to navigate between functions. Press once more on the info button to close the menu. @@@@The keypad buttons located on the front of the TV/DVD have similar functions to those on the remote control. NAVIGATION BUTTONS If the set is in TV mode, press the tv/dvd button. THE OTHER BUTTONS To put your TV/DVD set in stand-by. To control your TV/DVD set, switch to the tv+dvd position. To control other devices, see page 5. To switch from TV to DVD mode or from DVD to TV mode.

MAIN MENU These buttons allow you: - to choose a menu, - to increase or decrease a value, - to select an option. Use these buttons to access a menu. DVD PLAYBACK To skip chapters (DVD), tracks (Audio CD), or indices (Video CD). To confirm a selection. PLAY: to start playback. To access the TV-part menu. REV / FWD: for fast forward or rewind during playback. To modify the speed of a video disc, press this button several times. STOP: to stop playing a disc (to stop it completely and restart from the beginning, press twice). To eject the disc, hold this key down for a few seconds.

PAUSE: for a pause, a still frame or an image by image selection. EN TV DVD To return to the previous menu. PLAYING A DISC To access the INFO menus. To select an option for an INFO menu option. SOUND To control the volume.

To select an INFO menu option. To mute or cancel muting. To confirm a selection. To access the TV sound and picture preset menu (INFO menus disappear). To erase INFO menus.

To resume playback 10 seconds back. DVD FUNCTIONS To access the audio function of the INFO menu. To access the disc "OPTION" menu (if it exists). To access the Subtitle function of the INFO menu: you may then display or erase the subtitles. To access the disc "CONTENT" menu. To access the angle function of the INFO menu (see page 22). To access the Magnify function (see page 16). Important If the batteries of your remote control are flat, you can use the keys on the front of the unit : they have the same function as those of the remote control. 15 TV\_DVD\_LCD\_en 17/06/02 11:45 Page 16 Playback types of discs Standard playback Several playback modes are available. This page deals with simple playback mode.

For the other playback modes, see the next page. This page also contains information about the various disc types accepted by the player. 1 Insert the disk as shown in the illustration on page 2, with the printed side facing you (for single-sided disks). After a few seconds, the disc title (or, by default, the type of disc) appears with the image and audio format information and its total duration (if this information is available). 2 Press on the ok or PLAY button to start playback. Some discs automatically display a menu. You can choose an item using the /// buttons and press ok to confirm your selection. 3 To stop playback, press the STOP button. This disc location is stored by the player in its memory. If you press the PLAY button once again, the disc will resume playing from where you left off.

If you press the STOP button twice or if you remove the disc, this location will be deleted from the memory and the next time, the disc will start playing from the beginning. 4 To eject the disc, press and hold the STOP button for a few seconds. Discs you can read Digital video discs 12 cm and 8 cm, single or double-sided, single or dual layer. DVDs are high density optical discs on which high quality images and audio are recorded using digital signals. Audio CDs: 12 cm and 8 cm.

Video CDs: 12 cm and 8 cm (with or without playback control). NTSC playback: in addition to PAL DVDs and video CDs, you can enjoy your favourite NTSC movies as well. Discs you cannot read Currently, the discs that you cannot play with this unit are the following: CD-I, CD-ROM, DVD-ROM, DVD-RAM, CDV, CD-G. DVD discs with a different regional code to that of your player. Do not try to play Photo CDs or CD-R.

Regional code number: your DVD player has been designed to process regional management information that is stored on DVD discs. DVD discs that have different regional codes to that of your player cannot be played. The regional code for your player is 2. (Europe, the Middle East, South Africa, Japan). More info You can switch to TV mode by pressing the playback, without interrupting it. button during If the player is locked and the disc has been assigned a rating limit, you must enter the password to play the disc (see page 18). The disc functions available (menus, access functions, dialogue and subtitle languages, camera angles, interactivity) may vary from one disc to another. Please check the instructions given on the disc. Some discs may have been pre-programmed to prevent the operation of certain functions, such as skipping chapters, still frame and repeat play. MAGNIFY function On some DVDs and Video CDs, this function allows you to zoom in on a picture during playback at normal speed or during a pause.

It can zoom in 1.5, 2 or 4 times the normal size for DVDs and twice the normal size for Video CDs. When you press this button on the remote control, the centre of the picture is enlarged. When the picture is large enough, you can navigate from one zone to the next using the buttons (on some discs). If you access the Info menu while the Magnify function is activated, the buttons will only work for this menu. The Magnify function will be cancelled if you use one of the following functions: modification of title or chapter, disc menu, stop (STOP button), access to a marker. 16 TV\_DVD\_LCD\_en 17/06/02 11:45 Page 17 Playback modes To access the various playback modes, select the PLAY MODE menu using the confirm. Use the or button to select a mode, and press ok to confirm. / buttons, and press ok to 1 Standard Play is for normal disc playback. 2 Random Play mode activates a random playback.

This mode is only available for Audio CDs. 3 In Program Play mode, playback occurs in the order specified in the list entered using the "Edit Program" screen. If there is no programmed list, this mode cannot be selected. This mode is only available for Audio CDs. 4 The Edit Program screen allows you to specify the disc's order of play.

The list displayed can vary according to the type of disc. This menu is only available for Audio CDs. CDs: When the screen is displayed, the Track field is selected. - Using or button, select a chapter. - Press ok to validate your selection.

The page number will be displayed in the list followed by its duration.



[You're reading an excerpt. Click here to read official THOMSON LCD user guide](http://yourpdfguides.com/dref/1241905)  
<http://yourpdfguides.com/dref/1241905>

- Repeat the operation to add other tracks to the list. - When your list is complete, select it using the key and press PLAY to start the playback of your programme. The last line shows the total duration of the tracks chosen. To delete a track from the list: select the list using the or . Press CLEAR to delete it. key. Select the track using EN TV DVD 5 If Auto Play is selected, the player automatically starts playing as soon as a disc has been inserted. More info  
RANDOM PLAYBACK This mode cannot be used for DVDs and Video CDs. PROGRAM PLAY This mode is only available for Audio CDs.

**EDIT PROGRAM** The EDIT PROG. screen is only available for Audio CDs. **PLAYBACK ORDER** If the duration of track 1 exceeds the segment duration, this track will be divided into several parts. For example, if the track lasts 48 min., whereas the segment lasts 45 min., the track will be divided into two parts: 1A (45 min.) and 1B (3min.). Parts 1A and 1B will be placed into the segments as if they were different tracks. 17 TV\_DVD\_LCD\_en 17/06/02 11:45 Page 18

**Locking your DVD player** This function allows you to control access to discs with rating limits.

Select the Lock option in the main menu and press ok to confirm. The LOCK menu appears with the following options: 1 To activate the player lock, you must enter a password. 2 Enter a four digits code with numeric buttons on your remote control, and press ok to confirm. If this is the first time you enter the code, confirmation will be requested. Enter the code once more and press ok to validate.

Choose four numbers you will find easy to remember or note them down somewhere. 3 To activate the lock, select Lock player line and tick the box. Uncheck the box to disable the lock. 4 To change the password, select the Change Password line and press ok to confirm. CHANGE PASSWORD screen appears.

Enter the new four digits code with numeric buttons on your remote control, and press ok to confirm. Confirmation is requested. Enter the code once more and press ok to validate. Some DVDs contain rating limit information. The Ratings Limits function allows you to control the type of discs or programmes that your family may watch. If some discs or sections exceed the rating limit you have set, they will not be played. 5 Select the Ratings Limits line, then press ok to confirm and to display the RATING LIMITS screen. Using / buttons, select the level and press ok to confirm. The Rating Limits function will only be operational when the lock is enabled. 6 If you try to play a sequence whose rating limit is higher than the level you have set, a screen will inform you accordingly.

If you still want to see the sequence, press ok. The Code screen is displayed. Enter the 4 digits of the code, if it is correct, the sequence will be played. 7 All the unrated titles may have unrestricted access or require a password. Select Unrated Titles line and using access" or "Password required ". or button, select "Free More info RATING LIMITS Encoding scenes according to rating limits is decided by the disc publisher. In Europe, only a few discs are assigned a rating limit. 18 TV\_DVD\_LCD\_en 27/06/02 10:58 Page 19 Display and Sound The DISPLAY menu enables you to choose the image format and the Info displays. The Digital output line enables you to choose the type of sound assigned to the digital output. To reproduce the sound of a movie theatre from the sound recorded on your Dolby Digital DVDs, connect a Dolby Digital amplifier/decoder to the optical digital audio output jack and select the sound type in the Digital output line.

**DISPLAY** In the Main menu select the Display line using confirm with ok. The DISPLAY menu is displayed. or button and TV Image line allows you to choose the image format. The formats available are 4/3 Letterbox and 4/3 standard. Info Display line, allows to display some information on the screen.

Using or button, tick the box. When the box is checked, the following information is displayed on screen if it has been enabled: Viewing angle, Next chapter, Previous chapter, Play mode. EN TV DVD AUDIO OUTPUT Select the Digital output line from the Main menu using button then select the desired sound type. or Considering the device you connect to the digital audio output jack, choose the type of sound that will be output by this jack. Make your selection according to the type of disc and the type of sound you want to output from the digital audio output jack and press ok to confirm.

Digital output according to the chosen options: Disc format PCM Dolby Digital CD Digital output STOP No sound No sound No sound Bitstream PCM Dolby digital encoded PCM PCM PCM PCM PCM More info AUDIO FORMATS Dolby Digital is a sound compression technique elaborated by Dolby Laboratories for digital audio multichannel signals. The Dolby Digital system supports any audio channel configuration, from stereo sound (2 channels) up to the digital "surround" sound 5.1. If you have a Dolby Surround amplifier/decoder, you can still gain the benefits of surround sound, - either with titles with Dolby Surround label - or with DVD films whose sound has been recorded through Dolby Digital 5.1 channels. In both cases, your Pro Logic decoder must be connected to the 2- channel analog output of your TV/DVD set (see page 24 cinch audio outputs). PCM The linear PCM is a signal recording format used for CDs. CDs are recorded in 44.1kHz / 16bits. DVDs are recorded in 48kHz / 16 bits, or even up to 96kHz / 24 bits.

19 TV\_DVD\_LCD\_en 17/06/02 11:46 Page 20 Language selection During the initial installation (page 6), the language you choose during the first step has automatically been selected for the DVD part. Nonetheless, you may change the language for the player menus, and choose the languages you prefer for dialogues, subtitles and disc menus. You can change the language for any disc during playba, see page 22. Select the Languages line from the Main menu using then press ok to confirm. The LANGUAGES menu is displayed. or button, To change the player menu languages, select Player Menu line, then using or button, select the desired language. The language of the TV menus is linked to the language of the player menus. Any change in the language of the player menus also affects the TV menus and vice versa. To change the preferred language for disc menus, select Disc Menu line, then using or button select the language. If the chosen language is available for a title, it will automatically be selected.

To change the preferred language for dialogues, select Audio line, then using or button select the language. The "Original" option corresponds to a language which has been defined as the default language on the disc. If the chosen language is available for a title, it will automatically be selected. If it is not, the disc's default language will be selected. To choose the preferred language for subtitles, select Subtitles line then using or button, select the language.



[You're reading an excerpt. Click here to read official THOMSON LCD user guide](http://yourpdfguides.com/dref/1241905)

<http://yourpdfguides.com/dref/1241905>

If the chosen language is available, it will automatically be selected when you display the subtitles (see page 22). If it is not, the "subtitle" language indicated on the disc will be selected. If you choose the "automatic" option, the preferred language used for sub-titles will be the one you chosen for the dialogues (see above). Because of this, if the preferred language for dialogues is not available, but subtitles are available in this language, these subtitles will automatically appear on screen. More info The different languages and subtitles that are available are indicated on the DVD cover.

You will also find there the audio formats that are available according to the languages, image format, region and type of disc. To change the dialogue language while playing a DVD, display the audio info by pressing the button on your remote control. Using or button, select the language (see page 22). To change the subtitles language while playing a DVD, display the subtitles info by pressing the key of your remote control. Using or button, select the language (see page 22). OTHER LANGUAGES: To select a different language to those displayed for disc menus, dialogue and subtitles, select the "Other" option and enter the 4-digit code for the relevant language. You will find the list of codes at the end of this manual. 20 TV\_DVD\_LCD\_en 17/06/02 11:46 Page 21 Info Menus The Info menu can be used to access information on a disc being played, as well as other particular functions. This page describes the direct access and repeat play functions. DVD info menu Audio CD info menu Video CD info menu To display all the information, press the PLAY button to start playback and press the info (yellow) button on the remote control.

EN Direct access A DVD may contain several titles, which may be different films or programmes. These titles may be divided into numbered chapters. Audio CDs contain tracks, which you can access. Video CDs may also contain Indices. TV DVD DVD To directly access a Title (T), a Chapter (C), a Track (T) or an Index (I), select one of these items using or , button, then choose a number using / buttons or by directly entering a number using the numeric buttons. To directly access another part of the disc, select the Time indication info using or button, then enter a time using the numeric buttons. You must specify the tens and units for the hour, minutes and seconds: for example, to access the twentieth minute of a disc, enter 0, 0, 2, 0, 0, 0. Confirm with ok. This function is not available on some discs, even if the elapsed time appears on the screen. Audio CD Repeat playback Video CD This function allows you to repeat the playback of a title, chapter, track, A-B chosen segment (except for Video CDs), or whole disc.

This function is only available with discs for which the elapsed time appears. Select the info using or button. Choose an option using the /. Confirm with ok.

To repeat a sequence between two points A and B, choose the option "repeat A-B", then follow the given instructions for entering both points.

To stop the playback repeat: - select the Repeat info and choose the "stop" option, - press the STOP button twice, - access the disc menu by pressing the disc menu button. More info REPEAT PLAYBACK The repeat principle is based on a loop reading between a starting and a finishing point. On some discs, interactive menus may appear during playback: as you have to activate some functions within the menu to be able to play these discs. A-B REPEAT PLAYBACK for DVDs and Audio CDs If during a fast forward or rewind operation point B is reached, the player will proceed at normal speed from A point.

If during a fast search the A point is reached, the player will start playing at normal speed from A point.

The A-B repeat mode will be cancelled if you press STOP twice, the disc is ejected or if another repeat mode is selected. 21 TV\_DVD\_LCD\_en 17/06/02 11:46 Page 22 Info Menus Start reading a disc with the PLAY button, then press the info (yellow) button of the remote control. Markers (DVD and Audio CD) The player can store up to 5 locations on the disc, as long as the disc remains in the player (and if the TV/DVD set has not been switched off using the On/Off switch). During that time, you can directly access any of these locations. This function is only available with discs with that have the elapsed time appearing in the Info menu. Select the of a marker. info using or button, and press ok to confirm the setting Audio, Subtitles, Camera angles (DVD) Some discs have multiple audio tracks, primarily used for the different languages. The default language is the one selected in the main menu (see page 14). To select the language during playback, select the info using / buttons. button, then choose a language using or During playback, you can display or hide the subtitles and change the subtitle language.

The default setting is the one chosen in the main menu (see page 20). To display or hide subtitles, select the info using / buttons. choose a language using Some discs have multiple camera angles for certain scenes. or button, then To change the camera angle, select the / buttons. choose the angle using info using or button, then Playback mode and Introscan (Audio CD) To change the playback mode, select the info using / choose a mode (Standard, Random, Program) using or button, then buttons. The Progr. mode is only available if a list has been programmed using "Edit Program" function ("Play Mode " menu in the main menu, see page 18). To play the first 10 seconds of each track, select the Introscan info using or button, then press ok to confirm. Audio channel (Video CD) Select the info using or button, then choose an option (stereo sound; left-hand side channel; right-hand side channel; left & right mono) / buttons. using More info MARKERS To create a new marker, select a location indicated as "unmarked" using or buttons, and press ok.

Two new icons are displayed: a play button and another representing a trashcan. To start playback from a marker, select the icon then press ok to validate. To delete a marker, select the icon then press ok to validate. DIRECT ACCESS You can use the remote control buttons to directly access the required info. To directly access the audio info, press the button on your remote control.

To directly access the sub-title info, press the button on your remote control. To directly access the angle info, press the button on your remote control. To automatically display the camera angle info as soon as several camera angles are available, activate the "Info display" option in the DISPLAY menu. 22 TV\_DVD\_LCD\_en 27/06/02 10:58 Page 23 Connections Your TV/DVD has a number of sockets which can be used to connect different types of equipment.

This page contain a description of the various sockets and relevant connections.



[You're reading an excerpt. Click here to read official THOMSON LCD user guide](http://yourpdfguides.com/dref/1241905)  
<http://yourpdfguides.com/dref/1241905>

AVI SCART socket (input-output) at the back of the TV/DVD. These sockets can be used to connect a VCR or a camcorder (VHS, S-VHS, 8 mm ou Hi 8), a decoder, a satellite receiver, a DVD player, a games console or any device producing an RGB signal. @@@@R. V Audio L / R CINCH sockets (output) at the back of the TV/DVD. These can be used to connect an Hi-Fi amplifier using a CINCH CINCH cable. Enable the External Amp function in the PREFERENCES menu to cut out the TV/DVD's left and right channels. Adjust the volume using the amplifier. Headphone socket located at the right-hand side of the TV/DVD. Enables you to connect stereo headphones or earphones. DIGITAL AUDIO socket at the back of the TV/DVD.

This can be used to connect a Dolby Digital amplifier/decoder. Do not forget to check the type of sound in the Main menu of the DVD part (see page 19).  
**Headphone** More info NexTView Link NexTView Link is an "intelligent" link, which can be used to set up channels and as an easy way to set programmes for recording on a video recorder with the NexTView Link function or similar (Easy Link, Smart Link, Megalogic, etc.) from a TV/DVD already set up. The video recorder should be connected to the AVI socket using a AVLink Scart cable. If you bought an Easy Link video recorder before 1997, it is possible that the recording function is not supported. Setting up channels The NexTView Link can be used to automatically download the terrestrial and cable channels already stored in the TV/DVD to the video recorder. They will be arranged in the same order on both items of equipment. Refer to the instructions for your video recorder to find out how this is done. Immediate recording The NexTView Link function can be used to record what you are currently watching. You simply press the relevant button on the video recorder remote control (usually REC) and the recorder will automatically switch to the same channel as the TV/DVD and start recording. Refer to the instructions for your video recorder to find out the relevant button to press and for more information on the subject. Connecting a video recorder To obtain optimum picture quality, use a SCART cable. However, you can also connect a video recorder to the TV/DVD using the aerial socket. The diagram on the inside cover at the end of the manual illustrates how this is done.

If you connect a video recorder only via the aerial socket (without any AV socket connection), switch it on and play a cassette. Then use the Auto update or the manual channel set-up, of the INSTALLATION OVERVIEW to search for the video recorder signal (refer to the Manual set-up section on page 7). The player's digital audio (optical) output jack fully complies with the international standard governing this type of jack (IEC 958). It is designed exclusively for connection to a Dolby Digital or a suitable decoder. Do not use the Digital Audio Output jacks to connect to an equipment other than a Dolby Digital or a suitable decoder.

Such a connection can create a high level of noise that may be harmful to your ears, and could damage headphones or speakers. Older digital equipment, some of which are not fully compliant with IEC 958, are likely to cause this problem. To avoid this drawback, use the «audio-digital output» menu (see page 14) to convert the Dolby Digital audio-digital output from bit to linear PCM flux. TV-DVD-LCD/GB/FR-BEI/05-02 23 .



[You're reading an excerpt. Click here to read official THOMSON LCD user guide](http://yourpdfguides.com/dref/1241905)

<http://yourpdfguides.com/dref/1241905>