




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THOMSON ROC 4206. You'll find the answers to all your questions on the THOMSON ROC 4206 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual THOMSON ROC 4206
User guide THOMSON ROC 4206
Operating instructions THOMSON ROC 4206
Instructions for use THOMSON ROC 4206
Instruction manual THOMSON ROC 4206

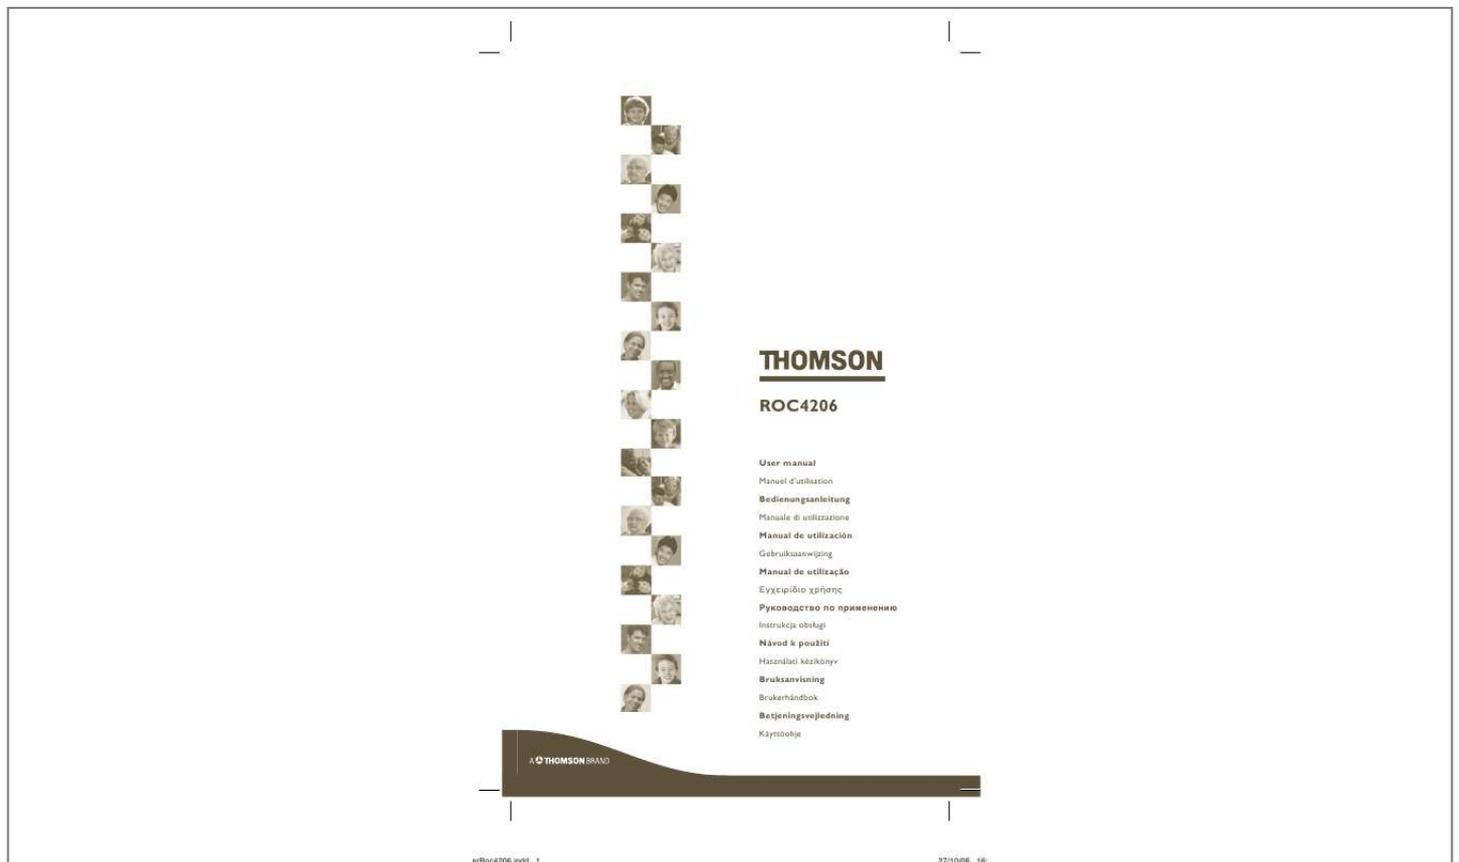

[You're reading an excerpt. Click here to read official THOMSON ROC 4206 user guide](http://yourpdfguides.com/dref/1247048)
<http://yourpdfguides.com/dref/1247048>

Manual abstract:

It is compatible with the majority of television sets, video cassette recorders, DVD players, satellite and cable receivers as well as terrestrial digital television (DVB-T), amplifiers and other audio equipment provided they are controlled by infra red signals. This remote control has been factory programmed to allow you to use it immediately with the majority of Thomson Group devices. We therefore advise you to try it before beginning to program it. If programming is necessary, follow one of the methods A, B, C, D or E that are given in this manual. First of all, please activate the remote control by removing the 2 protective tabs from the 2 CR 2032 batteries. @@@@ 5 SETUP: programs the remote control. 6 Navigation keys: use menus and other interactive displays (press the SHIFT key then one of the keys with indications in blue (MENU, EXIT, OK, .) = same use as the original device. 7 TV functions (same functions as on your original TV remote control): For sound VOL+ / VOL- = adjusts the volume c : sound off (MUTE function) For teletext a (teletext On/Off) - I (return to TV programs) (stop page scrolling) (teletext inlay on TV picture) - J (information display) 8 B : switch on or off (POWER) 9 b : Select an external source (AV, Audio/Video sockets). 10 Operating indicator: lights up when a key is activated and remains fixed or flashes during programming.

@@@@@ Hold down the SETUP key until the red indicator lamp remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. @@ 3. @@@@ 6. @@ 7. If the product doesn't turn off, press the B key repeatedly until the set switches off.

Wait approximately one second between key presses to give the red indicator lamp enough time to go off and light up again. This will allow you to see whether the product responds or not. @@@@@@ Turn on the device that you wish to control. @@@@@@ 3. @@@@@@ The red indicator then goes off if the code is correct or flashes, if the code is not on the list.

5. @@ 6. Should the set not switch off, repeat step 2. Then type in the next 4-digit code. Try to switch off the set by pressing B key once. Repeat this procedure by trying out each of the 4-digit codes. @@@@@@ As soon as the device reacts again, press c to record the code. @@@@@@ consult the separate list to discover this. @@@@@@ Wait approximately one second between key presses to give the red indicator lamp enough time to go off and light up again. Proceeding this way will enable you to see whether the set responds or not.

@@@@ 3. Press the TV key, then follow one of the programming methods (A, B, C or D) described earlier. 4. If a second code programming is required, then repeat steps 2 and 3 above. Adjustment of ALL volume controls under a specific mode You can allocate the volume control to one of the modes of the remote control on condition that the volume control exists on the corresponding device (e. Hold down the SETUP key until the red indicator lamp remains lit. Press once on the mode key (TV, DVD/VCR. @@@@@ g. @@@ Hold down the SETUP key until the red indicator lamp remains lit. Press once on the mode key (TV, DVD/VCR.

@@@@@ 2. @@@@@ 5. The digit which made the red indicator lamp flash, is the first number of the 4-digit code. Repeat step 4 to find out the other numbers of the code. 7.

When the fourth number is found, the red indicator lamp goes off. The THOMSON NAVILIGHT navigation system allows you easy access to the settings of your television set (TV) or your video recorder (VCR) fitted with the THOMSON NAVILIGHT system provided that you have allocated the DVD/VCR or SAT keys to the video recorder. Press the key corresponding to the type of set you want to use (TV, DVD/VCR, or SAT). In the DVD/VCR position, make sure that the AV mode is activated for the TV set (the SCART socket must be selected). 3.

Press the SETUP key once and then press the a key. 4. Navigate through the setting menus with the play keys p, q, t and u. To leave the menus, press key EXIT once. Note: The SETUP key remains on as long as light is lit. If this light goes out, you have to press the SETUP key again before using the navigation keys. To exit this mode, press SETUP a second time. - For a television or a satellite receiver: switch on and, for example, press PROG+ to change channels. - DVD player: load a DVD and then press PLAY. @@@@@@ do not use rechargeable batteries.

In order to avoid any risk of explosion, observe polarities indicated inside the battery compartment. replace only with the type of batteries specified above. Do not throw them into fire, do not recharge them. If you are not using the remote control for a long period of time, remove the batteries. please respect the environment and prevailing regulations. Before you dispose of batteries or accumulators, ask your dealer whether they are subject to special recycling and if they will accept them for disposal. Model and serial number Modèle et numéro de série Model und Seriennummer Modello e numero di serie Modelo y número de serie Model en serienummer Modelo e número de série Mo μ Model i numer seryjny Typ a výrobní číslo Típus és szeriaszám Modell och serienummer Modell och serienummer Model og serienummer Malli ja sarjanumero .



[You're reading an excerpt. Click here to read official THOMSON ROC 4206 user guide](http://yourpdfguides.com/dref/1247048)
<http://yourpdfguides.com/dref/1247048>