



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THOMSON ROC 4505. You'll find the answers to all your questions on the THOMSON ROC 4505 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual THOMSON ROC 4505  
User guide THOMSON ROC 4505  
Operating instructions THOMSON ROC 4505  
Instructions for use THOMSON ROC 4505  
Instruction manual THOMSON ROC 4505

**THOMSON**  
**ROC 4505**

**User manual**  
Manuel d'utilisation  
**Bedienungsanleitung**  
Manuale di utilizzazione  
**Manual de utilización**  
Gebruiksaanwijzing  
**Manual de utilização**  
Εγχειρίδιο χρήσης  
**Руководство по применению**  
Instrukcja obsługi  
**Návod k použití**  
Használati kézikönyv  
**Bruksanvisning**  
Brukerhåndbok  
**Betjeningsvejledning**  
Käyttöohje

A THOMSON BRAND  
ROC4505\_pov.indd 1 3/11/06 12:22:26



[You're reading an excerpt. Click here to read official THOMSON ROC 4505 user guide](http://yourpdfguides.com/dref/1247117)  
<http://yourpdfguides.com/dref/1247117>

### Manual abstract:

We therefore advise you to try it before beginning to program it. If programming is necessary, follow one of the methods A, B, C or D that are given in this manual. Keep these instructions and the separate list of codes in a safe place so that you can later reprogram your remote control. Keys for zapping, adjusting sound volume and muting sound. Become additional function keys able to copy other keys. Selects the connectors (AV) to which devices are going to be connected (TV source / video). DVBT (Digital Video Broadcast Terrestrial): in those countries where this service is available, you can control a DVBT receiver by entering its code from the separate list under a mode key (SAT or other). Note: depending on devices, brands, and year of manufacture, the functions covered may be more or less wide-ranging. Linked with keys A, B, C, this key allows sequences of commands to be triggered. Each sequence may include up to 10 keys.

Turn on the device that you wish to control. HOME CINEMA: puts the remote control in a mode allowing control of several pieces of equipment generally found in typical Home Cinema installations (TV, amplifier, DVD player (page 5). FAV: allows you to return to one of your 2 favourite channels and toggle from one to the other (page 6). Can be used in any remote control mode. Note 1: Except for the TV key, each mode key (DVD, VCR, .

) can be programmed to control a different device from that indicated on the key. It is therefore possible to allocate, for example, the Satellite mode to the DVD key. You need to enter the code corresponding to the manufacturer and the device you wish to program by following one of the methods given in this manual. However, method D (automatic code search) will simplify the task greatly. It is only necessary to enter the code from the list corresponding to the type of device (e.

g. @@@@ : television set, : DVD player, : video cassette recorder, : satellite / cable, : Hifi. ) first make sure that these two devices have been already adjusted to react to different sub codes (A and B codes on Thomson devices). Then successively program 2 mode keys using method D. Press the key that corresponds to the type of equipment you want to control: TV: television set - DVD: DVD player - VCR: video cassette recorder - SAT: satellite / cable - AUDIO: Hifi system. Before you start programming, you must find the subcode of the set to be controlled. @@@@ 3. Press the key that corresponds to the type of equipment you want to control: TV: television set - DVD: DVD player - VCR: video cassette recorder - SAT: satellite / cable - AUDIO: Hifi system.

While the indicator is lit, enter the first digit of the 4-digit code proposed for the set to be controlled (example: 0036 for Thomson). 5.

Direct the remote control towards the set and try to switch it off by pressing the key. 6. Should the set not switch off, repeat step 2. Then type in the next 4-digit code. Try to switch off the set by pressing key once. Repeat this procedure by trying out each of the 4-digit codes. In principle, your set is ready for receiving the remote control commands. @@@@ Direct the remote control towards the set and try to switch it off by pressing the key. 6. @@@@ 7.

@@@@ Before you start programming, you must find the code of the set to be controlled. @@@@ Should the set not switch off, press key, as many times as required (up to 200 times), until the set switches off. @@@@ In principle, your set is ready for receiving the remote control commands. @@@@ Try out other remote control keys to find out the range of functions you can control. If you think that not all of the keys are active, repeat the procedure of this programming method to find out the code supporting a wider range of features.

With this method, the remote control scrolls through the full code list by sending an IR signal to the set to be controlled remotely. Press the key that corresponds to the type of equipment you want to control: TV: television set - DVD: DVD player - VCR: video cassette recorder - SAT: satellite / cable - AUDIO: Hifi system. @@@@ 4. @@@@ 5. @@@@ Repeat step 4 to find out the other numbers of the code.

7. @@@@ As soon as the device reacts again, press OK to record the code. @@@@ consult the separate list to discover this. @@@@ For example after programming, by pressing MACRO then key A you could turn on your television set, turn on your satellite or cable receiver, zap to a preferred channel, turn on your video cassette recorder and start a recording session (providing a cassette was previously loaded). You can memorise a sequence of 10 commands with each A, B, or C key. If a second code programming is required, then repeat steps 2 and 3 above. Note: during the programming of a macro, the time between each step is limited to a few seconds. This leaves little time for reading the instructions and then carrying them out. If the mode indicator light blinks and then goes out, it is because this time limit has been exceeded, you must start again from step 1. Press and hold down the SETUP key until the mode key blinks (TV, VCR, .

@@@@ ) 6. @@@@ The mode key blinks when each key is pressed. 7. Memorise your key sequences by pressing the MACRO key once. The mode key is no longer lit and your Macro is complete. @@@@ The key goes out and then relights. The mode key goes out after several seconds. @@@@ Where necessary adjust the height of both remote controls so that the LED diodes are properly aligned. First copy 2 or 3 keys from the original remote control in order to check the compatibility of the codes of both remote controls. Then carry out a global delete of these keys before starting the full learning procedure. The keys L1 to L4 allow you to copy 4 additional keys. Note: when running a Macro (which takes a few seconds), ensure that the remote control is aimed at the device being controlled. remarks: · The default time between sending 2 commands when using a macro is half a second. However, it is posins lit. Press once on the mode key (TV, DVD, VCR, .

). The key goes out then relights. Press once on the key of your ROC 4505 to which you want to copy one of the keys of your original remote control. 6. Hold down the key of the original remote control you wish to copy until the mode key goes out and then relights (2 to 3 seconds).

In case of problems, the mode key will blink for 3 seconds but will remain in learning mode. Try again or try another key. 7. For the other keys, repeat the procedure from step 5 onwards. Press the SETUP key once when all the desired keys have been copied. @@@@ The mode key goes out then relights. Press once on the PROG key then once on a mode key (TV, DVD, VCR, . ). The key goes out then relights. (4) keys then once Press once on the VOL or on the mode key (TV, DVD, VCR, .

). The key goes out then relights. Press once on a numbered key then once on a mode key (TV, DVD, VCR, . ). The key goes out then relights. Press once on one of the navigation keys (5) then once on a mode key (TV, DVD, VCR, . ). The key goes out then relights.



[You're reading an excerpt. Click here to read official THOMSON](#)

[ROC 4505 user guide](#)

<http://yourpdfguides.com/dref/1247117>

@@ ). The key goes out then relights.

This key operates like this key on your original remote control. @@@@ 3. Press once on the HOME key goes out then relights. The HOME CINEMA key has now been deprogrammed. @@@@ Press the key until the mode key blinks once.

4. Press once on the mode key (TV, VCR, . @@@@ g. @@@@ Press the key until the mode key blinks once. 4.

Press once on the mode key (TV, VCR, . The THOMSON NAVILIGHT system allows you easy access to the settings of your television (TV) or video recorder (VCR) including this feature. Press the key corresponding to the type of set you want to use (TV, VCR, or SAT). In the VCR position, make sure that the AV mode is activated for the TV set (the SCART socket must be selected). Navigate through the setting menus with the play keys . To leave the menus, press key EXIT once. The group keys can be programmed in any order. The remote control remains in programming mode as long as the HOME CINEMA key is not pressed again. This key allows you to memorise two of your favourite channels. @@) then enter the number of your first favourite channel.

The key goes out then relights. 5. Press once on the then relights. Press once on the then relights. The key goes out The key goes out ) then enter the number of your second favourite channel. The key goes out then relights. Si la marque de l'appareil à commander ne figure pas dans la liste des codes livrée séparément, vous pouvez copier dans votre ROC 4505 les fonctions des touches de la télécommande d'origine de cet appareil. FAV: gör det möjligt att gå tillbaka till de 2 kanaler du använder mest och att växla från den ena till den andra (sidan 78). Det är alltså möjligt att koppla, till exempel, Satellitläget till knapp DVD. Till exempel kan man efter programmering genom att först trycka på MACRO och sedan på knapp A utföra följande: sätta på tv-apparaten, sätta på satellitmottagaren, gå till en bestämd kanal, sätta på videobandspelaren och sätta igång en inspelning (med kassett laddad i videobandspelaren).

Om du vill kopiera knappar från den ursprungli.



[You're reading an excerpt. Click here to read official THOMSON ROC 4505 user guide](http://yourpdfguides.com/dref/1247117)  
<http://yourpdfguides.com/dref/1247117>