



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THOMSON ROC5209. You'll find the answers to all your questions on the THOMSON ROC5209 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual THOMSON ROC5209  
User guide THOMSON ROC5209  
Operating instructions THOMSON ROC5209  
Instructions for use THOMSON ROC5209  
Instruction manual THOMSON ROC5209

ROC5209  
00131867

Operating Instruction  
Mode d'emploi  
Bedienungsanleitung

**5** IN 1  
FIND IT



**THOMSON** **THOMSON**

UNIVERSAL REMOTE CONTROL

Télécommande universelle  
Universal Fernbedienung

Manufactured and owned entirely  
by Thomson Consumer Electronics  
Trademark Thomson

Thomson GmbH & Co KG  
93691 Moosham Bayern GBRWY

0013186700a.indd 1-3

22.09.2009 10:02:31 Uhr



[You're reading an excerpt. Click here to read official THOMSON ROC5209 user guide](http://yourpdfguides.com/dref/3044327)  
<http://yourpdfguides.com/dref/3044327>

### Manual abstract:

**Indicator lamp:** The red indicator lights up when any key is pressed. Setup: Allows you to program your remote before the first use. it also allows you to access to secondary functions of certain A/V appliances (Shift). Press and release the "Setup" key followed by the function key you want. : Displays information of the selected appliance. Numeric keys 0-9: These keys have the same functions as those of your original remote and are also used to enter the codes for different products. -/--: In connection with the numeric keys, this button allows you, with some equipment, to select directly channels with 2 digits. J (Pause): Suspends play and stops on an image K (Stop): Stop the disc (DVD, VCR, . . .) I (Record): To record, press the RECORD key twice.

oK: Confirms a selection. Coloured keys: Can be used to select categories when teletext is activated, and specific functions depending on the make. And the device by using one of the methods indicated in this manual. However, method D (automatic search for a code) will greatly simplify the task for you. In this case it is only necessary to enter a code from the list that corresponds to the type of device, for example: 0603 for a Thomson satellite receiver) and then to run the automatic search procedure.

The remote control will then test all the codes automatically until it finds those that control the receiver. @@@@ 3. @@@@ 6. If the set you want to control switches off, press OK to memorise the code. 7.

@@@@@Check of the programming: In principle, your set is ready for receiving the remote control commands. @Method B 4-digit codes programming Before you start programming, you must find the code of the set to be controlled. Hold down the SETUP key until the red indicator lamp blinks and then remains lit (the indicator light Turn on the product you want to control. 2. Press the Mode key that corresponds to the type of product you want to control: TV: television set, DVD: DVD player, VCR: video recorder, SAT/ CAB: satellite or cable receiver, AUDIO/AUX: audio equipment or any other equipment. 3. Direct the remote control towards your equipment and try to switch it off by simply pressing the key G. If the device does not turn off, you must program the remote control using one of the methods A, B, C or D described hereafter. Note 1: Except for the TV key, the DVD, VCR, SAT/CAB and AUDIO/AUX mode keys can be programmed to control a device other than that indicated on the key. @@@@@@Please keep this guide along with the code list (provided separately), so that you can subsequently programme your remote control for use with other sets.

Remains on for a few seconds to give you the time to proceed with the following steps. @@@@While the indicator is lit, enter the first digit of the 4-digit code proposed for the set to be controlled (example: 0166 for a Thomson TV). @Should the set not switch off, repeat step 2. Then type in the next 4-digit code. Try to switch off the set by pressing key G once. Repeat this procedure by trying out each of the 4-digit codes. Again to slow down the test speed (1 code every 3 seconds). @@@@As soon as the set responds again, press OK to save the code. @ consult the separate list to discover this. @@@@ 3.

@@ 4. @@@@@@Hold down the SETUP key until the red indicator lamp remains lit. The red indicator lamp goes out and then relights. The red indicator lamp goes out after several seconds. @@@@@@ 3.

@@ 4. @@ 5. If the set you want to control switches off, press OK to memorise the code. 6. Should the set not switch off, press key G as many times as required (up to 200 times), until the set switches off.

Between two key presses, leave enough time for the key corresponding to the red indicator lamp to light up again (about 1 second). @@Check of the programming: In principle, your set is ready for receiving the remote control commands. @Try out other remote control keys to find out the range of functions you can control. If you think that not all of the keys are active, repeat the procedure of this programming method to find out the code supporting a wider range of features. Method D Automatic code search With this method, the remote control scrolls through the full code list by sending an IR signal to the set to be controlled remotely. @@@@@@ to copy keys 1. Hold down the SETUP key until the red indicator lamp remains lit. Press once on the mode key (TV, DVD, VCR, . . .) @ 6. Hold down the key of the original remote control you wish to copy until the red indicator lamp goes out and then relights (2 to 3 seconds).

In case of problems, the red indicator lamp will blink for 3 seconds but will remain in learning mode. Try again or try another key. 7. For the other keys, repeat the procedure from step 5 onwards. 8. Press the SETUP key once when all the desired keys have been copied. Hold down the SETUP key until the red indicator lamp remains lit 2. Press once on a mode key (TV, DVD, SAT, . . .) All the keys copied under this mode are deleted. @@ 2.

Press the key that corresponds to the type of equipment you want to find the code: TV: television set, DVD: DVD player, VCR: Video recorder, SAT/CABLE: satellite receiver, cable, DVBT, ADSL, AUDIO/AUX: audio equipment and any other appliance. Press the numbered keys in ascending order (0 to 9) until the red indicator lamp blinks once. 5. The number that caused the red indicator lamp to blink is the first of the four numbers that make up your code. Repeat step 4 to find out the other numbers of the code.

7. When the fourth number has been found, the red indicator lamp goes out. @@ 1. @@@@@@ 2. Release the SETUP key 3.

The volume and mute functions are now restored to their factory defaults. Find/Page Feature @@The base/stand also has a Find/Page feature, which lets you quickly find the remote from up to 6 meters from the base, if you've misplaced it. @@@@Used batteries do not qualify as household waste. @@@@Hence it is advisable to record the codes needed for your devices. Si la marque de l'appareil à commander ne figure pas dans la liste des codes livrée séparément ou si quelques fonctions manquent, vous pouvez copier dans votre ROC5209 les fonctions des touches de la télécommande d'origine de cet appareil. Todas las teclas guardadas bajo un modo se borran si se introduce un código de 4 cifras para este modo (lo mismo ocurre si se introduce directamente un código, si se busca un código o una marca). Om du vill kopiera knappar från den ursprungliga fjärrkontrollen till din ROC 5209, gå vidare till steg 5 i avsnittet "Kopiering av knappar". När du har hittat koden till din apparat ska du skriva ner den så att du har den till hands om du skulle behöva den. ) og merke, kommer du til å taste inn én enkelt kode for de to apparatene i Combo 'en eller taste inn to koder, én kode per apparat. .



[You're reading an excerpt. Click here to read official THOMSON ROC5209 user guide](http://yourpdfguides.com/dref/3044327)  
<http://yourpdfguides.com/dref/3044327>