



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THOMSON RR420CD. You'll find the answers to all your questions on the THOMSON RR420CD in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual THOMSON RR420CD**  
**User guide THOMSON RR420CD**  
**Operating instructions THOMSON RR420CD**  
**Instructions for use THOMSON RR420CD**  
**Instruction manual THOMSON RR420CD**



EN



[You're reading an excerpt. Click here to read official THOMSON RR420CD user guide](http://yourpdfguides.com/dref/1242914)  
<http://yourpdfguides.com/dref/1242914>

**Manual abstract:**

*It must not be connected to D.C. mains. Note: The mains lead of the set is fitted with a moulded plug. If the mains socket are not compatible or if for any reason the plug is removed please follow the directions below. The moulded plug cannot be rewired and if removed must be disposed of safely. DO NOT under any circumstances plug the severed plug into any mains socket as this could result in electric shock. Important: If the plug is removed, rewire the new plug as follow: The wires in the mains plug are coloured in accordance to the following code: BLUE = NEUTRAL & BROWN = LIVE If the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: BLUE wire to the terminal coded N (Neutral) or coloured black. BROWN wire to the terminal coded L (Live) or coloured red. DO NOT make any connection to the terminal in the plug which is marked by the letter E or by the earth symbol or coloured green BLUE BROWN or green and yellow.*

*A fused plug must be fitted with a 3A fuse approved by ASTA or BS1362 and fuse covers must be always be securely replaced. If your set does not work, the fuse may be blown. MAINS CONNECTIONS: (For UK, see inside front cover) MAINS OUTLET POWER SUPPLY: 230V ~50Hz Note: Power is fed to the unit even when it is not functioning. To cut the power supply off, the power cable must be unplugged. Safety Information CAUTION! Invisible laser radiation when open.*

*Avoid exposure to beam. Class 1 laser product. This system must be opened only by qualified technicians to prevent accidents caused by the laser beam.*

*@@This unit complies with the existing requirements. @@@@Increase the volume to the desired level only after headphone are in place.*

*ADVARSEL! USYNLIG LASERSTRÅLNING VED ÅBNING NAR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNGDÅ UDSÆTTELSE FOR STRÅLNING. VORSICHT! UNSICHTBARE LASERSTRALUNG WENN ABDECKUNG GEÖFFNET UND SICHERHEITS VERRIEGELUNG ÜBERBRÜCKT. NICHT DEM LASERSTRAHL AUSSETZEN! EN CAUTION INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS FAILED OR DEFEATED. AVOID EXPOSURE TO BEAM. ATTENTION RAYONNEMENT LASER INVISIBLE DANGEREUX EN CAS D'OUVERTURE ET LORSQUE LA SECURITE EST NEUTRALISEE. EXPOSITION DANGEREUSE AU FAISCEAU. VARNING OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRRAN ÄR URKOPPLADE. BETRAKTA EJ STRÅLEN. VARO! AVATTAESSA JA SOUJALUKITUS OHITETTAESSA OLET ALTTIINA NÄKYMÄTTÖMÄLLE.*

*LASERSÄTEIL YLLE ÄLÄ KA TSO SÄTEESEEN. RISK OF ELECTRIC SHOCK DO NOT OPEN THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WA R N I N G S I G N ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT. CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, D O N O T R E M O V E C O V E R ( O R B A C K ) . N O U S E R S E R V I C E A B L E P A R T S I N S I D E . R E F E R S E R V I C I N G T O Q U A L I F I E D S E R V I C E PERSONNEL. THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF I M P O R T A N T I N S T R U C T I O N S A C C O M P A N Y I N G T H E P R O D U C T . CAUTION CLASS 1 LASER PRODUCT LASER KLASSE 1 APPAREIL A LASER DE CLASSE 1 LUOKAN 1 LASERLAITE KLAS 1 LASERAPPARAT SEE MARKING ON BOTTOM / BACK OF PRODUCT WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. 1 Safety Information EN TECHNICAL SPECIFICATIONS: Power supply AC 230V ~50Hz Clock backup:9V 6F22 Power consumption: 7W Please respect the environment. Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling. Do not place the system near wet areas such as bathrooms and pool side.*

*@@Power is continuously supplied to the system. @@@@Install battery as below: 1. @@2. Connect a 9V battery to the connector plug. 3.*

*@@@@@Press the SET button, the " : " will flash on the display . or FWD to set the time. 2. @@Press ON to turn on the radio. 2.*

*Slide the MW/FM switch to the desired broadcast band. 3. Turn the TUNING knob to select a station. 4. @@@@FM antenna - The power cord acts as your FM antenna. @@Be sure the power cord is stretched to its full length. Do not coil or bunch the cord together. Changing position of the power cord may improve reception. @@@@Lift to open the CD compartment door. 2.*

*Insert a disc and close the door. 3. Press PLAY/PAUSE . 4. Adjust volume to your desired level. or FWD to skip back5. Press REV ward and forward. 6. Press STOP to stop CD playback. When there is no disc in the CD compartment, "nd" will show on display.*

*Selecting play mode 1. Start CD playback. 2. During playback, press CD MODE to toggle between different play mode. - repeat the current track. - repeat the whole disc. - play tracks randomly. - play random track repeatedly. 6 Operating the Alarm EN Setting the WAKE Time Your digital clock operates on a 24 hour standard mechanism. 1.*

*Press the SET button until ALARM 1 / ALARM 2 icon is blinking, or FWD to set the wake 2. Press REV time. The time decrements or increments will follow by a faster rate when you press or FWD . and hold either REV 3. After the ALARM time is set, press SET repeatedly until no icon is blinking. Tip: Tip The unit equips with GRAD-UWAKE feature, the alarm tone volume will increase gradually to its maximum in about 30 to 45 seconds. Waking by Selected Source You may be woken up by ALARM DIO or CD . , RA- 1. Select an MW or FM station.*

*2. Set wake time (see above directions). 3. Press ALARM 2 or ALARM 1 to select waking up by ALARM , RADIO or CD . Corresponding indicator will be up next to the selected setting. 4. Adjust the volume by turning VOLUME. You can select your CD wake track by the following procedures. 1. Press WAKE UP CD TRACK.*

*or FWD 2. While pressing, press REV to select your desired CD wake up track. Tip: Tip If you set the SLEEP function with low volume level before going to bed, we advise using ALARM mode to wake you up since its volume will automatically increase. Note Note: When you turn off the alarm by pressing OFF the alarm OFF, will turn on at the same time tomorrow. 7 Operating the Clock Radio EN Sleep Mode In sleep mode, the radio or CD will turn off automatically.*

*Simply: 1. Listen to CD or radio. or 2. While holding SLEEP, press REV to set the sleep time. The time FWD range is from 1 minute to 2 hours. 3. Release SLEEP and the current time will be shown again. The radio or CD will turn off when the preset time elapses. If you decide to turn off the radio or CD sooner, press SNOOZE or OFF. 4. When SLEEP is activated again, the sleep time will be the same as the one you have set before. 5. Press SLEEP to read the remaining sleep time. Stop the Nap alarm Press NAP or follow "Turning off Alarm". 1.*

*Press and hold NAP to cancel the nap setting. 2. Only alarm sound can be selected. 3. Nap alarm is equipped with GRAD-UWAKE feature.*



[You're reading an excerpt. Click here to read official THOMSON](#)

[RR420CD user guide](#)

<http://yourpdfguides.com/dref/1242914>

Turning off Alarm Silence the alarm momentarily Press SNOOZE. The alarm will sound again when the snooze period is over. Stop the alarm Press OFF.  
@@Simply: 1. Press NAP and release.  
The indicator will flash. During this period, adjust or FWD . NAP time by pressing REV The range is from 10 minutes to 2 hours. 2. The clock will be shown after 5 seconds if no button is pressed.  
The indicator will lit up. 3. @@Press CANCEL. 2. The ALARM indicator will be flashing.  
3. @@@@The alarm will turn off by pressing SNOOZE until the snooze period is over. Snooze function can be used repeatedly up to 2 hours. After this, the alarm will turn off until the next alarm conditions are met. Set the "quiet" period as follow: 1. Press and hold SNOOZE. or FWD to set the 2. Press REV "quiet" period (the default time is 9 minutes) from 1 minute to 30 minutes. Release the button, then the "quiet" period is set. Seconds Time Display The unit may display in seconds.  
or FWD to show sec1. Press REV onds display. 2. Release REV or FWD to return to the hour and minute display. EN Brightness control You can adjust the backlight by adjusting the BRIGHTNESS switch at the back of the unit, there are two modes you may select from: High -- Stronger Backlight. Low -- Weaker Backlight. 9 .



[You're reading an excerpt. Click here to read official THOMSON RR420CD user guide](http://yourpdfguides.com/dref/1242914)  
<http://yourpdfguides.com/dref/1242914>