



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THOMSON RR60. You'll find the answers to all your questions on the THOMSON RR60 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual THOMSON RR60
User guide THOMSON RR60
Operating instructions THOMSON RR60
Instructions for use THOMSON RR60
Instruction manual THOMSON RR60



[You're reading an excerpt. Click here to read official THOMSON RR60 user guide](http://yourpdfguides.com/dref/1241828)
<http://yourpdfguides.com/dref/1241828>

Manual abstract:

It must not be connected to D.C. mains. Note: The mains lead of the set is fitted with a moulded plug. If the mains socket are not compatible or if for any reason the plug is removed please follow the directions below. The moulded plug cannot be rewired and if removed must be disposed of safely.

@@@BROWN wire to the terminal coded L (Live) or coloured red. @@A fused plug must be fitted with a 3A fuse approved by ASTA or BS1362 and fuse covers must be always be securely replaced. If your set does not work, the fuse may be blown. MAINS CONNECTIONS: (For UK, see inside front cover) MAINS OUTLET POWER SUPPLY: 230V ~50Hz Note: Power is fed to the unit even when it is not functioning.

To cut the power supply off, the power cable must be unplugged. RR60 EN 1 9/10/02, 5:28 PM Safety Information TECHNICAL SPECIFICATIONS: Power supply AC 230V ~50Hz Clock:9V 6F22 Power consumption: 4W EN Please respect the environment. Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling. Do not place the system near wet areas such as bathrooms and pool side. Do not expose this appliance to rain or moisture Avoid storing the system at humid places or near abnormally heated areas.

Power is continuously supplied to the system. To disconnect power completely, unplug the power cord from the power outlet. Do not expose this appliance to dripping and splashing. RISK OF ELECTRIC SHOCK DO NOT OPEN THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT. CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK).

NO USER SERVICEABLE PARTS INSIDE. REFER SERVICE TO QUALIFIED SERVICE PERSONNEL. THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT. CAUTION SEE MARKING ON BOTTOM / BACK OF PRODUCT WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. 1 RR60 EN 2 9/10/02, 5:28 PM Battery Back-Up Operation EN This clock radio is equipped with a memory holding system that is powered with a 9volt battery (not included). The power failure protection circuit will not operate unless battery is installed. When normal household power is interrupted, or AC line cord is unplugged, the battery will power the clock radio to keep track of time and alarm settings programmed into memory. @@@@Install battery as follows: 1. @@2. Connect a 9-volt battery to the connector plug.

3. @@@@As batteries get older, their voltage drops and memory may be lost. Be sure to replace the battery periodically. @@@@Plug the power cord into any 230V AC household outlet. 2. Press ON/OFF (located on the top of the radio) to turn on the radio. 3. @@4. Turn TUNING to select a station. 5.

@@@@@1. Slide the set switch to TIME. 2. Press REV or FWD to set the clock time. @@@@3.

Alarm time is set. @@Slide the set switch to ALARM. 2. Press REV or FWD to set the alarm time. 4 RR60 EN 5 9/10/02, 5:28 PM Operating the Clock Sleep Mode In sleep mode, the radio will turn off automatically.

Simply: 1. Press SLEEP then the time display will exhibit 0:59 and the radio will turn on. 2. While holding SLEEP, press REV or FWD to set the sleep time. The time range is from 1 minute to 2 hours. 3. Release SLEEP and the current time will be shown again. The radio is turned on and you may select the station as usual. The radio will turn off when the preset time elapses. If you decide to turn off the radio sooner, press SNOOZE or ON/OFF.

4. When SLEEP is activated again, the sleep time will be the same as the one you have set before. 5. Press SLEEP to read the remaining sleep time. EN Waking by Selected Source Programme You may be woken up by radio or buzzer. 1. Select a radio station. (refer to "Tuning the Stations") 2. Set wake time (see above direction). 3.

Press the ALARM MODE button to select either waking up by radio or buzzer. A red indicator is up next to the selected setting. 4. Adjust the volume level by turning VOLUME. Nap Mode This function wakes you up after a short period of time.

Simply: 1. Press NAP and release. The NAP indicator will flash. During this time period, adjust NAP time by pressing REV or FWD. The range is from 10 minutes to 2 hours.

2. The clock will be shown after 5 seconds if no buttons are pressed. The NAP indicator will lit up. 3. Press NAP once to show time left. Note: When you turn off the buzzer or the radio by pressing ON/ OFF, the buzzer or the radio will turn on at the same time tomorrow. 5 RR60 EN 6 9/10/02, 5:28 PM Operating the Clock EN Stop the Nap alarm Press NAP or follow "Turning off Alarm". Snooze Alarm Operation This operation allows extra sleep time after the alarm is on. The alarm will be off by pressing SNOOZE until the snooze period is over. Snooze function can be used repeatedly up to 2 hours.

After this, the alarm will turn off until the next alarm conditions are met. Set the "quiet time" as follow: 1. Press and hold SNOOZE. 2. Press REV or FWD to set the "quiet" period (the default time is 9 minutes) from 1 minute to 30 minutes. Release button, then, the "quiet" period is set. Notes: 1. Press and hold NAP to cancel the nap setting. 2. Only buzzer sound can be selected.

3. Nap alarm is equipped with GRAD-U-WAKE feature. 4. @@@@1. Select LOCK in the SET switch.

2. Press REV or FWD to show seconds display. 3. @@Then, the alarm will be on the following day at the same time. Disable the alarm permanently 1.

Press CANCEL button. 2. The ALARM indicator will be flashing. 3. Press ALARM MODE button within 3 seconds to deactivate the alarm function permanently. Tip: You can activate the previously set alarm time by pressing ALARM MODE button. 6 RR60 EN 7 9/10/02, 5:28 PM.



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/1241828)

[RR60 user guide](http://yourpdfguides.com/dref/1241828)

<http://yourpdfguides.com/dref/1241828>