




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THOMSON SPEEDTOUCH D100. You'll find the answers to all your questions on the THOMSON SPEEDTOUCH D100 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

## User manual THOMSON SPEEDTOUCH D100 User guide THOMSON SPEEDTOUCH D100 Operating instructions THOMSON SPEEDTOUCH D100 Instructions for use THOMSON SPEEDTOUCH D100 Instruction manual THOMSON SPEEDTOUCH D100



**THOMSON**  
SpeedTouch™ D100

**ENGLISH**

**HANDSET KEYS**

- Access the list of numbers dialled
- Increase the sound volume of the handset's earpiece and the hands-free speaker
- Access the list of unanswered calls if available at the PABX
- Decrease the sound volume of the handset's earpiece and the hands-free speaker
- Cancel/return key
- Line seizure and hang up key
- Press and hold: activate/deactivate hands-free mode
- ON/OFF switch (press and hold in idle mode)
- Left contextual menu key; access directory
- Confirm key
- Right contextual menu key
- Menu access key
- Return key

**DISPLAY AND ASSOCIATED ICONS**

- Battery charge level
- Reception antenna: flashes if out of range
- Fixed if range is correct
- Flashes when receiving a call
- Fixed when transmitting a call
- Silence (ringing volume in silent mode)
- Directory
- Indicates unanswered incoming calls (depends on the PABX)
- Put on hold
- Hands free activated
- Seize line

**1. INSTALLATION**

Informative note: your SpeedTouch™ D100 telephone is a DECT™ standard certified item of equipment. It is meant for transmitting and receiving telephone calls and for connection to a PABX only.


**1.1 CONNECTING THE CHARGER**

- Connect the power supply cable to the charger.
- Plug the mains adaptor into a 230 V / 50 Kz electric socket.

**1.2 PREPARING THE HANDSET**

**Fitting the batteries and charging up for the first time**

Insert the batteries in the handset's compartment.

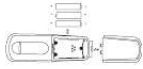

Before using for the first time, we recommend that you leave the handset to charge up on the charger for 24 hours. In order to optimise battery performance and longevity. Place the handset on the charger. It beeps. The icon flashes during charging.

**Before using your telephone, contact your telephone maintenance service to register it with your PABX.**

Obtain a line .

The tone confirms that the telephone is working. Check that the symbol is not flashing.

DECT is a trademark registered by the ETSI.

**! Only use rechargeable batteries with exactly the same specifications as those supplied with the product. Using non-rechargeable or non-conforming batteries can damage the product. Failure to comply with this recommendation will invalidate the manufacturer's warranty. The batteries could split or leak if incorrectly inserted, opened or exposed to heat. Never dispose of batteries in a fire: risk of explosion.**

**! The "System" Menu is reserved for the installer.**

**1.3 GETTING TO GRIPS WITH YOUR TELEPHONE**

**1.3.1 Navigating through the menus**

It's easy to adjust and customise your DECT cordless telephone using the scrolling menu feature.

- To access the menu: press the key under "Menu".
- Keep pressing the arrows and to reach your selection. The options loop round, going beyond the last option takes you back to the first. The screen displays:
- To confirm a choice, press under "OK".
- To go back to the previous menu, press under "Esc".
- To quit the menu and go back to the idle screen, press the key.

**N.B.:** When a choice of options is offered, the active status is displayed first.

**1.3.2 Switching the telephone On/Off**

In idle mode:

- To switch off the telephone, press for at least 2 seconds.
- The display goes out. You cannot call out and the telephone will not ring if you receive calls.
- To switch the telephone back on, press the key (press and hold).

**2. USING THE TELEPHONE**

**2.1 MAKING A CALL**

**Direct dialling**

- Press .
- Dial the number to be called.
- To hang up after finishing a call, press .

**Pre-dialling**

With the pre-dialling feature you can enter and modify a number before making the call.

- Dial a number of up to 25 digits.
- Press to correct an input error.
- Press to initiate the call and to hang up at the end of the call.

**2.2 RECEIVING A CALL**

When you receive an external call, the icon flashes. The information displayed on the screen depends on the PABX's configuration (name, number, origin of the call, ...).

To take the call:

- Press .
- The icon appears on the screen.
- Press to raise the volume or to lower it.
- To hang up at the end of the call, press .

**Cutting the ringing volume during a call in progress**


You can cut the volume using the key under "Sil".

**2.3 REDIALLING ONE OF THE LAST NUMBERS CALLED**

The last 10 numbers dialled on your DECT cordless telephone are memorised in the scroll list.

To redial a number:

- Press .
- Scroll through the names and numbers using the and keys.
- To quit the menu, press .
- To initiate the call, just press when you reach the name or number you want.



Thomson Telecom Australia Pty Limited  
1st Floor  
Bundock  
1 Moorbank Avenue  
Moorbank NSW 2170  
Australia



[You're reading an excerpt. Click here to read official THOMSON SPEEDTOUCH D100 user guide](http://yourpdfguides.com/dref/3820520)  
<http://yourpdfguides.com/dref/3820520>

### Manual abstract:

Using nonrechargeable or non-conforming batteries can damage the product. Failure to comply with this recommendation will invalidate the manufacturer's warranty. @Never dispose of batteries in a fire: risk of explosion. @@To access the menu: press the key under "Menu". Keep pressing the arrows and to reach your selection. @@@@/The manufacturer reserves the right to modify the specifications of its products in order to make technical improvements or comply with new regulations. / El fabricante se reserva el derecho de modificar sin previo aviso las características de sus productos para introducir mejoras técnicas o cumplir con nuevas regulaciones oficiales. / Der Hersteller behält sich das Recht vor, seine Produkte zu verändern, um sie technisch zu verbessern oder an neue gesetzliche Bestimmungen anzupassen. / Il fabbricante si riserva il diritto di modificare le caratteristiche dei suoi prodotti in vista di apportare migliorie tecniche o di rispettare nuove regolamentazioni. / De fabrikant behoudt zich het recht de eigenschappen van zijn producten te wijzigen met het doel om technische verbeteringen aan te brengen of de nieuwe reglementeringen te respecteren.

/ O fabricante reserva-se o direito de alterar as características dos seus produtos com vista a trazer melhorias técnicas ou para respeitar as novas regulamentações. -----Esc To confirm a choice, press under "OK". To go back to the previous menu, press under "Esc". To quit the menu and go back to the idle screen, press the C key. N.

B. : When a choice of options is offered, the active status is displayed first. 1.3.2 Switching the telephone On/Off In idle mode: To switch off the telephone, press for at least 2 seconds.

The display goes out. You cannot call out and the telephone will not ring if you receive calls. To switch the telephone back on, press the key (press and hold).

2. USING THE TELEPHONE 2.1 MAKING A CALL Direct dialling Press . Dial the number to be called. To hang up after finishing a call, press Pre-dialling With the pre-dialling feature you can enter and modify a number before making the call. Dial a number of up to 25 digits. Press C to correct an input error.

Press to initiate the call and to hang up at the end of the call. icon flashes. . Seize line 1. INSTALLATION Informative note: your SpeedTouch™ D100 telephone is a DECT™ standard certified item of equipment. It is meant for transmitting and receiving telephone calls and for connection to a PABX only.

1.1 CONNECTING THE CHARGER Connect the power supply cable to the charger. @@To take the call: Press . The icon appears on the screen. to lower it. . @@Place the handset on the charger. It beeps. The icon flashes during charging.

@@To redial a number: Press . and keys. @@@@Obtain a line . symbol is The tone confirms that the telephone is working. @@Press under "Opt" during the call.

Select "Mute" and press under "OK" to confirm. The icon appears on the screen along with "Unmute". The handset's microphone is then disabled.

@@@@@@@Select the page you want to modify. Press under "Opt". Select "Edit" and press under "OK" to confirm.

@@@@@@@Press under "Opt" . Select "Delete" and press under "OK" to confirm. The name is displayed; press under "OK" to confirm. The contact page is deleted.

. 4.4 NAMING A HANDSET You can assign a name to your handset. Enter the menu by pressing the key under "Menu". @@Select "Name" and press under "OK" to confirm. Delete by pressing C . Enter the name (max. @@@@To change the language: Enter the menu by pressing the key under "Menu".

@@Select "Language" and press under "OK" to confirm. Select the language and press under "OK" to confirm.

icon. 2.6 LOCKING THE KEYBOARD You can lock your handset's keyboard. There are two methods: Locking by default Enter the Menu by pressing the key under "Menu". Select "Key lock" and press key under "OK" to confirm.

The keyboard is locked and the screen displays "Dial 080". To unlock the keyboard, dial 080. Locking protected by a password Enter the "Menu", select "Security HS" and press the Select "PIN lock" and press the The screen displays " HS\_PIN?". Dial 0000 and press the To unlock, select "Opt". The screen displays "Unlock".

Press the key under "OK" to confirm. key under "OK" to confirm. The screen displays " HS\_PIN?". Dial 0000 and press the Your keyboard is unlocked. key under "OK" to confirm. The screen displays "PIN lock". key under "OK" to confirm. 3.5 THE SHORTCUT KEYS 3.5.

1 Programming the 9 shortcut keys key under the Enter the directory by pressing the Select "Opt" and press the Select a name in the directory that you want to associate with a shortcut key. key to confirm. key under "OK" to confirm. Select "Speed dial" and press the 5. WARRANTY Your SpeedTouch™ D100 telephone complies with requirements of the Australian Communications Authority as certified by the A-Tick. You therefore have a legal warranty covering this product; for all information concerning this warranty, please contact your reseller. Regardless of the legal warranty covering the product, the reseller guarantees conformity of the products with their technical specifications for a period of twelve (12) months, parts and labour, starting from the date appearing on the proof of purchase of the product. @@@@Products and spare parts - which may be either new or refurbished - are guaranteed either for three months from the date of repair or until the end of the initial warranty period, whichever is the longer. Products and parts that have been returned and replaced become the property of the manufacturer. However, this warranty does not apply in the following cases: installation or use in a way which fails to comply with the instructions contained in this guide; incorrect connection or non-standard use of the product, notably with accessories not designed for the purpose; normal wear and tear; failure to comply with the technical and safety standards prevailing in the state or country of use; devices subjected to shocks or falls; devices damaged by lightning, voltage surge, heat sources or radiation therefrom, water, exposure to excessive humidity, or any other cause external to the product itself; negligence or poor maintenance; maintenance, modification or repair of the product by persons not authorised by the manufacturer or reseller.



[You're reading an excerpt. Click here to read official THOMSON SPEEDTOUCH D100 user guide](http://yourpdfguides.com/dref/3820520)  
<http://yourpdfguides.com/dref/3820520>