




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THOMSON SPEEDTOUCH D51. You'll find the answers to all your questions on the THOMSON SPEEDTOUCH D51 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual THOMSON SPEEDTOUCH D51
User guide THOMSON SPEEDTOUCH D51
Operating instructions THOMSON SPEEDTOUCH D51
Instructions for use THOMSON SPEEDTOUCH D51
Instruction manual THOMSON SPEEDTOUCH D51

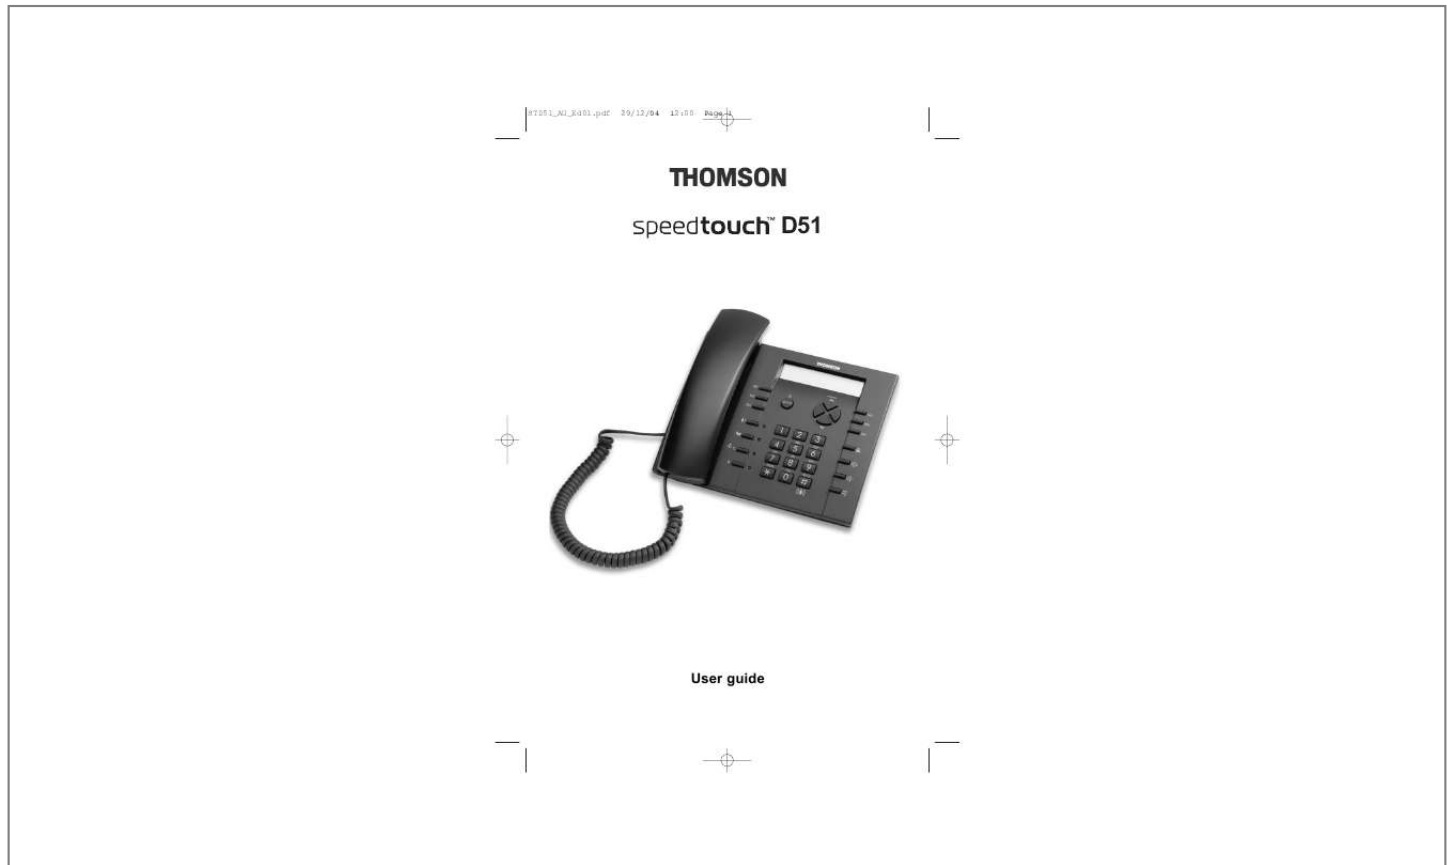

[You're reading an excerpt. Click here to read official THOMSON SPEEDTOUCH D51 user guide](http://yourpdfguides.com/dref/3820526)
<http://yourpdfguides.com/dref/3820526>

Manual abstract:

1 1.2 1.3 1.4 2. 2.1 2.2 2.3 3. 3.1 3.
2 3.3 3.4 3.5 3.6 3.
7 3.8 3.9 3.10 3.11 3.
12 3.13 4. 4.1 4.2 4.3 4.4 4.5 5. 5.1 5.

2 5.3 5.4 5.5 5.6 5.7 5.8 6. 6.1 6.2 7.
7.1 7.2 7.3 7.4 8.

9. 10. 11. 12. 2 **INSTALLATION** .

.....

.....

.....

.....

.....

... *Precautions*

.....

.....

.....

.....

.....

.....

Connecting the telephone

.....

.....

.....

..... *Installing the telephone* ...

.....

.....

.....

.....

..... *Getting to grips with your telephone*

.....

.....

.....

... **CONFIGURING THE BASE'S LINES**

.....

.....

.....

.. *Line priority*

.....

.....

.....

.....

.....

..... *Choosing the ringing group* .

.....

.....

.....

.....

..... *Ringing priority*

.....

.....

.....

.....

..... USING THE TELEPHONE .

.....
.....
.....

Making a call.....

.....
.....
.....
.....
.....

Making an internal call.....

.....
.....
.....

Receiving a call.....

.....
.....

Displaying the duration of the call.....

.....
.....
.....

Transferring a call.....

.....
.....
.....
.....

Redialling one of the last numbers called (bis).....

.....
.....

Mute (cuts off the micro) / put on hold function...

.....
.....

Calling from the log of calls (list of the last 50 calls received)..

Shuttling between an external and internal call..

.....
.....

3-way conference (2 internal correspondents and 1 external).

Managing 2 simultaneous external calls on the same telephone.

Activating / deactivating hands-free mode during a call...

.....
.....

Locking the keyboard.....

.....
.....
.....
.....

YOUR PHONE BOOK.....

.....

.....
.....
.....
.....
. Programming the 6 direct memories
.....
.....

.....
Creating a contact page
.....
.....

.....
.....
. . . Using the phone book to make a call . .
.....
.....

.....
.....
. Modifying a contact page
.....
.....

.....
.....
.....
. . . Deleting a contact page
.....

.....
.....
.....
.....

. CUSTOMISING YOUR TELEPHONE
.....
.....
. Adjusting the keytones .

.....
.....
.....
.....

. Choosing a melody and adjusting the volume . .
.....
.....
.....

Emergency number
.....
.....
.....

.....
. Naming a telephone
.....
.....

.....
.....
.....
. . Selecting the display language

.....
.....
.....
. Changing the telephone's PIN number

.....
.....
.....
.. *Returning to default settings*

.....
.....
.....
..... *Adjusting the automatic line seizure* ...

.....
.....
.....
..... *ASSOCIATING / DISASSOCIATING A TELEPHONE WITH THE BASE* . *Associating an extra telephone with the base* ...

.....
.....
.....
.... *Removing (disassociating) a telephone* .

.....
.....
.....
.. *BASE SETTING*

.....
.....
.....
..... *Dialling method* .

.....
.....
.....
.....

.....
.....
.....
... *Call barring* ..

.....
.....
.....
.....

Setting the flashing time

.....
.....
.....
..... *Setting the pause time* ..

.....
.....
.....
.. *TECHNICAL SPECIFICATIONS* ...

.....
.....
.....
.... *TROUBLESHOOTING* .

.....

.....
.....
..... WARRANTY ..

.....
.....
.....
.....

.....
..... ENVIRONMENT .

.....
.....

.....
.....

..... SAFETY ..

.....
.....

.....
.....

.....
.....

. @@@@ Never allow your telephone to come into contact with water or other liquids or with aerosols. To reduce the risk of interference and optimise reception, take particular care to keep it away from the immediate vicinity of windows, large metal objects, reinforced concrete, televisions, music centres, halogen lamps or heating devices, fluorescent lighting, burglar alarms, microwave ovens, computers, etc. To clean your telephone, use a lightly moistened antistatic cloth. D51 telephone is a DECTTM* standard Informative note: your certified item of equipment.

It is meant for transmitting and receiving telephone calls and for connection to the public switched telephone network. 1.2 CONNECTING THE TELEPHONE Connect the handset to the telephone. * DECT is a trade mark registered by the ETSI. 4 STD51_AU_Ed01.pdf 29/12/04 12:00 Page 5 | Connect the power supply cable as indicated at the rear of the base. | Plug the mains adaptor into a 230 V / 50 Hz electric socket. INSTALLING THE TELEPHONE 1.3 Charge up the battery unit for the first time Insert the battery unit in the compartment at the rear of the telephone. Before using for the first time, we recommend that you leave the telephone to charge up for 24 hours in order to optimise the performance and longevity of the battery unit.

The icon flashes during charging. Seize the line by picking up the handset. ! Only use rechargeable batteries with exactly the same specifications as those supplied with the product. Using non-rechargeable or non-conforming batteries (see the "Safety" chapter) can damage the product and presents a health hazard. Failure to comply with this recommendation will invalidate the manufacturer's warranty. The batteries could split or leak if incorrectly inserted, opened or exposed to heat. Never dispose of batteries in a fire: risk of explosion. After charging up the battery unit, you can disconnect the mains adaptor. 5 STD51_AU_Ed01.pdf 29/12/04 12:00 Page 6 |.

4 GETTING TO GRIPS WITH YOUR TELEPHONE 1.4.1 Navigating through the menus It's easy to adjust and customise your DECT cordless telephone using the scrolling menu. | | To access the menu: press the key. Press the and keys to find your way to the option you want to select. The options succeed each other in a loop. To validate an option, press . . | | | To return to the previous menu, press To quit the menu and return to the idle screen, press and hold the key. Note: When an option is proposed, the current setting is displayed first.

1.4.2 Telephone On/Off In idle mode: | To switch off the telephone (mains adaptor disconnected), press and hold for at least 2 seconds. | The display goes out. You can no longer call. The telephone will not ring if you receive calls. To switch on the telephone, press the key (hold it down). | 6 STD51_AU_Ed01.pdf 29/12/04 12:00 Page 7 | 2. CONFIGURING THE BASE'S LINES D150 pack) (supplied with You can configure the base's lines according to your requirements.

2.1 LINE PRIORITY You have the following options for managing the outgoing calls for each telephone: - Alternative (Line 1 or Line 2): default setting - Line 1 First: line 1 takes priority and if this line is busy, line 2 will be used - Line 2 First: line 2 takes priority and if this line is busy, line 1 will be used - Line 1 Only (line 1): line 1 authorized and no access to line 2 - Line 2 Only (line 2): line 2 authorized and no access to line 1 - No Ext (internal calls only) This line priority has no effects on the reception of incoming calls. | | | | | Press to enter the menu.



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/3820526)

[SPEEDTOUCH D51 user guide](http://yourpdfguides.com/dref/3820526)

<http://yourpdfguides.com/dref/3820526>

to confirm. Select "BS Setting" and press Enter the "MASTER PIN:" 1590 (by default) and press Select "Select Line" and press Use the list and press and to confirm. keys to choose the telephone you want from the to confirm (HS1 = telephone 1). to l Choose the line priority from the 6 options given above and press confirm. CHOOSING THE RINGING GROUP 2.2 Each telephone may receive a call on line 1 and/or line 2.

For example, you may decide that telephones 1, 3 and 5 will be associated with line 1 and ring on line 1 and that telephones 2 and 4 will be associated with line 2 and ring on line 2. l l l Press to enter the menu. to confirm. to confirm. Select "BS Setting" and press Enter the "MASTER PIN:" 1590 (by default) and press 7 STD51_AU_Ed01.

pdf 29/12/04 12:00 Page 8 l l Select "Ring Group" and press Use the confirm. and to confirm. to keys to choose one of the lines and press l Choose the telephones you want using the keyboard and press confirm. The telephones which are not available will be indicated by an "X". 2.

3 RINGING PRIORITY You can choose the handset that will ring first when an incoming call is received. You can also set the number of rings on the priority telephones before the others ring. l l l l Press to enter the menu. to confirm. to confirm. Select "BS Setting" and press Enter the "MASTER PIN:" 1590 (by default) and press Select "Ring Prior" and press to confirm. to confirm. Select "Line 1" or "Line 2" and press Use the and l keys to choose the to confirm. and keys to choo- number of the telephone that should ring first and press l HS No. : 2 Now use the se the number of rings on the priority telephone before the other handsets ring and press l HS No.

: 2 Ring Cnt : 4 to confirm. and To cancel the ringing priority for a telephone, select "off" with the keys and press to confirm. 8 STD51_AU_Ed01.pdf 29/12/04 12:00 Page 9 3. USING THE TELEPHONE 3.1 MAKING A CALL Before you make a call, you can see on the screen if lines 1 and 2 are busy. Direct dialling l l l Pick up the handset. Dial the number to be called. To hang up after finishing a call, place the handset on the base. Pre-dialling With the pre-dialling feature you can enter and modify a number before making the call.

l l l Dial a number of up to 25 digits. Press to correct an input error. Pick up the handset to make the call and hang up at the end of the conversation. . Note: You can insert a pause with a long press on 3.

2 MAKING AN INTERNAL CALL If you have registered more than one telephone, you can make internal calls. l l Press . Dial the number of the hanyour conversation with the second caller and hang up at the end of your conversation. When the telephone rings, pick it up to resume your conversation with the first caller. Alternatively, you can put the second call on hold in order to resume your conversation with the first caller by pressing .

Hang up to release the line. When the telephone rings, pick it up. When your conversation has ended, hang up. The telephone will ring; pick it up in order to speak to the second caller who you had put on hold. l 12 STD51_AU_Ed01.pdf 29/12/04 12:00 Page 13 3.12 ACTIVATING / DEACTIVATING HANDS-FREE

MODE DURING A CALL To talk on the phone while doing something else, or share a conversation with someone next to you: l Press . appears on the display. " The icon l To adjust the hands-free volume: Press or . To deactivate hands-free mode: l Press .

3.13 LOCKING THE KEYBOARD You can lock your telephone's keyboard. l l Press to enter the menu. to confirm. Select "Key lock" and press " The screen displays "Locked". l To unlock, press " The screen displays "Unlock ?". l Confirm by pressing the key. " Your keyboard is unlocked. 13 STD51_AU_Ed01.pdf 29/12/04 12:00 Page 14 4.

YOUR PHONE BOOK Your telephone contains a phone book capable of storing your 50 most useful contacts. Each contact page in the address book consists of a name (max. 12 characters) and a number (max. 25 digits). 4.

l l l l PROGRAMMING THE 6 DIRECT MEMORIES Press to enter the menu. to confirm. Select "Memory Dial" and press Select "Memory 1", for example, and dial the number you want to store in that memory then press to confirm. Proceed in the same way to record numbers in the 5 other memories. 4.

2 CREATING A CONTACT PAGE With your DECT cordless telephone, you can key in letters as well as digits. Handy for entering names in the address book or for naming a telephone! 4.2.1 Quick contact creation l Enter the menu by pressing the Select "Phone Book" and press Select "Add" and press key. to confirm. l l l to confirm. Name: Enter the name using the alphanumeric keyboard (maximum 12 characters). To select a letter, press the corresponding key as many times as required. l For example: - for S, press - for E, press 4 times. twice.

. . To toggle from capitals to small letters, press To enter a space: press 14 twice. To make a correction: STD51_AU_Ed01.pdf 29/12/04 12:00 Page 15 Confirm by pressing the l key. to Number: Enter the number and press confirm. Table of characters Key 1 2 3 4 5 6 7 8 9 0 *# 1 press 1 A D G J M P T W 0 * # 2 presses 3 presses 4 presses 5 presses Space () B C 2 , E F 3 : H I 4 + K L 5 % N O 6 / Q R S 7 U V 8 . X Y Z 9 4.3 l l l l USING THE PHONE BOOK TO MAKE A CALL Press the Use the and key. keys to scroll through the list of names.

@ @ to confirm. to confirm. @ @ @ @ to confirm. to confirm. @ @ @ @ to confirm. to confirm. @ @ @ @ to confirm. to confirm. @ @ @ @ to confirm. to confirm. The display is empty.

to confirm. @ @ to confirm. to confirm. @ @ @ @ To change the language: l l Press to enter the menu. to confirm. to confirm. @ @ to confirm. to confirm. @ @ @ @ to confirm. to confirm.

@ @ to confirm. @ @ @ @ @ @ to confirm. @ @ @ @ @ @ @ @ to confirm. to confirm. Select "BS Setting" and press Enter "MASTER PIN:" 1590 (by default) and press Select "Remove HS" and press to confirm. Enter the number of the telephone you are removing (disassociating) and press to confirm. 21 STD51_AU_Ed01.pdf 29/12/04 12:00 Page 22 7. BASE SETTING (supplied with 7.1 DIALLING METHOD D150 pack) You can choose tone or pulse dialling. The default is tone dialling. l l l l Press to enter the menu. to confirm. to confirm. Select "BS Setting" and press Enter "MASTER PIN:" 1590 (by default) and press Select "Dial Mode" and press to confirm.

Select "DTMF Dial" or "PULSE Dial" and press CALL BARRING to confirm. 7.2 You can program up to 5 call barrings per base. These call barrings may cover all the terminals or just some of them.



[You're reading an excerpt. Click here to read official THOMSON SPEEDTOUCH D51 user guide](http://yourpdfguides.com/dref/3820526)
<http://yourpdfguides.com/dref/3820526>

It is possible to bar the first 5 digits.

1 1 1 1 Press to enter the menu. to confirm. to confirm. Select "BS Setting" and press Enter "MASTER PIN:" 1590 (by default) and press Select "CallBarring" and press to confirm. For example, to bar access the international network: 1 1 Enter 00 and press to confirm. No. 1 : 00 Then choose the telephone or telephones that will be covered by the barring and press to confirm. HS No. 12XX5XXXX The call barring is activated on handsets 1, 2 and 5. 7.

3 1 1 1 1 SETTING THE FLASHING TIME Press to enter the menu to confirm. to confirm. Select "BS Setting" and press Enter "MASTER PIN:" 1590 (by default) and press Select "Flash Time" and press to confirm. 22 STD51_AU_Ed01.pdf 29/12/04 12:00 Page 23 1 Use the and keys to choose the flashing time you want and press to confirm. 7.4 1 1 1 1 SETTING THE PAUSE TIME Press to enter the menu. to confirm. to confirm. Select "BS Setting" and press Enter "MASTER PIN:" 1590 (by default) and press Select "Pause time" and press and to confirm.

Use the to confirm. keys to choose the pause time you want and press 8. TECHNICAL SPECIFICATIONS Standard Radio frequency Channels Bandwidth Modulation Mains adapter Range in open air Range inside Battery unit Battery life Operating temperature DECT From 1880 MHz to 1900 MHz 10 1.728 MHz GFSK Input: AC 230 V / 50 Hz / 59 mA Output: DC 9 V / 600 mA 300 m 50 m* PT079 Ni-MH 3.6 V / 650 mA Standby: 100 hours* Talktime: 10 hours* 5 °C to 40 °C * Data supplied for informative purposes 23 STD51_AU_Ed01.*

pdf 29/12/04 12:00 Page 24 9. TROUBLESHOOTING ... Generally speaking, if you have a problem, take the batteries out of all the telephones in your installation, disconnect the base's electricity power supply.

Wait for 1 minute, reconnect the base and re-insert the batteries. Problems The display is off. Causes The telephone is off (deactivated). The battery unit is discharged. You hear no tone. The telephone is out of base range. Remedies Press and hold the key to reactivate it. Connect the electrical adaptor again to charge up the battery unit. Move closer to the base. The telephone is not Refer to the registered with the base.

"Associating an extra telephone with the base" paragraph. The batteries are discharged. You are out of range of Reception quality deteriorates during the the base or in a disturbed environment. call. Your correspondent cannot hear you. The battery unit is still discharged after several hours of charging. Connect the electrical adaptor again to charge up the battery unit. Move closer to the base. The mike is deactivated, Refer to the "Mute the Mute function is function" paragraph. activated.

The telephone is not receiving power. Check the electrical power supply connection. The handset battery unit Contact your reseller to is faulty. obtain new batteries. However, if the problem persists, you can call the hotline on the following number: 1300 302 699, from Monday to Friday, from 9 a.

m. to 5 p.m. (call billed at current rates). The store where you bought your and provide after-sales service.

24 D51 is also able to inform you STD51_AU_Ed01.pdf 29/12/04 12:00 Page 25 10. WARRANTY D51 complies with requirements of the Australian Communications Authority as certified by the A-Tick. You are covered by a legal warranty for this product and for all information concerning this warranty, please contact your reseller. Notwithstanding other applicable statutory warranties, the reseller warrants that the product complies with the applicable technical specifications and is free from any defect in workmanship and materials for a period of twelve (12) months from the date of purchase shown on the invoice or receipt. You should therefore keep your invoice or till receipt specifying the date of purchase of the product and the name of the reseller. Nonetheless, if the statutory warranty in force in your country exceeds twelve (12) months, the statutory warranty in force in your country will apply in lieu of the manufacturer's warranty. The manufacturer undertakes to repair or replace at its option the defective product or part thereof with a comparable product or part or at least equivalent as to the performances and functionality. The replacement product or parts, which may be new or reconditioned, are warranted for a period expiring either simultaneously with the initial warranty of the concerned product or part thereof or three (3) months after delivery of such repaired product or part, whichever is later. @@@@ Acts of vandalism, lightning, fire, humidity, bad weather.

Use of the product in combination with, or integration of the product into, equipment not supplied by the reseller, unless such combination or integration has been expressly approved in writing by the reseller. Use of the product for a purpose other than that for which it is intended. Faults and deterioration caused by normal wear and tear, a shock or a fall. Product malfunctioning due to external causes (e.g., radio-electric interference produced by other equipment, variation in voltage of the mains supply and/or telephone line). Changes made to the product, including mandatory changes. Product from or on which the brand or serial numbers have been removed or altered. 25 STD51_AU_Ed01.pdf 29/12/04 12:00 Page 26 Defects as a result of other goods and services being connected to the product which disturb or affect the predicted level of service.

UNLESS OTHERWISE STIPULATED BY LAW, ANY AND ALL WARRANTY PROVISION OTHER THAN THOSE MENTIONED HEREIN ARE EXPRESSLY EXCLUDED. 11. ENVIRONMENT Used telephone batteries must be disposed of in compliance with current environmental protection regulations. You should return your batteries to your reseller or dispose of them in an approved recycling centre. 12.

SAFETY In the event of danger, the mains adapter acts as 230V power isolating device. It should therefore, as a precaution, be installed close to the appliance and be easily accessible. If the mains adapter fails, it must be replaced by an identical model. If they are not connected to the mains power or if there is a mains power failure, installations with cordless handsets will no longer work. You will then be unable to make or receive calls in the event of an emergency.

This is why we recommend that you also have a conventional telephone as a backup. Battery unit type: rechargeable battery unit Ni-MH AAA 3.6 V / 650 mAh. Do not attempt to open the batteries, as they contain chemical substances. In the event of leakage, avoid contact with the skin, eyes, mouth and nose. In the event of contact, rinse the affected part for twenty minutes in running water and seek medical assistance immediately. Clean the telephone with absorbent paper or a dry cloth and contact your reseller to change your batteries. ! Do not use your telephone to notify a gas leak when you are in the vicinity of the leak.



[You're reading an excerpt. Click here to read official THOMSON SPEEDTOUCH D51 user guide](http://yourpdfguides.com/dref/3820526)
<http://yourpdfguides.com/dref/3820526>

We recommend that you avoid using this device during electrical storms. 26 STD51_AU_Ed01.

pdf 29/12/04 12:00 Page 27 27 STD51_AU_Ed01.pdf 29/12/04 12:00 1st Floor Building B 1 Moorebank Avenue Thomson Telecom Australia Ref: XX-XXX-XXXX-XX - 29/11/04 Moorebank NSW 2170 Australia Page 28 © Thomson Telecom - Reproduction interdite / All rights reserved / Reproducción prohibida THOMSON et sont des marques déposées / THOMSON and are registered trade marks / THOMSON y son marcas registradas Le constructeur se réserve le droit de modifier les caractéristiques de ses produits en vue d'y apporter des améliorations techniques ou de respecter de nouvelles réglementations. / The manufacturer reserves the right to modify the specifications of its products in order to make technical improvements or comply with new regulations. / El fabricante se reserva el derecho de modificar sin previo aviso las características de sus productos para introducir mejoras técnicas o cumplir con nuevas regulaciones oficiales. .



[You're reading an excerpt. Click here to read official THOMSON SPEEDTOUCH D51 user guide](http://yourpdfguides.com/dref/3820526)
<http://yourpdfguides.com/dref/3820526>