



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THOMSON T1000C SMS. You'll find the answers to all your questions on the THOMSON T1000C SMS in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual THOMSON T1000C SMS
User guide THOMSON T1000C SMS
Operating instructions THOMSON T1000C SMS
Instructions for use THOMSON T1000C SMS
Instruction manual THOMSON T1000C SMS



IMPORTANT SAFETY INSTRUCTIONS

For Your Safety



Do not use the telephone during an electrical storm as it is possible to get a shock. Refer to the Telstra White Pages® directory for further information.

RENTAL TERMS AND CONDITIONS

Your rental telephone is subject to the terms and conditions set out in Part A - General of the Basic Telephone Service Section of Our Customer Terms, which is available for inspection at most Telstra shops or at www.telstra.com.au/customerterms/index.htm.

RENTAL TELEPHONE FAULTS

For any service difficulties and faults call 13 2203 for Residential or 13 2255 for Small Business customers or check the Telstra White Pages® directory for further contact numbers.

TELSTRA TEXT MESSAGING (SMS) SERVICE

Call 01983 39999 and follow voice prompts for information on how to use your Telstra text messaging (SMS) feature.

CARE OF THE TELEPHONE

- Avoid hard knocks and do not drop the telephone.
- Keep the telephone away from heaters.
- Clean the telephone surface with a damp cloth. Do not use detergents or immerse the telephone in water.
- The performance of the telephone may be affected by electro-magnetic interference if placed near radio transmitters, diathermy machines, welding machines etc.

© COPYRIGHT Telstra Corporation Limited
This work is copyright. All rights reserved. This document is subject to conditions prescribed under the Copyright Act. No part of it may in any form or by any means (electronic, mechanical, photocopying, micro copying, scanning, recording or otherwise) be reproduced, stored in a retrieval system or transmitted without prior permission from Telstra Corporation Limited ABN 33 051 775 556.
® Registered trade mark of Telstra Corporation Limited

Telstra T1000C SMS

Calling Number Display Rental Telephone

User Guide

To fully benefit from this Australian designed and manufactured telephone, please read the User Guide and keep handy for future reference.



[You're reading an excerpt. Click here to read official THOMSON T1000C SMS user guide](#)
<http://yourpdfguides.com/dref/3820530>

Manual abstract:

Refer to the Telstra White Pages® directory for further information. RENTAL TERMS AND CONDITIONS Your rental telephone is subject to the terms and conditions set out in Part A - General of the Basic Telephone Service Section of Our Customer Terms, which is available for inspection at most Telstra shops or at www.telstra.com.au/customerterms/index.htm. Telstra T1000C SMS Calling Number Display Rental Telephone User Guide To fully benefit from this Australian designed and manufactured telephone, please read the User Guide and keep handy for future reference. RENTAL TELEPHONE FAULTS For any service difficulties and faults call 13 2203 for Residential or 13 2255 for Small Business customers or check the Telstra White Pages® directory for further contact numbers. TELSTRA TEXT MESSAGING (SMS) SERVICE Call 0198339999 and follow voice prompts for information on how to use your Telstra text messaging (SMS) feature. CARE OF THE TELEPHONE - Avoid hard knocks and do not drop the telephone.

· Keep the telephone away from heaters. · Clean the telephone surface with a damp cloth. Do not use detergents or immerse the telephone in water. · The performance of the telephone may be affected by electro-magnetic interference if placed near radio transmitters, diathermy machines, welding machines etc.

© COPYRIGHT Telstra Corporation Limited This work is copyright.

All rights reserved. This document is subject to conditions prescribed under the Copyright Act. No part of it may in any form or by any means (electronic, mechanical, photocopying, micro copying, scanning, recording or otherwise) be reproduced, stored in a retrieval system or transmitted without prior permission from Telstra Corporation Limited ABN 33 051 775 556. ® Registered trade mark of Telstra Corporation Limited 16 CONTENTS Getting Started

Features of the Telephone Telephone Settings Using MessageBank® Button How to use your Telstra T1000C Telephone Features Important Safety Instructions Rental Terms and Conditions Rental Telephone Faults Telstra Text Messaging (SMS) Service Care of the Telephone 2 3 4 7 9 16 16 16 16 16 FEATURES OF THE TELEPHONE 1. Ringer and earpiece level and scroll through Callers and Memory Lists.

2. Names stored in memory will be displayed when the callers number matches the number in memory1. 3. Redial button used to easily redial the last number dialled. 4. Store button used to turn on Phone Features and adjust ringer and contrast. 5. Cancel button used to turn off phone features e.g. Call Wait.

6. Two line LCD Calling Number Display with a 20 number call list1. 7. 20 number memory directory with One-Touch dial using OK button. 8. OK button used to confirm menu selections. 9. Visual Message Wait Indicator. 10. MessageBank button used to retrieve messages from MessageBank.

11. Sending and receiving text messages2. 12. One Touch Phone Feature buttons. 13.

Delete button used to delete numbers from the Callers and Memory lists. 14. @@@@an answering machine, extension ringer or modem. Visual Message Waiting Power Pack socket is located at the rear. @@Adjust the handset hook on the base.

1. You need to subscribe to Telstra Calling Number Display in order to receive the number of your callers. Monthly charges apply. Available most areas. Not available for blocked calls. For more information, call 13 2200 for Residential or 13 2000 for Business services. 2. Text message functionality available to eligible Telstra and Telstra reseller customers with text capable phones such as this T1000C. Telstra expects the fixed line text messaging functionality will become more widely available at a later stage and all other customers wishing to use this function should confirm its availability with their service provider. 2 3 TELEPHONE SETTINGS To adjust the ringer volume when the telephone is ringing Press or while the phone is ringing To adjust the display contrast 1.

Press 2. Press 3. Press Display will show "CONTRAST". or to adjust contrast to clear the display and save the setting. To adjust the ringer volume when the telephone is idle 1. Press 2. Press Display will show (Min) to clear the display and save setting. (Max) To adjust the earpiece volume press Adjusts the earpiece volume to one of four levels. Confirmation tone will stop after the minimum or maximum setting has been reached. Note: The earpiece volume will reset to normal when the handset is replaced, unless you fix the level.

To suppress the first ring When text messages are delivered to your phone, your phone will ring once. If you do not want your phone to ring for text messages, you can suppress the first ring. However, this is not recommended as any other phone you have connected to the same line will still ring. To suppress the first ring Press Display will show "SUPPRESS FIRST RING", press To re-enable the first ring Display will show "ENABLE FIRST RING", press Press To fix the earpiece volume press or to adjust the volume and press To have the volume reset to normal when the handset is replaced press or to adjust the volume and press Note: The T1000C also provides magnetic coupling in the handset for use with hearing aids with a T position switch. Key tone When the handset is lifted, your phone generates a key tone for each valid key press.

If you have a power adaptor connected, the key tone is generated when the handset is on the hook. Last Number Redial Press The display shows the last number dialled. to call the last number dialled. Callers List The Callers List can store up to 20 incoming callers numbers. The symbol on the display shows there is an unanswered new call in the Callers List.

To disable the key tone Press Display will show "DISABLE KEY TONE", press Viewing and dialling from the Callers List To enable the key tone Press Display will show "ENABLE KEY TONE", press Press then or to find number. Lift the handset to call the number. The symbol will turn off when the callers key is pressed. Note: The Callers List will store the number, date and time of the last 20 calls. 4 5 Storing numbers and names in Memory You can store up to 20 numbers and names in Memory: 1. Press then or "ENTER NUMBER" on the display indicates an empty memory location. 2. Enter the phone number, including the area code. 3. Press to save number only, or press to enter a name using letters on keypad (maximum of 13 letters including spaces).

4. Press to save number and name in Memory. 5. Press to return to standby mode or press or to locate an empty memory location to store another name and number. Hints: If you make a mistake while entering a name or number, press to delete the previous letter or number. OR Press to start again. to enter a 1.5 second pause between numbers if needed. Press The cursor shifts one space to the right automatically or press to move the cursor right. @@@@Press then or to find an empty memory.

2. Press then or to select number.



[You're reading an excerpt. Click here to read official THOMSON T1000C SMS user guide](http://yourpdfguides.com/dref/3820530)
<http://yourpdfguides.com/dref/3820530>

3. Press to enter name using letters on keypad and press to save. 4.

@@@ Monthly charges apply for MessageBank. @@@@press When you are on a call and you hear two beeps: 1. Press to swap between callers. 2. Press to hang up one caller and return to the caller on hold.

3. @@ · Adjust the phone settings (except the earpiece volume). · View the Callers List. · View the Memory List. · View the text message list. · Compose and send a text message. · Delete an entry in the Callers List or Memory List. @@@@@@@Applicable call costs and usage charges apply. 5. Applicable call costs and usage charges apply.

Available most areplay "SMS LIST FULL". @@@@Press 2. Press 3. Press then until display shows "VIEW RECEIVED MESSAGES". then to select text message number. @@Press Display shows "VIEW RECEIVED MESSAGES". 2. @@3. Press to scroll through all received messages. 4. Press to select a message and press or to read the full message and to see the date and time of the message. 5. Press to return to the received messages list. 4. Press to save name and number in memory.

to return to standby mode or press or 5. Press text messages. to view other received If the text message memory is full When the text message memory is full, the phone will display the number of unviewed text messages followed by "SMS:LIST FULL" e.g. "10 SMS:LIST FULL".

If all the messages have been viewed but not deleted, the phone will display "SMS:LIST FULL". You need to delete some received messages to make room for new ones. To reply to a text message 1. While viewing a selected received text message, press Display shows "REPLY?". 2. Press Display shows "ENTER MESSAGE". Enter your text message using letters on keypad. 3. Press Display shows "SEND SMS?". 4.

Press Display shows "SENDING". Note: Display shows "SENT TO #" when text message is sent . To delete individual text messages 1. Press 2. Press 3. Press 4. Press and scroll to "VIEW RECEIVED MESSAGES". and scroll to the message you want to delete. Display shows "DELETE?". again to delete message. Note: Display moves to next message. To forward a text message 10 1. While viewing a selected received text message, press SMS?" using 2. Press Display shows "ENTER NUMBER". 3.

Enter telephone number including area code, or press required number and press to select. 4. Press Display shows "SEND SMS?". 5. Press Display shows "SENDING".

Note: Display show " SENT TO #" when text message is sent . and scroll to "FORWARD To delete all text messages 1. Press 2. Press 3. Press OR Press OR Press 4. Press Display will show "DELETE SMS OR MESSAGEBANK PIN". Display will show "DELETE ALL SENT SMS?". to "DELETE ALL UNSENT SMS?" to "DELETE ALL RECEIVED SMS?" to "DELETE ALL SMS?". to delete the select messages. or and scroll to or To call the sender of a text message While viewing a selected received text message, press and scroll to "CALL?" using Press Display shows telephone number, then lift handset to call.

10. Charges apply for each message sent even if not received. 12 13 SMS Service Centre numbers The Telstra SMS Service Centre Send and Receive numbers are preset in your T1000C SMS phone. If you accidentally change the Send or Receive numbers you will need to re-enter them in order for your text messaging service to work. Telstra's Send SMS service number is 01983391. Telstra Receive SMS service Centre number is 01983391. The default terminal number is 0. Changing the terminal number To change the terminal number or sub-address for sending and receiving text messages: 1. Press Display will show "TERMINAL ID 0". 2.

Enter the new terminal number (1 to 9). 3. Press to store the new number. Two or more SMS phones on the same line If you have more than one SMS phone on the same line the phones may not operate properly when receiving text messages. To overcome this you should change the terminal number(s) so that only one phone has a terminal number of 0.

@@@@@Press Display will show "TERMINAL ID 0". 2. Press Display will show "OUTGOING SMSC 01983391". 3. Enter the new number.

4. @@Press Display will show "TERMINAL ID 0". 2. Press Display will show "INCOMING SMSC 01983391". 3. Enter the new number. 4. Press to store the new number. Note: SMS Service Centre phone numbers cannot be blank. Sub-addressing of text messages Telstra's fixed text messaging service allows you to send text messages to a specific phone when there is more than one phone connected to a telephone line.

This may be useful when you want to direct a message to a specific household member for privacy reasons. Each phone can be given a different terminal number (from 1-9), text messages can be sent to an individual phone by simply adding an extra digit to the phone number corresponding to the terminal number of the particular phone. For example, if a text message is sent to a fixed line with an additional digit "1" added to the telephone number, only a phone set up with terminal number "1" on that line would receive the message. The default terminal number for your phone is "0" and your phone will automatically receive all text messages sent unless they have an additional sub-address digit added. 14 15 .



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/3820530)

[T1000C SMS user guide](http://yourpdfguides.com/dref/3820530)

<http://yourpdfguides.com/dref/3820530>