



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THOMSON TX807C. You'll find the answers to all your questions on the THOMSON TX807C in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual THOMSON TX807C
User guide THOMSON TX807C
Operating instructions THOMSON TX807C
Instructions for use THOMSON TX807C
Instruction manual THOMSON TX807C

tx807en2 15/01/03 12:26 Page 1

About this manual

This manual is common to several TV models. Therefore, the model you bought may not support some of the functions or settings described hereinafter.

About the On/Off switch

The position of the ON/OFF switch **Ⓞ**, differs depending on the model. It may be located on the front or on the right-hand side of your set (see the drawing inside the cover page of your manual).

For your safety

To ensure your own safety and safe operation of the equipment, observe the following instructions thoroughly.

TV sets require sufficient ventilation to prevent their components from overheating, which will cause failure. Do not block the ventilation openings at the rear. If you place your TV set in a special piece of furniture, make sure there is enough space for unhindered air circulation. Do not place the TV set in the close vicinity of a heater.

The TV set has been designed for use in dry rooms. Should you use it, in exceptional circumstances in the open air (example: on the balcony, in the veranda or tent), you must absolutely protect it against moisture (dew, rain, splash water). Before switching on a cold TV set in a warm room, you should wait until any condensation in the screen has dried by itself.

Maximum ambient temperature: 35°.
Maximum humidity: 85%.

In the evening, after TV programmes or in case of a long absence, it is recommended to turn off the apparatus at the main switch. Even when the On/Off switch is in the "Off" position and even though it does not consume any current, the television is not completely separated from the mains supply. In order to completely disconnect, it is necessary to unplug the mains plug.

The mains plug must be easily accessible.

In the following cases, we recommend that you pull out the mains connector:

1. During a thunderstorm. In such a case, it is advisable that you also disconnect the TV set from the aerial socket.
2. When odour or smoke emanates from the set.

Never attempt to open your TV set yourself.

Further information:
The TV set shielding is sufficient to prevent X-radiation to the exterior.

Any operation performed by a non skilled person, change of high voltage or replacement of the picture tube by a model not complying with the manufacturer specification are likely to cause considerable increase in X-radiation.

A TV set modified in such a way no longer complies with the manufacturers' specification and must not be used.

About cleaning

The screen is to be cleaned with liquid glass cleaners.

- Never use abrasive products.
- Clean the cabinet with a soft cloth soaked with neutral cleaner. Do not use solvents, such as white spirit or alcohol-based cleaning products since they may damage your television.
- At regular intervals, clean the ventilation grids at the rear of the TV set.

About degaussing

The terrestrial magnetic field may have an influence on your TV set. This influence is revealed by the coloured spots, which appear on the screen.

Should this be the case:

- Turn the equipment off by means of the On/Off switch.
- Wait about one hour before switching the set on again.

This procedure performs automatic degaussing of the screen. Should there still be coloured spots on the screen, repeat the operation.

EN

1



[You're reading an excerpt. Click here to read official THOMSON TX807C user guide](http://yourpdfguides.com/dref/2178724)
<http://yourpdfguides.com/dref/2178724>

Manual abstract:

Therefore, the model you bought may not support some of the functions or settings described hereinafter. The mains plug must be easily accessible. In the following cases, we recommend that you pull out the mains connector: 1. During a thunderstorm. In such a case, it is advisable that you also disconnect the TV set from the aerial socket. 2. When odour or smoke emanates from the set. Never attempt to open your TV set yourself. Further information: The TV set shielding is sufficient to prevent X-radiation to the exterior. Any operation performed by a non skilled person, change of high voltage or replacement of the picture tube by a model not complying with the manufacturer specification are likely to cause considerable increase in X-radiation.

A TV set modified in such a way no longer complies with the manufacturer's specification and must not be used. The position of the ON/OFF switch A, differs depending on the model. It may be located on the front or on the right-hand side of your set (see the drawing inside the cover page of your manual).

For your safety To ensure your own safety and safe operation of the equipment, observe the following instructions thoroughly. TV sets require sufficient ventilation to prevent their components from overheating, which will cause failure.

Do not block the ventilation openings at the rear. If you place your TV set in a special piece of furniture, make sure there is enough space for unhindered air circulation. Do not place the TV set in the close vicinity of a heater. The TV set has been designed for use in dry rooms. @@@@Maximum ambient temperature: 35°C.

Maximum humidity: 85%. @@@@In order to completely disconnect, it is necessary to unplug the mains plug. About cleaning The screen is to be cleaned with liquid glass cleaners. ✕ Never use abrasive products. ✕ Clean the cabinet with a soft cloth soaked with neutral cleaner. Do not use solvents, such as white spirit or alcohol-based cleaning products since they may damage your television. ✕ At regular intervals, clean the ventilation grids at the rear of the TV set. About degaussing The terrestrial magnetic field may have an influence on your TV set. This influence is revealed by the coloured spots, which appear on the screen. Should this be the case: ✕ Turn the equipment off by means of the On/Off switch.

✕ Wait about one hour before switching the set on again. This procedure performs automatic degaussing of the screen. Should there still be coloured spots on the screen, repeat the operation. 1 EN About the On/Off switch tx807en2 15/01/03 12:26 Page 2 Set-up To set up your TV set, follow the instructions on this page before you continue with the channel set-up procedure described on page 5. 1. Put the batteries in the remote control unit. Please respect the environment and prevailing regulations. Before you dispose of batteries or accumulators, ask your dealer whether they are subject to special recycling and if he accepts to take them back. 2. Connect the TV to a mains socket.

The mains plug carries the power supply to your TV set. It should only be connected to an AC supply at 220 - 240 V ~ 50 Hz. It must not be connected to a DC supply *. If the plug is detached from the cable, do not under any circumstances connect it to a mains socket as there is a danger of electrocution. UK

SOCKET: Equipment for the UK is supplied with a mains cable fitted with a moulded plug.

Continental Europe Batteries (LR 06-AA or LR 03-AAA) insertion differs according to the type of your remote control. 1 1 2 3 1 2 3 220 - 240 V ~ 50 Hz 2 The plug contains safety components and must not be replaced by a type sold in shops. It is fitted with a fuse that protects your television. If your set no longer works, the fuse may have blown. If it has, replace it with an identical ASTA certified or BSI (BS 1362) 5 amp fuse.

3. Connect the outside aerial or cable network to the g socket at the back of the TV set. 220 / 240 V ~ 50Hz United Kingdom 2 5A The aerial socket is for connecting an external antenna or equipment fitted with a modulator (VCR, satellite receiver, etc.). When connecting additional equipment to the aerial socket, you must assign a channel number to it. To do so, switch the external equipment on, then search for its modulator channel on the TV set, assign the channel number found to the equipment and store. From now on, every time you want to use the external equipment connected, you must select the channel number assigned to it. VCROs without an integrated modulator do not require this setting. 4. Continue on page 5, Channel set-up.

* For models operating on batteries, see page 10. 3 2 tx807en2 15/01/03 12:26 Page 3 Remote Controls: Models 100 and 111 / list Info Model 100 text Model 111 pr menu pr Is for calling up the menu windows. For erasing the menu windows or information from the screen. Volume control. Mute. MENU 1 4 7 av 2 5 8 3 6 9 exit EXIT / VOL+/- pr+/pr- Programme change. PR+/PR- Model 100 Directional keys Up/Down, Left/Right for selection and validation key (OK).

Personal Adjustments. Timer. info PRESETS ZZZ/LIST INFO Display of channel, stand-by time.

Selection of the sound type (Sound 1, Sound 2, Sound 3) in Dual, Nicam and AV. GUIDE text Videotext keys. 0 TEXT 1 For channel selection and number input in the menus. To select one of the appliances connected via the AV sockets. 1 0 av AV Model 111 3 EN exit menu Switching the TV set on standby. tx807en2 15/01/03 12:26 Page 4 About the TV set Prior to enjoying your TV set, you'll have to set it up, i.e. to find and store the channels, which may be received in your area. The Automatic Channel Set-up will look for all the channels and number them. Since the channel numbers assigned to the programmes by the Automatic Channel Set-up do not necessarily correspond to the actual number of the channels (example: Channel 4), you may change them upon completion of Automatic Channel Set-up.

How to switch on the set? With the On/Off-button fitted on the set. When the red LED is lit, the TV set has previously been switched on standby with the key B on the remote control. To switch the TV set on again, type in a channel number. The set-up carried out through Frequency allows you to find all the channels (even the non-standard ones). Therefore, it is the recommended one if you are connected to a cable network. ✕ Start the Automatic Channel Set-up by pressing the OK key. Wait a few minutes until the Channel Organisation menu (ORG.) appears. Channels Organisation How to change the channel number? To identify each channel, make use of your TV magazine to find out the actual name of the current programme/channel. 1.

Use the key pr+ and pr- to select the channel number you wish to change. 2. Press the new channel number (compulsorily 2 digits, for ex.: for Channel 2, enter 0, then 2) on the remote control.



[You're reading an excerpt. Click here to read official THOMSON TX807C user guide](http://yourpdfguides.com/dref/2178724)
<http://yourpdfguides.com/dref/2178724>

You can also use the directional Left/Right keys. 3. Validate with key OK. @@How to delete a channel number? Delete any programme the picture quality of which appears to be poor. 1. Select the channel with the key pr+ and pr-

2. Press 00 on the remote control. 3. Then validate with OK: The channel number is now deleted. @@Once your channels are duly sorted, close the menu through exit.

@@@The first line (Standard) is selected. @@¥ Select the Install. line with the directional Up/Down keys. @@@@- 3 times for the stereo TV sets. The first line (Standard) is selected.

@@2 .Select the Mode line through the Up/Down directional keys. 3. @@4. Select the CH or CC line through the Up/Down directional keys. 5. @@When a channel is found, the pictures appear. @@6. Select the Decod. @@8.

@@You may also use the Left/Right keys. 9. @@10. Store the programme by pressing OK. To find the next programme, re-start Channel Set-up by means of the directional keys Left/Right. Once the set-up achieved, close the menu through exit. Adjusting the Picture Press the menu key once to display the menu.

Through the Up/Down keys, select the function you want to adjust (Brightness, Colour, Contrast, Sharpness, Tint). Adjust with the Left/Right keys. Adjustment of tone is only possible and necessary for an NTSC image.

If you wish to preserve these adjustments as preferential, press the red button to memorise them. You'll then be able to recall them later on. Close the menu through exit. Settings are stored until you proceed to another change. Adjusting the Sound (only on stereo models) Press the menu key twice to display the menu.

Through the Up/Down keys, select the function you want to adjust (Treble, Bass, Balance, Mode). With the Left/Right keys, adjust the Treble or Bass level. display persists, check your antenna connection. How to adjust the volume? - With the remote control, by making short pulses or maintaining the / buttons pressed. - With the keypad of the television, by maintaining / pressed. buttons How to mute the sound? With the () key.

Press once more on the key to reactivate the sound. 6 tx807en2 15/01/03 12:26 Page 7 The Videotext How to use Videotext? (If included) Press the key text to display the Summary (page 100). Calling up a page Enter the 3 digits of the number (e.g. 150, 170) of the page you want to read. After a few moments, the page will be displayed. To visualise the next or previous page, press the directional keys Left/Right, pr+/pr-. To access page scrolling, Games, Zoom and Display functions, you must first press the menu button to display the corresponding panel at the bottom of the Fastext page. Page Scrolling You may stop the page scrolling with the red key. This has the effect that STOP is displayed instead of the page number.

When pressing the red key again, page scrolling will start again. Prize competitions By means of the green key, you can either display or hide the solutions.

Zoom With the yellow key, you can subsequently enlarge the upper and the lower half of the screen page and then switch back to full screen page display.

Videotext display The blue key enables you to superpose a videotext page on the standard TV picture and to switch back to the standard TV picture Fastext When videotext pages are broadcast as per the Fastext standard, you can use the corresponding colour keys to select one out of the 4 headings displayed in the footer. Selection of a given heading may have the effect to display further headings. Certain programmes use videotext to broadcast subtitles, as well as constantly updated news. These pages can be found in the videotext summary. Once you have found the page, the subtitle and/or news will be superposed on the TV picture. Choice of the character set table If the characters on the teletext page are inaccurate, verify that you have chosen the correct character table as indicated on pages 6 and 7. If you have chosen the correct table and a few characters are nevertheless inaccurate, proceed as indicated below.

Press the Text button for at least 3 seconds and then release it to go from the default character table to the alternative table and vice-versa. Leave the videotext through exit. Choice of table of characters EN NLA F DE HR* SL* RO* FR IT ES PT IS SV NO FI HU TR PL ET LT RU BG SL EL AR FA UK BE CS SK HR RO 1 2 3 4 5 6 1 / 2 + Alt 1 + Alt The table below shows you, in relation to the teletext language, the number to type in on the Text line of the Manual Channel Installation menu. The sign Alt points out the need for select the Alternative character table as described in the paragraph Choice of character table in the Teletext chapter. 7 EN tx807en2 15/01/03 12:26 Page 8 Connections The scart cable (1) The scart cable allows you to connect a VCR or camcorder (VHS, 8 mm,S-VHS or Hi-8), a Canal + decoder, a video game machine or devices supplying a RGB signal.

You may also connect a digital decoder cable/earth/satellite, an analog satellite receiver or a DVD player. The type of connection shown on the opposite is highly recommended, given that it provides improved picture quality. To operate the external equipment connected, you must select its av socket by means of the av key. With certain equipment, selection of proper av socket is performed automatically. When connecting an S-Video equipment, make sure you press the av key twice.

When you turn off the connected device, and if you have not changed channel during viewing, the TV set automatically returns to the previously watched channel. @@@@The Headphone socket (3) (only available on specific models) The headphone adapter allows you to connect a stereo headphone or earphone plugs; the loudspeakers sound is then muted. Volume may be adjusted through keys . / 1 2 3 Mains/batteries supply Some TV set models may be supplied through either mains (220 - 240V ~ 50Hz) or battery 12V / 24V - CC. To connect your TV set to either one of these power sources, please proceed as indicated below: 220 - 240V ~ 50 Hz Supply (Mains) Connect the mains lead to the top socket (move the socket cover down). 12V / 24V DC Supply (Direct current). Connect the battery lead to the bottom socket (move the socket cover up). Use the supplied battery lead uniquely with this apparatus. This is equipped with an 8A delayed-action fuse. If your apparatus ceases to function, the fuse may be blown.

In this case, replace it with an identical one. DC AC TX807 C/CS N2I/EN - BEI / RDG - Le 14 / 01 / 2003 8 .



[You're reading an excerpt. Click here to read official THOMSON TX807C user guide](http://yourpdfguides.com/dref/2178724)