




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for THOMSON WFT6412XI. You'll find the answers to all your questions on the THOMSON WFT6412XI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual THOMSON WFT6412XI**  
**User guide THOMSON WFT6412XI**  
**Operating instructions THOMSON WFT6412XI**  
**Instructions for use THOMSON WFT6412XI**  
**Instruction manual THOMSON WFT6412XI**

Washer-dryer installation and operation manual  
Manuel d'installation et d'utilisation du lave-linge séchant  
Handbuch für Einbau und Bedienung der Wasch- und Trockenmaschine

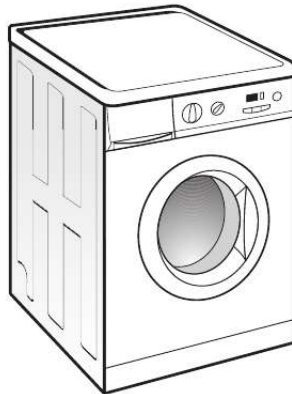

[You're reading an excerpt. Click here to read official THOMSON WFT6412XI user guide](http://yourpdfguides.com/dref/3922653)  
<http://yourpdfguides.com/dref/3922653>

**Manual abstract:**

*Do not use an extension lead or adaptor plug to connect the washing machine to the mains. Do not climb onto the washing machine or lean on the loading door when it is open. The machine must only be used for the purpose for which it is designed. Do not dry any items in the tumble dryer if they have not been previously washed. Do not wash any articles that have previously been cleaned, washed, soaked or treated with petrol, dry cleaning solvents or any other flammable or explosive substances, as these produce vapours which could catch fire or explode. @@@@Do not repair or replace any part of the washing machine or attempt to carry out any type of servicing, unless it is expressly recommended in the maintenance instructions in the manual.*

*@@@@The appliance should not be installed behind a lockable or sliding door or a door with the hinges on the opposite side to where the tumble dryer is located. Do not start up the washing machine until you have ensured that: A IAll the water, drainage, electrical and earth connections comply with local legislation and any other applicable regulations. The final stage of a tumble dryer cycle does not use heat, so as not to damage the items (cooling cycle).*

*Never stop the tumble dryer before the end of the drying cycle, unless you quickly remove all the items and lay them out for them to cool down.*

*This appliance is not designed for use by people (including children) whose physical, sensorial or mental capacities are impaired, or who lack sufficient experience or knowledge, unless they are supervised or have been instructed in the use of the appliance by a person responsible for their safety. Children must be supervised to ensure they do not play with the appliance. A Unscrew the screws holding the 3 plastic cover pieces in place, at the rear of the washing machine. b Unscrew and remove the 3 metal fixing flanges. C Use the previously removed cover pieces to cover the holes.*

*Keep the metal fixing flanges, as they will be useful if you need to transport the appliance at a later date. Make sure you firmly tighten the locking nut.*

*@@@@Do not use the old supply hoses. @@@Make sure the drain hose is not blocked, kinked or squashed. @@@For models with nuts, tighten the nuts with a spanner.*

*Make sure your washing machine is correctly plugged into an earthed socket. The electrical installation, plug, mains socket and the fuses or automatic circuitbreaker and counter must withstand the maximum power indicated on the instruction plate. Never plug the washing machine into the mains with wet or damp hands. To unplug the appliance from the mains, pull on the plug, never pull on the cable. If the supply cable is damaged, it must be replaced as soon as possible with a cable or special unit provided by the manufacturer or after-sales service. For built-in washing machines, the mains connection plug must be accessible after installation. When your washing machine has been correctly installed, we recommend that you pre-clean the machine. This is to check that the installation, the connections and the drainage are all correct, and to thoroughly clean the inside of the washing machine before any wash programmes are run (see the operating instructions on the following pages). Make sure you empty the pockets of the clothes before you place them in the drum.*

*Small objects could block the drain pump. A Sort the clothes by fabric type We recommend using the delicate programmes for more fragile items. Use the special wool wash programmes for washing woollens. @@@@Check your woollens are machinewashable before washing them.*

*@@@@@@@@How dirty the clothes are. @@@@@@@@@@You will save money and contribute to protecting the environment.*

*@@A To change it, turn the spin speed selector. @@The wash programme stops on the last rinse, with the clothes left in water. When the function is deactivated, the washing machine continues the programme, draining and spin-drying. It is used, for example, when you are not at home and want to delay the spindrying until you get home, to prevent the clothes creasing after spin-drying and being left in the drum to be removed.*

*To use it, turn the spin speed selector to the full tub stop position. @@@@@@@@@@ If you change the programme on the programme selector dial during washing and drying, the washer dryer will automatically go onto PAUSE and the programme running will be cancelled. if you need to add or remove an item , press the Stop/Pause button. Check there is no danger of the water overflowing when you open the door and that the water temperature is not too high. To reduce noise on spin drying, level the washing machine by regulating the adjustable feet.*

*You should wash clothes of different sizes on the same wash programme whenever possible, as this helps distribute the clothes inside the drum on spin-drying and improves spin performance. All the models have a safety system to prevent spin-drying from starting up if the clothes are too concentrated inside the drum. This protects the washing machine from vibrating excessively. If you notice that the clothes are still too damp after spin drying, distribute them evenly inside the drum and then run the spin dry cycle again. If a power cut should occur, when the electricity comes back on the washing machine will continue functioning from where it left off (it has a memory of several hours).*

*After each wash programme, leave the loading door open for a short time so that air can circulate around the washing machine. @@This will prolong the life of your washing machine. @@@@@Then fit the drawer back into its housing. @@@ a Open the plinth cover , by pressing the lug and pulling gently on it. B Place a dish or similar recipient under the filter to collect the water that will run out of it when it is removed. C Turn the filter a quarter of a turn or a half turn to the left. the water will start to run out. D When all the water has come out of the washing machine, turn the filter several times until it can be completely removed by gently pulling on it. To prevent risk of burns, do not carry out this operation with washing water temperatures of over 30°C. To clean the outside of the washing machine, use warm soapy water or a gentle cleaning.*



[You're reading an excerpt. Click here to read official THOMSON](http://yourpdfguides.com/dref/3922653)

[WFT6412XI user guide](http://yourpdfguides.com/dref/3922653)

<http://yourpdfguides.com/dref/3922653>