



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TOSHIBA 32AV625D. You'll find the answers to all your questions on the TOSHIBA 32AV625D in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TOSHIBA 32AV625D
User guide TOSHIBA 32AV625D
Operating instructions TOSHIBA 32AV625D
Instructions for use TOSHIBA 32AV625D
Instruction manual TOSHIBA 32AV625D

TOSHIBA
Leading Innovation >>>



AV6**D Digital
Series
RV6**D Digital
Series



[You're reading an excerpt. Click here to read official TOSHIBA 32AV625D user guide](http://yourpdfguides.com/dref/2367326)
<http://yourpdfguides.com/dref/2367326>

Manual abstract:

.....
.....
... 19 Dual ..

.....
.....
.....
.....

.....
.....
.... 19 Bass, Treble and Balance .

.....
.....
.....

19 Advanced Sound Settings

.....
.....
.....

19 Stable Sound®

.....
.....
.....
.....

..... 19 Dynamic Range Control ...

.....
.....
.....

.....
.....
19 Audio Level Offset

.....
.....

.....
.....
. 20 Headphone Settings

.....
.....
.....

..... 20 Audio description .

.....
.....
.....
.....

.....
.....
. 20 Widescreen viewing

.....
.....

.....
.....
.....
.....
..... @23 Picture Position

.....
.....
.....
.....

.....
.. 23 Picture Mode ...

.....
.....
.....
.....
.....

. 23 Picture preferences

.....
.....
.....

.....
. @24 3D Colour Management

.....
.....

.....
... 24 Base Colour Adjustment ..

.....
.....

.....
24 Colour Temperature

.....
.....

.....
... 24 Auto Brightness Senser Settings

.....
.....

.....
.... 25 Active Backlight Control .

.....
.....

.....
.. 25 Black/White Level ...

.....
.....

.....
..... 25 Static Gamma .

.....
.....

.....
. 25 MPEG NR Noise Reduction

.....
.....

.....
.. 25 DNR Digital Noise Reduction ...

.....
.....

..... 25 Resolution+

.....
.....
.....

.....
.....

..... 26 Cinema Mode

.....
.....
.....
.....

.. 26 Expert Mode ...

.....
.....
.....
.....
.....

.. 26 Resetting the advanced picture settings

.. 26 Control Visualization ...

.....
.....
.....

.... 27 Automatic Format (Widescreen) .

.....
.....
.....

27 4:3 Stretch

.....
.....
.....
.....
.....

.. 27 Blue Screen

.....
.....
.....

... 27 Side panel adjustment

.....
.....
.....

..... @@27 Enjoying Photo through USB port ..

.....
.....
.....

.... 28 To open Photo Viewer

.....
.....
.....
.....
..... 28 Viewing photo files .

.....
.....
.....
.....
.....
..... 29 Other features .

.....
.....
.....
.....
.....
.....
..... 30 Panel lock

.....
.....
.....
.....
.....
.....
..... 30 TOSHIBA Illumination

.....
.....
.....
.....
.....
.....
..... 30 The timers

.....
.....
.....
.....
.....
.....
..... 30 Programme Timers digital only

.....
..... 30 On Timer .

.....
.....
.....
.....
.....
.....
..... 31 Sleep Timer ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
..... 31 Digital on-screen information and Programme Guide

.....
.....
.....

.... 32 Information .

.....
.....
.....
.....

32 Guide

.....
.....
.....
.....
.....

..... 33 Genre selection/searching .

.....
.....
.....

..... 33 CONNECTING YOUR TV Connecting external equipment ..

.....
.....
.....

.....7 Connecting an HDMITM or DVI device to the HDMI input ..

.....
.....
.....
.....
.....
.....

8 To connect an HDMI device

.....
.....

8 To connect a DVI device

.....
.....

8 Connecting a computer

.....
.....
.....
.....

..9 To connect a PC to the RGB/PC terminal

..9 To connect a PC to the HDMI terminal ...

.....

.....9 Controls and input connections

.....
.....
.....

.....10 Switching on

.....
.....
.....
.....

.....
.....

10 Using the remote control

.....
.....

.10 Using the controls and connections

.....

..10 SETTING UP YOUR TV Startup Application

.....
.....
.....

.....
.....

....11 Quick Setup .

.....
.....

.....
.....

.....
.....

11 Ant/Cable In (if available)

.....
.....

.....
.....

12 Auto Tuning

.....
.....

.....
.....

.....
.....

.13 ATV Manual Tuning

.....
.....
.....

.....
.....

..13 Tuning ...

.....
.....
.....
.....
.....

.....
.....
.13 Skip
.....

.....
.....
.....
.....
.....
.....
....15 Sorting positions .
.....

.....
.....
.....
.....
.....
.....
...15 DTV Manual Tuning
.....
.....
.....

.....
.....
....16 Manual Tuning .
.....
.....
.....
.....

.....16 Manual Tuning for DVB-C
.....
.....
.....

.....16 DTV Settings
.....
.....
.....
.....
.....
.....

..16 Channels
.....
.....
.....

.....
.....
.....
.....16 Auto Channel Update ...
.....
.....
.....

...17 DVB Character Set
.....

.....
.....

.....
.....17 Analogue switch-off.

.....
.....

.....
.....

.....
.....17 Location setting

.....
.....
.....
.....

.....17 CONTROLS AND FEATURES General controls

.....
.....
.....

.....
.....
.....

.....18 Selecting positions ...

.....
.....
.....
.....

.....18 The Time Display analogue only ..

.....
.....

.....18 Stereo and Bilingual transmissions

.....
.....18 Quick Menu

.....
.....
.....

.....
.....
.....
.....

.....18 2 English Digital settings parental control

.....
.....

.....34 Setting the PIN

.....
.....
.....
.....

.....34 Parental Setup ...

.....
.....

.....
.....
.....

.....34 Digital settings Channel Options .

.....
.....
.....
..35 Selecting favourite channels

.....
.....
....35 Favourite Channel Lists .
.....

.....
.....
.....
...35 Skip channels

.....
.....
.....
.....

.....
.....
.....
.....
..35 Locking channels

.....
.....
.....
.....
....35 Digital settings other settings

.....
.....
.....
.....
...36 Subtitles

.....
.....
.....
.....

.....
.....
.....
.....
....36 Audio languages .
.....

.....
.....
.....
.....

..36 Common Interface

.....
.....
.....
.....

...36 Software Upgrade ..
.....
.....

.....
.....
.....
.....

..37 Auto Upgrade

.....
.....
.....
38 Input selection and AV connections
.....

.....*39 Input selection ..*
.....
.....
.....

.....
.....
.....
.....39 External input skip

.....
.....
.....
.....
.....39 INPUT signal selection
.....
.....
.....

.....
.39 PC Audio
.....
.....

.....
.....
.....
.....

.....39 HDMI 1 Audio
.....
.....
.....

.....
.....
.....
...40 HDMI Settings

.....
.....
.....
.....

.....
40 Digital Audio Output
.....
.....

.....
.....
...40 TEXT SERVICES Text services ..
.....

.....
.....
.....
.....

.....
.....
41 Selecting modes
.....

.....
.....
.....
.....41 Text information .

.....
.....
.....
.....
...41 Navigating pages using Auto ..
.....
.....

.....41 Navigating pages using LIST ..
.....
.....
.....

....41 Control buttons
.....
.....
.....

.....
.....
.....
42 PROBLEM SOLVING Questions and Answers

.....
.....
.....
.....43 INFORMATION Notes ..

.....
.....
.....
.....
.....
.....
.....
.....

.....46 Information
.....
.....
.....

.....
.....
.....
.....

...48 Specifications and accessories
.....
.....
.....

....50 3 INSTALLING YOUR TV English Safety Precautions This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety. They

are of a general nature, intended to help with all electronic consumer products and some points may not apply to the goods you have just purchased. **DO NOT REMOVE ANY FIXED COVERS AS THIS WILL EXPOSE DANGEROUS AND 'LIVE' PARTS. THE MAINS PLUG IS USED AS A DISCONNECTING DEVICE AND THEREFORE SHOULD BE READILY OPERABLE.** Do not **DO NOT** obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc.

Overheating will cause damage and shorten the life of the equipment. **DO NOT** allow electrical equipment to be exposed to dripping or splashing or objects filled with liquids, such as vases, to be placed on the equipment. Air Circulation Leave more than 10cm clearance around the television to allow adequate ventilation. This will prevent overheating and possible damage to the television. Dusty places should also be avoided.

Heat Damage Damage may occur if the television is left in direct sunlight or near a heater. Avoid places subject to extremely high temperatures or humidity. Place in a location where the temperature remains between 5°C (41°F) min. and 35°C (94°F) max. **DO NOT** place hot objects or naked flame sources, such as lighted candles or nightlights on, or close to equipment.

High temperatures can melt plastic and lead to fires. **DO NOT** use makeshift stands and **NEVER** fix legs with wood screws. To ensure complete safety, always fit the manufacturers' approved stand, bracket or legs with the fixings provided according to the instructions. **DO NOT** leave equipment switched on when it is unattended, unless it is specifically stated that it is designed for unattended operation or has a standby mode. Switch off by withdrawing the plug, make sure your family know how to do this. Special arrangements may need to be made for people with disabilities. **DO NOT** continue to operate the equipment if you are in any doubt about it working normally, or it is damaged in any way switch off, withdraw the mains plug and consult your dealer. **WARNING** excessive sound pressure from earphones or headphones can cause hearing loss. **ABOVE ALL NEVER** let anyone, especially children, push or hit the screen, push anything into holes, slots or any other openings in the case. **NEVER** guess or take chances with electrical equipment of any kind it is better to be safe than sorry.

Mains Supply The mains supply required for this equipment is 220/240v AC 50/60Hz. Never connect to a DC supply or any other power source. **DO** ensure that the television is not standing on the mains lead. Use only the supplied lead. **DO NOT** cut off the mains plug from this equipment, this incorporates a special Radio Interference Filter, the removal of which will impair its performance. **IF IN DOUBT PLEASE CONSULT A COMPETENT ELECTRICIAN.** **Do DO** read the operating instructions before you attempt to use the equipment. **DO** ensure that all electrical connections (including the mains plug, extension leads and inter-connections between pieces of equipment) are properly made and in accordance with the manufacturers' instructions. Switch off and withdraw the mains plug before making or changing connections. **DO** consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

DO be careful with glass panels or doors on equipment. 4 **INSTALLING YOUR TV** English Installation and important information Where to install Locate the television away from direct sunlight and strong lights, soft, indirect lighting is recommended for comfortable viewing. Use curtains or blinds to prevent direct sunlight falling on the screen. Place the TV on a stable, level surface that can support the weight of the TV.



[You're reading an excerpt. Click here to read official TOSHIBA](#)

[32AV625D user guide](#)

<http://yourpdfguides.com/dref/2367326>

8 CONNECTING YOUR TV English Connecting a computer With either an RGB/PC or an HDMI connection, you can watch your computer's display on the television and hear the sound from the television's speakers. · When PC input mode is selected some of the television's features will be unavailable e.g. Manual Settings in the SETUP menu, Colour, Tint, Sharpness and Black/White Level in the PICTURE menu. · If connecting a certain PC model with a unique PC signal, the PC signal may not be detected correctly.

To connect a PC to the RGB/PC terminal When connecting a PC to the RGB/PC terminal on the television, use an analogue RGB (15-pin) computer cable and a PC audio cable for the PC/HDMI1 (AUDIO) socket. Select PC from the PC/HDMI 1 Audio options in the AV Connection menu located in the SETUP menu. the back of your television To connect a PC to the HDMI terminal When connecting a PC to the HDMI terminal on the television, use an HDMI-to-DVI adapter cable and an analogue audio cable. If connecting a PC with an HDMI terminal, use an HDMI cable (type A connector). A separate analogue cable is not necessary (see page 8). the back of your television Mini D-sub 15 pin connector Computer Audio cable for PC to television connection (not supplied)

Computer RGB PC cable (not supplied) HDMI-to-DVI adapter cable Audio cable for PC to television connection (not supplied) Conversion adaptor if required (not supplied) For acceptable PC and video signal formats, see page 49. To use a PC, set the monitor output resolution on the PC before connecting it to the television. For acceptable PC signal formats, see page 48. To display the optimum picture, use the PC setting feature (see page 38). NOTE: · The PC audio input terminal on the television is shared with the HDMI 1 analogue audio input terminal (see page 39).

· Some PC models cannot be connected to this television. · An adapter is not needed for computers with a compatible mini D-sub 15-pin terminal. · Depending on the DVD's title and the specifications of the PC on which you are playing the DVD-Video, some scenes may be skipped or you may not be able to pause during multiangle scenes. · A band may appear at the edges of the screen or parts of the picture may be obscured. This is due to scaling of the picture by the set, it is not a malfunction. NOTE: · The edges of the images may be hidden. · If connecting a certain PC model with a unique PC signal, the PC signal may not be detected correctly. 9 CONNECTING YOUR TV English Controls and input connections A wide variety of external equipment can be connected to the input sockets on the side of the television. Whilst all the necessary adjustments and controls for the television are made using the remote control, the buttons on the television may be used for some functions. Standby Illustration represents 32RV635D.

COMMON INTERFACE The Common Interface is for a Conditional Access Module (CAM). Contact a service provider. POWER switch USB port To access photo files HDMI 4 INPUT (Not available on all models.) Input 3 (side) will take priority over EXT 3 (back) if both connections are used at the same time.

ORANGE LED - Programme timer set (digital only) RED LED Programme timer Active (digital only) GREEN LED On Timer set RED LED Standby GREEN LED Power on INPUT 3 (EXT 3) Switching on If the RED LED is unlit, check that the mains plug is connected to the power supply and press the ! (POWER) button on the left side of the television to switch the television on.

If the picture does not appear, press 1 on the remote control, it may take a few moments. The GREEN LED will be lit. To put the television into Standby, press 1 on the remote control. To view the television, press 1 again. The picture may take a few seconds to appear.

Using the controls and connections To alter the volume press 2 +. To alter the programme position press b p B. Press MENU and I, i, U or u to control the sound and picture options. Press MENU to finish. An S-video cable provides better picture performance than a composite video cable. If you connect an S-video cable to EXT 3, be sure to disconnect the standard (composite) video cable or the picture performance will be unacceptable. To select an external input, press o until the appropriate input source is selected as described on page 39. Please always refer to the owner's manual of the equipment to be connected for full details. NOTE: Interactive video games that involve shooting a "gun" type of joystick at an on-screen target may not work with this TV. Using the remote control Press MENU on the remote control to see the menus.

The menu appears as a list of five topics. As each symbol is selected by pressing C or c on the navigation ring on the remote control, its respective options will appear below. NOTE: The same menu is displayed in DTV (Digital TV) and ATV (Analogue TV) modes; however, some items are greyed out in each case. To use the options, press B and b on the remote control to move up and down through them and Q, and then, press C or c to select the required choice. Follow the on-screen instructions. The functions of each menu are described in detail throughout the manual. 10 SETTING UP YOUR TV English Startup Application

Before switching on the television, put your decoder and media recorder, if applicable, to Standby. To set up the television use the buttons on the remote control as detailed on page 6. h Press b or B to highlight Start Scan, then press Q. Auto Tuning Tuning Mode Start Scan DTV and ATV Quick Setup a NOTE: If Cable is selected in step 6, additional setting options appear in the Auto Tuning screen.

See "Ant/ Cable In" section. The television will start to search for available DTV and/or ATV channels. The progress bar will indicate the scan status. You must allow the television to complete the search. English Germany English English English Press the 1 button.

The Quick Setup screen will appear. This screen will appear the first time that the television is switched on and each time Reset TV is selected. Quick Setup Menu Language Country Primary Subtitle Language Secondary Subtitle Language Primary Audio Language Secondary Audio Language Auto Tuning Progress DTV Tune ATV Tune 3% Waiting...

Channel: C7 Found 2 b c d Highlight Menu Language and press C or c to select the menu language. Press b to highlight Country and C or c to select. The television will now tune the stations for your country. Press Q, the Location screen will appear. Location To use the TV for displaying in a store showroom, please select [Store]. [Home] mode is recommended for normal use. Store When the search is complete the television will automatically select position one. The Auto Tuning screen will display the total number of services found. i j Press C or c to view the DTV (digital channel) or ATV (analogue channel) lists.



[You're reading an excerpt. Click here to read official TOSHIBA](http://yourpdfguides.com/dref/2367326)

[32AV625D user guide](http://yourpdfguides.com/dref/2367326)

<http://yourpdfguides.com/dref/2367326>

Use **b** or **B** to move through the list to select a channel then press **Q** to view.

In **ATV** mode some areas may receive duplicate stations. There may not be a clear picture or the signal may be weak, so the station order can be changed using **ATV Manual Tuning**. **REMEMBER:** Press **ATV/DTV** at any time to select between **ATV** and **DTV** (**DTV TV/DTV RADIO/DTV TEXT** if available) modes. **NOTE:** The time will be set automatically by transmission but can be advanced or decreased by using **Local Time Setting** in the **DTV Settings** screen. **e** Press **C** or **c** to select **Store** or **Home**. For normal home use, select **Home**. If the **Home** option is selected the **AutoView** option will be activated, allowing the TV to automatically adjust the picture setting based on the user's individual viewing environment. In most cases this will result in the TV operating with lower energy consumption. **f** Press **Q**. If the **Ant/Cable In** screen appears, press **C** or **c** to select **Antenna** or **Cable**.

Ant/Cable In Antenna PLEASE NOTE The **Reset TV** menu can also be accessed at any time from the **SETUP** menu. **g** Press **Q**, the **Auto Tuning start up** screen will appear with the option to select between **DTV** and **ATV**, **DTV** or **ATV** if available. Use **C** or **c** to select the appropriate mode. **11 SETTING UP YOUR TV English Ant/Cable In** (if available) From this menu, you can set the **RF input configuration** to **cable**. **DTV End Frequency:** This sets the frequency at which the scan will end.

* Valid entry range for frequency items is 113.000-858.00 for **C-Book/Other** and 114.000-858.00 for **Nordig-C**.

If numbers outside of this range are entered, the values will automatically be set to the min. or max. valid value as appropriate. **a b** Press **MENU**, and select **SETUP** menu. Use **b** to highlight **Ant/Cable In** and use **C** or **c** to select **Antenna** or **Cable**. **NOTE:** When you attempt to change the **Ant/Cable In** setting, a warning message will appear followed by **PIN** entry (if **PIN** has been set) and prompt for **Auto Tuning**. **DTV Modulation:** You can choose from five **QAM** modulation settings. **DTV Symbol Rate:** This is the baud rate (**KS/s**) of the scan. * Valid entry range for **Symbol Rate** is 4000-7200. If a number outside of this range is entered, value will be automatically set to the min.

or max. valid value as appropriate. **c** When **Ant/Cable In** is set to **Cable**, the following setting options will be provided in the **Auto Tuning** screen. Press **B** or **b** to select an item, then press **C** or **c** to select your desired option. **Auto Tuning Tuning Mode Start Scan DTV Scan Type Start Frequency End Frequency Modulation Symbol Rate Network ID Quick Scan Auto Auto Auto Auto DTV and ATV DTV Network ID:** This is the **Network ID** to be utilized for the scan. This item is greyed out when **DTV Scan Type** is set to "**Full Scan**". * Valid entry range for **Network ID** is 1-65535. If a number outside of this range is entered, value will be automatically set to the min. or max. valid value as appropriate.

With the exception of **DTV Scan Type** and **DTV Modulation** items, all of the following items will have 2 operating modes. The first is **Auto** where the values for each item are preset by the system. The second is an **Input** mode where you will be able to enter a single value in place of the pre-set value. If no channel is currently tuned and the **Input** state is chosen, a system default value will be shown. However, if a channel is currently tuned when the item is accessed, the value of the current channel will be displayed.

DTV Scan Type: This item determines whether a **Quick Scan** or a **Full Scan** will be executed. The **Quick Scan** is a simplified version of the **Full Scan** that is designed to complete in less time. **DTV Start Frequency:** This sets the frequency from which the scan will begin. **12 SETTING UP YOUR TV English Auto Tuning NOTE:** As new services are broadcast it will be necessary to retune the television in order to view them. **Auto Tuning** will completely re-tune the television and can be used to up date the channel list.

It is recommended that **Auto Tuning** is run periodically to ensure that all new services are added. All current channels and settings, i.e. favourites and locked channels, will be lost. **ATV Manual Tuning Tuning** The television can be tuned-in manually using **ATV Manual Tuning**. For example: if the television cannot be connected to a media recorder/decoder with a **SCART** lead or when you want to tune-in a station on another System. Use **C** and **c** to move across the screen and select any of the **ATV Manual Tuning** options. Then use **B** or **b** to adjust the settings. **ATV Manual Tuning System:** **1 a** Press **MENU** and use **C** or **c** to select **SETUP** menu. Use **b** to highlight **Auto Tuning**.

Press **Q**. **SETUP Menu Language Country Ant/Cable In Auto Tuning ATV Manual Tuning DTV Manual Tuning DTV Settings AV Connection English Germany Antenna 1 I A C 2 0 VCR 1 2 3 4 5 6 7 8 1 9 Position:** The number to be pressed on the remote control to tune the channel. **System:** Specific to certain areas. **Colour System:** Factory set to **Auto**, should only be changed if problems are experienced, i.e. **NTSC** input from external source. **Skip:** 8 means nothing has been saved or the facility to skip the channel is **ON**. See page 15. **Signal Class:** The channel classification. **Channel:** The channel classification and the channel number on which a station is being broadcast.

Search: Search up and down for a signal. **Manual Fine Tuning:** Only used if interference/weak signal is experienced. See page 43. **Station:** Station identification. Use the **B** or **b** and **C** or **c** buttons to enter up to seven characters.

b A screen will appear warning that previous programmes and settings will be deleted. **Auto Tuning Previous settings will be lost!** Press **EXIT** for no change.

Tuning Mode DTV and ATV 2 3 4 Start Scan 5 6 Use **C** or **c** to select **DTV** and **ATV**, **DTV** or **ATV**, if available, then highlight **Start Scan** and press **Q** to continue with the **Auto Tuning**. **NOTE:** If you have selected "**Others**" for the **Country** field in the **SETUP** menu, and select the tuning mode other than "**DTV**", choose the optimum **ATV** broadcasting system (**B/G**, **I**, **D/K** or **L**). The television will start to search for all available **DTV** and/or **ATV** services.

You must allow the television to complete the search. When the search is complete the **Auto Tuning** screen will display the services found. **7 8 9** To allocate a position on the television for a decoder and media recorder: turn the decoder on, insert a pre-recorded film in the media recorder and press **PLAY**, then manually tune. **c** Use **b** or **B** to move through the list to select a channel then press **Q** to view. **13 SETTING UP YOUR TV English a** Press **MENU** and using **C** or **c** select the **SETUP** menu. With **b** highlight **ATV Manual Tuning** and press **Q** to select. **g h** Each signal will show on the television, if it is not your media recorder, press **B** or **b** again to restart the search. When your media recorder signal is found, press **c** to move along to **Station**. With **B**, **b**, **C** and **c** put in the required characters, **e**.



You're reading an excerpt. Click here to read official TOSHIBA

32AV625D user guide

<http://yourpdfguides.com/dref/2367326>

VCR. ATV Manual Tuning Station: VCR 1 1 A C 2 0 VCR SETUP Menu Language Country Ant/Cable In Auto Tuning ATV Manual Tuning DTV Manual Tuning DTV Settings AV Connection English Germany Antenna i j k l m Press Q to save. Repeat for each position you want to tune or, press MENU to return to the list of channels and select the next number to tune. Press EXIT when you have finished. To name external equipment, e.g. DVD on EXT 2, press o to select o2, then select Manual Settings from the SETUP menu. Press c to select Label then using B, b, C and c put in the required characters. Manual Settings b Use B or b to highlight the position required e.g.

we suggest Pos. 0 for a media recorder. ATV Manual Tuning Pos. Channel 1 C2 2 3 4 5 6 7 8 Station S10 C7 S40 C22 C25 C28 C30 Different Channel numbers may be displayed. Label: DVD EXT 2 A DVD c d Press Q to select.

If the channel is set to skip, Skip must be removed before storing. PLEASE NOTE Press c to select System and use B or b to change if required. ATV Manual Tuning System: 1 1 A C 2 0 This television has direct channel entry if the channel numbers are known. Select the ATV Manual Tuning screen in Step 3. Enter the Position number, the System, then C for standard (terrestrial) channels or S for cable channels and the Channel number.

Press Q to save. e f Then press c to select Search. Press B or b to begin the search. The search symbol will flash. ATV Manual Tuning Search: 1 1 A C 2 0 14 SETTING UP YOUR TV English Skip To prevent certain channels from being viewed, positions can be skipped. The remote control must be removed as the channels will still be available using the number buttons. Channels can then be watched as normal using the controls on the television, but the television will not show the skipped channel positions. Sorting positions Channels may be moved and saved to the position of your choice. a b Select ATV Manual Tuning from the SETUP menu. With the list of channels now showing use B or b to highlight the channel you want to move and press c.

The selected channel will be moved to the right of the screen. ATV Manual Tuning Pos. Channel 2 3 4 a b Select ATV Manual Tuning from the SETUP menu. Use B or b to highlight the position to be skipped and press Q to select. ATV Manual Tuning Pos. Channel 1 C2 2 3 4 5 6 7 8 Station Station S10 C7 S40 C22 C25 C28 C30 ABC1 ABC1 S10 C7 C40 C22 C2 C25 C28 C30 ABC1 ABC1 5 1 6 7 8 c d Press c to select Skip. Use B or b to turn Skip on. Press Q. c d Use B or b to move through the list to your preferred position. As you do so the other channels will move to make room.

Press C to save your move. Repeat as necessary, then press EXIT. 8 on the screen indicates a skipped position. ATV Manual Tuning Skip: On 1 1 A C 2 0 e Press MENU and repeat from Step 2 or press EXIT. Each position has to be individually selected.

To turn Skip off, repeat the procedure for each position. Skipped positions cannot be selected by PU and Pu or by the controls on the television, but can still be accessed by the number buttons on the remote control. 15 SETTING UP YOUR TV English DTV Manual Tuning NOTE: This feature varies depending on the Ant/Cable In setting. DTV Settings Channels The channel order may be changed to suit your personal preference. Manual Tuning This feature is available for service engineers or can be used for direct channel entry if the multiplex channel is known.

a b Select DTV Settings from the SETUP menu and press Q. Select Channels and press Q. DTV Settings Channels Channel Options Subtitle and Audio PIN Setting Parental Control Local Time Setting Auto Channel Update DVB Character Set 11:51 Off Standard a Select DTV Manual Tuning from the SETUP menu and press Q. DTV Manual Tuning Signal Strength Quality WEAK GOOD AVERAGE 85% 13 STRONG 76% Channel Start Scan b c Enter the multiplex number using the number buttons or use C or c to adjust the number up or down. Highlight Start Scan, then press Q. The television will automatically search for that multiplex. DTV Manual Tuning 0 New Channels - Total 6 New Pos. Name ABC ONE 1 2 7 40 51 c With the list of channels showing use b or B to highlight the channel you want to move and press c. Channels Pos. 1 2 Name TV ABC ONE ABC TWO ABC THREE CAB Channel ABC NEWS 24 ABCi Type 7 30 40 51 ABC TWO ABC THREE ABC NEWS 24 ABCi When the multiplex is found any channels that are not currently in the channel list will be added and the channel information at the top of the screen will be updated.

d e Use b or B to move through the list to your preferred position. As you do so the other channels will move to make room. Press C to save your move. Repeat as necessary, then press EXIT. To renumber for the highlighted channel, press the RED button on the remote control. d Repeat as necessary. Press EXIT to finish. Manual Tuning for DVB-C When Ant/Cable In is set to Cable, DTV Manual Tuning items are as follows: Frequency input a specific frequency to be scanned Modulation choose from one of five QAM modulation options Symbol Rate input a specific baud rate (KS/s) to be used for the manual scan 16 SETTING UP YOUR TV English Edit channel number using number buttons and press Q. Channels Pos. 1 2 7 30 40 5-Name Location setting You can select either Home or Store mode.

Home is recommended for normal home use. Select Store when using a television for displaying in a shop, etc. TV ABC ONE ABC TWO ABC THREE CAB Channel ABC NEWS 24 ABCi a b Select Location from the SETUP menu. Press C or c to select Home or Store. Auto Channel Update If the Auto Channel Update is set to On, when the TV is in standby mode, Digital Tuning is automatically executed and any new channels are saved.

a b Select DTV Settings from the SETUP menu and press Q. Press b to select Auto Channel Update and use C or c to select On. DVB Character Set This feature allows you to manually set the character set (Standard = Table 0 or West = Table 5) to be used for DVBC or DVB-T channels. a b Select DTV Settings from the SETUP menu and press Q. Press b to select DVB Character Set and use C or c to select Standard or West.

Analogue switch-off This is a digital television which is integrated to allow the use of both digital and analogue services. However, during the lifetime of this set it is very likely that analogue services will be switched off to allow for more new digital services. This 'switch-off' will happen in a number of phases, which will be advertised in your area well in advance. It is recommended that at each phase the television is re-tuned to ensure that existing and new digital services can be viewed without disruption. 17 CONTROLS AND FEATURES English General controls Selecting positions To select a position, use the numbered buttons on the remote control. Positions can also be selected using PU and Pu.



[You're reading an excerpt. Click here to read official TOSHIBA](http://yourpdfguides.com/dref/2367326)

[32AV625D user guide](http://yourpdfguides.com/dref/2367326)

<http://yourpdfguides.com/dref/2367326>

To display on-screen information i.e. position, input mode or stereo/mono signal, press . Press again to cancel.

Quick Menu Quick Menu helps you access some options quickly, such as Picture Mode, Picture Size, More Information, Sleep Timer etc. Press QUICK to display the Quick Menu and use B or b to select the option. Quick Menu Picture Mode Picture Size Favourites More Information Sleep Timer Media Player Headphone Level System Information 0 00:00 AutoView Super Live The Time Display analogue only The time display facility allows the current (text service) time to be seen on the television screen. Press D whilst watching a normal television broadcast to see a time display from the broadcaster. It will remain on screen for about 5 seconds. NOTE: This display may not be available in some cases. NOTE: Quick Menu items are different depending on the current mode. Mode Quick menu item Description Stereo and Bilingual transmissions For ATV programmes If stereo or dual language broadcasts are transmitted, the word Stereo or Dual will appear on the screen each time positions are changed, disappearing after a few seconds. If the broadcast is not in stereo, the word Mono will appear. Stereo.

.. Press s to select Stereo or Mono. Bilingual..

. Bilingual transmissions are rare. If they are transmitted, the word Dual will be displayed. Choose the required programme number and if the word Dual appears press s to select Dual 1, Dual 2 or Mono. When viewing a TV programme or pictures from the external input Picture Mode Picture Size Channels/Favourites More Information Sleep Timer Media Player Headphone Level System Information See page 23.

See page 21. See page 35. See page 33. See page 31. See page 28. See page 20. See page 37. See page 33. See page 33. See page 29.

See page 29. When using EPG Genre Colour EPG Update/ Cancel EPG Update For DTV programmes For stereo or dual mono broadcasts, press s and use C or c to select settings. Mode Display Pressing c When using Media Player Interval Time Repeat Stereo Dual mono Mono Multichannel Stereo S Left S Right Dual 1 S Dual 2 S Dual For multi-audio track broadcasts, press s repeatedly to change the audio language (see 'Audio language' on page 36). 18

CONTROLS AND FEATURES English Sound controls Volume controls and mute sound Volume Press Y or y to adjust the volume. Sound Mute Press once to turn the sound off and again to cancel. Advanced Sound Settings Stereo Extension, Voice Enhancement, and Dynamic Bass Boost help to create an enhanced surround sound experience with deep, rich bass from stereo sound sources. Your TV's audio will sound fuller, richer, and wider. a b In the SOUND menu, press b to highlight Advanced Sound Settings then press Q. Press b to highlight Stereo Extension then press C or c to select On or Off. Advanced Sound Settings Stereo Extension Voice Enhancement Dynamic Bass Boost Off On High Dual If a programme or film is being broadcast with a soundtrack in more than one language, the DUAL feature allows selection between them.

a b Press MENU and C or c to select SOUND. Use b to highlight Dual then press C or c to choose between Dual 1 or Dual 2. c d Press b to highlight Voice Enhancement then press C or c to select On or Off. Then press b to highlight Dynamic Bass Boost and using C or c select the desired bass expansion level (Off, Low or High). SOUND Dual Bass Treble Balance Advanced Sound Settings Stable Sound Dynamic Range Control Audio Level Offset 0 0 0 Off On Dual 1 Stable Sound® The Stable Sound feature limits high volume levels on the TV speakers preventing the extreme changes in volume that can occur when channels are changed or a programme switches to a commercial.

a Bass, Treble and Balance The sound controls are accessible in digital and analogue modes. Select the SOUND menu. Use b to highlight Stable Sound then press C or c to select On or Off. b a b Select the SOUND menu. Press b to highlight Bass, Treble or Balance and C or c to change the setting.

Dynamic Range Control This feature allows control of audio compression for some digital TV programmes except MPEG-1 and MPEG-2 audio. a b In the SOUND menu, press b to highlight Dynamic Range Control. Press C or c to select On or Off. NOTE: If the Stable Sound and Dynamic Range Control features are both set to On, each effect may not be noticeable. 19 **CONTROLS AND FEATURES** English Audio Level Offset It tends to change into loud volume when switching from a DTV 5.1ch to a DTV 2ch, an ATV or an external input. Using the Audio Level Offset feature reduces these volume differences. Audio description Audio description is an additional narrative sound track for visually impaired people to understand and enjoy the story line more fully. If this function is activated by pressing AD button, when the programme has such signal, the word AD will be displayed in the Channel Banner. You can select sound from speakers or headphone as you desire.

a b c d Set the volume level usually used when watching DTV 5.1ch programme. Tune to a channel which is DTV 2ch or ATV, or an external input. In the SOUND menu, press b to highlight Audio Level Offset and press Q. Press b to highlight an option, then use C or c to adjust the volume level. Audio Level Offset DTV 2ch ATV External Input -5 0 0 a b From the SOUND menu select Audio Description and press Q. Highlight Audio Description then press C or c to select On. Audio Description Audio Description Mixing Level Speaker Out 50 Off On NOTE: - The available item alters depending on the current input source. For example, while watching the DTV 2ch programme, only the DTV 2ch is available and other two items are greyed out in the menu. It helps you to adjust easily responding to each condition.

. When watching the DTV 5.1ch programme, this feature is not available. c d To adjust the level of the audio description sound to the main sound, highlight Mixing Level and use C or c. Highlight Speaker Out then press C or c to select On or Off. On: sound from both the headphone and speakers.

Off: sound from the headphone. See "Headphone Settings" to adjust the headphone sound. Headphone Settings This setting is used to set the sound output while connecting the headphone. Speaker Link On Off Headphone Speakers No sound Sound comes out (2 + is available.) Sound comes out (Headphone level menu is available.)

) Sound comes out (2 + is available.) a b c In the SOUND menu, press b to highlight Headphone Settings then press Q. Press b to highlight Speaker Link and use C or c to select On or Off. If you select Off, then highlight Headphone Level and using C or c to adjust the headphone sound. Headphone Settings Speaker Link Headphone Level 50 Off 20 **CONTROLS AND FEATURES** English Widescreen viewing Depending on the type of broadcast being transmitted, programmes can be viewed in a number of formats.



[You're reading an excerpt. Click here to read official TOSHIBA](http://yourpdfguides.com/dref/2367326)

[32AV625D user guide](http://yourpdfguides.com/dref/2367326)

<http://yourpdfguides.com/dref/2367326>

Use this setting when watching a widescreen DVD, widescreen video tape or a 16:9 broadcast (when available). Due to the range of widescreen formats (16:9, 14:9, 20:9 etc.) black bars may be visible on the top and bottom of the screen. WIDE 4:3 Use this setting to view a true 4:3 broadcast. SUPER LIVE This setting will enlarge a 4:3 image to fit the screen by stretching the image horizontally and vertically, holding better proportions at the centre of the image.

Some distortion may occur. CINEMA When watching 'all sides panel format' films/video tapes, this setting will eliminate or reduce the black bars at all sides of the screen by zooming in and selecting the image without distortion. SUBTITLE When subtitles are included on a letterbox format broadcast, this setting will raise the picture to ensure that all the text is displayed. SUBTITLE 14:9 Use this setting when watching a 14:9 broadcast. 21 CONTROLS AND FEATURES English NATIVE This setting will show the picture without over scan, i.e. WYSIWYG. This option is only available when watching video signal source via HDMI. PC NORMAL This setting will show the picture without over scan, i.e.

WYSIWYG. This option is only available when watching PC signal source via HDMI or PC terminal. PC WIDE This setting will show the picture without over scan and side panel. This option is only available when watching PC signal source via HDMI or PC terminal. Dot by Dot "Dot by Dot" is a non-scaling display.

Depending on the input signal format, the picture is displayed with side panels and/or bars at the top and bottom (i.e. VGA input source). Press QUICK and highlight Picture Size, then press Q to display the list of available widescreen formats. Use B and b to highlight the required format and Q to select. AV format Picture Size Wide Super Live Cinema 4:3 Subtitle 14:9 Native PC format Picture Size PC Normal PC Wide Dot by Dot Using the special functions to change the size of the displayed image (i.e. changing the height/width ratio) for the purposes of public display or commercial gain may infringe on copyright laws. 22 CONTROLS AND FEATURES English Picture controls Most of the picture controls and functions are available in both digital and analogue modes. PLEASE NOTE: features not available will be greyed out. Picture Mode This television offers the choice of personalising the picture style. AutoView, Dynamic, Standard, Movie, Store, Game and PC are preset options and affect many features/settings within the television. NOTE: · Because the AutoView mode automatically adjusts picture settings based on ambient light conditions and input signal content, the Auto Brightness Sensor and Expert Mode menus are greyed out when it is selected. · Store mode is only available when Location is set to Store. · Game mode is available in external input mode (other than aerial input).

When you select Game mode, suitable widescreen formats will be selected. @@@@A confirmation message will appear. @@@@Press Q to return to the previous menu. @@@@Press C or c to adjust the level. @@The Backlight Adjustment Pro window will appear. Press Q again to display the adjustment window. @@@@Use C or c to select Low, Middle, High, Auto or Off. The differences may not always be noticeable (for the best result use lower settings as picture quality can be lost if the setting is too high). a b In the Advanced Picture Settings menu press b to select Active Backlight Control. Press C or c to select On or Off.

25 CONTROLS AND FEATURES English Resolution+ The Resolution+ feature allows you to adjust the levels for your desired picture settings. Expert Mode Red Green Blue Colour Tint On On Off 50 50 a b In the Advanced Picture Settings menu, press b to select Resolution+ and press Q. In the Resolution+ field, select On. Resolution+ Resolution+ Level On 3 c Press b to select Colour or Tint, and then press C or c to adjust. Resetting the advanced picture settings This feature enables to reset the current Advanced Picture Settings to the default values.

c Press b to highlight Level, then press C or c to adjust the level. NOTE: · This feature may not work properly depending on the content. · Adjustable range varies according to the Picture Mode you set. · The noise may appear on the image depending on the device connected to the TV (e.g. a device with specific enhancer function). a b In the Advanced Picture Settings menu press b to select Reset. Press Q. Cinema Mode If there are lines or jagged edges in the film or programme being viewed, selecting Cinema Mode can help correct this by smoothing out the picture. a b In the Advanced Picture Settings menu press b to select Cinema Mode. Press C or c to select On or Off. NOTE: When a DVD with subtitles is being played this mode may not work correctly. Expert Mode This feature enables to turn on/off the colours red, green and blue individually for adjusting each colour more accurately. NOTE: This feature is not available when Picture Mode is set to AutoView. a b In the Advanced Picture Settings menu press b to select Expert Mode and press Q.

Press B or b to select either Red, Green or Blue you want to adjust and press C or c to select On. Select Off on other two colours. 26 CONTROLS AND FEATURES English Control Visualization This feature displays the brightness histogram and control curve of each scene. 4:3 Stretch When 4:3 Stretch is activated the size switching system changes 4:3 programmes into full screen picture. a In the PICTURE menu, press b to select Control Visualization and press Q. The histogram window will appear. Control Visualization Distribution a b In the PREFERENCES menu press b to highlight 4:3 Stretch. Press C or c to select On or Off. Blue Screen Number Of Pixels When Blue Screen is selected the screen will turn blue and the sound will be muted on analogue channels and external input modes when no signal is received. a Brightness In the PREFERENCES menu press b to highlight Blue Screen.

Press C or c to select On or Off. Control Curve b Output Side panel adjustment Input The Side Panel feature lightens or darkens the band on each side of the screen when in 4:3 or 14:9 format. This helps prevent image retention of the band and can also make viewing in bright or dark conditions more comfortable. b Press RETURN to return to the previous menu. a b In the PREFERENCES menu press b to select Side Panel.

Press C or c to adjust (1-3). Automatic Format (Widescreen) When this television receives a true Widescreen picture and Auto format is On, it will automatically be displayed in Widescreen format irrespective of the television's previous setting. Picture still This feature is used to hold a still image on the screen. Press r to hold an image on the screen, press r again to cancel.



[You're reading an excerpt. Click here to read official TOSHIBA 32A V625D user guide](http://yourpdfguides.com/dref/2367326)
<http://yourpdfguides.com/dref/2367326>

a b Press MENU and C or c to select the PREFERENCES menu.

Press b to highlight Auto Format, then C or c to select On or Off. PREFERENCES Teletext Panel Lock Auto Format 4:3 Stretch Blue Screen Side Panel TOSHIBA Illumination Auto Off On Off On 1 On 27 CONTROLS AND FEATURES English Enjoying Photo through USB port The Photo Viewer allows you to playback JPEG files from a USB storage device. Entire files can be viewed individually in a Single View or Slideshow mode, or as thumbnails in a Multi

View overview mode. To open Photo Viewer There are two kinds of methods to open Photo Viewer as follows: Automatically open a b Photo Viewer specifications Data type: JPEG Exif ver2.2 File format: DCF ver1.1 Maximum photo size: 9 MB Maximum number of files: 2000 / Folder Maximum photo resolution: 16384 5 16384 pixels PLEASE NOTE · Gently insert the USB device into the port and do not remove while viewing Media Player. · USB device: USB Mass Storage Class device (MSC) · Connectivity is not guaranteed for all devices. · Connect the USB device to the TV directly. · Do not use a USB hub. · You must obtain any required permission from copyright owners to use copyright content.

Toshiba cannot and does not grant such permission. Please confirm the Auto Start in the Media Player menu is set to On. See below. Gently insert a supported USB storage device to the USB port on the side of the TV. The prompt will appear. NOTE: If inserting and removing the USB connector frequently, the prompt may not appear. c Press C or c to select Yes, then press Q. The Media Player menu will appear. When you select No, nothing happens. USB device was connected to TV.

Do you want to open Media Player? No Yes NOTE: The prompt will disappear after about 6 sec. Open from Menu a b c Press MENU and C or c to select the APPLICATIONS menu. Press b to select Media Player then press Q. Press b or B to select Photo then press Q. Media Player Photo Auto Start On d Press b or B to select active device if the selection window appears then press Q.

The Photo Viewer will open. NOTE: · The viewer will also open even if there are no photo contents at all. · While the Photo Viewer is active, the on-screen menus cannot be displayed. 28 CONTROLS AND FEATURES English Viewing photo files There are three types of view modes. Single View In this view mode, the only contents it locates on the same directory shall be played.

This view allows you to change the photo content manually. When moving from Multi view to the single view, the selected photo content shall be played. Multi View This view allows you to search for photos in the grid. These pictures are displayed by use of thumbnail data in each picture. Photo /Folder/select Folder or File a b c Press c to view the next photo content. Press C to view the previous photo content. Press B to rotate the image 90° clockwise. Press b to rotate the image 90° counterclockwise. Press to display file status information (content number, photo title, shooting date and time, resolution etc.).

The information will be removed by time-out (about 6 sec) or pressing again. 1/54 E05265464.jpg OK Select P Page RETURN Back Slideshow This view allows you to watch the slide show of the photos. In this view mode, the only contents it locates on the same directory shall be played. The initial highlighted position will be on the top left thumbnail in the Multi view. a Press B b C c to move the highlight in one window. If all of the photo contents will not fit in one screen, when pressing C at the top left thumbnail, the screen will move to the previous page. At this time, the highlight shall be the content at the bottom right. Conversely, when pressing c at the bottom right thumbnail, the screen will move to the next page. At this time, the highlight shall be the content at the top left. PU Pu buttons can be used to page up/down the photo list when there are more contents than will fit onto one screen. When the PU Pu buttons pressed, the highlight shall be the content at the top left of Previous/Next list. a b c d To start slideshow, press Q in the single view mode. Press C / c to view the previous/next photo content. Press B or b to rotate the photo.

Press to display file status information. The information will be removed by time-out (about 6 sec) or pressing again. To set Interval time and Repeat setting: a Press QUICK to open the Quick Menu. Quick Menu b c When you select a folder, press Q to move to next layer. Press RETURN to move back to previous layer.

Press Q to move to the single view mode and play the selected photo content. Interval Time Repeat 3sec On b c a Press B or b to select either Interval Time or Repeat. Press C or c to adjust the setting and press Q. To close the Photo Viewer Press EXIT. The television will return to the last viewed channel or external input. 29 CONTROLS AND FEATURES English Other features Panel lock Panel lock disables the buttons on the television. All buttons on the remote control can still be used. The timers Programme Timers digital only This feature will set the television to go to a specific channel at a certain time. It can be used to view a particular programme, or by setting the mode to daily or weekly, can be used to view a series of programmes. a From the PREFERENCES menu select Panel Lock and choose On or Off using C or c.

a Press MENU and C or c to select the APPLICATIONS menu. PREFERENCES Teletext Panel Lock Auto Format 4:3 Stretch Blue Screen Side Panel TOSHIBA Illumination Auto Off On Off On 1 On APPLICATIONS Media Player EPG Programme Timers On Timer Sleep Timer 00:00 When Panel Lock is On, a reminder will appear when the buttons on the television are pressed. If the standby button is pressed the television will switch off and can only be brought out of standby by using the remote control. b c d Press b to select Programme Timers, then press Q. Press b if necessary to select an open timer position, then press Q. The Edit Timer menu will now appear on screen. Press B and b to go through the list adding the details of the programme by using the number buttons and C and c to make selections. Edit Timer Timer Type Channel Date Start Time End Time Repeat Subtitle 0 - 9 Enter Number OK Save Timer TOSHIBA Illumination You can set the illumination mode of the TOSHIBA logo located on the front panel to On or Off. a b In the PREFERENCES menu, press b to select TOSHIBA Illumination. Press C or c to select either On or Off.

10:50 Tue, 26 Apr Reminder 30 CBBC Channel Tue, 26 Apr 2009 10:49 11:49 Once Off RETURN Back e When all the details have been entered press Q to save the timer. The ORANGE/RED programme timer indicator on the front of the television will be lit (see page 45 for details). PLEASE NOTE: When a timed programme is about to start, an information screen will appear offering the option of watching or cancelling the programme.



[You're reading an excerpt. Click here to read official TOSHIBA](http://yourpdfguides.com/dref/2367326)

[32AV625D user guide](http://yourpdfguides.com/dref/2367326)

<http://yourpdfguides.com/dref/2367326>

The menus and other channels will not be available during the timed programme unless the programme timer is cancelled. The programme timer you set is not performed when the TV is turned off with the ! POWER switch.

30 CONTROLS AND FEATURES English On Timer The feature allows you to set the television to turn on automatically in a preset channel at a certain time of day or after a certain length of time. While On Timer is set to On, the green on timer indicator on the front of the television is lit. Sleep Timer The television can be set to turn itself Off after a certain length of time. a a b In the APPLICATIONS menu, press b to select On Timer and press Q. Press B or b to select Enable On Timer, and then press C or c to select On.

On Timer Enable On Timer Enable DTV Clock Power On Time Repeat Input Channel Volume Time until Power On On On 00:00 Once DTV 12 ABC 20 00:00 In the APPLICATIONS menu, press b to select Sleep Timer. Use the number buttons to set the required time. For example, to switch the television off in one and a half hours enter 01:30, or press c/C to increase/decrease in steps of 10 minutes. Press EXIT to finish. To cancel the Sleep Timer, enter zero in the above setting. b c d Press b to select Enable DTV Clock, and then press C or c to select On or Off. Press B or b to go through the list adding the details of the on timer by using the number buttons and C and c to make selections. Power On Time (only for DTV Clock On mode): Set the time you prefer with the number buttons. Repeat (only for DTV Clock On mode): Select the desired on timer operation (Once, Everyday, MonFri, Mon-Sat, Sat-Sun). Input: Select video input source (ATV, DTV, EXT 1, EXT 2, EXT 3, HDMI 1, HDMI 2, HDMI 3, HDMI 4 or PC).

Channel: Set the channel when the television turns on. NOTE: When any external input is selected in the Input field, this feature cannot be selected. Volume: Set the volume when the television turns on. Time until Power On (only for DTV Clock Off mode): Set the time you prefer until the TV turns on from now with the number buttons (maximum of 12 hours and 50 minutes). To cancel the on timer a b In the On Timer menu, select Enable On Timer Press C or c to select Off. 31 CONTROLS AND FEATURES English Digital on-screen information and Programme Guide When viewing in digital mode, the on-screen information and programme guide provide access to programme details for all available channels. On-screen Information icons Icon Service info Description Service type (TV, Radio, TEXT) Skip Audio info Mono Stereo Dual mono Multichannel D D+ Information Dolby Digital Dolby Digital+ For Hard of Hearing Video format (HD, SD) Video Aspect Teletext Subtitle (Single, Multi) Multi-audio track a Press , the information screen will appear giving details of the channel and programme currently being viewed. 4 CANAL+ Audio/Subtitle info Event info HD, SD 16:9, 4:3 10:34 Tue, 26 Apr English 0, 4 18 Now City Hospital SD 16:9 10:00- 10:49 News 15 min left Parental rating Encrypted Recording Reminder Timer info Next Also 10:49- 11:49 b c Press B or b to select the "Now", "Next" or "Also" information guide. To record the following programme, select "Next" and, press Q. The Edit Timer screen will appear.

Edit Timer Tue, 26 Apr 11:00 30 CBBC Channel Seven Wonder4 Timer Type Start Time End Time Repeat Subtitle Edit 50 OK Save 10:50 Tue, 26 Apr Recording 10:49 11:49 Once On RETURN Back d The details of the programme will have been added to the timer. Press Q to save. To indicate that a Recording Timer has been set, a clock icon will be displayed in the Next and Also fields of the information screen. A check mark will appear if the timer is a Reminder Timer. e Press b to select Also.

Details of programmes that have started on other channels will be provided. Use C or c to change the display contents. 32 CONTROLS AND FEATURES English Guide Genre selection/searching From the guide screen, you can use the genre selection and search features. a Select the on-screen guide by pressing GUIDE, the guide screen will appear highlighting details of the channel and programme currently being viewed. This may take a few moments to appear.

Thu6 a b Press the QUICK button from the guide screen. Press b or B to highlight Genre Colour in the Quick Menu, then press Q. Genre Colour Setup Movies 10:50 Tue, 6 Apr TV 6 M6 9 W9 11 NT1 31 PARIS PREMIERE 18:00 18:30 19:00 19:30 20:00 09 LES SIM... 33 LES SIM... 06 TOP MODEL 09 LES SIMPSON 10 SUMMERLAND 53 SUMMERLAND 44 LES SIM..

. 08 Nicky La... 32 Street fight... 59 Dragon B...
24 Dragon B... 48 K 2000 06 MA SORCIE..

39 HAPPY DAYS 39 HAPPY DAYS 34 AB1 800 FlowerGd 6Mbs 801 FlowerGd 4Mbs 802 FlowerGd 2Mbs 804 Codec 4:3 806 ITV1 807 ITV3 808 ITV2 809 ITV4 00 Evamag 27 21 jump street 14 Jerry Springer Show 54 City guys 17 L... Colour Setup RETURN Back c d With the focus on a particular genre, press the desired colour key to assign.

Four colours will be available to set. Press RETURN to go back to the guide screen. Press the YELLOW button to access the Genre Search screen. 10:50 Tue, 6 Apr You can switch the time scale to 1.25 or 2.5 hours by pressing the GREEN button. NOTE: Channels are displayed in group of service type (TV, Radio, Text). Pressing the ATV/DTV button will switch the service type. Genre Search Movies 34 AB1 Hard Rain Wed,27 Apr 0:15- 1:45 Wed,27 Apr 22:15- 23:55 Thu,28 Apr 1:20- 3:00 Fri,29 Apr 1:30- 3:00 Sat,30 Apr 0:45- 2:40 Sat,30 Apr 1:15- 3:00 Sat,30 Apr 15:00- 17:30 Sat,30 Apr 23:20- 1:15 Sun,1 May 0:40- 2:00 Sun,1 May 0:40- 2:20 b Press C or c for information on other programmes scheduled for the channel selected. To highlight the first programme in the genre grid, press the RED button.

For details of other programmes currently available, press B and b to scroll up and down the channel list. As channels are selected details of the programme currently being broadcast will appear. Press C or c to view information for future programmes. For information on a highlighted programme press . To set the timer for that programme, press the BLUE button to bring up the Programme Timers menu. NOTE: In order for the recording operation to work properly, the media recorder must be set to the same time as the TV. Regarding the process for recording, please refer to the owner's manual of the recording equipment. 31 PARIS PREMIERE Red Corner The Lawnmower Man 11 NT1 9 W9 34 AB1 11 NT1 A Vow to Kill Parenthood Body and Soul 31 PARIS PREMIERE The Nun's Story 9 W9 Red Corner 11 NT1 The Real Blonde 31 PARIS PREMIERE Critters 11 NT1 11 NT1 34 AB c Indiana Jones and the Temple of Doom Sun,1 May 21:10- 23:20 Sun,1 May 23:20- 1:15 The jackal Coup De Ville Mon,1 May 1:10- 3:00 d e f Press C or c to select the genre. Programmes listed will change for the new genre.



[You're reading an excerpt. Click here to read official TOSHIBA](#)

[32AV625D user guide](#)

<http://yourpdfguides.com/dref/2367326>