



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TOSHIBA 32S1655EV. You'll find the answers to all your questions on the TOSHIBA 32S1655EV in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TOSHIBA 32S1655EV
User guide TOSHIBA 32S1655EV
Operating instructions TOSHIBA 32S1655EV
Instructions for use TOSHIBA 32S1655EV
Instruction manual TOSHIBA 32S1655EV



[You're reading an excerpt. Click here to read official TOSHIBA 32S1655EV user guide](http://yourpdfguides.com/dref/5964027)
<http://yourpdfguides.com/dref/5964027>

Manual abstract:

Net Toshiba estimates that the initiative of making the advanced functions available online will save over 100,000 trees per year (6. 5 Million Kg CO2). If you wish to view the advanced functions but do not have access to a computer or the internet then please contact your local owner's manual Helpline number. Contact details are shown at the back of this book. 15 Using the Controls on the TV . 46 3 English Safety Precautions This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety. They are of a general nature, intended to help with all electronic consumer products and some points may not apply to the goods you have just purchased. Air Circulation Leave more than 10cm clearance around the television to allow adequate ventilation. This will prevent overheating and possible damage to the television.

Heat Damage Damage may occur if the television is left in direct sunlight or near a heater. avoid places subject to extremely high temperatures or humidity. Place in a location where the temperature remains between 5°C (41°F) min. and 35°C (94°F) max. Do Not DO NOT obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc.

Overheating will cause damage and shorten the life of the equipment. DO NOT allow electrical equipment to be exposed such as vases, to be placed on the equipment. dO NOT sources , such as lighted candles or nightlights on , or close to equipment. High temperatures can melt WARNING: To prevent the spread of away from this product at all times. dO NOT legs with wood screws.

To ensure complete safety, Mains Supply The mains supply required for this equipment is 220-240v AC 50Hz. Never connect to a DC supply or any other power source. DO ensure that the television is not standing on the mains lead. Use only the supplied lead. DO NOT cut off the mains plug from this equipment, this incorporates a special Radio Interference Filter, the removal of which will impair plug is approved by ASTA or BSI to BS1362. DO NOT leave equipment switched on when it is designed for unattended operation or has a standby mode. Switch off by withdrawing the plug, make sure your family know how to do this. Special arrangements may need to be made for people with disabilities. DO NOT continue to operate the equipment if you are in any doubt about it working normally, or it is damaged in any way – switch off, withdraw the mains plug and consult your dealer. WARNING – excessive sound pressure from earphones or headphones can cause hearing loss.

ABOVE ALL – NEVER let anyone, especially children, push or hit the screen, push anything into holes, slots or any other openings in the case. these actions will damage screen or internal parts. NEVER guess or take chances with electrical equipment of any kind – it is better to be safe than sorry. THE MAINS PLUG IS USED AS THE DISCONNECTING DEVICE AND THEREFORE SHOULD BE READILY OPERABLE. Do DO read the operating instructions before you attempt to use the equipment. DO ensure that all electrical connections (including the mains plug, extension leads and inter-connections between pieces of equipment) are properly made and in accordance with the manufacturers' instructions. Switch off and withdraw the mains plug before making or changing connections. DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment. dO be careful with glass panels on equipment. WARNING: To prevent injury, this apparatus must be securely attached to a solid base in accordance with the installation instructions. 4 English Installation and Important Information Where to install Locate the television away from direct sunlight and strong lights, soft, indirect lighting is recommended for comfortable viewing. Use curtains or blinds to prevent direct sunlight falling on the screen. Place the TV set on a stable, level surface that can support the weight of the TV. The LCD display panels are manufactured using an extremely high level of precision technology, however sometimes some parts of the screen may be missing picture elements or have luminous spots. This is not a sign of a malfunction.

Make sure the television is located in a position it cannot be pushed or hit by objects, as pressure will break or damage the screen. Also, please be certain that small items cannot be inserted into slots or openings in the case. Studies indicate that plastics may weaken and crack over time from the combination effects of chemical agents and mechanical stress (such as weight of TV). Failure to follow these instructions could result in serious injury and/or permanent damaged to TV and TV pedestal. cleaning the screen and cabinet.

Turn off the power, and clean the screen and cabinet with a soft, dry cloth. We recommend that you do not use any proprietary polishes or solvents on the screen or cabinet as this may cause damage. When using a Wall Bracket Please use a wall bracket appropriate for the size and weight of the LCD TV. Two people are required for installation. Unplug and remove any cables and/or other connections from the rear of the TV. Follow the instructions provided with your wall bracket. Before proceeding, make sure the appropriate bracket(s) are attached to the wall and the back of the TV as described in the instructions provided with the wall bracket. 4. Always use the screws supplied or recommended by the wall mount manufacturer. removing the Pedestal Stand: 1.

Ioned surface with the stand hanging over the edge. After the screws are removed, hold the pedestal stand in place, then remove it from the TV by sliding away from the bottom of the TV. NOTE: Extreme care should always be used when removing the pedestal stand to avoid damage to the LCD panel. 32W24** | 32L/40L24** x 4 5 English Interoperability with MHL devices of other manufacturers is not guaranteed. Toshiba does not provide any guarantee, therefore, against operational failure such as that described below when an MHL source is connected to the TV. - No picture or sound - Some of the functions do not work be remote operation from the TV If the MHL does not work properly, also contact the manufacturer of the source device for advice on its use. Do not disconnect the power plug when the TV is active and the MHL device is being connected. Do not disconnect the power plug when the TV is in standby mode and the MHL device is being connected. Please take note EXCLUSION CLAUSE Toshiba shall under no circumstances be liable for loss and/or damage to the product caused by: i) ii) iii) iv) v) vi) any damage or loss caused as a result of the owner's failure and/or neglect to follow the instructions vii) viii) any loss or damage caused directly as a result of misuse or malfunction of the product when used Furthermore, under no circumstances shall Toshiba be liable for any consequential loss and/or damage whether caused during normal operation or misuse of the product.



[You're reading an excerpt. Click here to read official TOSHIBA](#)

[32S1655EV user guide](#)

<http://yourpdfguides.com/dref/5964027>

The digital reception function of this television is only effective in the countries listed in the Country section of the SETUP menu.

Depending on country/area, some of this television's functions may not be displays, video games, on-screen menus, etc. Are left on the television-screen for any length of time they could become conspicuous, it is always advisable to reduce both the brightness and contrast settings. Very long, continuous use of the 4:3 picture on a 16:9 screen may result in some retention of the image at the 4:3 outlines, this is not a defect of the LCD TV and is not covered under the manufacturers warranty. Regular use of other size modes (e. NOTE: Interactive video games that involve shooting a "gun" type of joystick at an on-screen target may not work with this TV.

SYMBOL SYMBOL DEFINITION INSTRUCTIONS: The exclamation point within an equilateral triangle to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance. 12 13 14 15 16 17 18 19 In TV mode: Display on-screen information In Text mode: Access the index page Mute the sound Display the QUICK access menu Exit the menu system Display EPG Go to the previous level of the menu Display the on-screen menu In Text mode: Change the page 20 Colour button: Text control buttons Reveal concealed text Hold a wanted page Enlarge text display size Select a page while viewing a normal picture Inserting batteries and effective range of the remote Remove the back cover to reveal the battery compartment and make sure the batteries are inserted the right way round. Suitable battery types for this remote are AAA, 1.5V. Do not combine a used, old battery with a new one or mix battery types.

Remove exhausted batteries immediately to prevent acid from leaking into the battery compartment. Dispose of them in accordance with instructions on page 58 of this manual. Warning: batteries must not be exposed to excessive heat such as The performance of the remote control will 1 2 3 4 5 6 7 8 9 10 11 Switch between TV ON or Standby Switch between external input sources Still Picture To display the teletext screen TEXT subtitle pages if available Stereo/Bilingual transmissions Number buttons Audio Description Switch between ATV and DTV Change the volume Change the channel or outside an angle of 30 degrees from the centre of the television. If the operating range becomes reduced the batteries may need replacing. 7 English Connecting External Equipment Before connecting any external equipment, turn off all main power switches. If there is no switch remove the mains plug from the wall socket. iLLUSTRATION SHOWS 32L24. *a decoder could be Digital Satellite or any other compatible decoder. *Model will determine power cord position. USB SOCKET HDMI 2 INPUT SOCKET POWER CORD RGB/ PC HDMI 1 INPUT SOCKET SCART 1 (INPUT/TV OUT) 8 English Aerial cables: ----- Connect the aerial to the ANT socket on the rear of the television.

If you use a decoder and/or media recorder, connect through the decoder and/or media recorder to the television. SCART cables: ----- Connect the video recorder IN/OUT or decoder TV socket to the television. Connect the media player SAT socket to the decoder MEDIA REC. socket. Before running Auto Tuning put your decoder and media recorder to Standby. NOTE: Although this television is able to connect to HDMI equipment it is possible that some equipment may not operate correctly. A wide variety of external equipment can be connected to the back of the television, therefore the relevant owner's manuals for all additional equipment must be referred to. If the television automatically switches over to monitor external equipment, return to normal television by pressing the desired channel button. DTV Programme Scrambled with CGMS-A: 00 (Copy Freely) Scrambled with CGMS-A: 01 (Copy No More) Scrambled with CGMS-A: 10 (Copy Once) Scrambled with CGMS-A: 11 (Copy Never) Non-scrambled SCART Analog Output Output via SCART Not output via SCART Not output via SCART Not output via SCART Output via SCART *CGMS-A (Copy Generation Management System-Analog) is a copy protection mechanism for analog television signals. 9 English HDMI CEC Connections The basic functions of connected audio/video equipment can be controlled using the television's remote control if an HDMI CEC compatible device is connected.

iLLUSTRATION SHOWS 32L24. The back of your television AV amplifier HDMI in HDMI out Playback equipment HDMI out Playback equipment HDMI out 10 English Connecting an HDMI or DVI Device to the HDMI Input The HDMI input on your television receives digital audio and uncompressed digital video from an HDMI source device or uncompressed digital video from a DVI (Digital Visual Interface) source device. This input is designed to accept HDCP (High-Bandwidth Digital-Content Protection) programme material in digital form from EIA/CEA-861-D-compliant [1] consumer electronic devices (such as a settop box or DVD player with HDMI or DVI output) put your decoder and media recorder to Standby if they are connected. To set up the television use the buttons on the remote control as detailed on page 7. home or Store.

First Time Using 7 For normal home use, select Home. **Уві́д Українське** Location To use the TV for the display in a store showroom, please select [Store]. This mode consumes more energy. Are you sure you want to set to this mode? NOTE: Please make sure the aerial is connected to the TV before tuning. Time Zone This function allows you to manually set the time zone.

NOTE: This function is only available when Country is Spain. The search will begin for all available stations. The slide bar will move along the line as the search progresses. You must allow the television to complete the search. When the search is complete the television will automatically select channel 1. This may not be a clear picture or the signal may be weak, so the station order can be changed using ATV/DTV Manual Tuning in the SETUP menu. 16 English Setting the Channels NOTE: When Parental Block is activated, the 4-digit password is needed. Auto Tuning The Auto tuning function will completely retune the television and can be used to update the channel list. NOTE: It is recommended that Auto tuning is run periodically to ensure that all new services are added. NOTE: All the current channels and settings, for example, the locked channels, will be lost.

To enter the Tuner Mode - Cable Switching between tuner modes will change the features available on your television. All the current channels and settings, for example, the locked channels, will be lost. Tuner Mode This may change the features available on your TV. Press to enter the OK Enter RETURN Back Auto tuning, and to enter the submenu. Tuning Mode Start Scan Operator Selection Scan Type Start Frequency (MHz) End Frequency Modulation Symbol Rate Network ID System ATV and DTV OK Manual Tuning There are two TV modes: ATV and DTV that can be tuned-in manually using Manual Tuning.



[You're reading an excerpt. Click here to read official TOSHIBA](http://yourpdfguides.com/dref/5964027)

[32S1655EV user guide](http://yourpdfguides.com/dref/5964027)

<http://yourpdfguides.com/dref/5964027>

Language Country Tuner Mode Auto tuning ATV Manual Tuning DTV Manual Tuning DTV Settings AV connection Picture Position Quick Setup to enter the ATV Manual to enter the SETUP English Germany Antenna OK OK Quick Scan Auto Auto Auto Auto Auto D/K 1/2 Edit RETURN Back Operator Selection Others, Ziggo or UPC. NOTE: Operator Selection can only be adjusted when Country is Netherlands. scan Type , and Full Scan or Quick Scan. NOTE: Channels with a weak signal may be missed by Quick Scan. Operator Selection, Scan Type, Start Frequency , End Frequency, Modulation, Symbol Rate, Network ID or System, and use number key pad on the remote to Auto for tuning.

start Scan and to start tuning. Press NOTE: The information should be given by your cable provider. Network ID is only available for Quick Scan. oK OK OK OK Enter RETURN Back position you want to arrange and then ATV Manual Tuning Position 1 2 3 4 5 6 Channel C69 C69 C69 C69 C69 C69 Station ----- Sort OK Enter RETURN Back your preferred position. As you do so the other stations will move to make room.

ATV Manual Tuning Position 1 DK A C 69 0 - - - - - to enter the DTV Manual to enter the SETUP 1/2 English Germany Antenna OK Select Change OK Save RETURN A B C D E F G H I A B C Position: The number to be pressed on the remote control. System: Colour system: Factory set to Auto, should only be changed if problems are experienced, i. Skip: means nothing has been stored or the facility to skip the channel is On. Signal Class: Channel: The channel number on which a station is being broadcast. searching: Search up and down for a signal.

OK OK OK OK Enter RETURN Back RF Channel and pad on the remote to enter a channel. Language Country Tuner Mode Auto tuning ATV Manual Tuning DTV Manual Tuning DTV Settings AV connection Picture Position Quick Setup Automatic Power Down to enter the DTV Manual to enter the SETUP English Germany Cable OK 1/2 The TV will automatically turn itself off (standby) within 4 hours, if you do not touch the control buttons on the remote control or on the TV control panel. It will also automatically turn off if no input signal is detected after approximately 15 minutes. SETUP 2/2 4h Home OK OK OK OK OK OK Automatic Power Down Location Software Upgrade System Information Reset TV OK Enter RETURN Back Frequency, Modulation or Symbol Rate, and use the information or select Auto for tuning. DTV Manual Tuning Weak Signal Strength Quality Poor Average Strong Edit RETURN Back Reset TV Selecting Reset TV will reset all TV settings to their original factory values. Select OK Enter RETURN Back 20 English DTV Settings Channels The channel order may be changed to suit your personal preference. nOTE: This function is only available in DTV mode. Favorite Press the button on the remote. The desired channel is displayed on the list. channel List Favorite DTV DTV Press 804 Rossia 24 806 TRK 5 kamal Channels Subtitle and Audio Password Parental Local Time Setting Standby Update Control Standby Channel Update Channel Grouping Common Interface OK OK OK OK 22:17 Enable Off On OK Skip OK Enter RETURN Back Channels.

Channels Position 803 804 805 806 807 273 Name Rossia 1 Rossia 24 NTV TRK 5 kamal Bibigon Service Information Radio Three Press the button on the remote. a icon appears. Channels TV Position 803 804 805 806 807 273 Name Rossia 1 Rossia 24 NTV TRK 5 kamal Bibigon Service Information Radio Three TV Re-number Re-number Favorite Skip Lock OK Favorite Skip Lock OK Sort Sort Re-number Press the button on the remote to renumber the highlighted channel. Edit the channel number using the number keys on the remote and press . Channels Position 8 - - - ABC Jazz ABC1 2 ABC1 21 ABC2 22 ABC3 23 ABC4 24 Name Lock Press the button on the remote. 1 In the DTV Settings Password, and press to enter the submenu. DTV Settings Channels Subtitle and Audio Password Parental Local Time Setting Standby Update Control Standby Channel Update Channel Grouping Common Interface OK OK OK OK OK OK Store RETURN Back wish to swap with the one selected in Step 8 and then press . Channels Position 803 804 805 806 807 273 Name Rossia 1 Rossia 24 NTV TRK 5 kamal Bibigon Service Information Radio Three 22:17 Enable Off On OK TV OK Enter RETURN Back Enter a new 4-digit password, and reRETURN OK Store Back Password New Password Confirm Password The name of the two channels are swapped. channels Position 804 805 806 807 273 274 Name Rossia 1 NTV TRK 5 kamal Bibigon Service Information Radio Three CNN CO/B EIT text TV 0-9 Input RETURN Back NOTE: "0000" cannot be used. Re-number Favorite Skip Lock OK Sort Parental This function blocks channels or programmes that you do not want to or that you do not want your children to watch.

NOTE: When Parental Control is activated, you will need to enter the 4-digit password before you enter the DTV Settings submenu under the SETUP menu. After auto tuning, all the channel blocks will be cleared. Subtitle and Audio You can choose the Subtitle Type or Audio Type from Normal or Hearing Impaired. If the Hearing Impaired is selected, it provides subtitle services to deaf and hard of hearing viewers with additional descriptions. Subtitle Language or Audio Language allow of soundtrack language, provided they are currently being broadcast.

1 In the DTV Settings Subtitle And Audio, and press to enter the submenu. 1 In the DTV Settings Parental, and press enter the submenu. NOTE: This function is available for programmes with Age Rating information. Common Interface The Common Interface Slot, situated on the side of the television, enables the insertion of a CAM (Conditional Access Module) and card. These are purchased from a service provider and allow additional subscription broadcasts to be viewed.

For information, see a service provider. 1 Insert the CAM and card into the Common Interface Slot, following the instructions provided with the CAM. a box the CAM has been inserted. In the DTV Settings Common Interface, and press to enter the submenu. Details of the CAM should now be available. nOTE: The software updating of CI Plus CAM may be automatically executed. At this time, any Recording/Reminder programme timer will be cancelled. Standby Channel Update If the Standby Channel Update is set to On, when the TV is in standby mode, Digital Tuning is automatically executed and any new channels are saved. NOTE: Standby Channel Update is only available when Standby Update Control is Enable. DTV Settings Channels Subtitle and Audio Password Parental Local Time Setting Standby Update Control Standby Channel Update Channel Grouping Common Interface OK OK OK OK 22:17 Enable Off On OK Edit RETURN Back When Channel Grouping is On, the channel change by P and P will be within a single service group, press ATV/DTV on the remote control can be still used for change services among ATV, DTV Video, DTV Radio and DTV Text.



[You're reading an excerpt. Click here to read official TOSHIBA 32S1655EV user guide](http://yourpdfguides.com/dref/5964027)
<http://yourpdfguides.com/dref/5964027>

on or Off. Information I Press , and the information screen will appear giving details of the channel and programme currently being viewed. 3 BBC Parliament English 10:18 Sun, 17/10/2012 Icon HD, SD 16:9, 4:3 Description Video format (HD, SD) Video Aspect Teletext Event info Now Next SD 16 : 9 Subtitle (Single, Multi) Multi-audio track 0, 4 - 18 Westminster Hall Prime Minister's Questions AD 3 07:00 – 11:30 11:30 – 12:00 72 Minutes Left Recorded coverage of questions in the House of Commons to Prime Minister Gordon Brown from Wednesday 26 November. The guide screen will appear highlighting details of the channel and programme currently being viewed. This may take a few moments to appear. programmes scheduled for the channel selected. For details of other programmes currently down the channel list. NOTE: In order for the recording operation to work properly, the media recorder must be set to the same time as the TV. Regarding the process for recording, please refer to the owner's manual of the recording equipment. On-Screen Information Icons Icons will appear on the Information screen giving details about the programmes being broadcast.

Details of these icons are listed below: Icon Service info Description Service type (TV, Radio, TEXT) Skip Mono Stereo Dual mono Audio info Dolby D Dolby D+ HE-AAC AD Multichannel Dolby Digital Dolby Digital+ Audio Coding Audio Description Hearing Impaired Audio/ Subtitle info 24 English General Controls The General Functions allow you to select channels and information, adjust sound features, personalise the picture style and select any connected external equipment. Selecting Channels To select a channel use the numbered buttons on the remote control. Channels can also be selected using P and P .

Subtitles If Subtitles are available for your current programme, pressing the SUBTITLE button will toggle Subtitles on or off. Picture Still Stereo and Bilingual Transmissions If stereo or dual language broadcasts are transmitted the word Stereo or Dual will appear on the screen each time channels are changed, disappearing after a few seconds.

If the broadcast is not in stereo the word Mono will appear. To change between languages, press to switch between Dual 1 and Dual 2. This feature is used to hold a still image on the screen. Press to hold an image on the screen, press again to cancel. Input Selection Use the Input Selection feature if the television does not switch over automatically when using an external device.

Quick Access Menu Quick access helps you access some options quickly such as Picture Size, Picture Mode, Sleep Timer, Media Player, System Information, HDMI CEC Control, Speakers and MHL Control. Press the QUICK button to display the Quick access Inputs TV 1 2 3C HDMI1 HDMI2 MEDIA PC Quick access Picture Size Picture Mode Sleep Timer Media Player System information HDMI CEC Control Speakers MHL Control Wide Standard 00:00 OK OK HDMI® displays equipment connected to Input HDMI on the back of the television. It is designed for best performance with TV Speakers NOTE: Quick access items are different depending on the current mode. 25 English Sound Controls Volume Controls and Mute Sound Volume Press or to adjust the volume.

Stable Sound The Stable Sound feature limits high volume levels in order to prevent the extreme changes in volume that can occur when channels are changed or a programme switches to a commercial. Sound Mute Press on the remote once to turn the sound off and again to cancel. Dual a soundtrack in more than one language, the DUAL feature allows selection between them. 1 Press MENU SOUND and press to enter the submenu. Dynamic Range Control This feature allows control of audio compression for some digital TV programmes (MPEG-1 and MPEG-2 audio programmes are not supported). SOUND Dual Bass Treble Balance Stable Sound Dynamic Range Control Advanced Sound Settings Audio Level Offset Digital Audio Output Audio Description Dual1 0 0 0 Off On OK OK OK OK Voice Enhancement Voice Enhancement emphasises the frequency range of the speaker's voice, making it easier to catch what they are saying.

Advanced Sound Settings Voice Enhancement Bass Boost Off Low Edit RETURN Back Bass, Treble and Balance The sound controls are accessible in digital and analogue modes. To enter the Digital Audio to enter the Audio Format, PCM or Auto. Digital Audio Output Audio Format Audio Delay Audio Delay Time (ms) Auto Manual 0 Audio Level Offset Sometimes there can be large changes in volume when switching from a DTV 5. 1ch to a DTV 2ch , an ATV channel , or an external input. Using the Audio Level Offset feature reduces these volume differences. NOTE: is only available when Audio Delay is Manual. Audio Level Offset DTV 2ch ATV External Input 0 0 0 Audio Description Audio Description is an additional narration describing on-screen action, body language, expressions and movements for people with visual disabilities while watching the TV. This function enables you to choose the type of narrations. Audio Description Audio Description Mixing Level On 80 Edit RETURN Back NOTE: The available item changes depending on the current input source. @@This allows you to easily adjust according to each condition.

when watching a DTV 5. 1ch programme, this feature is not available. @@@@ due to the range of widescreen formats (16:9 , 14:9 , 20:9 etc.) black bars may be visible on the top and bottom of the screen. @@@ due to the range of widescreen formats (16:9 , 14:9 , 20:9 etc.

Some distortion may occur. @@@@Native The setting will show the picture without over scan, i. @@@@ "Dot by Dot" is a non-scaling display. @@@@ e. @@@@ NOTE: Features not available will be greyed out.

@@NOTE: Game is not available for the TV input mode. @@@@30 English Black/White Level This function increases the strength of dark areas of the picture, which improves picture Static Gamma The static gamma feature allows you to adjust the levels of black in the picture. The effect depends on the broadcast and is most noticeable on dark colours. Reset This feature resets all picture settings to the factory settings. in the Picture Settings select Reset and press to reset settings. NOTE: If any picture settings have not been changed, Reset is not available. cinema Mode second , whereas movie software such as DVD , etc. , that you enjoy watching on television at home runs at 30 (NTSC) or 25 (PAL) frames a second. To convert this signal to reproduce a smooth motion and picture quality, select the Cinema Mode. Active Backlight Control When the Active Backlight Control feature is activated, High mode will control the backlighting levels depending on various scenes such as picture motion, bright scene or dark scene.

Low mode will control the backlighting level on dark scene. Colour Temperature Colour Temperature increases the 'warmth' or "coolness" of a picture by increasing the red or blue tint. 1 In the Picture Settings Colour Temperature and Colour Temperature Medium, Warm or Cool to suit your preference.



[You're reading an excerpt. Click here to read official TOSHIBA](#)

[32S1655EV user guide](#)

<http://yourpdfguides.com/dref/5964027>

colour Temperature Colour Temperature Red Level Green Level Blue Level Medium 0 0 0 Red Level , Blue Level or Green Level to adjust the settings as required. 31 English 3D Colour Management When 3D Colour Management is set to On, it allows the Base Colour Adjustment feature to become available. You can adjust the picture colour quality by selecting from 6 base colour adjustments : Red, Green, Blue, Yellow, Magenta or Cyan. NOTE: When a DVD movie with subtitle is playing back, this mode may not work correctly. Digital Noise Reduction enables you to "soften" the screen representation of a weak signal to reduce the noise effect. NOTE: This function is not available for HDMI input. MPEG NR – Noise Reduction When watching a DVD, the compression may cause some words or picture elements to become distorted or pixelated.

Using the MPEG NR feature reduces this effect by smoothing out the edges. Base Colour Adjustment The Base Colour Adjustment feature allows the adjustment of individual colours to suit personal preference. This can be useful when using an external source. It only can be adjusted when 3D Colour Management is set to On. 1 In the PICTURE to select Base Colour Adjustment and press to enter the submenu.

NOTE: In the PC Input mode, this function is not available. 32 English Enjoy Photos through USB Port Image Photo Base-line Resolution 15360x8704 (1920x8 x 1088x8) 1024x768 9600x6400 1200x800 9600x6400 JPEG Progressive non-interface PNG interface BMP View Photo Files 1 Insert a USB storage device and press on the remote. mEDIA and press . You wish to view and press to enter. Photo Music Movie Move OK Select EXIT Exit 33 English Press MENU to change the settings when viewing a photo.

Set Interval Time 1 Press MENU to change the settings when viewing a photo. And press to select the desired interval time (3/5/10/15/30/60/90 Sec). off On 15 sec 788 X 1157 00001 / 00004 0000-1. Jpg --- /- /- -- :-Previous Using the Play List 1 Move OK Press MENU to change the settings when viewing a photo. Press RETURN on the remote to collapse the list. Jpg --- /- /- -- :-Play List 1/3 P Page Move OK Select RETURN Back Using Slide Show This view allows you to watch a slide show of the photos. jpg Off On 15 sec 788 X 1157 00001 / 00004 0000-1. 1 Press MENU to change the settings when viewing a photo. and press to turn On or Off. NOTE: If Repeat is On, slide show starts photo Background Music Set the background music when viewing photo.

1 Press MENU to change the settings when viewing a photo. and press . Off On Repeat Settings for Slideshow 1 Press MENU to change the settings when viewing a photo. Photo Info Info number, photo title, shooting date and time, resolution etc.). 1 Press MENU to change the settings when viewing a photo. Press RETURN on the remote to collapse the list. Wish to play and press to enter. Press EXIT on the remote to collapse the list. Move OK Select RETURN Back / : Play or pause the selected music : Rewind the selected music : Fast forward the selected music : Go to the previous music : Go to the next music : Stop play : Select the desired repeat interval: - Repeat Off - Repeat One: Repeat the selected music once - Repeat Folder: Repeat all music : Show play list : Music information and press Folder 00:00:02 / 00:02:42 00001 / 0003 001.

MP3 1/1 16 Play List P Page Move OK Select RETURN Back Music Info Info number, music title, Bit Rate, Artist, Sampling, Year, and size). 0 or above is recommended for best media performance. 264: 1080P@50fps Others: 1080P@30fps 40 High Level and Advanced Simple MP4: GMC is not supported 1080P@ 30fps 40 and Advanced Simple may not be played. Press MENU to change the settings when viewing a video. play Inputs TV 1 2 3C HDMI1 HDMI2 MEDIA PC Sta Standard ti Native Folder 00:00:08 / 00:02:28 00001 / 0003 001.

Avi 16 Pause P Page Move OK Select RETURN Back / : Play or pause the selected video Movie and press to enter the submenu. uSB 2. 0 : Fast back the selected video : Fast forward the selected video : Go to the previous video : Go to the next video : Stop play : Select the desired repeat interval: - Repeat Off - Repeat One: Repeat the selected video once - Repeat Folder: Repeat all video : Repeat from A to B - Set A: A-Set Repeat and Start - Set B: B-Set Repeat and repeat from A to B : Show play list : Video information Photo Music Movie Move OK Select EXIT Exit wish to view and press to enter. Avi 1/1 P Page Move OK Select RETURN Back : Slow forward the selected video : Step forward the selected video : Aspect Ratio : Picture Mode : Allows you to input a search time and press and press to play. 39 English Repeat Settings 1 Press MENU to change the settings when viewing a video.

and press to select Off , One or Folder. Video Info Info number, video title, audio track, subtitle, program, size, etc.). 1 Press MENU to change the settings when viewing a video. And press Play Set 1 Press MENU to change the settings when viewing a video. Avi Resolution: AudioTrack: Subtitle: Program: Size: Audio Type: 720 x 576 1/1 -- / 0 -- / 0 9172 KBytes MPG Close Using the Play List 1 Press MENU to change the settings when viewing a video. and press to play the video. Press RETURN on the remote to collapse the list. Aspect Ratio 1 Press MENU to change the settings when viewing a video. Avi 1/1 1 16 Play List Press MENU to change the settings when viewing a video.

1 Press MENU to change the settings when viewing a video. and press to select SF2X , SF4X , SF8X , SF16X or Play. Goto Time The feature allows you to view a selected time during the video. 1 Press MENU to change the settings when viewing a video. and press . Step Forward The feature allows you to view a video one frame at a time. 1 Press MENU to change the settings when viewing a video. and press to play step by step. Use the number key pad on the remote to enter time. Avi 16 0 0 : 0 0 : 0 0 OK 40 Goto Time P Page Move OK Select RETURN Back English HDMI CEC Control This feature uses CEC (Consumer Electronics Control) technology, and allows the control of Toshiba HDMI CEC compatible equipment from the television's remote control.

nOTE: Not all Toshiba products currently support HDMI CEC. Equipment Control The HDMI CEC mode on the television's remote control allows the control of connected HDMI CEC equipment being watched. To control the HDMI CEC select the equipment with HDMI CEC input source selection, then switch the mode on the remote control to HDMI CEC and press any buttons. The available functions are dependent on the equipment connected. Not all the remote control keys may be available.

Please refer to the operation manual for each piece of equipment connected. The HDMI-LINK icon appears automatically after detected with HDMI CEC with the HDMI-LINK icon. Inputs TV 1 2 3C HDMI1 HDMI2 MEDIA PC HDMI1 Disc Player HDMI-LINK 41 English HDMI CEC Menus By activating the Enable HDMI-LINK feature in the HDMI CEC Control menu, individual HDMI-LINK features can then be activated.



[You're reading an excerpt. Click here to read official TOSHIBA](http://yourpdfguides.com/dref/5964027)

[32S1655EV user guide](http://yourpdfguides.com/dref/5964027)

<http://yourpdfguides.com/dref/5964027>

One Touch Play The function of HDMI CEC will automatically power on the television that was in standby mode and switch the television's input source to the port connected with the audio/video equipment by powering-on or playing from the audio/video equipment. NOTE: This feature is dependent on the connected equipment and television setting.

Enable HDMI-LINK When the Enable HDMI-LINK is set to On, it allows the other functions to be enabled. 1 Press MENU PREFERENCES and press to enter the submenu. PICTURE SOUND SETUP APPLICATIONS PREFERENCES 2 System Standby This feature automatically switches the connected equipment into standby when the television goes into standby and conversely for the television to switch into standby when connected equipment goes into standby. it is selected in the HDMI CEC Control menu. NOTE: This feature is dependent on the connected equipment and television setting. control , and press submenu. HDMI CEC Control Teletext Panel Lock Auto Format 4:3 Stretch Blue Screen Side Panel DivX Registration DivX Deregistration HDMI CEC to enter the PREFERENCES OK Auto Off On Off On 1 OK OK Enter RETURN Back System Audio Control Using the Speaker Preference feature allows the television's remote control to adjust the volume or mute the sound of the speakers 3 Enable HDMI-LINK On or Off. HDMI CEC Control Enable HDMI-LINK Auto Power On Auto Standby Amplifier Control Speaker Preference On On On On TV Speakers HDMI CEC equipment are selected in the input source selection and that the Speaker Preference is set to in the HDMI CEC Control menu. NOTE: its input source changed or the volume adjusted, the sound will be output from speakers has been selected. Turn the television off then on again to output the sound from the TV's speakers.

The full function may not work and is dependent Edit RETURN Back 42 English Auto Power On The Auto Power On setting allows the television to be automatically switched On if user pressed Play key on the HDMI CEC device. Auto Standby When the Auto Standby is enabled, switching off the television will automatically switch off all connected HDMI CEC equipment. When is set to On, it allows the Speaker Preference feature to become available. Speaker Preference This feature allows the audio output preference television's remote control adjust or mute the volume of the audio. 1 In the HDMI CEC Control menu, press Speaker Preference when is On. tV Speakers or 2 . NOTE: This function is only available when the TV is connected to audio receivers that support CEC function. 43 English HDMI CEC Playback Device Control This is a new feature that uses CEC technology and allows you to control HDMI CEC compatible devices from the TV remote control via HDMI connection. When there are two or more HDMI CEC devices connected to the television, the device selection to select. menu appears.

Highlight the desired device, and then press Remote Control Pass-Through Control Panel 1 3 4 6 8 NOTE: 2 1 3 GUIDE EXIT 2 MENU RETURN 5 7 9 4 6 8 MENU ROOT CONTENTS TOP DVD 5 7 9 HDMI CEC Control in the Quick access menu, and then press . the Pass-Through Control Panel appears. Some functions are only available when the Pass-Through Control Panel is displayed on the screen. MENU and RETURN functions are unavailable when the Pass-Through Control Panel is on. When opening the Pass-Through Control Panel: 3 4 5 6 7 8 9 MENU RETURN ROOT DVD CONTENTS TOP Skip Reverse. 44 English Using MHL TV Function You can use the following functions by connecting between the TV HDMI 2 port and micro USB port of mobile phones etc. with a MHL cable. Charge with mobile phone from TV Video/Audio output from mobile phone Access mobile content through TV remote controller Supports transfer of HD video resolution up to 1080p MHL functions may not perform properly as some mobile devices may not incorporate the full MHL functionality NOTE: These functions may not be available depending on the connected equipment. 14:21 Connecting an MHL-compatible Device Connect the device to the HDMI 2 port on the TV using an MHL cable (not supplied). GUIDE EXIT HDMI 2 MENU RETURN 2 micro USB MHL cable (not supplied) NOTE: The Pass-Through Control Panel is only available when viewing photo/video or listening to music.

When you connect an MHL-compatible device to the HDMI 2 port on the TV with the MHL cable, charging starts automatically. NOTE: Do not connect an MHL-compatible device to any port other than the HDMI 2 port. Entry MHL Control (Pass-Through Control Panel) When viewing the video or listening to music: 3 Rewind. 46 English Preference Controls On Timer This feature allows you to set the television to turn on automatically to a preset channel at a certain time of day or after a certain length of time. 1 Press MENU APPLICATIONS and press to enter the submenu. 5 6 7 8 Power On Time pad on the remote to enter the time. Channel and number or use the number key pad on the remote to enter the channel number. NOTE: Channel is only available when the Input is ATV or DTV. blank screen will appear if not tuned. Volume and use the number key pad on the remote to enter the volume.

Time Until Power On the number key pad on the remote to enter the time for the TV to turn on automatically. NOTE: Time Until Power On is only available when Enable DTV Clock is Off. On Off 00:00 ONCE ATV 0 30 00:00 Sleep Timer The television can be set to turn itself Off after a certain length of time. 1 Press MENU APPLICATIONS. Sleep Timer 2 (Turn off the TV). Edit RETURN Back 4 NOTE: The settings are only available when Enable On Timer is On. enable DTV Clock On or Off. NOTE: Power On Time and Repeat are only available when Enable DTV Clock is On. 3 should turn off, or use the number key pad on the remote to enter the time. 47 English EPG EPG (Electronic Programme Guide) supports 9 sets of timers.

You can set or cancel a timer for a selected programme within the guide. When the TV is on and the timer activates, a dialogue box is shown informing you that the programme is about to start. When the TV is in standby mode and the timer activates, the TV will wake up with backlight off, speaker mute on, and change to the channel selected. You must set the time correctly before using this function. All set timers are cleared when performing a new channel scan. 1 Press GUIDE on the remote to display the Programme Guide. SIT 5 Unclassified 19:30-20:00 20:00-21:00 21:00-22:00 22:00-22:30 22:30-23:00 23:00-23:30 23:30-00:00 DeeJay Chiama Italia DeeJay Hits The Club DeeJay Tg DeeJay News Beat DeeJay News Beat DeeJay News Beat 4 Press the button on the remote to enter the Timer List menu. programme Timers Channel 1 1 10 11 12 ONE HD ONE HD TEN Digital ELEVEN ONE HD 07:42:58 Fri , 27 Aug Date Fri , 27 Aug Fri , 27 Aug Fri , 27 Aug Fri , 27 Aug Time 19:30-20:00 20:00-21:00 21:00-22:00 22:00-22:30 22:30-23:00 LIVE: Bask etball: NBA Judge Judy Jag AFL Premiership Season 2011 Delete OK Edit RETURN Back 5 programme and press to edit.



[You're reading an excerpt. Click here to read official TOSHIBA 32S1655EV user guide](http://yourpdfguides.com/dref/5964027)
<http://yourpdfguides.com/dref/5964027>

NOTE: Press the button on the remote to delete the timer. Press NOTE: After adjustment, the TV clock may not match the time in the EPG Programme Guide. The EPG Programme Guide time follows the broadcast stream time which can not be adjusted. 48 English Panel Lock Panel Lock disables the buttons on the television. All buttons on the remote control can still be used. 1 Press MENU PREFERENCES and press to enter the submenu. Blue Screen When Blue Screen is selected, the screen will turn blue when no signal is received. PREFERENCES OK Side Panel The Side Panel feature lightens or darkens the band each side of the screen when in 4:3 or 14:9 format. This helps prevent image retention of the band and can also make viewing in bright or dark conditions more comfortable. Edit RETURN Back When Panel Lock is On, a reminder will appear when the buttons on the television are pressed. If the standby button is pressed the television will switch off and can only be brought out of standby by using the remote control. DivX Registration View the registration code that is required to DivX® VOD (Video On Demand) service on the TV.

DivX® VOD is a video delivery service that lets you rent or purchase video content recorded in DivX® that are compatible with the DivX® VOD service, the TV needs to be registered as a DivX® player. in the PREFERENCES select DivX Registration and press . You must register your device to play DivX® protected videos. Registration code: XXXXXXXXXX When this television receives a true Widescreen picture and Auto format is On, it will automatically be displayed in Widescreen format, irrespective of the television's previous setting. 4:3 Stretch When 4:3 Stretch is activated, this function will switch 4:3 format programmes into a full screen picture. Back RETURN Are you sure you wish to deregister? You must register your device to play DivX® protected videos. USB Upgrade and press to start upgrading the USB Upgrade 0 % NOTE: Firmware upgrading is suggested to be done by the professional service personnel. 50 English Text Services and Text Information This television has a multi-page text memory, which takes a few moments to load. Setting the Modes 1 In the PREFERENCES Teletext. PREFERENCES HDMI CEC Control Teletext Panel Lock Auto Format 4:3 Stretch Blue Screen Side Panel DivX Registration DivX Deregistration OK Control Buttons Below is a guide to the functions of the remote control text buttons.

Displays the index/initial page: Press to access the index/initial page. The page displayed is dependant on the broadcaster. Reveals concealed text: To discover the solutions on quiz and joke pages press the button. Holds a wanted page: At times it is convenient to hold a page of text. Press and will appear in the top left of the screen. The page will be held on-screen until the button is pressed again. Enlarges the text display size: Press once to enlarge the top half of the page, press again to enlarge the bottom half of the page. press again to revert to normal size. Selects a page while viewing a normal picture: Enter the page number then press , a normal picture will be displayed. The television will indicate when the page is present by displaying the page number at the top of the screen. To display text service (see the index page of your text service). By pressing displayed as and when they are broadcast. Press again to cancel the display. How to change the page: Auto Off On Off On 1 OK Edit RETURN Back 2 Auto or LIST. Navigating Pages using Auto If Fastext is available, four coloured titles will appear at the base of the screen. To access one of the four given subjects, press the relevant coloured button on the remote control. For further information on your particular text system(s), see the broadcast text index page or, consult your local Toshiba dealer. Navigating Pages using LIST If Fastext is available, four coloured titles with numbers 100, 200, 300 and 400 have been programmed into the television's memory. To view these pages press the relevant coloured buttons. To change these stored pages press the relevant coloured button and enter a new 3 digit number.

This number will change in the top left of the screen and in the coloured highlight. press to store. The bars at the bottom of the is pressed all four page numbers showing at the bottom will be stored and the previous ones will be lost. If is not pressed the selection will be forgotten when text is cancelled. Other pages may be viewed by entering the 3 digit page number – but DO NOT press or these pages will be stored. 51 English PC Settings Most of the picture controls and functions are available. However features not available will be greyed out. In the PC input mode, the Manual Setting is not displayed. First press in order to select the PC input mode. This function may not be available for some signal or if no signal is received.

The optimum points of the clock phase and sampling clock adjustments may be incomprehensible according to the input signals. Horizontal and Vertical Position Connect the PC (as shown in the "Connecting a Computer" section) and ensure that a picture is showing on the television screen. The picture position may now be adjusted to suit personal preference. 2 Clock Phase The Clock phase matches the PC signal with the LCD display. Adjusting this can clear horizontal stripes and picture blur.

NOTE: If any PC settings have not been changed, Reset is not available. Edit RETURN Back NOTE: When a PC is connected using HDMI none of these functions will be available. The screen is disrupted momentarily when adjusting PC setting. This is not a sign of malfunction. @@@@ q A I Interference or a weak signal.

Try a tuning may help: Select the ATV Manual Tuning in the SETUP menu. Highlight the station and press , then tuning. ATV Manual Tuning Position 1 DK A C 69 0 – – – – The colour is factory set to Auto to automatically display the best colour system. When using an external source, if there is little or no colour, improvements may sometimes be achieved. With the external source playing, select Manual setting in the SETUP menu. Q A Q A Check all cable connections and that the volume has not been turned down or that the sound has not been muted. Make sure the Media player or DVD player is connected to the television, then select the correct input by pressing . Good performance of text depends on a strong broadcast signal. If the text is unreadable or garbled, check the aerial, satellite or cable connection. Go to the main index page of the text service and look for the User Guide.

This will explain the basic operation of text in some detail. Select Manual setting from the SETUP menu and set the Colour System to Auto. Manual setting Colour system: Auto EXT 1 A Select Change OK Save RETURN Back Q A Q A Q A Use the universal password 1276, then change to a new number of your choice. Make sure to use cables with the HDMI ® logo (). Some early HDMI equipment may not work properly with the latest HDMI TV products, due to adoption of new standards.



[You're reading an excerpt. Click here to read official TOSHIBA](http://yourpdfguides.com/dref/5964027)

[32S1655EV user guide](http://yourpdfguides.com/dref/5964027)

<http://yourpdfguides.com/dref/5964027>

check the correct input has been chosen: S-VIDEO or AV. After roughly 15 minutes without any input video signal at TV mode, the TV will turn off to reduce power. UHF 21-69 DVB-C Broadcast systems Energy consumption XYZ kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.) (Height dimension includes foot stand) TV with stand 32W 32L 40L Gross weight 32W 32L 40L TV without stand 32W 32L 40L Operating Conditions Supplied accessories 6.

5V) Screw (M4*12 x 4) 56 English License Information DivX® - ® is a digital ® ® device must be registered in MHL, the MHL logo, and Mobile High-Association REACH information information about the presence in our articles of substances included on the candidate list 57 English Cleaning the screen and cabinet... Disposal... Disposal of products disposal of products and batteries and thus help to prevent potential negative consequences for Disposal of batteries and/or accumulators EU DVB is a registered trademark of the DVB Project © TOSHIBA All rights reserved. Reproduction in whole or part without written permission is strictly prohibited. TOSHIBA 23 Davy Road , Plymouth , PL6 8BY , UK 58 © TOSHIBA All rights reserved. Reproduction in whole or part without written permission is strictly prohibited. TOSHIBA 23 Davy Road, Plymouth, PL6 8BY, UK Specification is subject to change without notice.



[You're reading an excerpt. Click here to read official TOSHIBA](#)

[32S1655EV user guide](#)

<http://yourpdfguides.com/dref/5964027>