



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TOSHIBA BDX-3100-KB. You'll find the answers to all your questions on the TOSHIBA BDX-3100-KB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

 
**User manual TOSHIBA BDX-3100-KB**  
**User guide TOSHIBA BDX-3100-KB**  
**Operating instructions TOSHIBA BDX-3100-KB**  
**Instructions for use TOSHIBA BDX-3100-KB**  
**Instruction manual TOSHIBA BDX-3100-KB**



## TOSHIBA



Blu-ray Disc Player



**BDX3100KB**  
**Owner's Manual**



[You're reading an excerpt. Click here to read official TOSHIBA BDX-3100-KB user guide](http://yourpdfguides.com/dref/3873133)  
<http://yourpdfguides.com/dref/3873133>

**Manual abstract:**

*and.important.notice. @@@@3-6 2 Your Product. @@7-9 . Regions.codes....  
. 7 Product.overview. 8 . Remote.  
Control... 9 3 Connections..*

.....

.....

....

....

.....

.....

....

....

.....

.....

....

....

.....

*..... 10-11 Connecting.to.a.TV.*

....

....

.....

.....

....

....

.....

.....

....

....

.....

.....

....

....

*.... 10 .....*

.....

....

....

.....

.....

....

....

.....

.....

....

....

.....

*..... 11 Optional.Connection. Connect.  
USB.device....*

....

.....

.....

....

....

.....

.....  
.....  
.....  
.....

..... 11 Connect.power.. 11 4 Preparation..

... @@ 12 . @@ 12 5 Playback. ... 13-15 . @@ 6 Customizing 16-22 .  
General.Setting. @@ Display.Setting..

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

20-21 . Audio.Setting. ....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.21-22 System.information.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... 22 7 Specification...

23 8 Troubleshooting.....



website (www.

home-entertainment.toshiba.co.uk) or alternatively please contact your retailer where the product was purchased. Disposal of batteries and/or accumulators  
The crossed out wheeled dust bin symbol indicates that batteries and/or accumulators must be collected and disposed of separately from household waste. If  
the battery or accumulator contains more than the specified values of lead (Pb), mercury (Hg), and/or cadmium (Cd) defined in the Battery Directive  
(2006/66/EC), then the chemical symbols for lead (Pb), mercury (Hg) and/or cadmium (Cd) will appear below the crossed out wheeled dust bin symbol. By  
participating in separate collection of batteries, you will help to assure the proper disposal of products and batteries and thus help to prevent potential  
negative consequences for the environment and human health. For more detailed information about the collection and recycling programmes available in  
your country, please visit our website (www.home-entertainment.toshiba.

co.uk) or alternatively please contact your retailer where the product was purchased. General Information . This appliance may be fitted with a  
nonrewireable plug.

.If it is necessary.

to change the fuse in a non-rewireable plug, the fuse.

cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used.

until a replacement is available from

the appliance manufacturer is obtained.

If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and an appropriate plug fitted following the  
wiring instructions below.

The plug removed must be disposed of safely as it

is hazardous if inserted into

a live socket. English Disposal of your old product and batteries IMPORTANT The wires

in this mains lead are colored in accordance with the

following code: BLUE:..NEUTRAL BROWN:..LIVE . As the colors of

the wires in the mains

lead of this unit may

not correspond with the colored markings identifying the terminals in your plug, proceed as follows: . The

wire that is colored blue must be connected to the

terminal in the plug which

is marked with the letter

N or colored black . The wire that is colored

brown must be connected to the terminal which is marked

with the letter L or

colored red. Do not connect

either wire to the earth terminal which is marked by

the letter E or by the safety earth symbol .

or colored green or green-and-yellow. Use

a 5A BSI 362 fuse which

is approved by ASTA or BSI. Always replace the

fuse cover after changing the fuse. Copyright notice This product incorporates copyright

protection technology that is protected

by U.S. patents

and other intellectual property rights... Use of this

copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited

viewing uses only unless otherwise

authorized by Rovi Corporation.

.Reverse engineering or disassembly is prohibited. Disclaimers I..HEALTH/SAFETY-RELATED IMPORTANT.

SAFETY INFORMATION. CONCERNING 3D VIEWING . If you or any viewer

experiences the following symptoms or

any other discomfort from viewing 3D video images, stop viewing and

contact your health care provider: Convulsions.....

...Eye or muscle twitching. Loss of awareness.

.....

.....

...Altered vision. Involuntary movements. ...Disorientation Eye.

Strain. ....

...Nausea/Vomiting.

Dizziness.....

.....

.....Headaches..

Fatigue . Some viewers may experience  
a seizure or blackout when

exposed to certain flashing images or lights contained in certain 3D television pictures or video games.

Anyone who has had a seizure, loss of awareness, or other symptom linked to an epileptic condition, or has a family history of epilepsy, should contact a health care provider before using the 3D function. . If

you feel eye fatigue or

other discomfort from viewing 3D video images, stop viewing and take  
a rest until the condition is eliminated. . Due to

the possible impact on vision development, viewers of 3D video images should be age 6 or  
above. Children and teenagers

may be more susceptible to

health issues associated with viewing in 3D and should be

closely supervised to avoid prolonged viewing without rest...

. Avoid use of the

3D function when under the influence of alcohol. .

Watching the screen while sitting too close for an extended

period of time may cause eye strain... Consult

your display manual to determine

the ideal viewing distance..

. . Viewing in 3D may cause dizziness and/or disorientation.

for some viewers... Therefore, to avoid injury do not place your player or display near open stairwells, balconies, or wires, and do not sit near  
objects that could be broken.

if accidentally hit...

. CAREFULLY READ INSTRUCTIONS PROVIDED.

WITH YOUR DISPLAY AND/OR 3D GLASSES BEFORE 3D VIEWING. .



[You're reading an excerpt. Click here to read official TOSHIBA](#)

[BDX-3100-KB user guide](#)

<http://yourpdfguides.com/dref/3873133>

II. PERFORMANCE-RELATED. P · This product is designed to playback Blu-ray discs that comply with the 3D specifications of Blu-ray Disc Association. It is not compatible with other 3D specifications. · 3D capable display, 3D eyewear and High Speed HDMI

cable (all sold separately) required for playback and viewing 3D content... · If you route your signal through an AV receiver or other video distribution device they must be 3D capable to support

3D English viewing... Viewing HD content and upconverting DVD content may require an HDCP capable input on your display device. · While up-converting DVD video content may result in a picture that appears

to be near HD quality, results may vary depending on content, display and settings.. · 1080p capable display required for viewing content in 1080p.. · 1080p/24fps encoded content and an HD display capable of accepting a 1080p/24Hz signal required for viewing 1080p/24fps content.... · Performance

of interactive and/or network features may vary due to disc design or content, and may also require an always-on broadband internet connection. · Firmware update may

be required for some interactive and/or network features... Some features may require additional bandwidth. · BD-Live™ may require an SD or SDHC card

or USB memory with available storage capacity of at least 1GB (sold separately)... · For Dolby® TrueHD and DTS-HD Master Audio \ Essential™ playback, content encoded in Dolby® TrueHD and DTS-HD Master Audio

l. Essential™ format required. Supported file types: JPEG, MP3, DivX and AVCHD. Some recordable media, cards or files may not be supported. Deep Color feature as specified in HDMI specification requires compatible Deep Color capable

HD display and/or device. Use of HDMI-CEC requires an HDMI-CEC compatible display device.. Depending on the specifications of your display device, some or all HDMI-CEC functions may not work even if your display device is HDMI-CEC

compatible... · Products do not play HD DVD discs.. · Some features subject to delayed availability..

· · Because the Blu-ray format and 3D specifications use new technologies, certain disc, content, connection and other compatibility Connect a USB flash drive. Turns

the power on or restores the unit to the standby mode. Playback/Pause. Stop play. Show information about the current status of this unit. Point the remote control at the IR

sensor. Open or close the disc compartment. Loads a disc into the disc drive. 1 2 3 4 5 6 VIDEO NO a b c d e f Control AC. power cord LAN jack HDMI OUTPUT jack VIDEO OUTPUT jack ANALOG AUDIO OUTPUT jacks COAXIAL jack Function Connects to a standard AC outlet. Use this to connect to

a network with an always-on broadband connection.. It is reserved for future usage of

· BD-Live. Outputs video/audio signals to a connected TV, monitor or AV amplifier. Connect to a TV, monitor or AV amplifier equipped with HDMI input. Output. video signals to a connected TV. Outputs audio signals to a connected TV or AV amplifier. Output digital audio

signals when connecting the coaxial digital cable. Remote Control REMOTE SIGNAL EMITTER · Point remote control to the sensor on the front panel ON / STANDBY · To switch the BD player to ON or standby mode SETUP Enters or exits the system setup menu MC (Media Center) · To OPEN/CLOSE Media Center 2nd AUDIO Switch the secondary audio of secondary video (PIP) to on or off SEARCH · To search a title, chapter, track or playing time OPEN/CLOSE · Open/ Close the disc tray AUDIO · To select the sound stream; press repeatedly to select different audio streams available cable to: · · the wall socket. ....

· The product is ready to be set up for

use. Notes: Before connecting the AC power cord, ensure you have completed all other connections. Risk of product damage! Ensure that the power supply

voltage corresponds to the voltage printed on the back of the unit. The type plate is located on the back of the unit. 1..Connect.the.audio.cable.  
from.the.analogue.AUDIO.OUT.  
jacks.on.this.product.to.  
the.audio.input.jacks.on.the.system. Option 3: Connect to network Connect.this.product.

to.the.network.to.enjoy.BD-Live.bonus.content. 1..  
Connect.the.network.cable.from.  
the.LAN.jack.on.the.  
product.to.the.LAN.jack.on.the.network.system. 11 English 4 Preparation English 1 Always.

follow.the.instructions.in.this.chapter.in.sequence. Note: - Use of controls or adjustments or performance of procedures other than herein may result in  
hazardous radiation exposure or other unsafe operation. Setting up the player Find the correct viewing channel 1.Press.  
1 to.turn.on.this.product.  
2.Turn.on.the.TV.  
and.switch.to.the.correct.video-in.channel.(refer.to.the.

TV.user.manual.on.how.to.select.the.correct.channel) Initial Setting When.  
you.turn.on.this.unit.  
for.the.first.time,you.need.to.follow.these.steps. 1..  
A.welcome.page.will.be.displayed.when.this.product.is.

powered.on. 2..Press.OK.to.enter.language.setting.  
3. Select your desired language, resolution.and.aspect.ratio.  
using./, then.press.OK. 4.  
.Press.SETUP.to.exit.the.Setup.menu. Prepare the remote control 1.Open.

the.battery.compartment. 2.Insert.two.R03.batteries.with.correct.  
polarity.(+/-).as.indicated. 3.

Close.the.battery.compartment. Notes: - If you are not going to use the remote control for a long time, remove the batteries.  
- Do not use old and new or different types of batteries in combination. - Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard  
batteries in fire. · The maximum operable ranges from the unit are as follows. Use the SETUP menu 1.Press. SETUP to. display. the. Setup.

menu.when.the.BD.Player.is.playing.or.no.disc.  
.And.press.SETUP.to.exit.  
the.Setup.menu.Select.menu.display.language.1.Press.  
SETUP [General Setting] menu.is.displayed.2.Select.[Language], then.press.3.Select.[OSD], then.press..

...-The.language.options.may.vary.for.  
different.regions. 4.Press / to select a language, then press OK Note: - If this disc player is connected to a HDMI CEC compliant TV, skip this setting. It  
switches automatically to the same OSD menu language as per your TV setting.  
-Line.of.sight: approx.  
.9.m -Either.side.of.the.centre: approx..

7.m. . within.30° -Above: approx..7.m.  
within.30° -Below: approx..  
7.m.within.30° USB 7m 9m 7m 5 Playback Playback Functions Basic Playback 1..  
Press. .button.on.the.front.panel.or.the.remote.control,your.player.will.turn.on.

The.unit.will.take.around.30.seconds.to.warm.up.  
2. Turn on the TV, and then select the input setting.on.the.TV.  
that.matches.the.connection.method.  
you.used.to.connect.your.player. 3..Press.OPEN/CLOSE.

Z.to.slide.out.the.disc.tray. 4..Place.  
a.disc.on.the.disc.  
tray.with.the.label.facing.up,and.then.press.OPEN/CLOSE.Z.  
to.slide.back.and.close.the.disc.tray.The.disc.

loading.time.depends.on.the.types.of.disc.you.are.loading,and.loading.aBlu-ray.Disc.will.take.longer.  
time. 5..If.the.

disc.does.not.start.playing.  
automatically, please press u.to.start.playback. 6. If a Blu-ray disc or DVD menu displays, use cursor buttons to select PLAY. Then, press OK to confirm. 7.  
To eject the disc, press OPEN/CLOSE.Z. Pause playback 1.

.Press.u.to.pause.playback..The.sound.will.  
be.muted. 2..Press.  
u.to.resume.the.playback.

*Stop playback 1..Press.STOP..button.once.to.go.to.*

*resume. mode, the TV screen will show the resume logo. 2..Press.STOP..twice.to.stop.  
the.playback. completely. 3..  
Press.u.to.resume.playback.  
from.the.point. where.playback.is.stopped.or.from.*



[You're reading an excerpt. Click here to read official TOSHIBA  
BDX-3100-KB user guide  
http://yourpdfguides.com/dref/3873133](http://yourpdfguides.com/dref/3873133)

the.

beginning of the disc after the playback is completely stopped.

Not all Blu-ray Discs support

the resume feature. Fast Forward and Fast Reverse 1.

. Press F.F.M. to fast forward through the

disc. The fast forward speed changes based on how

many times you pressed the

button. The speed will

increase through the following sequence: 2X, 4X, 8X, 16X, 32X 2. Press u to resume.

playback. 3. Press F.R.M. to fast reverse.

through the disc. The

fast reverse speed changes based

on Instant Search and Instant Replay 1. During playback, press and hold M button, you can skip 30 seconds forward. 2. During playback, press and hold mb button, you can instant replay the content from

10 seconds before. Previous and Next During playback, press PREV button, and you can skip back to

the previous chapter or track.

. Each press of this

button will allow you to skip a chapter or track.

till the beginning of the disc. Press of NEXT >

button during playback will allow

you to skip the playback.

to next chapter or track. Slow Forward and Slow Reverse Slow Reverse 1. Press t

during normal playback. The slow reverse speed is 1/16.

in default. 2. To change slow reverse speed, press t repeatedly, and the slow reverse speed will be changed in the following sequence: 1/16, 1/8, 1/4, 1/2,

normal.

3. To exit slow

reverse mode and return to normal playback, press u. Slow Forward 1. Press

=B during normal playback. The slow forward speed is

1/16 in default. 2. To change slow forward speed, press =B.

repeatedly, and the slow forward speed will be changed in the following sequence: 1/16, 1/8, 1/4, 1/2, normal. 3. To exit

slow forward mode and return to normal playback, press u. Step Forward/Step Backward Use this feature.

to help you to enjoy the video frame by frame.

Step Forward 1. Press u during normal playback, then playback

will change to pause state.

2. Press = B repeatedly to advance the picture frame.

by frame. 3. Press u to resume normal

playback. Step Backward 1. Press

u during normal playback, then playback will change to pause

state. 2. Press c repeatedly to reverse the picture frame.

by frame. 3. Press u to resume normal

playback. 1 English how many times you

pressed the button. The

speed will increase through the following sequence: 2X, 4X, 8X, 16X, 32X. 4. Press u

to resume playback. Advanced Playback DISPLAY Press this button and the screen will

display some information about disc, such as: Title number, Chapter number, Track number, Elapsed Time, Mode, Audio, Angle, and Subtitle

languages. Press this

button again to turn off

the information display. During DVD/CD playback, you may edit the chapter and track. REPEAT Press REPEAT repeatedly to

select different repeat modes. DVD: Repeat Chapter, Repeat Title, and All. VCD/PBC off/CD/JPEG/MP3: Repeat Track.

and. All. A-B To play certain

section within the video or

song, press A-B button to set the start-point. Then, press A-B button again to set the endpoint and complete the setting. The selected section

will be played repeatedly. Press A-B button the third

time to cancel this function.

The end point cannot be set until 5 seconds of playback has elapsed from the

start point. **SEARCH** During playback, press **SEARCH** button to edit Title, Chapter, and Time. Press / and **OK** button on the remote control to select Title, Chapter, or Time. Then press the numeric buttons or / and then press **OK**. The playback will skip to the

desired location. For Time Search, press / to select Title or Chapter time search. **SUBTITLE** Press this button repeatedly and the screen will display "X/XX.XXX" or "Off". The "X" indicates the current number

of this language; "XX" indicates the total number of language; "XXX" indicates the language. The number of available languages depends on the disc. **RETURN** Press this button to return to the previous

on-screen menu in setup menu such as Information, Parental Control, Country Code etc.. During MP3/JPEG/VIDEO playback, press return once, it will return back to Media Center.

page. During VCD disc playback and PBC On is selected, press this button to return to PBC Menu. **ANGLE** During playback, press this button to change the angle of the picture.

The screen will display "Angle X/X". The first "X" indicates the current number of angle, and the second "X" indicates total number of angle. Not all BD or DVD

has the multi-angle 1 feature. The screen will take around 5 seconds to change. **TOP MENU** You may press this button at any time, and the BD or DVD video disc

playback will pop up the disc menu. **POP MENU/MENU** During Blu-ray Disc playback, press **POP MENU/MENU** to display the disc title, and the playback will not

be stopped even the menu is on the screen. 1. Press the /// buttons to select an option, then press **OK** to confirm. 2. Press **POP MENU/MENU** to close the menu. During DVD playback, press **POP MENU/MENU** to

open the disc menu. During VCD playback, press **POP MENU/MENU** to switch PBC On/Off. During displaying USB and Data Disc file content in media center, press **POP MENU/MENU** to add the Photo/Music/Video files to the playlist. 1. Press /// buttons to select an option under the Photo/Music/Video files. 2. In the file browser, press to select the file(s) to be added to the playlist. " " will appear beside the selected files. 3. Press **POP MENU/MENU** button, a pop up menu will appear, then press / and

**OK** button to select "Add to Playlist" to add the files to the Playlist. "Select all" and "Clear all" options are also available. Select "Cancel" to exit. the pop up menu. All the selected files will be added to the "Playlist" folder. You can

play or delete the files in the playlist. Press **POP MENU/MENU** to delete the selected files in "Playlist" **SETUP** Press the **SETUP** button, and the screen will display some information about the player, such as: · General Setting · Display

Setting · Audio Setting · System Information **PROGRAM**. During CD/DVD/VCD playback, you can press this button to edit the sequence of the playlist. **BOOKMARK** During

VCD/DVD/DivX disc playback, press the **BOOKMARK** button to add the bookmark; press and hold for a few seconds to display the list of bookmark which you added before on the screen, then you can press the **OK** button

to select the bookmark or **CLEAR** button to delete the bookmark. **AUDIO** Press **AUDIO** button on the remote control to select

the audio streams that set within the Blu-ray or DVD disc. The screen will display: **AUDIO:**  
X./XX.XXX.XXXX.

English "X" - the Current Audio Stream Number "XX" - The total

number of Audio Stream "XXX" - Audio Language "XXXX" - Audio Technology **MC** Press this button to play media files in the USB. **ZOOM 1**. Press **ZOOM** button repeatedly to Zoom in/out playback in the video. Zoom mode...Zoom.2x.

->.Zoom.3x.->.Zoom. 4x.->.Zoom.1/2.->.  
Zoom.1/3.->.Zoom.1/4.

*DIGEST* During playback of JPEG disc, press *DIGEST* to view  
a page of 12 thumbnail images. -.Use. /// .to.

select an image. Press *OK* to view the selected image.  
in fullscreen and subsequent images will be displayed one after another.  
automatically. -.Press *PREV* .  
/.*NEXT* . to view the previous or next thumbnail.

screen. 2nd *AUDIO* Press 2nd *AUDIO* button to open the secondary audio.  
of secondary video (PIP's sub-window video).  
. *OSC* Press *OSC* to open.

On-Screen Control menu during playback. In this menu, you can make some playback-related control. The on-

screen control contains following items: [Title]: The title in current playback/titles.  
in total..Select your  
desired title to playback. [Chapter]:  
The chapter in current playback/ chapters in total..Select your.

desired.



[You're reading an excerpt. Click here to read official TOSHIBA  
BDX-3100-KB user guide  
http://yourpdfguides.com/dref/3873133](http://yourpdfguides.com/dref/3873133)

chapter. to.playback. [Time]:View.the.elapsed/remaining.playback. time.  
of.title/chapter.. Use. / to.  
view:.the.elapsed.playback. time of title, the remaining playback time of title, the elapsed playback time of chapter, and  
the.remaining.playback.time.of.chapter. [Mode]:.Select.playback.mode.

among. shuffle, random, and normal. [Audio]:.The.BD/DVD.disc's.soundtrack. language..Use.  
./ to.view.the.audio.  
available.in.the.disc.and.  
select.your.desired. Audio.type. [Angle]:.The.angle.view.of.

current.playback/ the.angles.in.total..Please.reference. Playback>Angle.to.  
see.more.detailed.info..  
Use. / to.select.your.desired.  
angle.view.. [Subtitle]:.The.Subtitle.in.current.playback..

Use. / to.view.the.subtitles.available.in. the.disc.and.  
select.your.desired.subtitle.type.  
or.turn.it.off..

*Note: In accordance with the different discs, there would be different subtitles. Such as Central Europe Cyrillic Latin I Greek Turkish Hebrew [Subtitle Style]. When. you. play. the. BD. disc. and if it has external subtitle, you will see it in OSC.*

menu. [Bitrate]:Use. / to.select.your.desired.Bitrate. [Still.Off]:.Close.  
the.Still.feature.of.DVD.  
disc.. For some DVD discs, a certain video picture will. be. freeze.  
as. a. still. picture. during. the. process.of.playback.to.

let.user.better.view.the. certain picture. To continue playback, select Still.Off..  
[Instant.Search]:.Instant.skip.30.  
seconds.for. search. [Instant.Replay]:.

*Replay.the.content.from.10. seconds.before. Tips: - The specified operation for each item will vary with disc types. And some items are available only when the disc is supportable. - The DivX® subtitle filename(*

*sub) has to be saved under the same filename as the movie(.avi) in the same folder (e.g. Folder A: abc.avi and abc.sub). Blu-ray Disc Bonus View  
Playing.Secondary.Video.(Picture-in-Picture).  
and.Secondary.Audio.is.for.  
Blu-ray.Disc.only.. Secondary.  
video.can.be.played.from.a.disc. compatible.with.the.*

*Picture-in-Picture.(PIP). function. For the playback method, refer to the instructions.for.the.disc. 1..Turn.  
on.secondary.video.by.pressing.  
the. PIP.button. 2..*

*Press.the.2nd.AUDIO.button.to.select.the. secondary audio, and select an option except Off. The secondary audio is opened, you can hear.*

*the.disc.secondary.video.sound.. In order to hear the secondary audio, the PIP feature.on.the.disc.  
must.be.tuned.on. 3.  
.Press.the.PIP.button.  
again.to.turn.off.the. secondary.video. Primary video This.function.is.*

*not.available.when.the. primary video is played in Search, SlowMotion, or Frame-by-Frame or Fast Forward/ Reverse.mode. To listen to the secondary  
audio, the digital audio.output.must.be.  
set.to."Re-encode".or. "PCM".*

*Otherwise, only the primary.audio.can. be.heard.*

*Note: -Not all the BD discs can support this function. Secondary video with Secondary Audio 1 English 6 Customizing English 1 This. section. describes. the.  
various. setting. option.of.this.*

*BD.player.. If the setup option is grayed out, it means the. setting. cannot. be. changed. at. the.  
current.state. General Setting 1..Press.  
SETUP.button.on.the.remote.  
control.The.Setup.Menu.appears. ... General Setting ..*

*. System Language Playback Security Network Screen Saver Disc Auto Playback CEC Easy Setup Load Default On On On More... More... Move cursor key to  
select menu option then use "OK" key to select SETUP Exit 2. Press to select an option, then press .to.*

*access. 3. Press / to.select.a.  
setup.option.and press .. 4.*

*Select.the.setting.you.wish.to.change and press OK to confirm. - Press to.return.to.*

*the.previous.menu. [System] To.change.the.following.system.option.to.*

personalize.your.BD.player. · [Screen Saver] Turn.  
On.or.Off.the.screen.  
saver.mode. It.helps.to.protect.the.TV.screen. {.

On.}.Set.the.screen.saver.active. after.approximately.  
10.minutes.with.no. operation.  
-.The.BD.player.will.  
switch.to.standby. mode.if.there.is.no.operation.after.

the. screen.saver.is.engaged.for. approximately.20.minutes. {.  
Off.}.Turn.off.  
the.screen.saver. mode..  
· [Disc Auto Playback] Turn.On.or.Off.the.disc.automatic. playback.switching.mode.

{On}..The.disc.playback.automatically. after.loading. {Off}..  
Turn.off.disc.auto.playback.  
mode. · [CEC] This.player.supports.REGZA-LINK.  
which.uses.the.HDMI.CEC.(Consumer. Electronics.Control).protocol..

You.can. use.one.single.remote.control.to.control. all.  
REGZA-LINK-compliant.devices.that. are.connected.  
through.HDMI.connectors. {On}..-  
Turns.on.REGZA-LINK.features. -With CEC on, during TV standby with the BD player on, pressing SETUP, PLAY/ PAUSE.will..power.on.the.

TV.When.you. turn.the.TV.off, this.unit.will.automatically.turn.off. {Off}..-Disables.REGZA-LINK.  
features. · [Easy Setup] Re-configure some settings. It is the same as."Load.Default".  
of.steps.4-8. Tip: For setting OSD language, TV resolution and TV aspect. · [Load Default] Reset.  
all.settings.of.BD.player.to.initial. default.state. -.

Follow.the.instruction.on.the.TV.screen. to.confirm.the.default.setting.operation. 1..  
Select.Load Default. 2..A.  
dialogue.box.pops.up.shown.  
as. below..Select.OK. Load Default Do you want to load default? OK Cancel 3.It.may.take awhile.

when.loading. default.is.in.progress..Please.wait..  
. Load Default Loading default, please wait... 30% 4.  
.TV.will.display.as.

follow: Welcome to the Toshiba BD Player Setting Wizard. Some simple settings are suggested before you begin. You can also access detailed settings from  
the Setup Menu. OK Next 5. Press OK, enter language setting. Press/ to.select.a.language.option.

Choose an OSD language before starting. The language selected will be applied not only here but also in other OSD windows, menus etc. English Previous  
OK Next 6. Press OK, enter Resolution setting. Choose a resolution that fits your TV. Change will be applied immediately, you have 15s to determine whether  
to save the setting or rollback to prior resolution. Better performance will be provided by an HDMI connection! Auto 480I/576I 480P/576P 720P 1080I  
1080P Previous OK Next Press./ to.select.an.  
option..Press.OK. Select.  
"Yes".or."No".using./.

Resolution has been changed! 14s Does everything looks all right with this resolution? Press Yes if you want to apply it. Press No to rollback to previous one.

Yes No Previous OK Next 7. Press OK, enter Aspect ratio setting. Choose an aspect ratio that fits your TV. The change will be applied in the next page,  
Determine whether to save the setting or rollback to the previous aspect ratio. 16:9 Full 16:9 Normal 4:3 Pan&Scan 4:3 Letterbox verification, error prompt  
is displayed, check the package again (such as the package is not complete) - Make sure the firmware version is not an old version. - When you upgrade the  
system using USB Flash device, you should make a new folder named UPG\_ALL, and copy the upgrade file into this folder. · [Disc Auto Upgrade] Turn.On.

or.Off.the.disc.automatic.upgrade. switching.mode. {On}..-  
Start.upgrading.from.the.insert.  
disc. {Off}..-Disable.disc.  
auto.upgrade.mode. · [External Memory] External. Memory. would. be. used. in. BDLive.

function..When.you.plug.in.the.SD. card.which.  
has.at.least.1GB.free.  
space.to. play BD-Live function, the BD system would. make. a.  
directory. named. BUDA. automatically.. Information. will. display. the.Free.

size. 1..Press.OK. 2..Follow.the.instruction.  
on.the.TV. screen.to.  
select.{Information}. ...

General Setting ... System Language Playback Security Network Screen Save Information Disc Auto Playback CEC Free size is : 0MB Previous OK Next  
Press.



[You're reading an excerpt. Click here to read official TOSHIBA  
BDX-3100-KB user guide  
http://yourpdfguides.com/dref/3873133](http://yourpdfguides.com/dref/3873133)

/ to.select.an.option..Press.

OK. Setting wizard is complete! Now press the OK button to finish and return to the Setup Menu. Off On On On More... Erase Disc Auto Upgrade Load Default Move cursor key to select menu option then use "OK" key to select Previous Finish SETUP Return OK 8..Press.OK.to.

return.to.[General.Setting]. Menu.

· [Upgrade] For.software.upgrades.to.enhance.

performance, you could select the following.upgrade.method.and.start.to. upgrade. {.Disc.}/[USB Storage].

Upgrade.the.software.from.the.disc.or. USB.Flash.device.

1..Insert.the.disc.

or.connect.the.USB. Flash.

device.which.contains.the.upgrade. file package. 2..Follow.the.

instruction.on.the.TV. screen to confirm upgrade operation. -.The.system.will.reboot.

after.5.seconds. . or.

OK.key.is.pressed. Notes: - If set [Disc Auto Playback]to [Off], after you insert the disc that contains the upgraded information to upgrade system, you have to start upgrade from this option of SETUP Menu.

- If the upgrade file package did not pass the 3.Press OK to select "Erase", the data in the.BUDA.folder.will.be.cleared. [Language] Select the OSD(On-Screen Display), set up Menu, Audio, Subtitle default language for the.player. .

.. General Setting ... System Language Playback Security Network Move cursor key to select menu option then use "OK" key to select SETUP Exit OSD Menu

Audio Subtitle English English English English · [OSD] · [Menu] Select.the.default.on-screen.display.

language. Select.the.menu.language.

· [Audio] · [Subtitle] Select.the.default.audio.language.

Select.the.default.subtitle.language. 1 English [Playback] ... General Setting ..

. System Language Playback Security Network Angle Mark PIP Mark Secondary Audio... Last Memory Closed Caption On On On On On · [Angle Mark]

Move cursor key to select menu option then use "OK" key to select SETUP Exit . . . . Some.BDs/DVDs.contain.the.scenes. recorded with multiple angles, which allow you.

to.enjoy.the.videos.with.

your.desired. angles, therefore the angle mark is displayed.only.when.

the.BD/DVD.disc.is. supportable.for.multi-angle.and.Angle. Mark.

is.set.to.ON. {On}..Display.the.angle.mark.

{Off}..Hide.the.angle.

mark. [PIP Mark] The.Picture.-In-.Picture.

(PIP).mode.display. two.pictures.on.the.TV.screen.at.

the.same. time, the full screen picture is called Main Window.and.the.small.inset.window.is. called.

Sub.Window..The.PIP.

mark.is. displayed.when.in.

PIP.mode.and.PIP.Mark. is.set.to.ON..

{On}..Display.the.PIP.mark. {Off}..Hide.the.

PIP.mark. [Secondary Audio Mark] {On}..Display.

Secondary.Audio.Mark. {Off}..

Hide.the.Secondary.Audio.Mark. [Last Memory] If.you.open.the.disc.

tray.or.switch.this. player.to.standby.state.during.normal.

playback, the BD Player can memorize the end playing point, the player will start playback.from.the.memorized.point.

next. time.. {On}..

Active.Last.Memory.feature. {Off}..Disable.Last.Memory.feature.

Note: -Not all the BD discs can support this function. [Closed Caption] Allow. people. who. are. deaf. or. hearing. impaired, to have access to television programming. by.

displaying. the. audio. portion.of.

a.television.programme.as.text.

on. the.screen. {On}..Display.the.Closed.Caption. {Off}.

.Hide.the.Closed.Caption. {On} Display playback control menu, use.NUMBER.keys.to.select.

desired.option. {Off}..Hide.

playback.control.menu.and. start.

playback.from.track1.automatically. · [DivX(R) VOD DRM] The.DivX(R).VOD.DRM.means.DivX(R).

Video. on.Demand.Digital.Right.Management.. DivX®.is.the.

name.of.a.revolutionary. new.

video.codec.which.is.based.

on.the.new.MPEG-4.compression.standard.for.video.You.

will.be.able.to.play.DivX®.movies.using.this.player.

You.can.only.play.DivX®.

videos.that.were.rented.or.

purchased.with.the.DivX®.registration.code.of.this.product.Select.the.DivX(R)VOD.DRM.option,you.can.find.this.product's.registration.code.

To.learn.more.please.visit.<http://www.divx.com/vod>. [Security] ..

. General Setting ... System Language Playback Security Network Move cursor key to select menu option then use "OK" key to select Change Password

Country code Parental Control English 1 SETUP Exit · [Change password] Follow.

the.instruction.on.the.TV.

set.or.change.the.password.for.locked.discs.and.play.

restricted.BDs/DVDs. ... General Setting ... System Language Playback Security Network Screen Save Off Change Password Disc Auto Playback On Please  
enter current password: CEC On On More..

. Disc Auto Upgrade Load Default Move cursor key to select menu option then use "OK" key to select Return Return 1..Use.NUMBER.

keys.to.enter.four.digit.

old.password.The.default.password.is."0000".2..

Enter.the.new.password ... General Setting ... System Language Playback Security Network Screen Save Off Change Password Disc Auto Playback On CEC

New password: On On More.

.. Disc Auto Upgrade Load Default Confirm password: 3. Enter the new password again to confirm. Move cursor key to select menu option then use "OK" key

to select Return Return · [PBC] VCD2.

0.has.PBC.control.(Playback.

Control) menu, which allow you to interact.with.the.system.via.menu.. · [Country Code] This.ensure.that.

you.will.be.able.to.see.the.scenes.intended.for.

your.current.residential.Country/Area.Use.

NUMBER.Keys.to.enter.your.

password,then.you.can.choose.your.Country/Area. · [Parental Control] Restricts.access.to.discs.that.are.unsuitable.for.children.

.These.discs.must.be.recorded.with.rating.1..

Press.OK.2..Use.

NUMBER.keys.to.enter.the.

password ... General Setting ... System Language Playback Security Network Screen Save Off Parental Control Disc Auto Playback On Enter password: CEC

On On More... Disc Auto Upgrade Load Default Move cursor key to select menu option then use "OK" key to select Return Return 3.

Select a rating level, then press OK. ... General Setting ... System Language Playback Security Network Screen Save Off Parental Control Disc Auto Playback

On CEC On [1] KID SAFE Disc Auto Upgrade On [2] G Load Default More...

Off Select level: Off Return Return Items G PG PG-13 PGR R NC-17 ADULT Description All children and general guidance Parental guidance Parental  
guidance for children under 13 Parental guidance Recommended Restricted viewing No one 17 and under allowed Adult only KID SAFE Safe for kids Notes:

- Rated discs above the level you set in [Parental Control] require a password to be entered. - The ratings are country-dependent. To allow all discs to play,  
select 'Off'. [Network] ..

. General Setting ... System Language Playback Security Network Move cursor key to select menu option then use "OK" key to select SETUP Exit IP Setting

Connection Test BD-Live Connection Information Note: - Ensure that the network cable is properly connected and the router is switched on.

1..Connect.the.BD.player.to.the.broadband.modem.

or.router.2.In.the.Setup.menu,select[Network],then.press..3.Select[IPSetting]in.themenu,then.press.OK.to.

select.[Auto]..An.IP.

address.is.obtained.automatically.If.no.IP.address.is.obtained,select[Manual]toinputIPAddress,SubnetMask,DefaultGateway,DNSandpress.

OK.to.re-connect.again.to.the.network..It.will.

try.to.obtain.the.IP.address.



[You're reading an excerpt. Click here to read official TOSHIBA](#)

[BDX-3100-KB user guide](#)

<http://yourpdfguides.com/dref/3873133>

again. 4..Press.  
RETURN.or.press.OK.to.

exit. Notes: - A contract with the provider is needed to connect to the Internet. - This player does not support automatic detection of cross-cables. Use the straight (standard) LAN cable. - Loading BD-Live content from the Internet may take some time, depending on the file size and the speed of the internet connection.

[IP Setting] [Auto]..Auto.obtain.network.information. [Manual]..Manual.setup.

network. information. [Connection Test] Display.Network.connection.status. information. [BD-Live Connection] [Permitted]..  
During.playback.of.BD-Live disc, the disc may automatically download.all.  
information.from.appointed. network. [Partial Permitted].

.During. playback of BD-Live disc, the disc may automatically.download.partial.of.the. information.from.appointed.

network. [Prohibited]..Disable.downloading. information.from.network. [Information] Display.all.  
Network.Informaion.. To enjoy BD-Live bonus contents, setup the.network.  
connection. 1 English Display Setting English 0 1. Press.SETUP [General Setting] menu.is.  
displayed. 2. Press to.select.[Display Setting], then.press... 3. Select an option, press to.

access. ... Display Setting... TV Video Process Motion Video...

TV Screen Resolution Color Space HDMI Deep color HDMI 1080P 24F Move cursor key to select menu option then use "OK" key to select 16:9 Full Auto YCbCr422 Off On SETUP Exit 4. Press / to.select.a.setup.  
option.and press .. 5. Select.  
the.setting.you.wish.to.change and press OK to confirm. -.Press to.return.to.

the.previous. menu. -.Press SETUP.to.exit.the.menu..  
[TV] [TV Screen] Select.the.screen.format.according.  
to. how.you.want.the.  
picture.to.appear.on. the.TV. {16:9 Full}..for.a.

disc.with.the.aspect. ratio of 4:3, the output video is stretched.into.16:9.full.screen. {16:9 Normal}.  
for.a.disc.with.

the. aspect ratio of 4:3, the output video is resized.vertically.to.match.  
what.will.be. seen.on.the.display. {4:3 Pan&Scan} for standard TV, Display.a.wide.

picture.on.the.entire. screen.and.cuts.off.the.redundant.  
portions. {4:3 Letterbox} for standard TV, Display.a.wide.picture.  
with.two.black. borders.on.  
the.top.and.bottom.of.4:3. screen. [Resolution] Select.a.video.

output.resolution.that.is. compatible.with.your.TV.display. capability.  
{Auto}..Select.the.most.  
suitable. resolution.according.to.the.

TV.. {480I/576I}, {480P/576P}, {720P}, {1080I}, {1080P}. .Select.a.video.resolution.setting.that.

is.best.supported.by.the.TV..See.TV. manual.  
for.details. [Color Space] Select a predefined Color space of picture. {RGB}..  
select.RGB.Color.space. {YCbCr}.  
..select.YCbCr.Color.space. {YCbCr422}..Select.YCbCr422.Color.

space. {Full RGB}..select.Full.RGB.Color. space. [HDMI Deep Color] This.feature.  
is.available.only.when.the.  
display.device.is.connected.by.  
a.HDMI. cable, and when it supports deep Color feature. {30 bits}..Output.30.bits.Color. {36 bits}.

.Output.36.bits.Color. {Off}..Output.standard.24.  
bit.Color. [HDMI 1080p 24F] {On}..Enable.  
1080p.24F.video. resolution.setting.

{Off}..Disable.1080p.24F.video. resolution.setting. About HDMI 1080p 24F Notes: If you want the 24Hz output, it should fulfill below 3 conditions: 1.TV supports the 24Hz display: 2.

Player choose the 24Hz option in the setup menu; Notes - This resolution becomes effective only when the playing BD-Disc contents are Film source. - During HDMI 1080p 24F playback, there will be no composite output. [HDMI 3D] Turn.on.or.off.the.3D.function. {Auto}.  
.Opening..the.3D.

function.of. player. {Off}..  
Turn.off.the.3D.function. When you play a side by side 3D disc, which.is.a.kind.of.

3D.disc.and.it.is.make.up. of two frames, the player will playback this disc.and.export.  
the.content.based.on.the.

TV's settings. So if you want to do some settings, such as OSC or program, please ensure that the 3D TV's setting is correct. Note: If you do some 3D TV's setting during 3D disc playback, the TV screen may be abnormal. To recover, load the 3D TV's default setting first. [Video Process] .  
.. Display Setting... TV Video Process Motion Vide... Video Adjust Sharpness More..

. Low 3.Media must be the 24Hz video. Move cursor key to select menu option then use "OK" key to select SETUP Exit · [Video Adjust] Select a predefined setting of the video. 1..Press.OK.. 2.

.Press/ to adjust the video Brightness, Contrast, Hue and Saturation. {Brightness}-.press./ to.adjust. the brightness of display, goes left means.dark.and. right.means.bright. {Contrast}-..press./to.adjust. the contrast of display, goes left means.

low.contrast.and.right.means. high.contrast. {Hue}-.press./ to.adjust.the.Hue. of display, goes left means low hue and. right.means.high.hue. {Saturation}-. press. / to. adjust. the saturation of display, goes left means.low.Saturation.and.right.means.

high.saturation. 3..Press.RETURN.to.exit. Brightness Contrast Hue Saturation Change Return Exit · [Sharpness] Select the level of sharpness: High, Medium, Low {High}-.Select.

High.sharpness.level {Medium}-.Select.Medium. sharpness. level {Low}-.Select.Low. sharpness.level [Motion Video Process] ... Display Setting... TV Video Process Motion Video...

Video Mode Color Adjust Noise Reduction 0 Standard · [Color Adjust] You can define your own Color adjustment.when.you.select.the.Custom. video.mode.and.you.

can.adjust.the.Color. of red, green, blue, yellow, cyan and magenta.

{Red} Define your own red Color by adjusting the brightness, saturation and hue. {Green}.Define your own green Color by adjusting the brightness, saturation and hue. {Blue}.Define your own blue Color by adjusting the brightness, saturation and hue.

{Yellow} Define your own yellow Color by adjusting the brightness, saturation and hue. {Cyan} Define your own cyan Color by adjusting the brightness, saturation and hue. {Magenta}.Define your own magenta Color by adjusting the brightness,saturation and hue. · [Noise Reduction] Reduces.the.noise.of.the.

playback.picture. {0}..Shows.the.original.picture.as. recorded.

{1}..Executes.3D.noise.

reduction.which. detects.and.deletes.

the.noise.by. comparing.each.picture.frames. {2}..Executes.

MPEG.noise.reduction. which.reduces.the.block.noise.and. mosquito noise on the subtitles on the movie.

{3}..Executes.both.MPEG.

noise. reduction.and.3D.noise.

reduction. Audio Setting 1. Press.SETUP [General Setting] menu.is.displayed. 2. Press to.select.[Audio Setting], then.

press... 3. Select an option, press to.access. ... Audio Setting.

.. Audio Output Spdif HDMI Down\_samp PCM PCM 48K Off Move cursor key to select menu option then use "OK" key to select SETUP Exit DRC Move cursor key to select menu option then use "OK" key to select · [Video Mode] Select the output mode of video,options include: Standard, Vivid, Cinema, Custom, these.can.change.

the.output.display. {Standard}.output.

video.signal.without. any.processing.and.in.standard.mode. {Vivid}.

output.video.signal.in.vibrant. color.mode. {Cinema}.output.video.

signal.in.cinema. mode. {Custom} you can define your own video mode by adjusting the video Brightness, Saturation, Hue, Contrast, Sharpness and CTI. SETUP Exit 4. Press / to.select.a.setup.

option.and.press .. 5. Select.the.setting.you.wish.to.

change and press OK to confirm. -.Press to.return.to.the.previous. menu. -.Press SETUP. to.exit.



[You're reading an excerpt. Click here to read official TOSHIBA](http://yourpdfguides.com/dref/3873133)

[BDX-3100-KB user guide](http://yourpdfguides.com/dref/3873133)

<http://yourpdfguides.com/dref/3873133>

the.menu..  
[Audio Output] · [Spdif] Select.the.output.mode.of.  
COAXIAL. 1 English jack, options include Bitstream, PCM, Re-encode.and.Off. {Bitstream}..Output.digital.signal. without.  
any.processing. {PCM}..Output.digital.signal.with. processing, only two channels export. {Re-encode}.  
.Auto.select.signal.type.  
from.COAXIAL,jack.according.to.  
the. Audio.stream.on.disc. {Off}..No.output.for.

S/PDIF. · [HDMI] Select.the.output.mode.of.HDMI.Out. jack, options include Bitstream, PCM, Re-encode.and.  
Off. {Bitstream}..Output.HDMI.  
digital. signal.without.any.processing.  
{PCM}..Output.HDMI.digital.signal. with processing, only two channels export. {Re-encode}..Auto.

select.signal.type. from.HDMI.Out.jack.according.to.the.  
Audio.stream.on.disc. {Off}.  
.No.output.for.HDMI.

· [Down\_samp] Select. the. digital. audio. signal. sampling. frequency. {48K}..For.

discs.recorded.at.sampling. rate.of.48.kHz. {96K}..  
For.discs.recorded.at.sampling.  
. rate.of.96.kHz.  
. {192K}..For.discs.recorded.at.sampling. rate.of.

192.kHz. · [DRC]. Select.the.Dynamic.Range.Control.mode. which.  
makes. it. available. to. listen.  
to. a. movie. at. a.  
low. volume. without. losing. sound.clarity. {Off}..Non-dynamic.range.

compress.. {On}..Dynamic.range.compress. {Auto}. . Adjust.  
the. DRC. according. to. input.  
audio. The.setting.of.Auto.  
is.effective.for.Dolby.TrueHD. System Information 1. Press.SETUP [General Setting].menu.is.

displayed. 2. Press to.select.[System Information], -.The.current.software.version.and.  
MAC. address.display -.Press to.return.  
to.the.previous. menu. -.  
Press SETUP.to.exit.the.menu. ... System Information ..

English Software version: V XX MAC: E8-9D-87-XX-XX-XX Move cursor key to select menu option then use "OK" key to select SETUP Exit 7 Specification.

Playable media This.product.can.play:. · BD-Video, BD-R/RE2.0, BDAV · DVD, DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R-R DL (Dual Layer)  
· Video.CD/SVCD · Audio CD, CD-R/CD-RW · AVCHD, AVCREC · USB flash device Video Signal.

system:PAL/NTSC Composite.video.output:. IVP-p.(75.

ohm). HDMI Output: 480i/576i,480p/ 576p,720p,1080i,1080p,1080P/24F. Audio ·2.Channel.

analogue.output - Audio L&R : 2 Vrms (> 1 kohm) Signal-to-noise Ratio 95 dB THD+N 1kHz -85 dB Dynamic Range 1kHz 85 dB Crosstalk 1kHz -95dB  
·Digital.output.(Coaxial):. 0.5.Vp-p.(75.ohm) ·

HDMI.output LAN · LAN.terminal...10BASE-T/100BASE-TX USB ·USB.1.1./.  
USB.2.0.Full-speed./.  
USB....

..2.0.High-speed ·Supporting range: flash disk,card reader, USB.Mass.Storage.Class.Device.

MP3 tracks · Supported file extension: '.mp3' ·Supported.audio.codec.:MP3 ·ISO.format ·Supported.  
corresponding.bitrate:.8kbps-320.kbps ·Supported sampling frequencies :.

... 32kHz,44.1kHz, 48kHz JPEG · Supported file extension: '  
'jpg' or '.jpeg' ·JPEG/ISO.format ·Does.not.support.Picture.CD Main Unit ..

Power.supply.rating:. ...110V-240V.50/60Hz ·.Power.  
consumption:.25W ·.Power.consumption.  
in.standby.mode:. <1W ·.  
Dimensions.(w.x.h.x.d):. 430.x.54.x.

225.(mm). ·.Net.Weight:.2.1.kg ·.  
Operating.temperature:5°C.to.35°C ·.  
Operating.humidity:Less.than.80.%.

(no... ....condensation) Accessories supplied · Remote control and Size 'R03' carbon ...

zinc.batteries.(Two) ..AV.cable ..Simple.IB English DivX® · Supported file extension: '.DIVX' ·  
DivX.HT. 8 Troubleshooting If you experience any of the following difficulties while using this unit, check the list below before consulting your  
nearest TOSHIBA dealer. Problem No. reaction.  
to the remote control. Tip Connect the product to the power.

outlet. Point the remote control at the product. Insert the  
batteries correctly. Insert new batteries.  
in the remote control. No  
video signal on the display device. Turn on the TV.

Set the TV to the correct external input. Select the  
correct video resolution. Set TV  
System correctly. No audio/  
video signal. If the unit is connected to the unauthorized.

display device with on the display device via an HDMI cable, the audio/video signal may not be output. HDMI  
cable. No high-definition video signal on the TV.

Does the disc contain high-definition video? High-definition video is not available when  
the disc does not contain it. Does the TV support high-definition video? High-definition video is not available when

the TV does not support it. Assign the audio input  
of the TV to the  
corresponding video. No audio signal  
from the loudspeakers of the input TV. No audio

signal from the loudspeakers of the audio system. No 3D  
effectiveness Turn on the audio system.

Set the audio system to  
the correct external input. Increase the volume level of the

audio system. Set HDMI 3D to Auto. Connecting by HDMI  
cable. Connecting to a 3D

TV. Playback a 3D disc.

Wear 3D glasses. English Cannot play back a disc. Make sure

that the BD Player supports the disc. For DVD+RW/+R or DVD-RW/-R, make sure that the disc is finalized. Clean the  
disc. Cannot play back JPEG

files from a disc. Cannot play DivX® files Cannot play MP3 files from a

disc. Make sure that the disc was recorded in the UDF, ISO9660 or JOLIET format. Make sure that the file was recorded in the H.264 or MPEG-4 format.  
Make sure that the disc was recorded in the UDF, ISO9660 or JOLIET format. Make sure that the bit rate of the MP3 files is between 112 and 320 kbps. Make  
sure that the sample rate of the MP3 files is 32 kHz, 44

1 kHz or 48 kHz. Cannot find a JPEG file. Make sure that the selected group  
(folder) does not contain more than 9,999 files for DVD, and 999 files for CD.

Make sure that the file extension is .jpg, .JPG, .jpeg or .JPEG.

Cannot find a MP3 file. Make sure that the selected folder does not contain

more than 9,999 files for DVD, and 999 files for CD. Make sure that the file extension is .mp3 or .MP3. Cannot upgrade SW When you upgrade the system  
with USB Flash device, you should make a new folder named UPG\_ALL, and copy the upgrade file into this folder.

Use USB Flash Device corresponding

to the Mass Storage Class

Driver. POWER The USB Flash Device. Cannot be played Sometimes the options

When playing a DVD disc or BD disc, press STOP button. of setup menu cannot. once, the player will go into stop resume mode, meanwhile  
you cannot change some settings.

in setup menu such as

be selected. language subitem menu, audio, subtitle etc. If you want to change that, press STOP button twice, the player will go into full stop mode, then you  
can do it. English Make

sure that the Blu-ray Disc player supports the region code

of the DVD or BD. 9 Glossary Aspect ratio Aspect ratio refers to  
the length to height ratio

of TV screens. The

ratio of a standard TV is 4:3, while the ratio of a high definition or wide TV is 16:9. The letter box allows you to enjoy

a picture with a wider perspective on a standard 4:3

screen. Blu-ray Disc (BD) Blu-ray Disc

*is.a.next.generation.optical.*

*video disc capable of storing five times more.data.than.a.conventional.DVD..The. large capacity makes it possible to benefit from the features such as high-definition videos, multichannel surround sound, interactive.menus.*

*and.so.on. BONUSVIEWTM. This is a BD-Video (Final Standard Profile or Profile 1.1) that supports interactive content encoded on the disc, such as picture-in-picture..This.means.you.*

*can.play. the.primary.video.*

*and.secondary.video. simultaneously. Digital.*

*Audio Digital.Audio.is.a.sound.signal.that.has.*



**[You're reading an excerpt. Click here to read official TOSHIBA  
BDX-3100-KB user guide  
http://yourpdfguides.com/dref/3873133](http://yourpdfguides.com/dref/3873133)**

been converted.

into numerical values. Digital sound can be transmitted through multiple channels. Analogue sound can only be transmitted through two channels. Dolby® Digital. The system to compress digital

sound developed by Dolby Laboratories. It offers you sound of stereo (2ch) or multichannel audio. Dolby® Digital Plus Dolby Digital Plus is the next generation digital audio compression technology developed as

an extension to Dolby Digital. Blu-ray Disc supports 7.1 multi-channel surround sound output. Dolby® TrueHD Dolby TrueHD is a lossless coding technology developed for next generation optical discs. Blu-ray

Disc supports 7.1 multi-channel surround sound output. DTS®. DTS is a multi-channel surround sound system. By connecting to DTS decoder, you can enjoy movie dynamic and realistic sound like movie theater. DTS surround sound

technologies were developed by DTS, Inc. DTS-HD® DTS-HD is a lossless coding technology developed as an extension of the original DTS Coherent Acoustics format. Blu-ray Disc supports 7.1 multi-channel surround sound

output. DTS-HD Master Audio™ A disc encoded with DTS-HD Master Audio delivers ALL of the information

from the original master recording -- bit-for-bit, it's identical to what the sound engineers laid down. Audio doesn't get any better than this. HDCP High-bandwidth Digital Content Protection

. This is a specification that provides a secure transmission of digital contents between different devices (to prevent unauthorized copyright.) HDMI® High-Definition Multimedia Interface (HDMI) is a high-speed digital interface that

can transmit uncompressed high definition video and digital multichannel audio. It delivers high quality picture and sound quality. HDMI is fully backward compatible with DVI. As required by the HDMI standard, connecting to HDMI or DVI products without

HDCP (Highbandwidth Digital Content Protection) will result in no Video or Audio output. JPEG A very common digital still picture format. A still picture data compression system proposed by the

Joint Photographic Expert Group, which features small decrease in English DivX® DivX® is a codec (compression/decompression) that can compress images to a very

small amount of data. DivX Certified® to play DivX® video, including premium content. -ABOUT DIVX VIDEO: DivX®

is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit

[www.divx.com](http://www.divx.com) for more

information and software tools to convert your files into DivX video. -ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be

registered in order to play DivX Video-on-Demand (VOD) content.

To generate the registration code, locate the DivX VOD section in the device setup menu.

Go to [vod.divx.com](http://vod.divx.com) with this code to complete.

the registration process and learn more about DivX VOD. LAN (Local Area Network) A group of linked devices in a company, school or home. Indicates the boundaries of a particular network. Local storage. This storage area

is used as destination for storing additional contents from BD-Live enabled BD-Video. MP3 A file format with a sound data compression system. MP3 is the abbreviation of

Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3

.With. the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD.. PBC.. Playback Control..A system. where you navigate through a Video CD/Super VCD. with on-screen

menus that are recorded onto the disc.. You can enjoy interactive playback and search. Region code. A system that allows discs to be played only in the region designated.

.This unit only plays discs that have compatible region codes. You can find the region code of your unit on the product label.. Some discs are compatible with more than one region (or ALL regions).

) English image quality in spite of its high compression ratio.. Files are recognized by their file extension '.jpg' or '.jpeg'. 'PCM Pulse Code Modulation..A

digital audio encoding system. This document is statement purpose only.

Not concerned with operation of this product. The software pre-installed in this product consists of multiple, independent software components. Each software component is copyrighted by a third

party.. This product uses software components that are distributed as freeware under a third-party end-user license agreement or copyright

notice. (hereinafter referred to as a "EULA"). Some EULAs require that the source code of the applicable component be disclosed as the condition for distributing the

software component in executable format. You can check the software components subject to such EULA requirements on the following e-mail address: E-mail address: linux@toshiba-dme.co.jp TOSHIBA provides a warranty for this product you have purchased under conditions set forth

by TOSHIBA. However, some of the software components distributed under an EULA are made available for use by the user on the assumption that they are not copyrighted or warranted by a third

party.. These software components are licensed to the user

free of charge and therefore not covered by any warranty within the scope of the applicable laws.. These software

components are not subject to any copyrights or other third-party rights and are provided in "as is" condition without any warranty, whether express or implied. "Warranty" here includes, but not limited to, an implied warranty for marketability or fitness for specific uses. All risks associated with the quality or performance of these software components are

assumed by the user.. TOSHIBA shall not be liable whatsoever for any cost of repair or correction or other incidental expense incurred in connection with a defect found in

any of these software components. Unless specified under the applicable laws or in a written agreement, a party who changes or redistributes the software with consent from the copyright holders or based on the aforementioned licenses shall not be held liable whatsoever for any

loss arising from the use of or inability to use such software components.. The same applies even when the

copyright holders or relevant third parties have been informed of the possibility of such loss. "Loss" here includes normal, special, incidental and indirect loss (including, but not limited to, the loss of data or its accuracy; loss incurred by the user or any third party; and interface incompatibility with other software). Please read each EULA for details.

on the use conditions and items that must be observed regarding these software components. The table below lists the software components pre-installed in this product, which are subject to EULAs. The user should read

the applicable EULAs carefully before using these software components..

*The EULAs are exhibited in their original text (English), as exactly written by the respective parties. License Information on the Software Used in This Product English Project name Linux kernel Busybox U-boot glibc SquashFS International Components for Unicode OpenSSL zlib FreeType Expat CURL Independent JPEG group LIRC Project license GPLv2 GPLv2 GPLv2 LGPLv2.1 GPLv2 ICU License OpenSSL License and SSLeay License zlib license FreeType License Expat license curl license IJG license GPLv ...*

*.....GNU.GENERAL.PUBLIC.  
LICENSE Version 2, June 1991 Copyright (C) 1989, 1991 Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301.USA  
.Everyone is.  
permitted to copy and distribute.  
verbatim copies of this license document, but changing it is not allowed. ....*

*.....  
.....  
.....  
..Preamble The licenses for most software are designed to.*

*take away your freedom to share.*



**[You're reading an excerpt. Click here to read official TOSHIBA BDX-3100-KB user guide](http://yourpdfguides.com/dref/3873133)**  
**<http://yourpdfguides.com/dref/3873133>**

and. change. it. By contrast, the GNU General Public License.  
is. intended. to. guarantee. your.  
freedom. to. share. and. change.  
free. software--to. make. sure.the.software.is.free.for.all.

its.users...This. General. Public. License. applies. to.  
most. of. the. Free Software Foundation's software and to any other. program.  
whose. authors. commit. to. using.  
it...(Some.other.Free.Software.Foundation. software.is.

covered.by.the.GNU.Lesser.General. Public.License.instead.).  
.You.can.apply.it.  
to.your. programs, too. When we speak of free software, we are referring to freedom, not price. Our General Public Licenses.  
are.designed.to.make.sure.that.you. have. the. freedom. to.

distribute. copies. of. free. software. (and. charge. for. this. service.  
if. you. wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and  
that.you.know.  
you.can.do.these.things.

To protect your rights, we need to make restrictions.that.forbid.anyone.to.deny.you.these. rights.or.

to.ask.you.to.surrender.the.rights. These. restrictions. translate.  
to. certain. responsibilities. for. you.  
if. you. distribute. copies. of.  
the. software, or if you modify it. For example, if you distribute copies of such a program, whether gratis or for a fee, you must  
give.the.recipients.all.the.rights.that.you.

have.. . You must make sure that they, too, receive or can.get.the.source.code...  
And.you.must.show. them.  
these.terms.so.they.know.  
their.rights. . . We. protect. your. rights. with. two.

steps:. (1). copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute.and/or.modify.the.software. Also, for  
each author's protection and ours, we.want.to.  
make.certain.that.everyone.understands.  
that.there.is.no.warranty.  
for.this.free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original,  
so.that.any.problems.introduced.by.others.

will. not. reflect. on. the. original. authors' reputations. Finally, any free program is threatened constantly.by.software.patents...We.wish.  
to.avoid. the.danger.that.  
redistributors.of.a.free.program.

will individually obtain patent licenses, in effect making. the. program. proprietary.. To. prevent. this, we have made it clear that any patent must be licensed  
for everyone's free use or not licensed.at.all.

The precise terms and conditions for copying, distribution and modification follow. GNU.GENERAL.PUBLIC.LICENSE TERMS AND CONDITIONS FOR  
COPYING, DISTRIBUTION.AND.MODIFICATION ..0..

This.License.applies.to.any.  
program.or.other.work.which.  
contains.a.notice.placed.by.the. copyright.holder.saying.it.

may.be.distributed.under.the.terms.of.this.General.Public.License.

. . The "Program", below, refers to any such program or work, and a "work based on the Program".means.either.  
the.Program.or.any.derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with  
modifications and/or translated.  
into. another. language.. . (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed.as."you". Activities  
other than copying, distribution and modification are not covered by this License; they.

are.outside.its.scope...The.act.of.running.  
the Program is not restricted, and the output from. the. Program. is. covered.  
only. if. its. contents.constitute.  
a.work.based.on.the.Program. (independent.of.having.been.

made.by.running. the.Program)..Whether.that.is.true.  
depends.on. what.the.Program.  
does. ..1..

You.may.copy.and.distribute.verbatim.copies of the Program's source code as you receive it, in any medium, provided that you conspicuously. and.

appropriately. publish.

on. each. copy. English an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program. You

may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee. . .

2.. You may modify your copy or copies of

@@files and the date of any change. @@or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

@@display an announcement including an appropriate copyright notice and a

notice that @@program under these conditions, and telling the user how to view a copy of this License.. (Exception: if the Program itself is

interactive. @@@@ with a work based on the Program) on a

volume of a storage or distribution medium does not bring the other work under the scope of this License. .

.3.. You may copy and distribute the Program.

@@Sections 1 and 2 above provided that you also do one of the following: . .

. . a). Accompany it

with the complete @@ 1 and 2 above on a medium.

customarily used. @@copy of the corresponding @@source code.. (This alternative is allowed only

for noncommercial distribution and only

if @@form of the work for making modifications to it. @@@@need not include anything that is @@If distribution

of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place. @@the source along with the object code.

4. @@under this License.. Any attempt. @@@@parties remain in full compliance. 5. @@@@actions are prohibited by law if you do not accept this License. @@@@.6.. Each time

you redistribute the Program (or @@). You may not impose any further restrictions on the recipients' exercise of the rights granted herein. . You are not responsible for enforcing compliance by third parties to this License. 7.

@@other reason (not limited to patent issues), conditions are imposed on you (whether by @@excuse you from the conditions of this License.

..If you cannot

distribute so as to satisfy @@@@of the Program by all

those who receive @@License would be to refrain entirely from distribution of the Program. If any portion of this section

is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and

the section as a whole is intended to apply in other circumstances. It is not the purpose of this section

to induce you to infringe any patents or other property

*right. claims. or. to. contest. validity. of. any. such. claims; this section has the sole purpose of protecting.  
the.integrity.of.the.free.*

*software.distribution system, which is implemented by public license.practices...*

*Many.people.have.made generous. contributions. to. the. wide. range. of.*

*software.distributed.through.that.system.in.reliance on consistent application of that system; it. is. up. to.  
the. author/donor. to. decide. if.*

*he. or. she.is.willing.*

*to.distribute.software.through.any. other.system.and.a.licensee.*

*cannot.impose.that. choice. This. section. is. intended. to. make.*

*thoroughly. clear what is believed to be a consequence of the.rest.of.this.*

*License. ..8..*

*If.the.distribution.and/or.use.of.the.Program. is. restricted.*

*in. certain. countries. either. by. patents or by copyrighted interfaces, the original copyright.holder.who.places.the.  
Program.under. this. License. may.*

*add. an. explicit. geographical. distribution.*

*limitation. excluding. those. countries, so that distribution is permitted only in or.among.countries.not.thus.excluded..*

*.In.such. case, this License incorporates the limitation as if.*



**[You're reading an excerpt. Click here to read official TOSHIBA  
BDX-3100-KB user guide](http://yourpdfguides.com/dref/3873133)**

**<http://yourpdfguides.com/dref/3873133>**