



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TOSHIBA BDX-3200. You'll find the answers to all your questions on the TOSHIBA BDX-3200 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TOSHIBA BDX-3200
User guide TOSHIBA BDX-3200
Operating instructions TOSHIBA BDX-3200
Instructions for use TOSHIBA BDX-3200
Instruction manual TOSHIBA BDX-3200



TOSHIBA



Blu-ray Disc™ Player



BDX3200KB
Owner's Manual



[You're reading an excerpt. Click here to read official TOSHIBA BDX-3200 user guide](http://yourpdfguides.com/dref/3960054)
<http://yourpdfguides.com/dref/3960054>

Manual abstract:

*and.important.notice. @@@@3-6 2 Your Product. @@7-9 . Regions.codes....
. 7 Product.overview. 8 Remote.Control.
.. 9 . 3 Connections..*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 10-11 Connecting.to.a.TV.

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 10 Optional.Connection.

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*..... 11 Connect.
USB.device....*

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

..... 11 Connect.power.. 11 4 Preparation..

... @@@@12 . 5 Playback. ... 13-15 . @@6 Customizing16-22 General.
Setting. @@Display.Setting...

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....20-21 .

Audio.Setting.

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

21-22 . System.information.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 22 7 Specification...

23 8 Troubleshooting.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..24-25 9 Glossary.....26-27 10 License Information..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

....28-46 English 1..Important Safety and important notice Warning:
Risk.of.overheating!.Never.install.
the.product.in.a. confined space.

Always leave a space of at least 4.inches.around.the.product.for.ventilation.. Ensure.curtains.

or.other.objects.never.cover.the. ventilation.slots.on.the.
product.

Never.place.the.product,.remote.

control.or. batteries near naked flames or other heat sources,.including.direct.sunlight.

Only.use.this.product.indoors..Keep.this.product. away from water, moisture and liquid-filled objects.
.....Never.

place.this.product.on.other.
electrical. equipment.Keep.away.from.this.

product.during.lightning. storms.Where.the.
mains.plug.or.an.appliance.
coupler.is. used.as.the.

disconnect.device,.the.disconnect. device.shall.remain.readily.operable. LASER CAUTION: USE.

OF.CONTROLS.OR.ADJUSTMENTS.OR. PERFORMANCE.OF.PROCEDURES.OTHER.THAN.
THOSE.SPECIFIED.HEREIN.MAY.RESULT.

IN. HAZARDOUS.RADIATION.EXPOSURE. CAUTION: VISIBLE.
AND.INVISIBLE.LASER.RADIATION. WHEN.OPEN.AND.INTERLOCKS.DEFEATED..

DO. NOT.STARE.INTO.BEAM. LOCATION: INSIDE,.NEAR.THE.DECK.MECHANISM.

Pb,Hg,Cd EU Conformity Statement This.product.is.marked.with.
"CE".and.complies. therefore.with.

the.applicable.harmonized. European.standards.listed.under.the.Low.Voltage.

Directive.2006/95/EC.and.the.EMC.Directive. 2004/108/EC. Responsible.for.CE-marking.
is.TOSHIBA. INFORMATION.SYSTEMS.(U.

K.)LTD.,Toshiba. Court.,

Weybridge.Business.Park,.Addlestone. Road,.Weybridge,Surrey,KT15.2UL, United.Kingdom. Following information is only valid for EU member States:

Disposal of products The crossed out wheeled dust bin symbol indicates that products must be collected and disposed of separately from household waste. Integrated batteries and accumulators can be disposed of with the product.

They will be separated at the recycling centres. The black bar indicates that the product was placed on the market after August 13, 2005. By participating in separate collection of products and batteries, you will help to assure the proper disposal of products and batteries and thus help to prevent potential negative consequences for the environment and human health. For more detailed information about the collection and recycling programmes available in your country, please visit our website (<http://www.recycle-more.co.uk/>) or alternatively please contact your retailer where the product was purchased. Disposal of batteries and/or accumulators The crossed out wheeled dust bin symbol indicates that batteries and/or accumulators must be collected and disposed of separately from household waste. If the battery or accumulator contains more than the specified values of lead (Pb), mercury (Hg), and/or cadmium (Cd) defined in the Battery Directive (2006/66/EC), then the chemical symbols for lead (Pb), mercury (Hg) and/or cadmium (Cd) will appear below the crossed out wheeled dust bin symbol. By participating in separate collection of batteries, you will help to assure the proper disposal of products and batteries and thus help to prevent potential negative consequences for the environment and human health.

For more detailed information about the collection and recycling programmes available in your country, please visit our website (<http://www.recycle-more.co.uk/>) or alternatively please contact your retailer where the product was purchased. General Information This appliance may be fitted with a nonrewireable plug.

If it is necessary to change the fuse in a non-rewireable plug the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement available from the appliance manufacturer is obtained. If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and an appropriate plug fitted following the wiring instructions below. The plug removed must be disposed of safely as it is hazardous if inserted into a live socket. English Disposal of your old product and batteries Copyright notice This product incorporates copyright. protection. technology. that. is. protected. by. U.

S. patents. and. other. intellectual. property. rights. . .

Use. of. this. copyright. protection.

technology. must. be. authorized. by.

Rovi. Corporation., and. is. intended. for. home. and. other. limited.

viewing. uses. only. unless. otherwise. authorized. by. Rovi. Corporation..

Reverse. engineering. or. disassembly. is.

prohibited. Disclaimers I. HEALTH/SAFETY-RELATED IMPORTANT SAFETY INFORMATION. CONCERNING 3D VIEWING . If. you. or. any. viewer. experiences.

the. following. symptoms. or. any. other. discomfort. from. viewing. 3D.

video. images., stop. viewing. and.

contact. your. health. care. provider: Convulsions.

..... Eye. or.

muscle. twitching Loss. of. awareness.

.....

.. Altered. vision Involuntary. movements.

. . Disorientation Eye. Strain.

..... Nausea/Vomiting Dizziness. . .

.....

.....

.....

Headaches Fatigue . Some. viewers. may. experience. a. seizure. or. blackout. when.

exposed. to. certain. flashing. images. or. lights. contained. in. certain. 3D.

television. pictures. or. video. games.

.. Anyone. who. has. had. a. seizure., loss. of.

awareness., or. other. symptom. linked. to. an. epileptic. condition., or.

has. a. family. history. of.

epilepsy., should. contact. a. health.

care. provider. before. using. the. 3D. function. . If. you.

feel. eye. fatigue. or. other. discomfort. from. viewing. 3D. video.

images., stop. viewing. and. take.

a. rest. until. the. condition.

is. eliminated. . Due. to. the. possible. impact. on. vision.

development., viewers. of. 3D. video. images. should. be. age. 6.

or. above. . Children. and.

teenagers. may. be. more. susceptible.

to. health. issues. associated. with. viewing. in. 3D. and. should.

be. closely. supervised. to. avoid. prolonged. viewing. without. rest..

... Avoid use of
the 3D function when under the influence of alcohol.
... Watching the screen while sitting too close for an

extended period of time may cause eye strain...
Consult your display manual to
determine the ideal viewing distance.
... Viewing in 3D may cause dizziness and/or

disorientation for some viewers... Therefore, to avoid injury,
do not place your player
or display near open stairwells,
balconies, or wires, and do not sit near objects

that could be broken if accidentally hit...
**CAREFULLY READ INSTRUCTIONS PROVIDED WITH
YOUR DISPLAY AND/OR 3D GLASSES
BEFORE 3D VIEWING. II. PERFORMANCE RELATED. P. This**

product is designed to playback Blu-ray™ discs that comply with
the 3D specifications of Blu-ray Disc Association. It is
not compatible with other 3D
specifications. ... 3D capable display, 3D eyewear and High Speed

HDMI cable (all sold separately) required for playback and viewing
3D content...
If you route your signal
through an AV receiver or other video distribution device they

must be 3D capable to support 3D viewing...
Viewing HD content and upconverting
DVD content may require an
HDCP capable input on your display device... ..

While up-converting DVD video content may result in a picture
that appears to be near
HD quality, results may vary
depending on content, display and settings... .. 1080p capable.

display required for viewing content in 1080p... .. 1080p/24
fps encoded.



**[You're reading an excerpt. Click here to read official TOSHIBA
BDX-3200 user guide
http://yourpdfguides.com/dref/3960054](http://yourpdfguides.com/dref/3960054)**

content.and.an.
HD.display.capable.of.accepting.
a. English 1080p/24Hz.signal.required.for.viewing. 1080p/24.fps.content..
.. . Performance.of.interactive.and/or. network.features.may.
vary.due.to.disc. design.
or.content,.and.may.also.
require. an.always-on.broadband.internet. connection..Firmware.update.may.
be. required.for.some.interactive.and/or. network.features..Some.
features.may. require.additional.bandwidth.
.. . BD-LiveTM.may.
require.an.SD.or.SDHC. card.or.USB.memory.with.
available. storage.capacity.of.at.least.1GB.(sold. separately)..
. . For.Dolby®.TrueHD.
and.DTS-HD. Master.Audio.1.
Essential.TM.playback,. content.encoded.in.Dolby®.TrueHD.and. DTS-HD.

Master.Audio.1.Essential.TM.format. required. Supported file types: JPEG, MP3, DivX.and.AVCHD.
.Some.recordable.media,. cards or files may not be supported.
Deep Color feature as specified in HDMI specification requires compatible Deep Color.capable.HD.display.and/or.
device... Use.of.HDMI-CEC.requires.an.HDMI-CEC. compatible.

display.device..Depending.on. the specifications of your display device, some.or.all.HDMI-CEC.functions.
may.not. work.even.if.
your.display.device.is.HDMICEC.
compatible... . Products.do.not.play.HD.DVD.

discs.. . Some.features.subject.to.delayed. availability..
. . Because.the.Blu-rayTM.
format.and.3D. specifications use new technologies, certain.disc..
content,.connection.and.other. compatibility.and/or.performance.issues. are.possible.

..If.you.experience.such. issues,.please.refer.to.
www.home-entertainment.toshiba.co.uk.
(for.UK.models).or. http://eu.
consumer.toshiba.eu/en. (for.Europe.continental.models).to.get. information on the availability of firmware updates.

that.may.resolve.your.problem,.or. contact.Toshiba.Customer.Solutions.
. While.every.effort.has.
been.made.at. the.time.
of.publication.to.ensure.the. accuracy.of.the.information.provided.

English herein, product specifications, configurations, system/component/ options.availability.are.all.subject.to. change.without.notice..
Notice for Trademark English HDMI, the HDMI logo and High-Definition Multimedia.Interface.are.trademarks.or.
registered.trademarks.of.HDMI.Licensing.
LLC.in.the.United.States.and.mote.control.at.the.IR.

sensor. Loads.a.disc.into.the.disc.drive. 1 2 3 4 5 6 NO a b c d e Control AC.power.
cord COAXIAL.jack ANALOG AUDIO OUTPUT jacks VIDEO.OUTPUT.jack HDMI OUTPUT jack Function Connects.to.
a.standard.AC.outlet. Output.
digital.audio.signals.when.connecting.the.coaxial.digital.cable. Outputs audio signals to a connected TV or AV amplifier.

Output.video.signals.to.a.connected.TV. Outputs video/audio signals to a connected TV, monitor or AV amplifier. Connect to a TV, monitor or AV amplifier
equipped with HDMI input. Use.
this. to. connect. to. a.
network. with. an. always-on. broadband.
connection.. It. is. reserved.for.future.usage.of.

BD-LiveTM. f LAN jack Remote Control REMOTE SIGNAL EMITTER . Point remote control to the sensor on the front panel ON / STANDBY . To switch the
Blu-ray DiscTM player to ON or standby mode SETUP Enters or exits the system setup menu MC(Media Center) . To OPEN/CLOSE Media Center 2nd
AUDIO Switch the secondary audio of secondary video(PIP) to on or off SEARCH . To search a title, chapter , track or playing time OPEN/CLOSE . Open/
Close the disc tray AUDIO . To select the sound stream; press repeatedly to select different audio streams available in your disc SUBTITLE . To display
subtitle; press repeatedly to select different subtitles available in your disc ANGLE . Switch the camera angle during playback HDMI To change
the.AC.power.cable.to:
-the.wall.socket. .

...The.

product.is.ready.to.be.set.up.for.use. Notes: Before connecting the AC power cord, ensure you have completed all other connections.

Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back of the unit. The type plate is located on the back of the unit. 1..Connect.the.audio.cable.from.the analogue.AUDIO.OUT.jacks.on.

this.product. to.the.audio.

input.jacks.on.the.system. Option 3: Connect to network Connect.this.product.to.the.

network.to. enjoy.BD-Live™.bonus.content. 1..Connect.the.

network.cable.from.the.LAN.

jack.on.the.product.to.

the.LAN.jack.on.the. network.system. 11 English 4 Preparation English 1 Always.follow.the.

instructions.in.this.chapter. in.sequence. Note: - Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation. Setting up the player Find the correct viewing channel 1.Press.1 to.

turn.on.this.product. 2.

Turn.on.the.TV.and.

switch.to.the.correct. video-in.channel.(refer.to.the.TV.

user. manual.on.how.to.select.the.correct. channel). Initial Setting When.

you.turn.on.this.unit.

for.the. first time, you need to follow these steps. 1..

A.welcome.page.will.be.displayed.when. this.product.is.

powered.on. 2..Press.OK.to.enter.language.setting.

3..Select.your.desired.

language, resolution.and.aspect.ratio.using.

/, then.press.OK. 4..Press.SETUP.to.exit.

the.Setup.menu. Prepare the remote control 1.Open.the.battery.compartment. 2.Insert.

two.R03.batteries.with.correct.

polarity.(+/-).as.indicated. 3.

Close.the.battery.compartment. Notes: - If you are not going to use the remote control for a long time, remove the batteries. - Do not use old and new or different types of batteries in combination. - Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire. · The maximum operable ranges from the unit are as follows. Use the SETUP menu 1.

Press. SETUP to. display. the. Setup. menu. when.the.Blu-ray.Disc™.

Player.is.playing.or. no.

disc..And.press.SETUP to.

exit.the.Setup. menu. Select menu display language 1.Press.SETUP [General Setting] menu.is.displayed. 2.

Select.[Language], then.press . 3.Select.[OSD], then.press

.-The.language.options.

may.vary.for. different.regions.

4.Press / to.select.a.language,then. press OK. Note: - If this disc player is connected to a HDMI CEC compliant TV, skip this setting. It switches automatically to the same OSD menu language as per your TV setting. -.

Line.of.sight:.approx..9.m -.Either.side.of.

the centre:.approx..7.

m. . within.30° -.Above:.

approx..7.m.within.30° -.Below:.approx..7.

m.within.30° 7m 9m 7m 5 Playback Playback Functions Basic Playback 1..Press. .button.on.the.front.

panel.or.the. remote.control,.

your.player.will.turn.on.

The.unit.will.take.around.30.seconds.to. warm.up.

2..Turn.on.the.TV,.,and.then.select.the.

input. setting.on.the.TV.

that.matches.the. connection.method.

you.used.to.connect.your. player. 3..Press.OPEN/CLOSE.

Z.to.slide.out.the.disc. tray. 4..Place.

a.disc.on.the.disc.

tray.with.the.label. facing.

up,.,and.then.press.OPEN/CLOSE.Z.to. slide.back.and.

close.the.disc.tray. The.disc.loading.time.depends.on.
the.types. of.disc.you.
are.loading.,and.loading.a.
Blu-ray. Disc™.will.take.longer.time. 5..If.the.
disc.does.not.start.playing. automatically.,please.press.u.to.
start. playback. 6..If.
a.Blu-ray.Disc™.or.DVD.
menu.displays., use.cursor.buttons.to.select.PLAY..Then.,
press OK to confirm. 7..To.eject.the.disc.,press.OPEN/CLOSE.Z.
Pause playback 1..Press.u.to.
pause.playback..The.sound.
will.be.muted. 2..Press.u.to.resume.the.
playback. Stop playback 1..Press.STOP..button.once.to.go.
to.resume. mode.,the.TV.
screen.will.show.the.resume.
logo. 2..Press.STOP..twice.to.stop.the.
playback. completely. 3..Press.u.to.resume.playback.from.
the.point. where.playback.is.
stopped.or.from.the. beginning.
of.the.disc.after.the.playback.is. completely.stopped. Not.

all.Blu-ray™.discs.support.the.resume. feature.. Fast Forward and Fast Reverse 1.



**[You're reading an excerpt. Click here to read official TOSHIBA
BDX-3200 user guide
http://yourpdfguides.com/dref/3960054](http://yourpdfguides.com/dref/3960054)**

Press.F.F.M.to.
fast.forward.through.the disc.
.The.fast.forward.speed.changes.based.on. how.many.
times.you.pressed.the.button..The. speed.will.increase.
through.the.following. sequence: 2X,.4X,.
8X,.16X,.32X 2..Press.
u.to.resume.playback. 3..Press.F.R.m.
to.fast.reverse.through.the. disc..The.fast.reverse.
speed.changes.based.on. how.
many.times.you.pressed.the.
button.. The.speed.will.increase.through.the. Instant Search and Instant Replay 1.During.
playback,.press.and.hold.M button,. you.can.search.30.seconds.
forward. 2.During.playback,press.and.
hold.m button,.you.can.instant.
replay.the.content. from.10.seconds.before. Previous and Next During.playback,.press.
PREV...button,. and.you.can.skip.back.to.
the.previous. chapter.or.track.
.Each.press.of.this.
button. will.allow.you.to.skip.a.chapter.or.track.
till. the.beginning.of.the.disc. Press.of.NEXT.>.
button.during.playback. will.allow.
you.to.skip.the.playback.
to.next. chapter.or.track. Slow Forward and Slow Reverse Slow.Reverse 1..Press.t.
during.normal.playback..The.slow. reverse.speed.is.1/16.
in.default. 2..To.
change.slow.reverse.speed,.press.
t. repeatedly,.and.the.slow.reverse.speed.will.be. changed.
in.the.following.sequence:.1/16,.1/8,. 1/4,.1/2,.normal. 3.
.To.exit.slow.reverse.
mode.and.return.to. normal.
playback,.press.u. Slow.Forward 1..Press.=B.during.normal.
playback..The.slow. forward.speed.is.1/16.in.default.
2..To.change.slow.
forward.speed,.press.=B. repeatedly,.
and.the.slow.forward.speed.will.be. changed.in.the.
following.sequence:.1/16,.1/8,. 1/4,.1/2,.normal. 3..To.
exit.slow.forward.mode.and.
return.to. normal.playback,.press.
u. Step Forward/Step Backward Use.this.feature.to.help.you.to.enjoy.the.
video.frame.by.frame. Step.Forward 1..Press.u.during.
normal.playback,.then. playback.will.
change.to.pause.state. 2.
.Press.= B.repeatedly.to.advance.the. picture.frame.by.
frame.. 3..Press.u.to.resume.normal.playback.
Step.Backward 1..Press.u during.
normal.playback,.then. playback.will.
change.to.pause.state. 2..Press c.repeatedly.to.reverse.
the. picture.frame.by.frame.. 3..Press.u.
to.resume.normal.playback. HDMI When there is file or disc being played, it is not.
allowed.to.switch.resolution.through.
the.HDMI.button.of.the.Remote.Control. 1 English following.sequence: 2X,.4X,.
8X,.16X,.32X. 4..Press.u.to.resume.playback.
Advanced Playback DISPLAY Press.this.button.and.the.

screen will display some information.
about disc, such as: Title number, Chapter number, Track number,
Elapsed Time, Mode, Audio, Angle, and Subtitle languages. Press
this button again to turn
off the information display. During
DVD/CD playback, you may edit the chapter and track. REPEAT Press.
REPEAT repeatedly to select different repeat modes. DVD: Repeat
Chapter, Repeat Title, and All.
VCD/PBC off/CD/JPEG/MP3: Repeat Track and
All. A-B To play certain section within the video or song,
press A-B button to set the start point. Then, press
A-B button again to set
the endpoint and complete the
setting. The selected section will be played repeatedly.
Press A-B button the third time to cancel this function.
The end point cannot be
set until 5 seconds of
playback has elapsed from the start point. SEARCH During playback, press
SEARCH button to edit Title, Chapter, and Time. Press
/ and OK button on
the remote control to select
Title, Chapter, or Time. Then press the numeric buttons
or / and then press OK. The playback will
skip to the desired location.
For Time Search, press /
to select Title or Chapter time search. SUBTITLE Press this button
repeatedly and the screen will display "X/XX.XXX" or "Off".
The "X" indicates the
current number of this language;
"XX" indicates the total number of language; "XXX" indicates the
language. The number of available languages depends on the disc.
RETURN Press this button to return
to the previous on-screen menu.
in setup menu such as External Memory Information, Parental Control,
Country Code etc.. During MP3/JPEG/VIDEO playback, press RETURN
once, it will return back
to Media Center page. During
VCD disc playback and PBC On is selected, press this
button to return to PBC Menu. ANGLE During playback, press this
button to change the angle
of the picture. The
screen will display "Angle X/X." The first "X" indicates the current number of angle, and the second
"X" indicates total number of angle. Not all Blu-ray Disc™
or DVD has the multi-1 angle
feature. The screen will
take around 5 seconds to change. TOP MENU You may press this
button at any time, and the Blu-ray Disc™ player or
DVD video disc playback will
pop up the disc menu.
POP MENU/MENU During Blu-ray Disc™ playback, press POP. MENU/MENU to display the
disc title, and the playback will not be stopped even
the menu is on the
screen. 1. Press the
/// buttons to select an option, then press OK to confirm. 2. Press POP.

MENU/MENU.to.close.the.menu.. During.DVD.playback,.press.
 POP.MENU/ MENU.to.open.the.
 disc.menu.. During.VCD.
 playback,.press.POP.MENU/ MENU.to.switch.PBC.On/Off. During displaying USB and Data Disc file content.in.
 media.center,.press.POP.MENU/ MENU to add the Photo/Music/Video files to the.playlist. 1.Press.///.buttons.
 to.select.an.option under the Photo/Music/Video files. 2.
 In the file browser, press .to.select.the.file(s) to be added to the playlist.
 " " will appear beside the selected files. 3..Press.POP.MENU/MENU.button,.a.pop.up.
 menu.will.appear,.then.press./and.OK.button.to.
 select."Add.to.Playlist".to.
 add.the.files.to.the.Playlist."Select.all"and"Clear.all"options.are.
 also.available..Select."Cancel".to.exit.the.pop.up.
 menu.All.the.selected.files.will.be.added.to.the."Playlist".folder..You.can.play.or.delete.
 the.files.in.the.playlist.Press.POP.MENU/MENU.
 to.delete.the.selected.files.in"Playlist"SETUP Press.
 the.SETUP.button,.and.the.screen.will.display.some.information.
 about.the.player,.such.as:·General.Setting·Display.Setting·Audio.Setting·System.Information PROGRAM. During.
 CD/DVD/VCD.playback,.you.can.press.
 this.button.to.edit.the.
 sequence.of.the.playlist.BOOKMARK During.VCD/DVD/DivX.disc.playback,.press.the.
 BOOKMARK.button.to.add.the.bookmark;.press.and.hold.for.
 a.few.seconds.to.display.
 the.list.of.bookmark.which.
 you.added.before.on.the.screen,.then.you.can.press.
 the.OK.button.to.select.the.bookmark.or.CLEAR.button.
 to.delete.the.bookmark.AUDIO Press.
 AUDIO.button.on.the.remote.
 control.to.select.the.audio.streams.that.set.within.the.
 Blu-ray™.or.DVD.disc.The.screen.will.display: AUDIO:.X/.
 XX.XXX.XXXX.English"X".-.
 the.Current.Audio.Stream.Number"XX".
 -The.total.number.of.Audio.Stream"XXX".-Audio.Language.
 "XXXX".-Audio.Technology MC Press this button to play media files in the USB. ZOOM Press.ZOOM.button.repeatedly.to.Zoom.
 in/out.playback.in.the.video.
 Zoom.mode.:.Zoom.
 2x.->.Zoom.3x.->.Zoom.4x.->.Zoom.1/2.
 ->.Zoom.1/3.->.Zoom.1/4.DIGEST During.playback.of.JPG.
 disc,.press.DIGEST.to.view.
 a.page.of.12.thumbnail.
 images.-Use.///.to.select.an.image.Press.OK.
 to.view.the.selected.image.in.fullscreen.and.subsequent.images.
 will.be.displayed.one.after.
 another.automatically.-.Press.PREV.
 ./NEXT.to.view.the.previous.or.next.
 thumbnail.screen.2nd AUDIO Press.2nd.AUDIO.button.to.open.the.secondary.
 audio.of.secondary.video(PIP's.sub-window.
 video)..OSC Press.OSC.to.
 open.On.Screen.Control.menu.during.playback..In.this.
 menu,.you.can.make.some.playback-related.control.The.on.screen.
 control.contains.following.items:[Title]:The.
 title.in.current.playback/titles.in.
 total..Select.your.desired.title.to.playback.[Chapter]:The.
 chapter.in.current.playback/chapters.in.total..Select.your.desired.

*chapter. to.playback. [Time]:.View.
the.elapsed/remaining.playback.time.of.
title/chapter.. Use./ to.view:.the.elapsed.playback.time.of.*

*title,.the.remaining.playback.time.of.title,. the.elapsed.playback.
time.of.chapter,.and.the.
remaining.playback.time.of.chapter.*

[Mode]:.Select.playback.mode.among.shuffle, random, and normal.



[You're reading an excerpt. Click here to read official TOSHIBA
BDX-3200 user guide
http://yourpdfguides.com/dref/3960054](http://yourpdfguides.com/dref/3960054)

[Audio]:The.Blu-ray.DiscTM/DVD.

disc's. soundtrack.language..Use./ to.view.the. audio.
available.in.the.disc.and.
select.your. desired.Audio.type.

[Angle]:The.angle.view.of.current.playback/ the.angles.in.total.

.Please.reference. Playback>Angle.to.see.more.detailed.info..
Use./ to.select.your.desired.
angle.view.. [Subtitle]:The.

Subtitle.in.current.playback.. Use./ to.view.the.subtitles.

available.in. the.disc.and.select.your.desired.subtitle.type.
or.turn.it.off..

Note: In accordance with the different discs, there would be different subtitles. Such as Central Europe Cyrillic Latin I Greek Turkish Hebrew [Subtitle Style]:. When. you.

play. the. Blu-ray. . DiscTM.and.if.it.has.external.

subtitle.,you.will. see.it.in.OSC.menu. [Bitrate]:Use./to.
select.your.desired.Bitrate. [Still.
Off]:.Close.the.Still.feature.
of.DVD.disc.. For. some. DVD. discs., a. certain.

video. picture. will. be. freeze. as. a. still. picture. during.
the. process.of.playback.to.
let.the.user.has.a.
better. view.of.certain.picture..To.continue.playback., select.

Still.Off... [Instant. Search]:. Instant. search. 30. seconds.
forward. [Instant.Replay]:.Replay.the.
content.from.10. seconds.before.

Tips: - The specified operation for each item will vary with disc types. And some items are available only when the disc is supportable. - The DivX® subtitle filename(.sub) has to be saved under the same filename as the movie(.avi) in the same folder (e.g. Folder A: abc.avi and abc.sub). Blu-ray DiscTM BONUSVIEWTM Playing.

Secondary.Video.(Picture-in-Picture). and.Secondary.Audio.is.for.Blu-ray.DiscTM.
only.. Secondary.video.can.
be.played.from.a.disc.

compatible.with.the.Picture-in-Picture.(PIP). function. For.the.playback.method.,

refer.to.the. instructions.for.the.disc. 1..Turn.
on.secondary.video.by.pressing.
the. PIP.button. 2..

Press.the.2nd.AUDIO.button.to.select.the. secondary.audio.,

and.select.an.option.except. Off..The.secondary.audio.
is.opened.,you.can. hear.
the.disc.secondary.video.sound.

. In.order.to.hear.the.secondary.audio.,the.PIP.

feature.on.the.disc.must.be.turned.on. 3..
Press.the.PIP.button.again.
to.turn.off.the. secondary.

video. Primary video Secondary video with Secondary Audio This.function.is.not.available.when.the. primary.video.

is.played.in.Search.,SlowMotion.,or.Frame-by-Frame.or.Fast.Forward/
Reverse.mode. To.listen.to.
the.secondary.audio.,the.digital.

audio.output.must.be.set.to."Re-encode".or. "PCM"..

Otherwise.,only.the.primary.audio.can. be.heard. Note: -Not all the Blu-ray TM discs can support this function. 1 English 6 Customizing English 1 This section. describes. the. various. setting.

option.of.this.Blu-ray.DiscTM.
player.. If.the.setup.option.is.greyed.out.,it.

means. the. setting. cannot. be. changed. at. the. current.state.
General Setting 1..Press.SETUP.button.

on.the.remote. control.The.

Setup.Menu.appears. General Setting System Language Playback Security Network Screen Saver Disc Auto Playback CEC Load Default Upgrade On On On
More... More... use.

one.single.remote.control.to.control. all.REGZA-LINK-compliant.devices.that
are.connected.through.HDMI.connectors.

{On}. - Turns.on.REGZA-LINK.

features. -With.CEC.on.,during.TV.standby.with. the.Blu-ray.

DiscTM.player.on.,pressing. SETUP,PLAY/PAUSE.will.power.on.
the. TV..When.you

turn.the.TV.off.,this.

unit. will.automatically.turn.off. {Off}. -Disables.REGZA-LINK.features.

· [Load Default] Reset.all.settings.of.Blu-ray.DiscTM.player. to.initial.default.
state. -Follow.the.instruction.

on.the.TV.screen. to confirm the default setting operation.

1..Select.Load Default. 2..A.dialogue.box.pops.

up.shown.as. below..Select.OK. Load Default Do you want to load default? OK Cancel Move cursor key to select menu option then use "OK" key to select
SETUP Exit 2. Press to.select.

an.option.,then.press .to.

access. 3. Press / to.select.a.

setup.option.and press .. 4. Select.the.setting.you.wish.

to.change and press OK to confirm. - Press to.return.to.the.previous.menu. [System] To.change.
the.following.system.option. to.

personalize.your.Blu-ray.DiscTM..

player. · [Screen Saver] Turn.On.or.Off.the.screen.saver.mode. It.

helps.to.protect.the.TV.screen. {On}..

Set.the.screen.saver.active.

after.approximately.5.minutes.with.

no. operation. -The.Blu-ray.DiscTM.player.will.switch.to.

standby.mode.if.there.is.no.operation. after.the.screen.

saver.is.engaged.for. approximately.

15.minutes. {Off}.

.Turn.off.the.screen.saver. mode.. · [Disc Auto Playback] Turn.On.

or.Off.the.disc.automatic. playback.switching.mode. {On}..

The.disc.playback.automatically. after.

loading. {Off}..Turn.off.

disc.auto.playback. mode. · [CEC] This.player.supports.REGZA-LINK.which. uses.

the.HDMI.CEC.(Consumer. Electronics.Control).protocol..You.can.

3.It.may.take.awhile.

when.loading. default.is.in.

progress..Please.wait... Load Default Loading default, please wait... 30% 4.

.TV.will.display.as.follow: Welcome to the Toshiba Blu-ray Disc Player Setting Wizard. Some simple settings are suggested before you begin. You can also
access detailed settings from the Setup Menu. OK Next 5. Press OK, enter language setting.

..Press.OK.,enter.

language.setting.. Press/ to.select.

a.language.option. Choose an OSD language before starting. The language selected will be applied not only here but also in other OSD windows, menus etc.
English Previous OK Next 6. Press OK, enter Resolution setting. ..Press.

OK.,enter.Resolution.setting.. Choose a resolution that fits your TV. Change will be applied immediately, you have 15s to determine whether to save the
setting or rollback to prior resolution. Better performance will be provided by an HDMI connection! Auto 480i/576i 480p/576p 720p 1080i 1080p Previous
OK Next Note: When the player is connected to both VIDEO OUTPUT jack and HDMI OUTPUT jack, resolution set to 720p/1080i/1080p, there will be no
output through VIDEO OUTPUT jack. Press/ to.

select.an.option..Press.

OK. Select."Yes".or."No".

using./ Resolution has been changed! 14s Does everything looks all right with this resolution? Press Yes if you want to apply it. Press No to rollback to
previous one. Yes No insert the disc that contains the upgraded information to upgrade system, you have to start upgrade from this option of SETUP Menu. -

If the upgrade file package did not pass the verification, error prompt is displayed, check the package again (such as the package is not complete) - Make
sure the firmware version is not an old version. - When you upgrade the system using USB Flash device, you should make a new folder named UPG_ALL, and

copy the upgrade file into this folder. · [External Memory] External. Memory. would.

be. used. in. BDLive™,function..When.you.plug.in.
the.USB. flash device which has at least 1GB free space. to. play.
BD-Live™. function,. the. Bluray. Disc™.
system. would. make. a. directory. named. BUDA. automatically.. Information.

will.display.the.Free.size. 1..Press.OK. 2.
.Follow.the.instruction.on.
the.TV. screen.to.select.

[Information]. General Setting System Language Playback Security Network Screen Save Information Disc Auto Playback CEC Free size is : 0MB Previous
OK Next 7. Press OK, enter Aspect ratio setting. ..Press.OK.,enter.Aspect.ratio.

setting.. Choose an aspect ratio that fits your TV. The change will be applied in the next page, Determine whether to save the setting or rollback to the
previous aspect ratio. 16:9 Full 16:9 Normal 4:3 Pan&Scan 4:3 Letterbox Off On On On More... Erase Disc Auto Upgrade Load Default Previous OK Next
Move cursor key to select menu option then use "OK" key to select RETURN Return Press.



[You're reading an excerpt. Click here to read official TOSHIBA](#)

[BDX-3200 user guide](#)

<http://yourpdfguides.com/dref/3960054>

/ to.select.

an.option..Press.OK.

Setting wizard is complete! Now press the OK button to finish and return to the Setup Menu. Previous OK Finish 8. Press OK to return to [General Setting] ..Press.

OK.to.return.to.[General.Setting]. Menu. · [Upgrade] For.software.upgrades.

to.enhance. performance,.you.could.select.the. following.upgrade.method.
and.start.to. upgrade. {.

Disc.}/{USB Storage}. Upgrade.the.software.
from.the.disc.or. USB.Flash.device. 1..Insert.

the.disc.or.connect.the.USB. Flash.device.which.contains.
the.upgrade. file package. 2..

Follow.the.instruction.on.the.

TV. screen to confirm upgrade operation. -.The.system.will.reboot.after.5.seconds.

. or.OK.key.is.pressed. Notes: - If set [Disc Auto Playback]to [Off], after you 3.Press.OK.to.
select."Erase",.the.data.in.

the.BUDA.folder.will.be.

cleared. · [Blu-ray Disc Logo] Turn.On.or.Off.the.Blu-ray.DiscTM.Logo.on.

the.front.panel..You.can.control.the.Bluray.DiscTM.

Logo.lights.on.or.off.

[Language] Set.up.the.OSD(On-Screen.Display),.

Menu,. Audio.and.Subtitle.default.language.for.the. player. General Setting System Language Playback Security Network Move cursor key to select menu option then use "OK" key to select SETUP Exit OSD Menu Audio Subtitle English English English English · [OSD] · [Menu] Select.

the.default.on-screen.display.language. Select.the.menu.language. Select.

the.default.audio.language. Select.

the.default.subtitle.language. · [Audio] · [Subtitle] 1 English [Playback] General Setting System Language Playback Security Network Angle Mark PIP Mark Secondary Audio.

.. Last Memory PBC On On On On On portion.of.a.television.programme.as.text.on.

the.screen. {On}..Display.the.Closed.Caption. {Off}..

Hide.the.Closed.Caption. English · · · · [DivX(R) VOD DRM] Move cursor key to select menu option then use "OK" key to select SETUP Exit · [Angle Mark] · 1 Some.

Blu-ray.discs/DVDs.contain.the. scenes.

recorded.with.multiple.angles,. which.allow.you.to.enjoy.the.

videos.with. your.desired.angles,.therefore.the.angle. mark.is.

displayed.only.when.the.Blu-ray.

DiscTM/DVD.disc.is.supportable.for.

multiangle.and.Angle.Mark.is.set.to.ON. {On}..

Display.the.angle.mark. {Off}..Hide.the.angle.mark.

[PIP Mark] The.Picture.-In-.Picture.(PIP).

mode.display. two.pictures.on.

the.TV.screen.at.the.same. time,.the.full.screen.

picture.is.called.Main. Window.and.the.small.inset.window.

is. called.Sub.Window..

The.PIP.mark.is. displayed.

when.in.PIP.mode.and.PIP.Mark. is.set.to.

ON.. {On}..Display.the.PIP.mark. {Off}..

Hide.the.PIP.mark. [Secondary Audio Mark] {On}.

.Display.Secondary.Audio.Mark.

{Off}..Hide.the.Secondary.Audio.Mark. [Last Memory] If.you.open.

the.disc.tray.or.switch.this. player.to.standby.state.

during.normal. playback,.the.Blu-ray.

DiscTM.Player.can. memorize.the.

end.playing.point,.the.player. will.start.playback.from.the.

memorized. point.next.time.. {On}..Active.Last.Memory.

feature. {Off}..Disable.Last.

Memory.feature. Note: -Not all the Blu-rayTM discs can support this function. [PBC] VCD2.0.

has.PBC.control.(Playback Control)menu,which.allow.you.to.

interact.with.the.system.via.menu.. [On]..Display.
playback.control.menu,. use.NUMBER.
keys.to.select.desired.option.
{Off}..Hide.playback.control.menu.and. start.playback.from.

track1.automatically. [Closed Caption] Allow. people. who. are. deaf. or. hearing. impaired.,
to. have. access. to. television.
programming. by. displaying. the. audio.

The.DivX(R).VOD.DRM.means.DivX(R).Video. on.Demand.Digital.

Right.Management.. DivX®.is.the.name.of.a.revolutionary.
new.video.codec.which.is.
based.on.the. new.MPEG-4.
compression.standard.for. video..You.will.be.able.to.

play.DivX®. movies.using.this.player. You.can.only.play.
DivX®.videos.that. were.rented.
or.purchased.with.the.DivX®.
registration.code.of.this.product. Select.the.DivX(R).VOD.DRM.

option,.you. can.find.this.product's.registration.code. To.learn.more.please.visit. <http://www.divx.com/vod>. [Security] General Setting System Language Playback Security Network Move cursor key to select menu option then use "OK" key to select Change Password Country Code Parental Control SETUP Exit · [Change password] Follow.the.instruction.on.

the.TV.set.or. change.
the.password.for.locked.discs. and.play.restricted.Blu-ray.Discs/DVDs.

General Setting System Language Playback Security Network Screen Save Off Change Password Disc Auto Playback On Please enter current password: CEC
On On More... Disc Auto Upgrade Load Default 1..Use.NUMBER.keys.to.enter.
four.digit. old.password..
The.default.password. is."0000".

2..Enter.the.new.password General Setting System Language Playback Security Network Screen Save Off Change Password Disc Auto Playback On CEC
New password: Move cursor key to select menu option then use "OK" key to select RETURN Return On On More... Disc Auto Upgrade Load Default Confirm
password: Move cursor key to select menu option then use "OK" key to select RETURN Return 3. Enter the new password again to confirm.

· [Country Code] [Network] General Setting This.ensures.that.you.will.be.able.to.see. the.
scenes. intended. for. your. current.
residential.Country/Area. Use. NUMBER. Keys.
to. enter. your. password,. then. you. can. choose. your. Country/Area.

· [Parental Control] Restricts.access.to.discs.that.are. unsuitable.for.children..
These.discs. must.be.recorded.
with.rating. 1..Press.

OK. 2..Use.NUMBER.keys.to.enter.the. password General Setting System Language Playback Security Network Screen Save Off Parental Control Disc Auto
Playback On Enter password: CEC Language Playback Security Network Connection Test Information More.

.. BD-Live Connection Permitted More... Move cursor key to select menu option then use "OK" key to select SETUP Exit On On More... Disc Auto Upgrade
Load Default Move cursor key to select menu option then use "OK" key to select RETURN Return 3..
Select.a.rating.level,.then.

press.OK. General Setting System Language Playback Security Network Screen Save Off Parental Control Disc Auto Playback On CEC On [1] KID SAFE
Disc Auto Upgrade On [2] G Load Default More...

Off Select level: Off RETURN Return Items G PG PG-13 PGR R NC-17 ADULT Description All children and general guidance Parental guidance Parental
guidance for children under 13 Parental guidance Recommended Restricted viewing No one 17 and under allowed Adult only KID SAFE Safe for kids · Notes:
- Rated discs above the level you set in [Parental Control] require a password to be entered. - The ratings are country-dependent. To allow all discs to play,
select 'Off'. · · · To.enjoy.BD-Live™.bonus.contents,. setup.the.

network.connection. Note: - Ensure that the network cable is properly connected and the router is switched on. 1..Connect.the.Blu-ray.Disc™.player.
to. the.broadband.modem.or.

router. 2..In.the.
Setup.menu,.select.[Network], then.press.. 3..Select.[IP.

Setting].in.the.menu,.then. press.OK.to.select.[Auto].
.An.IP.address. is.
obtained.automatically. If.no.IP.
address.is.obtained,.select. [Manual].to.input.IP.Address,.Subnet.

*Mask,.Default.Gateway,.DNS1/DNS2. and.press.OK.to.re-connect.again.
to.the. network..It.
will.try.to.obtain.the.
IP. address.again. 4..Press.RETURN.or.press.OK.*

to.exit. Notes: - During [Manual] mode, if the number is entered incorrectly, press V to erase the number.



[You're reading an excerpt. Click here to read official TOSHIBA
BDX-3200 user guide
http://yourpdfguides.com/dref/3960054](http://yourpdfguides.com/dref/3960054)

- A contract with the provider is needed to connect to the Internet. - This player does not support automatic detection of cross-cables. Use the straight (standard) LAN cable. - Loading BD-Live™ content from the internet may take some time, depending on the file size and the speed of the internet connection.

[IP Setting] [Auto]..Auto.
obtain.network.information. {Manual}..
Manual.setup.network.information. [Connection Test] Display.
Network.connection.status.information.. [BD-Live Connection] {Permitted}..During playback.of.

BDLive™.disc.,the.disc.may.automatically. download.all.information.from.
appointed.network. {Partial Permitted}..During.
playback.of.BD-Live™.disc.,the.
disc.may.automatically.download.partial.of.the.information.from.appointed.

network. {Prohibited}..Disable.downloading.information.from.network. [Information] Display.all.
Network.Informaion.. 1 English System IP Setting Auto Display Setting 1. Press.
SETUP [General Setting] menu.is.displayed. 2. Press to.
select.[Display Setting],. then.press... 3. Select.an.option.,
press.to.access. Display Setting TV Video Process Motion Vide... TV Screen Resolution Color Space HDMI Deep color HDMI 1080/24p Move cursor key to
select menu option then use "OK" key to select 16:9 Full Auto YCbCr422 Off On SETUP Exit 4. Press / to.select.a.setup.
option.and press .. 5. Select.
the.setting.you.wish.to.
change and press OK to confirm. -.Press to.return.to.the.previous. menu. -.Press SETUP.

to.exit.the.menu.. [TV] · [TV Screen] Select.the.screen.format.according.
to.how.you.want.the.
picture.to.appear.on.the.
TV. {16:9 Full}..for.a.disc.with.the.aspect.ratio.
of.4:3,.the.output.video.is.stretched.into.16:9.full.
screen. {16:9 Normal}..for.a.
disc.with.the.aspect.ratio.
of.4:3,.the.output.video.is.resized.vertically.to.match.
what.will.be.seen.on.the.display. {4:3 Pan&Scan}..for.
standard.TV,. Display.a.wide.
picture.on.the.entire.screen.
and.cuts.off.the.redundant.portions. {4:3 Letterbox}..for.standard.
TV,. Display.a.wide.picture.with.two.black.borders.on.
the.top.and.bottom.of.
4:3.screen. · [Resolution] Select.a.video.
output.resolution.that.is.compatible.with.your.TV.display.capability.
[Auto]..Select.the.most.suitable.resolution.according.to.the.
TV.. {480i/576i}, {480p/576p}, {720p},
{1080i}, {1080p}. .Select.a.
video.resolution.setting.that.is.best.supported.by.the.TV.

.See.TV.manual.for.details. Note: -When resolution is set to 720p/1080i/1080p: (1) If only CVBS connected, the resolution of CVBS video output will be set to 480i/576i automatically. (2) If HDMI and CVBS are both connected, there will be no CVBS video output, instead, a message will be shown as follows: Out Of
Range:Check Display Resolution · [Color Space] Select a predefined Colour space of picture. {RGB}..
select.RGB.Colour.space. {YCbCr}..
.select.YCbCr.Colour.space.
{YCbCr422}..Select.YCbCr422.Colour.space. {Full RGB}..select.Full.
RGB.Colour.space. · [HDMI Deep Color] This.feature.is.available.only.when.the.
display.device.is.connected.by.
a.HDMI.cable.,and.when.
it.supports.deep.Colour.feature. {30 bits}..Output.30.bits.
Colour. {36 bits}..Output.36.bits.Colour. {Off}..Output.
standard.24.bit.Colour. Note: -When the Colour space is "YCbCr422", even if HDMI Deep Colour is set to 30bits/36bits, it is not output with Deep Colour.
English 0 · [HDMI 1080/24p] {On}..Enable.1080/24p.video.
resolution.setting. {Off}..Disable.1080/24p.video.resolution.setting. · [HDMI 3D] Turn.
on.or.off.the.3D.function. {Auto}..Opening..
the.3D.function.of.player.

{Off}..Turn.off.the.
3D.function. When.you.play.a.side.by.side.3D.

disc,. which.is.a.kind.of.3D.disc.and.it.
is.make. up.of.two.
frames,.the.player.will.playback.
this.disc.and.export.the.content.based.on. the TV's settings. So if you want to do some.

settings,.such.as.OSC.or.program,. please ensure that the 3D TV's setting is correct. Note: If you do some 3D TV's setting during 3D disc playback, the TV screen may be abnormal. To recover, load the 3D TV's default setting first. [Video Process] Display Setting TV Video Process Motion Vide.
.. Video Adjust Sharpness More...

Low Notes about HDMI 1080/24p: If you want the 24Hz output, it should fulfill below 3 conditions: 1.TV supports the 24Hz display; 2.Player choose the 24Hz option in the setup menu; 3.Media must be the 24Hz video. Notes - This resolution becomes effective only when the playing Blu-ray Disc™ contents are Film source.

- During HDMI 1080/24p playback, there will be no composite output. Move cursor key to select menu option then use "OK" key to select SETUP Exit · [Video Adjust] Select a predefined setting of the video. 1..Press.OK.. 2..Press/ to adjust the video Brightness, Contrast, Hue and Saturation.

{Brightness}-press./to.adjust.the. brightness.of.display,.goes.
left.means. dark.and.right.
means.bright. {Contrast}-..press.
./to.adjust.the. contrast.of.display,.goes.left.means.

low. contrast.and.right.means.high.contrast. {Hue}-press./.
to.adjust.the.Hue.of.
display,. goes. left. means. low.
hue. and. right.means.high.hue. {Saturation}-press./to.

adjust.the. saturation. of. display,. goes. left. . means. low.
Saturation. and. right. means. high.
saturation. 3..Press.RETURN.

to.exit. Brightness Contrast Hue Saturation Change Return Exit · [Sharpness] Select.the.level.of.sharpness:.High,. Middle,.Low {High}-

Select.High.sharpness.level {Middle}-Select.Middle.sharpness.level {Low}-.Select.

Low.sharpness.level [Motion Video Process] Display Setting TV Video Process Motion Video...

Video Mode Color Adjust Noise Reduction 0 Standard · [Color Adjust] You can define your own Colour adjustment.when.you.select.the.
Custom. video.mode.and.you.can.adjust.the. Colour.of.

red,.green,.blue,.yellow,.cyan. and.magenta. {Red} Define your own red Colour by adjusting.the.brightness,.
saturation.and.hue. {Green}.Define your own green Colour by adjusting.
the.brightness,.saturation.and.hue.

{Blue}.Define your own blue Colour by adjusting.the.brightness,.saturation.and.hue. {Yellow} Define your own yellow Colour by adjusting.the.

brightness,.saturation. and.hue. {Cyan} Define your own cyan Colour by adjusting.the.brightness,.saturation.and.hue.

{Magenta}.Define your own magenta Colour by adjusting.the.brightness,.
saturation.and.hue. · [Noise Reduction] Reduces.the.
noise.of.the.playback.picture. {0}..Shows.the.original.

picture.as. recorded. {1}..Executes.3D.noise.reduction.which.
detects.and.deletes.the.noise.
by. comparing.each.picture.frames.

{2}..Executes.MPEG.noise.reduction. which.reduces.the.block.

noise.and. mosquito.noise.on.the.subtitles.on.the. movie.
{3}..Executes.both.MPEG.
noise. reduction.and.3D.noise.

reduction. Audio Setting 1. Press.SETUP [General Setting] menu.is.displayed. 2. Press to.select.[Audio Setting],.

then.press... 3. Select.an.option,.press to.access.

Audio Setting Audio Output Spdif HDMI Down_samp DRC Move cursor key to select menu option then use "OK" key to select PCM PCM 48K Off Move
cursor key to select menu option then use "OK" key to select SETUP Exit · [Video Mode] Select.the.output.mode.of.

video.options. include:.Standard,.Vivid,.Cinema,.

Custom,. these.can.change.the.output.display. {Standard}.output.video.

signal.without. any.processing.and.in.standard.mode. {Vivid}.output.
video.signal.in.vibrant. Colour.

mode. {Cinema}.output.video.signal.

in.cinema. mode. {Custom} you can define your own video mode.by.adjusting.



[You're reading an excerpt. Click here to read official TOSHIBA
BDX-3200 user guide
http://yourpdfguides.com/dref/3960054](http://yourpdfguides.com/dref/3960054)

the.video.Brightness,. Saturation,.

Hue,.Contrast,.Sharpness.and. CTI. SETUP Exit 4. Press / to.select.a.setup.
option.and press .. 5. Select.

the.setting.you.wish.to.
change and press OK to confirm. -.Press to.return.to.the.previous. menu. -.Press SETUP.

to.exit.the.menu. [Audio Output] · [Spdif] Select.the.output.mode.of.
COAXIAL. 1 English jack,.options.include.Bitstream,.
PCM,. Re-encode.and.Off. {Bitstream}.
.Output.digital.signal. without.any.processing. {PCM}..Output.

digital.signal.with. processing,.only.two.channels.export. {Re-encode}..
Auto.select.signal.type. from.
COAXIAL.jack.according.to.the.
Audio.stream.on.disc. {Off}..No.output.for.S/PDIF.

· [HDMI] Select.the.output.mode.of.HDMI.Out. jack,.options.include.
Bitstream,.PCM,. Re-encode.and.Off.
{Bitstream}..Output.HDMI.digital.
signal.without.any.processing. {PCM}..Output.HDMI.digital.signal.

with.processing,.only.two.channels. export. {Re-encode}..Auto.select.
signal.type. from.HDMI.Out.
jack.according.to.the. Audio.
stream.on.disc. {Off}..No.output.for.HDMI. · [Down_samp] Select.

the. digital. audio. signal. sampling. frequency. {48K}..For.discs.
recorded.at.sampling. rate.of.
48.kHz. {96K}..For.
discs.recorded.at.sampling. . rate.of.96.kHz..

{192K}..For.discs.recorded.at.sampling. rate.of.192.
kHz. · [DRC]. Select.the.Dynamic.
Range.Control.mode. which. makes.
it. available. to. listen. to. a. movie. at. a. low.

volume. without. losing. sound.clarity. {Off}..Non-dynamic.range.compress.
. {On}..Dynamic.range.
compress. {Auto}. . Adjust. the.
DRC. according. to. input.audio. The.setting.of.Auto.is.

effective.for.Dolby. TrueHD. System Information 1. Press.SETUP [General Setting].menu.is.displayed.

2. Press to.select.[System Information]. -.
The.current.software.version.and.

MAC. address.will.be.displayed. -.Press to.return.to.the.

previous. menu. -.Press SETUP.to.exit.the.menu. System Information English Software Version: BDP VXX MAC: E8-9D-87-XX-XX-XX Move cursor key to
select menu option then use "OK" key to select SETUP Exit 7 Specification. Playable media This.

product.can.play:. ·Blu-ray.

DiscTM-Video,.BD-R/RE2.0,.BD-RE .

DVD,.DVD-Video,.DVD+R/+RW,. DVD-R/-RW,.DVD+R/-R.DL.(Dual.Layer) · Video.CD/SVCD ·

Audio.CD,.CD-R/CD-RW ·AVCHD,.AVCREC.disc · USB flash device Video ·Signal.system:PAL/NTSC ·Composite.video.
output:.1Vp-p.(75.ohm). ·

HDMI. Output:. 480i/576i,480p/ . .

576p,.720p,.1080i,.1080p,.1080/24p Audio ·2.Channel.analogue.output -.Audio.

L&R.:2.Vrms.(<.2.2.kohm) Signal-to-noise Ratio 95 dB THD+N 1kHz -85 dB Dynamic Range 1kHz 85 dB Crosstalk 1kHz -95dB ·Digital.output.
(Coaxial):.0.5.Vp-p.(75.

ohm) ·HDMI.output LAN · LAN.terminal.10BASE-T/100BASE-TX USB ·
USB.1.1./USB.2.0.Full-speed./USB.

.... ·2.0.High-speed · Supporting range: flash disk, card reader, 4.ports.
USB.HUB,.USB.Mass.Storage.

Class. Device. MP3 tracks · Supported file extension: '.mp3' ·Supported.
audio.codec.:MP3 ·ISO.format ·Supported.corresponding.bitrate:.8kbps-.

320.kbps .Supported.sampling.frequencies:.32kHz,.. 44.1kHz,.
48kHz JPEG .Supported file extensions: '.jpg' or '.jpeg' .JPEG/ISO.format .
Does.not.support.Picture.CD Main Unit .
Power.supply.rating:. .100V-240V.50/60Hz .Power.consumption:.18W .

Power.consumption.in.standby.mode:.<1W .Dimensions.(w.x.h.
x.d):. .430×42.
5×200.(mm) .Net.Weight:.
1.45.kg .Operating.temperature:5°C.to.35°C .Operating.humidity:Less.than.

80.%(no. condensation) Accessories supplied . Remote control and Size 'R03' carbon ..zinc.batteries.(Two) .Simple.IB English DivX® . Supported file
extension: '.

DIVX' .DivX.HD 8 Troubleshooting If you experience any of the following difficulties while using this unit, check the list below before.consulting.your.
nearest.TOSHIBA.dealer. Problem.No.reaction.

to.the. remote.control. Tip Connect.the.product.to.the.power.

outlet. Point.the.remote.control.at.the.product. Insert.the.
batteries.correctly. Insert.new.batteries.
in.the.remote.control. No.
video.signal.on.the. display.device. Turn.on.the.TV.

Set.the.TV.to.the.correct.external.input. Select.the.
correct.video.resolution. Set.TV.
System.correctly. Incorrect.or.no.
audio./ video.signal.on.the. amplifier/display device via.HDMI.cable. No high-definition video signal.

on.the.TV. If.the.unit.is.connected.to.the.
unauthorized.display.device.with. an.
HDMI.cable,.the.audio/video.signal.

may.not.be.output. Ensure the amplifier/display devices setting match the Blu-ray Disc™.player. Does the disc contain high-definition video? High-definition
video.is.not.available.

when.the.disc.does.not.contain.it. Does the TV support high-definition video? High-definition video is.not.available.
when.the.TV.does.not.

support.it. No.audio.signal.
from. Assign.the.audio.input.of.the.TV.to.the.

corresponding.video. the.loudspeakers.of.the.. input. TV. No.
audio.signal.from. the.loudspeakers.
of.the. audio.system. No.
3D.effectiveness Turn.on.the.audio.system. Set.the.audio.system.

to.the.correct.external.input. Increase.the.volume.level.of.
the.audio.system. Set.HDMI.
3D.to.Auto. Connecting.by.
HDMI.cable. Connecting.to.a.3D.TV. Playback.a.3D.

disc. Wear.3D.glasses. English Cannot.play.back.a.disc. Make.
sure.that.the.Blu-ray.Disc™.
Player.supports.the.disc. For.
DVD+RW/+R.or.DVD-RW/-R,.make.sure.that.the.disc.is. finalized.

Clean.the.disc. Cannot.play.back.JPG. files from a disc. Cannot.play.
Divx® files Cannot play MP3 files from.a.disc. Make.sure.
that.the.disc.was.recorded.
in.the.UDF,.ISO9660.or. JOLIET.format. Make sure that the file was recorded in the H.264 or MPEG-4 format. Make.

sure.that.the.disc.was.recorded.in.the.UDF,.ISO9660.
or. JOLIET.format. Make sure that the bit rate of the MP3 files is between 8 and 320.kbps.
Make sure that the sample rate of the MP3 files is 32kHz, 44.1kHz.or.48kHz. Cannot find a JPEG file.
Make.sure.that.the.selected.group.(folder).does.not.contain.

more than 9,999 files for DVD, and 999 files for CD. Make sure that the file extension is .jpg, .JPG, .jpeg or .JPEG. Cannot find a MP3 file. Make.sure.that.
the.selected.folder.does.not.

contain.more.than. 9,999 files for DVD, and 999 files for CD. Make sure that the file extension is .
mp3 or .MP3. .Cannot.upgrade.SW When.you.upgrade.the.system.

with USB Flash device, you should make a new folder named UPG_ALL, and copy the upgrade file into this folder. Use USB Flash Device corresponding to the Mass Storage Class Driver. POWER The USB Flash

Device. Cannot be played Sometimes the options. When playing a DVD disc or Blu-ray Disc™, press STOP. of setup menu cannot button once, the player will go into stop resume

mode, be selected meanwhile you cannot change some settings in setup menu such as language subitem menu, audio, subtitle etc. If you want to change that, press STOP button

twice, the player will go into full stop mode, then you can do it. English Make sure that the Blu-ray Disc™ player supports the region code of the DVD or Blu-ray

Disc™. 9 Glossary Aspect ratio Aspect ratio refers to the length to height ratio of TV screens. The ratio of a standard TV is 4:3, while the ratio of a high definition or wide TV is 16:9. The letterbox allows you to enjoy

a picture with a wider perspective on a standard 4:3 screen. Blu-ray Disc™. Blu-ray Disc™

is a next generation optical video disc capable of storing five times more data than a conventional DVD. The large capacity makes it possible to benefit from the features such as high-definition videos, multichannel surround sound, interactive

menus and so on.



[You're reading an excerpt. Click here to read official TOSHIBA BDX-3200 user guide](http://yourpdfguides.com/dref/3960054)
<http://yourpdfguides.com/dref/3960054>

BONUSVIEW™. This is a Blu-ray Disc™ Video.
(Final Standard Profile or Profile 1.1) that supports interactive content
encoded on the disc, such
as picture-in-picture. This means you can play the primary

video and secondary video simultaneously. Digital Audio Digital Audio is a
sound signal that has been converted
into numerical values. Digital sound
can be transmitted through multiple channels. Analogue sound can only be

transmitted through two channels. DivX®. ABOUT.DIVX.VIDEO: DivX® is
a digital video format created
by DivX, Inc. This is an official DivX Certified® device that plays
DivX video. Visit divx.com for more information and software tools to convert your files into

DivX video. ABOUT.DIVX.VIDEO-ON-DEMAND: This DivX Certified® device must be registered
in order to play purchased
DivX Video-on-Demand (VOD) movies.
To obtain your registration code, locate the DivX VOD section

in your device setup menu. Go to vod.divx.
com for more information on
how to complete your registration.
DivX®, DivX Certified® and associated logos are trademarks of DivX, Inc.

and are used under license. For HD Test Kit 1080p.
v1.1 and later: DivX Certified® to
play DivX® video up to
HD 1080p, including premium content. Dolby® Digital The system to

compress digital sound developed by Dolby Laboratories. It offers you sound
of stereo (2ch) or multichannel audio.
Dolby® Digital Plus Dolby Digital Plus
is the next generation digital audio compression technology developed as an extension

to Dolby Digital. Blu-ray Disc™ supports 7.1 multi-channel surround sound
output. Dolby® TrueHD Dolby TrueHD is
a lossless coding technology developed for
next generation optical discs. Blu-ray Disc™ supports 7.1 multi-channel surround

sound output. DTS® DTS is a multi-channel surround sound system. By
connecting to DTS decoder, you can
enjoy movie dynamic and realistic sound.
like movie theater. DTS surround sound technologies were developed by DTS,

Inc. DTS-HD® DTS-HD is a lossless coding technology developed as an extension
of the original DTS Coherent Acoustics
format. Blu-ray Disc™ supports 7.
1 multi-channel surround sound output. DTS-HD Master Audio™ A disc encoded with

DTS-HD Master Audio delivers ALL of the information from the original master recording -- bit-for-bit, it's identical to
what the sound engineers laid down.

Audio doesn't get any better than this. HDCP High-bandwidth Digital Content Protection.

This is a specification that provides a secure transmission of digital contents between different devices (to prevent unauthorized copyright.

) English HDMI® High-Definition Multimedia Interface (HDMI) is a high-speed digital interface that can transmit uncompressed high definition video
and digital

multichannel audio. It delivers
high quality picture and sound.
quality. HDMI is fully backward compatible with DVI.

As required by the HDMI standard, connecting to HDMI or
DVI products without HDCP (High
bandwidth Digital Content Protection) will
result in no video or audio output. JPEG A very common

digital still picture format. A still picture data compression system proposed.

by.the.Joint.Photographic.Expert.
Group,. which. features. small. decrease.
in. image.quality.in.spite.of.its.high.compression. ratio.

Files are recognized by their file extension. '.jpg'.or. '.jpeg.'. LAN.(Local.Area.Network) A.
group.of.linked.devices.in.
a.company, school.or.home..

Indicates.the.boundaries.of.a.particular.network. Local.storage This.storage.area.

is.used.as.destination.for.storing.additional.contents.from.BD-Live™ enabled.Blu-ray.
Disc™-Video. MP3 A file format with a sound data compression.system..MP3.
is.the.abbreviation.of.Motion.Picture.

Experts Group.1.(or.MPEG-1).Audio.Layer.3..With.the.MP3.

format,.one.CD-R.or.CD-RW.can.contain.about.10.times.more.
data.than.a.regular.CD. PBC Playback.

Control..A.system.where.

you.navigate.through.a.Video.CD/Super.VCD with.on-screen.menus.that.are.

recorded.onto.the.disc..You.can.enjoy.interactive.playback.and.search.

PCM Pulse.Code.Modulation..A.

digital.audio.encoding.system. Region.code A.

system.that.allows.discs.to.be.played.only.in.the.region.

designated..This.unit.only.plays.discs.that.have.compatible.region.codes. You.can.find.the.region.code.of.
your.unit.on.the.product.

label..Some.discs.are.compatible.

with.more.than.one.region.(or.ALL.regions). English The.software.pre-installed.

in.this.product.consists.of.multiple,.independent.software.components..

Each.software.component.is.copyrighted.

by.a.third.party..

This.product.uses.software.components.that.are.distributed.as.freeware.

under.a.third-party.end-user.license.agreement.or.copyright.notice.(hereinafter.
referred.to.as.a."EULA").

Some.EULAs.require.that.the.

source.code.of.the.applicable.component.be.disclosed.as.the.

condition.for.distributing.the.software.component.in.executable.format..

You.can.check.the.software.

components.subject.to.such.EULA.

requirements.on.the.following.e-mail.address: E-mail.address:.linux@toshiba-dme.co.jp TOSHIBA.

provides.a.warranty.for.this.product.you.have.purchased.under.

conditions.set.forth.by.TOSHIBA.

.However,. some.of.the.

software.components.distributed.under.an.EULA.are.made.available.for.

use.by.the.user.on.the.assumption.that.they.are.

not.copyrighted.or.warranted.by.

a.third.party..These.

software.components.are.licensed.to.the.user. free.of.charge.

and.therefore.not.covered.by.any.warranty.within.the.scope.

of.the.applicable.laws..

These.software.components.are.not.

subject.to.any.copyrights.or.other.third-party.rights.and.are.

provided.in."as.is".condition.without.any.warranty,.whether.express.

or.implied.. "Warranty".here.

includes,.but.not.limited.to.,

an.implied.warranty. for marketability or fitness for specific uses. All risks associated with the quality or performance of these software
components.are.assumed.by.the.user.

.TOSHIBA.shall.not.be.liable.whatsoever.for.any.cost.

of.repair.or.correction. or.

other incidental expense incurred in connection with a defect found in any of these software

components. Unless specified under the applicable laws or in a written agreement, a party who changes or redistributes the software with consent from the copyright holders or based on the aforementioned licenses shall not be held liable whatsoever for any loss arising from the use of or inability

to use such software components. The same applies even when the copyright holders or relevant third parties have been informed of the possibility of such loss. "Loss" here

includes normal, special, incidental and indirect loss (including, but not limited to, the loss of data or its accuracy; loss incurred by the user or any third party; and interface

incompatibility with other software). Please read each EULA for details on the use conditions and items that must be observed regarding these software components. The table below lists the

software components pre-installed in this product, which are subject to EULAs. The user. @@@@ Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA. Everyone is permitted to

copy and distribute verbatim copies of this license document, but changing it is not allowed. @ take away your freedom to share and change it. By contrast, the GNU

General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users... This General Public

License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it.

(Some other Free Software Foundation software is covered by the GNU Lesser General Public

License instead.) You can apply it to your programs, too. ...

When we speak of free software, we are referring to freedom, not price. Our

General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software.



[You're reading an excerpt. Click here to read official TOSHIBA BDX-3200 user guide](http://yourpdfguides.com/dref/3960054)
<http://yourpdfguides.com/dref/3960054>

(and charge.
for this service if you wish), that you receive source
code or can get it if you want it, that
you can change the software
or use pieces of it
in new free programs; and that you know you can
do these things. @ rights or to ask you to surrender
the rights. These restrictions translate
to certain responsibilities for you
if you distribute copies of the software, or if you
modify it. For example, if you distribute copies
of such a program, whether
gratis or for a fee,
you must give the recipients all the rights that you
have. . You must make sure that they, too,
receive or can get the
source code. . And
you must show them these terms so they know their
rights. . . We protect your rights with two steps:
(1) @@@@ to know that what
they have is not the
original, so that any problems introduced by others will not reflect on the original authors' reputations.
. . Finally, any free program is threatened constantly by
software patents. We wish
to avoid the danger that
redistributors of a free program will individually obtain patent licenses,
in effect making the program proprietary. To prevent this,
we have made it clear
that any patent must be licensed for everyone's free use or not licensed at
all. . The precise terms and conditions for copying,
distribution and modification follow. GNU GENERAL PUBLIC LICENSE . . . TERMS AND CONDITIONS.
FOR COPYING, @@@@. @@@@ translation is
included without limitation in the
@@Activities other than copying, distribution and @@the Program is not
restricted, and the output from the Program is covered only
if its contents constitute a
work based on the Program.
(independent of having been made by running the Program).
Whether that is true depends on what the Program does.
@@and appropriately publish on each
@@of warranty; keep intact all
the notices that refer to this License and to the
absence of any warranty; and give any other recipients of the
Program a copy of this
License along with the Program.
You may charge a fee for the physical act of
transferring a copy, and you may at your option offer
warranty protection in exchange for
a fee. . . 2.
. You may modify your copy or copies of the
Program or any portion of it, thus forming a work
based on the Program, and
copy and distribute such modifications or work under the terms of Section
1. above, provided that you @@files and the date of any change. @@or is derived from.

the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License. c) If the modified program normally reads commands interactively when run, you

must cause it, when started running for such interactive use, in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that

there is no warranty (or else, saying that you provide a warranty), and that users may redistribute the program under these conditions, and telling the user how to view a copy

of this License. (Exception: if the Program itself is interactive, these sections when you distribute it are a work based on the Program, the distribution of

the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who

wrote it. Thus, it is not the intent of this section to claim, in addition, mere aggregation of another work not based on the Program with the Program (or with

a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License. 3.

You may copy and distribute the Program in Sections 1 and 2 above provided that you also do one of the following: . . . a) Accompany it with the

complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or, . . .

b) Accompany it with a written offer, valid for at least three years, to give any third party, at a machine-readable copy of the corresponding source code, to be distributed under the

terms of source code. (This alternative is allowed only for noncommercial distribution and only if Subsection b above.) The source code for a work means the preferred form of the work for making modifications to it.

. For an executable work, complete source code means all the source code for all modules, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on. If distribution of executable or object code is made

by offering access to copy from a designated place, then

offering equivalent access to copy
the source code from the
same place counts as distribution of the source code, even
though third parties are not compelled to copy the source
along with the object code.
.. 4. You
may not copy, modify, sublicense, or distribute the Program except
as expressly provided under this License. . Any attempt
otherwise to copy, modify, sublicense
or distribute. @@ However, parties who
have received copies, or rights, from you under this License
will not have their licenses terminated so long as such
parties remain in full compliance.
.. 5. You
are not required to accept this License, since you have
not signed it... However, nothing. @@ actions are prohibited
by law if you do
not accept this License.
. Therefore, by modifying or distributing the Program (or any
work based on the Program), you indicate your acceptance of
this License to do so,
and all its terms and
conditions for copying, distributing or modifying the Program or works based
on it. .. 6. Each time you redistribute
the Program (or any work
based on the Program), the
recipient automatically receives a license from the original licensor to
copy, distribute or modify the Program subject to these terms
and conditions. . You
may not impose any further
restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing
compliance by third parties to this License. .. 7.
. If, as a consequence
of a court judgment or
allegation of patent infringement or for any other reason (not
limited to patent issues), conditions are imposed on you (whether by
court order, agreement or otherwise)
that contradict the conditions of
this License, they do not excuse you from the conditions
of this License... If you cannot distribute so
as to satisfy simultaneously your
obligations under this License and any
other pertinent obligations, then as a consequence you may not
distribute the Program at all... For example, if
a patent license would not permit
royalty-free redistribution of the Program
by all those who receive copies directly or indirectly through
you, then the only way you could satisfy both it and
this License would be to
refrain entirely from distribution of
the Program. If any portion of this section is held
invalid or unenforceable under any particular circumstance, the balance of
the section is intended to
apply and the section as

a whole is intended to apply in other circumstances. It

*is not the purpose of this section to induce you
to infringe any patents or
other property right claims or
to contest validity of any such claims; this section has*

*the sole purpose of protecting the integrity of the free
software distribution system, which is
implemented by public license practices.
..Many people have made generous contributions to the wide*

*range of software distributed through that system in reliance on
consistent application of that system;
it is up to the
author/donor to decide if he or she*



**[You're reading an excerpt. Click here to read official TOSHIBA
BDX-3200 user guide
http://yourpdfguides.com/dref/3960054](http://yourpdfguides.com/dref/3960054)**