



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TOSHIBA ENCORE 2 WT10-A-102 (PDW0BE-006029FR). You'll find the answers to all your questions on the TOSHIBA ENCORE 2 WT10-A-102 (PDW0BE-006029FR) in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TOSHIBA ENCORE 2 WT10-A-102 (PDW0BE-006029FR)

User guide TOSHIBA ENCORE 2 WT10-A-102 (PDW0BE-006029FR)

Operating instructions TOSHIBA ENCORE 2 WT10-A-102 (PDW0BE-006029FR)

Instructions for use TOSHIBA ENCORE 2 WT10-A-102 (PDW0BE-006029FR)

Instruction manual TOSHIBA ENCORE 2 WT10-A-102 (PDW0BE-006029FR)



[You're reading an excerpt. Click here to read official TOSHIBA ENCORE 2 WT10-A-102 \(PDW0BE-006029FR\) user guide](http://yourpdfguides.com/dref/5834473)
<http://yourpdfguides.com/dref/5834473>

Manual abstract:

The screen is made of glass so avoid contact with sharp, rough, or abrasive objects or substances as screen may break or scratch if not handled properly. If you see a crack in the glass, discontinue use of the device to avoid injury. **Note:** The device's battery is not accessible by the user. **Subject to Change.** Wash hands after handling. Getting started Connect to a power source Assemble the AC/USB adaptor and the USB power cable and then connect it to your device and a live electrical outlet. You are now ready to start using your device. You can also charge your device by connecting the USB power cable to a USB port on your device. Make sure your device is turned ON while charging via USB. If your device is turned OFF, depending on device specifications, the tablet battery may discharge.

We recommend that you do not use your tablet while charging via USB as auto shutdown may occur if the battery charge is too low. Connect to the Internet Connect to a network to take full advantage of your device's features. Backup your device It is strongly recommended that you create a back up of your device before using it for the first time. This will enable you to return it to its out-of-box state, if necessary. Register your device Enhance your ownership experience by taking a few minutes to register your Toshiba Product at register.

toshiba.com. Completing Product registration allows Toshiba to provide you with Product information updates, special offers and promotions. Failure to complete Product registration will not diminish your rights under the Standard Limited Warranty. Quick Tour Front Front web camera* Note: When you rotate the device from portrait to landscape (or vice versa), the screen orientation automatically changes according to the rotation angle.

To lock the screen so that it does not rotate automatically, orient the device in the desired screen rotation (portrait or landscape) and do the following steps: 1. Swipe in from the right edge to reveal the charms. *Available on certain models. Display Back Back camera* 2. Touch the Settings charm. 3. Touch the Screen icon. 4. Swipe in from the top edge to reveal the Settings charm. 5. Touch the Screen icon.

screen. When the The Networks Windows charms screen appears. Select your appear, touch network. Touch the Settings Connect. charm. 3. Enter the network E security key (if applicable). Touch Next. Select Power Touch the Settings then Sleep/Shutdown/Restart. Keep the information near your Product for future reference.

Prevent direct exposure to heat sources. Cleaning Unplug Product from the electrical outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. This could cause a short circuit. Service Provider Disconnect Product from the electrical outlet and take Product to an authorized Toshiba service provider if: • AC adaptor or power cable/cord is damaged.

• Liquid has spilled into Product or an object (such as a screw, staple or L paper clip) has entered Product. • Product has been dropped, subject to shock or impact and/or damaged in some way. • Noticeable signs of overheating, smoke, deformation, cracks, leaks or unusual odor occur. • Service is needed on component inside compartments requiring opening or removal of covers. Thunderstorm Never operate your Product during a thunderstorm.

An electrical surge caused by the storm may cause system failure, loss of data or hardware damage. Wireless Functionalities Turn off your Product and/or all wireless functionalities where electronic devices are regulated or controlled or when near a person with any medical electric devices. Water and moisture Do not use Product in a wet location. Do not connect/disconnect a power plug/cord with wet hands. Need Help? Start Screen Most problems are easy to correct.

Save time with one of these simple solutions. Consult the electronic User's Guide (Internet connection required) To access the electronic User's Guide through your Start screen 1. Touch the TOSHIBA Central T 2. Touch User's Guide tile/icon Note: The User's Guide will be automatically downloaded and saved on your device so that you can access it at a later time. The User's Guide opens in the default PDF reader software; you may be required to complete a setup process.

For solutions to the most common problems, refer to the "If Something Goes Wrong" section of the User's Guide. Visit Toshiba's Support Web site Technical support is available online at Toshiba's Web site at support.toshiba.com. Wi-Fi is a registered trademark of the Wi-Fi Alliance. All other brand and product names are trademarks or registered trademarks of their respective companies. Printed on recycled paper ©2014 Toshiba America Information Systems, Inc. GMA501325011 • 11/14 .



[You're reading an excerpt. Click here to read official TOSHIBA ENCORE 2 WT10-A-102 \(PDW0BE-006029FR\) user guide](http://yourpdfguides.com/dref/5834473)
<http://yourpdfguides.com/dref/5834473>