



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TOSHIBA RBC-AMT31E. You'll find the answers to all your questions on the TOSHIBA RBC-AMT31E in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TOSHIBA RBC-AMT31E
User guide TOSHIBA RBC-AMT31E
Operating instructions TOSHIBA RBC-AMT31E
Instructions for use TOSHIBA RBC-AMT31E
Instruction manual TOSHIBA RBC-AMT31E

TOSHIBA

OWNER'S MANUAL
MANUEL DU PROPRIETAIRE
BETRIEBSANLEITUNG
MANUALE DEL PROPRIETARIO
MANUAL DEL PROPIETARIO
MANUAL DO UTILIZADOR
GEBRUIKSAANWIJZING
ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ
用户手册

WIRED STANDARD REMOTE CONTROLLER RBC-AMT31E


Object Indoor Unit

Super Modular Multi System/
Super Heat Recovery System

- <4-way Air Discharge Cassette Type>
MMU-AP0081H, AP0121H, AP0151H, AP0181H, AP0241H,
MMU-AP0271H, AP0301H, AP0361H, AP0481H, AP0561H
- <2-way Air Discharge Cassette Type>
MMU-AP0071WH, AP0091WH, AP0121WH, AP0151WH, AP0181WH, AP0241WH, AP0271WH,
MMU-AP0301WH
- <1-way Air Discharge Cassette Type>
MMU-AP0071YH, AP0091YH, AP0121YH, AP0151SH, AP0181SH, AP0241SH
- <Concealed Duct Standard Type>
MMD-AP0071BH, AP0091BH, AP0121BH, AP0151BH, AP0181BH, AP0241BH, AP0271BH,
MMD-AP0301BH, AP0361BH, AP0481BH, AP0561BH
- <Concealed Duct High Static Pressure Type>
MMD-AP0181H, AP0241H, AP0271H, AP0361H, AP0481H, AP0721H, AP0961H
- <Under Ceiling Type>
MMC-AP0151H, AP0181H, AP0241H, AP0271H, AP0361H, AP0481H
- <High Wall Type>
MMK-AP0071H, AP0072H, AP0091H, AP0092H, AP0121H, AP0122H, AP0151H, AP0181H, AP0241H
- <Floor Standing Cabinet Type>
MML-AP0071H, AP0091H, AP0121H, AP0151H, AP0181H, AP0241H
- <Floor Standing Concealed Type>
MML-AP0071BH, AP0091BH, AP0121BH, AP0151BH, AP0181BH, AP0241BH
- <Floor Standing Type>
MMF-AP0151H, AP0181H, AP0241H, AP0271H, AP0361H, AP0481H, AP0561H

Digital Inverter Air Conditioner

- <4-way Air Discharge Cassette Type>
RAV-SM560UT-E, SM800UT-E, SM1100UT-E, SM1400UT-E
RAV-SF1100UT-E (Super Digital Inverter)
- <Under Ceiling Type>
RAV-SM561CT-E, SM801CT-E, SM1101CT-E, SM1401CT-E
- <Concealed Duct High Static Pressure Type>
RAV-SM561BT-E, SM801BT-E, SM1101BT-E, SM1401BT-E

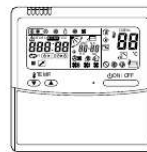

[You're reading an excerpt. Click here to read official TOSHIBA RBC-AMT31E user guide](http://yourpdfguides.com/dref/3704289)
<http://yourpdfguides.com/dref/3704289>

Manual abstract:

PRUDENCE Avant d'utiliser la tlcommande (RBC-AMT31E), veuillez lire ce Mode d'emploi. Consultez le Manuel d'installation du climatiseur uniquement pour installer la tlcommande, pas pour la faire fonctionner. Pour utiliser cette tlcommande de faon correcte et sre, lisez attentivement ce Mode d'emploi en entier. Lorsque vous avez fini de lire ce Mode d'emploi, rangez-le soigneusement pour pouvoir le consulter par la suite. Si une autre personne doit utiliser la tlcommande, remettez-lui ce Mode d'emploi. VORSICHT Lesen Sie dieses Benutzerhandbuch, bevor Sie die Fernbedienung (RBC-AMT31E) benutzen.

Einzelheiten zur Installation der Fernbedienung finden Sie in dem dem Klimagerat beiliegenden Installationshandbuch. Lesen Sie das Handbuch sorgfhtig, so dass Sie den Inhalt verstehen, um die Fernbedienung sicher und korrekt zu bedienen. Bewahren Sie das Handbuch nach dem Lesen so auf, dass jeder, der die Fernbedienung benutzen will, Zugriff auf das Handbuch hat. Will eine andere Person die Fernbedienung benutzen, hndigen Sie ihr das Handbuch aus.

AVVERTENZA Prima di usare il telecomando (RBC-AMT31E), raccomandiamo la lettura di questo manuale d'istruzioni destinato al proprietario. Solo per l'installazione del telecomando, non per il funzionamento, fare riferimento al manuale di installazione fornito con il condizionatore d'aria. Per utilizzare il telecomando correttamente e in condizioni di sicurezza, leggere completamente questo Manuale d'istruzioni. Dopo aver letto questo manuale, conservarlo a portata di mano di altri che debbano poi usare il telecomando. Se un'altra persona deve usare il telecomando, raccomandare la lettura del manuale.

PRECAUCIN Lea este Manual del propietario antes de utilizar el mando a distancia (RBC-AMT31E). Para conocer ms detalles slo acerca de la instalacin del mando a distancia, consulte el Manual de instalacin que se adjunta con el aparato de aire acondicionado. @@@@ Para utilizar este controlador remoto em segurana e correctamente, leia atentamente o presente Manual de Instrues antes da sua utilizao para um entendimento exaustivo.

Depois da leitura do presente manual, guarde-o para que quem utilizar o controlador remoto o possa ler em qualquer altura. Se outra pessoa utilizar o controlador remoto, faculte-lhe o Manual.

LET OP Lees voordat u de afstandsbediening (RBC-AMT31E) gaat gebruiken eerst deze gebruiksaanwijzing. Meer informatie over de installatie (dus niet over de werking) van de afstandsbediening vindt u in de installatiehandleiding bij de airconditionerunit. Lees voor een veilig en correct gebruik van deze afstandsbediening deze handleiding aandachtig door. Bewaar deze handleiding, zodat u deze in de toekomst zonodig nogmaals kunt nalezen. Overhandig de handleiding, als iemand anders de afstandsbediening gebruikt, aan deze persoon. (RBC-AMT31E),

(RBC-AMT31E) CONTENTS SAFETY CAUTION

.....
.....
.....

.....
.....
.....

..... 1 PARTS NAME OF REMOTE CONTROLLER ...

.....

.... 2 CORRECT USAGE .

.....
.....
.....
.....
.....

. 4 TIMER OPERATION ...

.....
.....
.....
.....
.....

..... 5 ADJUSTMENT OF WIND DIRECTION

.....
.....
.....

... 6 MAINTENANCE

.....
.....
.....
.....
.....

... 10 TROUBLESHOOTING

.....
.....
.....

.....
.....
.....

... 11 MESURES DE SECURITE

.....
.....
.....
.....

..... 12 NOM DES PIECES DE LA TELECOMMANDE

.....

... 13 UTILISATION CORRECTE ..

.....
.....
.....
.....
.....

. 15 FONCTIONNEMENT PAR MINUTERIE

.....
.....

..... 16 REGLAGE DU SENS DE SOUFFLAGE

.....
.....

... 17 ENTRETIEN ..

.....
.....
.....
.....
.....

.....
.....
.....

.... 21 DPANNAGE

.....
.....
.....
.....

.....
.....
.....

..... @@23 TEILEBEZEICHNUNG DER FERNBEDIENUNG ..

..... 24 RICHTIGE HANDHABUNG ...

.....
.....
.....

.....
.....
.....

.... @@27 EINSTELLUNG DES LUFTSTROMS .

.....
.....

| | |
|-------------------------------------------------|-------|
| | |
| . @@@@33 PRECAUZIONI DI SICUREZZA | |
| | |
| | |
| | |
| .. 34 NOME DELLE PARTI DEL TELECOMANDO | |
| @37 FUNZIONAMENTO CON TIMER ... | |
| | |
| | |
| | |
| . 38 REGOLAZIONE DELLA DIREZIONE DELL'ARIA | |
| ... @43 RISOLUZIONE DEI PROBLEMI .. | |
| | |
| | |
| | |
| ... 44 PRECAUCIONES DE SEGURIDAD | |
| | |
| | |
| | |
| .. @46 UTILIZACION CORRECTA | |
| | |
| | |
| | |
| | |
| 48 FUNCIONAMIENTO DEL TEMPORIZADOR | |
| | |
| | |
| . 49 AJUSTE DE LA DIRECCIN DEL AIRE | |
| | |
| .. @54 RESOLUCIN DE PROBLEMAS ... | |
| | |
| | |
| | |
| 55 PRECAUO DE SEGURANA | |
| | |
| | |
| | |
| ... 56 NOME DAS PEAS DO CONTROLADOR REMOTO .. | |
| 57 UTILIZAO CORRECTA | |
| | |
| | |
| | |
| | |
| 59 OPERAO DO TEMPORIZADOR | |
| | |
| | |
| | |
| 60 REGULAO DA DIRECO DO VENTO | |
| | |
| | |

.. @ @65 RESOLUO DE PROBLEMAS

.....
.....
.....

..... 66 INHOUD AANDACHTSPUNTEN VOOR UW VEILIGHEID

..... @ @ @ @70 DE TIMER GEBRUIKEN

.....
.....
.....

... 71 INSTELLEN VAN DE LUCHTSTROOMRICHTING 72 ONDERHOUD .

.....
.....
.....
.....

.....
.....
.....
.....

.. 76 STORINGEN VERHELPEN

.....
.....
.....

.....
... 77 .
.....
.....

..... 78 .
79

.....
.....
.....

.....
.....
.....
.....

.....
... 81 .
.....
.....

.....
.....
82

... 83

.....
.....
.....
.....

.....
.....
.....

..... 87 .

.....
.....
.....

..... 88 NEDERLANDS PORTUGUS NDICE ESPAOL CONTENIDO ITALIANO INDICE DEUTSCH INHALT FRANCAIS SOMMAIRE ENGLISH SAFETY
CAUTION Please read this "Safety Cautions" thoroughly before installation to install the air conditioner correctly.

The important contents concerned to the safety are described in the "Safety Cautions". Be sure to keep them. For Indications and their meanings, see the following description. n Explanation of indications WARNING Indicates possibilities that a death or serious injury of personnel is caused by an incorrect handling. CAUTION Indicates contents that an injury (1) or property damage (2) only may be caused when an incorrect work has been executed. 1 : "Injury" means a hurt, a burn, or an electric shock which does not require hospitalization or a long-term going to the hospital. 2 : "Property damage" means an enlarged damage concerned to property, or breakage of materials. After installation work has finished, check there is no trouble by a test operation, and explain using method and maintenance method to the customers based on the Owner's Manual. Please ask the customers to keep this Installation Manual together with the Owner's Manual. Make sure to ask the qualified installation professional in electric work to install the air conditioner.

If the air conditioner is inappropriate installed by yourself, it may cause water leak, electric shock, fire, and so on. A person qualified for the electric work should deal with the electric construction conforming to the regulations of the local electric company and the Installation Manual. Be sure to use the exclusive circuit. If there is capacity shortage of the power supply circuit or incomplete installation, a fire or an electric shock is caused. For wiring, use the specified wires and connect them securely so that external force of wire does not transmit to the terminal connecting section.

If connection or fixing is incomplete, a fire, etc may be caused. For the products sold separately, be sure to use those specified by us. Be sure to use the products sold separately which are specified by us; otherwise a fire, an electric shock, or water leak may be caused. Moreover ask an expert to install the air conditioner. When you notice something abnormal with the air conditioner (smells like something scorching, poor cooling, etc.

), immediately turn off the main switch, the circuit breaker, from the mains to stop the air conditioner, and contact the dealer. If the air conditioner is continuously operated with something abnormal, it may cause machine failure, electric shock, fire, and so on. Do not touch the switches with the wet hands. Otherwise an electric shock may be caused. When cleaning the air conditioner, be sure to stop the operation and turn off the power switch.



[You're reading an excerpt. Click here to read official TOSHIBA RBC-AMT31E user guide](http://yourpdfguides.com/dref/3704289)
<http://yourpdfguides.com/dref/3704289>

Otherwise an injury may be caused because the fan rfan which is sold on the market or etc. is connected. @@@@Lamp is off when stopped.
@@@@@Operation select button Selects desired operation mode. Set up temperature button Adjusts the room temperature.

@@SWING/FIX : Set up the auto swing and angle of the flap. @@the temperature. @@@@ Do not turn off the leak breaker while the air conditioner is used. @@@@The operation lamp goes on, and the operation starts. Select an operation mode with the button. @@@@@" is displayed and the air volume is LOW. @@@@The setup value is a criterion of the room temperature. (Automatic air speed cannot be selected in FAN mode.) Air volume of function is not provided to "Concealed Duct High Static Pressure Type" but air speed "HIGH " only is displayed. 4 Determine the set up temperature by pushing the "TEMP.

" or "TEMP. " button. Stop Push ON / OFF button. The operation lamp goes off, and the operation stops. 4 TIMER OPERATION A type of timer operation can be selected from the following three types.

OFF timer : The operation stops when the time of timer has reached the set time. @@@@ The timer display (type) changes for every push of the button. display flashes. @@@@For the setup time above (24 hr), time increases in the unit of 1 hr. The maximum setup time is (168 hr).

@@of days and time. @@@@ SET DATA display disappears and display goes on. @@ TIMER display disappears. NOTICE When in switch on the remote controller. @@Adjusting the stop position, push the switch. 2-way Air Discharge Cassette, 1-way Air Discharge Cassette, Floor Standing, High Wall Type [In Cooling operation] Use the air outlet flap with horizontal set point. [In Heating operation (For Heat-pump model only)] Use the air outlet flap with downward set point. Setup of air direction and swinging 1 2 3 Push SWING/FIX button during operation. [SWING] is displayed and the air direction automatically changes upward/downward. In case when one remote controller controls the multiple indoor units, each indoor unit can be selected and its air direction can be set up.

Push SWING/FIX button again during swinging of the air outlet flapp. The air outlet flap can be stopped at the desired position. UNIT TEMP. ON / OFF TIMER SET TIME FILTER RESET TEST SET CL FAN SWING/FIX UNIT MODE VENT To set up the air direction individually, push button to display each indoor unit No. in a group control. Then set up the air direction to a displayed indoor unit. If there is no display, all the indoor units can be operated collectively. @@1-1 Unit No. 1-4 Unit No. 1-3 3 Unit No.

@@@@ Do not move the horizontal flap directly with hands; otherwise a trouble is caused. Select direction of the horizontal flap using SWING/FIX switch on the remote controller. @@Adjusting the stop position, push the switch. Adjustment of air direction rightward/leftward To change the air outlet direction to right or left side, set the vertical flap inside of the horizontal flap to the desired direction. Setup of air direction and swinging Refer to description of "2-way Air Discharge Cassette Type".

9 Floor Standing Type Adjustment of air direction upward/downward [In Cooling operation] In cooling operation, move the flap with hands and use it with horizontal air outlet point so that the cold air diffuses in whole room. [In Heating operation (For Heat-pump model only)] In heating operation, move the flap with hands and use the horizontal flap with downward set point so that the hot air blows at the foot. Adjustment of air direction rightward/leftward [In case of using unsymmetrical air directions] Lift up the vertical flap lightly, direct it toward the desired direction, and lower it. In this case, do not use the Swing function. 2 1 In this case, do not use the swing function.

MAINTENANCE Cleaning of air filter When [FILTER] is displayed on the remote controller, maintain the air filter. Clogging of air filter decreases cooling/heating effect. CODE No. SET DATA SETTING TEST UNIT No. FILTER display Notifies the time to clean the air filter. H R.C. No. TEMP. ON / OFF TIMER SET TIME FAN SWING/FIX UNIT MODE VENT FILTER reset Push the FILTER switch after cleaning.

"FILTER" display disappears. FILTER RESET TEST SET CL WARNING Be sure to turn off the main power switch prior to the maintenance.

@@@@@appear on the display part of the remote controller. The check code is only displayed during the operation. @@in which an error occurred Confirmation of error history When a trouble occurred on the air conditioner, the trouble history can be confirmed with the following procedure. (The trouble history is stored in memory up to 4 troubles.) The history can be confirmed from both operating status and stop status. TEMP. ON / OFF 2 FILTER RESET TEST TIMER SET TIME SET CL FAN SWING/FIX UNIT MODE VENT 3 Procedure Description When pushing SET and TEST buttons at the same time for 4 seconds or more, the following display appears. If [Service check] is displayed, the mode enters in the trouble history mode.

CODE No. 1 1 UNIT No. [01 : Order of trouble history] is displayed in CODE No. window. [Check code] is displayed in CHECK window.

[Indoor unit address in which an error occurred] is displayed in UNIT No. Every pushing of displayed in order. , R.C. No.

button used to set temperature, the trouble history stored in memory is 2 3 The numbers in CODE No. indicate CODE No. [01] (latest) [04] (oldest).

CAUTION Do not push CL button because all the trouble history of the indoor unit will be deleted. After confirmation, push TEST button to return to the usual display. 1. Check the troubles according to the above procedure. 2. Ask an authorized dealer or qualified service (maintenance) professional to repair or maintain the air conditioner. 3.

More details of the service code are explained in Service Manual. 11 EH99923001 .



[You're reading an excerpt. Click here to read official TOSHIBA RBC-AMT31E user guide](http://yourpdfguides.com/dref/3704289)
<http://yourpdfguides.com/dref/3704289>