



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TOSHIBA RDXV-49-DTKF. You'll find the answers to all your questions on the TOSHIBA RDXV-49-DTKF in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TOSHIBA RDXV-49-DTKF
User guide TOSHIBA RDXV-49-DTKF
Operating instructions TOSHIBA RDXV-49-DTKF
Instructions for use TOSHIBA RDXV-49-DTKF
Instruction manual TOSHIBA RDXV-49-DTKF



[You're reading an excerpt. Click here to read official TOSHIBA RDXV-49-DTKF user guide](http://yourpdfguides.com/dref/3873126)
<http://yourpdfguides.com/dref/3873126>

Manual abstract:

located at the back of the unit and enter the information below. Retain this information for future reference. Model No. _____ Serial

No. @@@@NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. @@Only a qualified service personnel should remove the cover or attempt to service this unit, due to the possibility of eye injury. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. CAUTION: VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED. DO NOT STARE INTO BEAM.

LOCATION: INSIDE, NEAR THE DECK MECHANISM. CAUTION: Caution 1. Do not attempt to open the cabinet. There are no parts inside you can service. Refer all servicing to qualified service personnel.

2. Slots and openings in the cabinet at the sides and underneath are provided for ventilation. @@@@3. Keep the unit away from radiators and other heat sources. 4.

Avoid use near strong magnetic fields. 5. @@6. @@7. Do not stand the unit vertically. Use the unit in a horizontal (flat) position only. 8. Before attempting to operate the unit, make sure that the timer recording mode is off. 9. This product is in Stand-by mode when turned off while the mains cable is connected.

10. Do not place any combustible objects on the device (candles, etc.). 11. Before moving the unit, be sure to remove any medias and unplug the mains cable from the AC outlet. 12. Disconnect the mains plug to shut off when find troubles or not in use. 13. The mains plug shall remain readily operable. 14.

Read both manual instructions to ensure correct and safe installation and interconnection of the unit in multimedia systems. 15. Keep the distances 20 cm around apparatus of ventilation openings. Power Supply The power supply is connected and the unit is live when the mains cable is plugged into a 220 - 240 V~, 50 Hz AC outlet. To operate the unit, press [B ONSTANDBY].

WARNING: LIVE PARTS INSIDE. DO NOT REMOVE ANY SCREWS. 2 EN E3TK0FD_EN.book Page 3 Monday, March 9, 2009 10:00 AM A NOTE ABOUT RECYCLING This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with your local recycling regulations.

This product consists of materials which can be recycled and reused if disassembled by a specialised company. Following information is only for EU-member states: The use of the symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Following information is only valid EU-member States: Disposal of batteries and/or accumulators The crossed out wheeled dust bin symbol indicates that batteries and/or accumulators must be collected and disposed of separately from household waste. If the battery or accumulator contains more than the specified values of lead (Pb), mercury (Hg), and/or cadmium (Cd) defined in the Battery Directive (2006/66/EC), then the chemical symbols for lead (Pb), mercury (Hg) and/or cadmium (Cd) will appear below the crossed out wheeled dust bin symbol. By participating in separate collection of batteries, you will help to assure the proper disposal of products and batteries and thus help to prevent potential negative consequences for the environment and human health. For more detailed information about the collection and recycling programmes available in your country, please contact your local city office or the shop where you purchased the Pb, Hg, Cd product. Make your contribution to the environment!!! · Exhausted batteries do not belong in the dustbin. · You can dispose of them at a collection point for exhausted batteries or special waste.

· Contact your council for details. Do not place the unit on the furniture that is capable of being tilted by a child and an adult leaning, pulling, standing or climbing on it. A falling unit can cause serious injury or even death. Installation Location For safety and optimum performance of this unit: · Install the unit in a horizontal and stable position. · Keep the unit away from electronic equipment such as an amplifier, TV, etc. to prevent warping, damage, fire and malfunction. · Do not place anything directly on top of the unit. · Shield the unit from direct sunlight and keep away from sources of intense heat. Avoid dusty or humid locations. Avoid locations with insufficient ventilation for suitable heat dissipation.

Do not block the ventilation holes on the sides of the unit. Avoid locations subject to strong vibration or strong magnetic fields. Introduction Connections Basic Setup / TV View Operation Avoid the Hazards of Electrical Shock and Fire · Do not handle the mains cable with wet hands. · Do not pull on the mains cable to disconnect it from AC outlet. Grasp it by the plug.

· If, by accident, water is spilled on the unit, unplug the mains cable immediately and take the unit to an authorised service centre for servicing. Moisture Condensation Warning Moisture condensation may occur inside the unit when it is moved from a cold place to a warm place, after heating a cold room, or under conditions of high humidity. Do not use the unit for at least 2 hours to allow the inside to dry. Recording About Copyright Playback Editing Unauthorised copying, broadcasting, public performance and lending of discs are prohibited. This product incorporates copyright protection technology that is protected by U.

S. patents and other intellectual property rights. Use of this copyright protection technology must be authorised by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorised by Macrovision. Reverse engineering or disassembly is prohibited. Notice for the Progressive Scan Outputs Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture. In case of picture problems with 480 or 576 progressive scan output, it is recommended that the user switch the connection to the 'standard definition' output. If there are questions regarding your TV set compatibility with this 480p or 576p product, please contact our customer service centre.

Function Setup VHS Functions Others EN 3 E3TK0FD_EN.book Page 4 Monday, March 9, 2009 10:00 AM Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

"Dolby® Digital Stereo Creator enables consumers to create stereo DVD-Videos with stunning Dolby Digital sound tracks at home. The technology, when utilised instead of PCM recording, also saves recordable disc space, allowing for higher video resolution or extended recording time on each DVD.



[You're reading an excerpt. Click here to read official TOSHIBA RDXV-49-DTKF user guide](http://yourpdfguides.com/dref/3873126)
<http://yourpdfguides.com/dref/3873126>

DVDs mastered using Dolby Digital Stereo Creator will play back on all DVD-Video players." Note: This is true when the players are compatible with actual recordable DVD discs. Maintenance CLEANING THE UNIT Use a soft cloth slightly moistened with a mild detergent solution. Do not use solutions containing alcohol, spirits, ammonia or abrasive. CLEANING DISCS If a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out. Do not wipe in a circular motion. Do not use solvents such as benzene, thinner, commercially available cleaners, detergent, abrasive cleaning agents or antistatic spray intended for analogue records.

DISC HANDLING Handle the discs so that fingerprints and dust do not adhere to the disc surfaces. Always store the disc in its protective case when it is not in use. HDD HANDLING · HDD is a precision apparatus that is susceptible to vibration, strong impact or dirt. Depending on the installation environment or handling, the unit may become partially damaged or in the worst case, recording or replaying may not be available. Especially while the HDD is in motion, do not subject it to vibration or strong impact or pull out the power plug.

And if a power failure occurs, the content of the recording / replaying programme may be lost. · HDD rotates at high speed when in operation. Be sure that rotation has stopped and then move the unit without subjecting it to strong impact or vibration. SERVICING If the unit becomes inoperative, do not try to correct the problem by yourself. There are no user serviceable parts inside.

Turn the unit off, unplug the mains cable, and consult your dealer or an authorised service centre. CLEANING THE DISC LENS If the unit does not perform correctly even though you have referred to "Troubleshooting" and the relevant sections in the Owner's Manual, the laser optical pickup unit may be dirty. Consult your dealer or an authorised service centre for inspection and cleaning of the laser optical pickup unit. AUTO HEAD CLEANING · Automatically cleans video heads as you insert or remove a cassette, so you can see a clear picture. · Playback picture may become blurred or interrupted while the TV programme reception is clear. Dirt accumulated on the video heads after a long period of use, or the usage of rental or worn tapes can cause this problem. If a streaky or snowy picture appears during playback, the video heads in the unit may need to be cleaned. 1 Please visit your local Audio / Video store and purchase a good quality VHS Video Head Cleaner. 2 If a Video Head Cleaner does not solve the problem, please consult your dealer or an authorised service centre. Manufactured under license under U.

S. Patent #: 5,451,942 & other U.S. and worldwide patents issued & pending. DTS and DTS Digital Out are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Right Reserved. HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC. DivX, DivX Certified, and associated logos are trademarks of DivX, Inc. and are used under license.

DVB is a registered trademark of the DVB Project EU Conformity Statement "This product is marked with "CE" and complies therefore with the applicable harmonized European standards listed under the Low Voltage Directive 2006/95/EC and the EMC Directive 2004/108/EC." Responsible for CE-marking is TOSHIBA INFORMATION SYSTEMS (U.K.) LTD, Toshiba Court, Weybridge Business Park, Addlestone Road, Weybridge, Surrey, KT15 2UL, United Kingdom Note · Remember to read the instructions along with the ..

.....
.....

.... 74 Connections

.....
.....
.....

.....
.....
.....

..... 17 Connecting to a TV.....

.....
.....
.....

.....
.....
.....

.... 17 Connecting to an External Equipment.....

.....
.....
.....

.... 19 Digital Audio for Better Sound Quality

.....
.....
.....

.... 19 Playback.....

.....
.....
.....

.....
.....
.....
.....

..... *74 Basic Recording and One-touch Timer Recording (OTR)* .

.....
.....
.....

..... *74 Search..*

.....
.....
.....
.....

..... *75 Other Operations...*

.....
.....
.....
.....

..... *76 Changing the Video Colour System ..*

.....
.....
.....

..... *76 Hi-Fi Stereo Sound System*

.....
.....
.....
.....

..... *76 Basic Setup / TV View Operation*

.....
.....

..... *20 Initial Setting.....*

.....
.....
.....
.....

..... *20 Channel Setting.....*

.....

.....
.....
.....
.....
.....
.....

..... 21 TV View Operation ...

.....
.....
.....
.....
.....
.....

..... 23 Others

.....
.....
.....
.....
.....
.....

..... 77 Troubleshooting..

.....
.....
.....
.....
.....
.....

.. 77 Troubleshooting for Error Messages ...

.....
.....
.....
.....
.....
.....

.... 80 Language Code .

.....
.....
.....
.....

.d) DVD+R 480 min (12 cm) 144 min (8 cm) 1x-16x Playable on most DVD players. Finalisation recommended. (Title menu will be created) HDD 267 hrs (with SLP mode) Maximum Record Time 1x-6x Recordable/Playable Ver. 1.
1/1.2 Versions Ver. 1.1/1.2 CPRM compatible Playable on most DVD players. Compatibility Finalisation necessary. (Title menu will be created) Available Features Recording Features Record TV Programmes Reuse by Deleting the Current Contents Record 16:9 Size Pictures Record Copy-once Programmes Create Chapters at Fixed Intervals (auto chapter) Editing Features Scene Delete Edit Title Name Create Chapters Wherever You Like (chapter mark) Divide a Title Combine Titles Hide Chapters Delete a Title Deleting Selected Titles Create a Playlist Protect a Title Playable only on VR mode compatible unit. Finalisation recommended. * Playlist Original Playlist Original : Available * CPRM compatible disc only. DVD players with Gray: Not available are capable of playing DVD-RW recorded in VR mode.

8 EN E3TK0FD_EN.book Page 9 Monday, March 9, 2009 10:00 AM Introduction Discs for Playing Disc Type Logo DVD-VIDEO CD-DA Video CD CD-RW CD-R Icon DVD-V Files for Playing CD VCD CD CD Connections Type of title Icon MP3 JPEG DivX® MP3 CD-RW/-R USB device JPEG CD-RW/-R USB device DivX® Media CD-RW/-R DVD-RW/-R DVD+RW/+R USB device (not guaranteed) Basic Setup / TV View Operation is a trademark of DVD Format/Logo Licensing Corporation. · Official DivX® Certified product · Plays all versions of DivX® video (including DivX® 6) with standard playback of DivX® media files. · Media containing the DivX® files with the DivX® GMC (Global Motion Compensation) playback feature, which is DivX® supplemental function, cannot be played back on this unit. Following discs are recommended for good recording quality and are proven to be compatible with this unit. However, depending on the media condition the unit may not read the disc properly. Verbatim JVC Maxell SONY TDK DVD+R 8x, DVD+RW 4x, DVD-R 8x, DVD-RW 2x DVD-RW 4x DVD+R 4x/8x/16x, DVD-R 8x/16x DVD+R 4x/8x/16x, DVD+RW 4x DVD+R 4x/8x/16x Recording Unplayable Discs The following

*discs will not play back on this unit. · CD-ROM ····· Compact Disc-Interactive (CD-I) Video Single Disc (VSD) · DVD-ROM DVD-audio · Unfinalised disc
DVD or CD contains Windows Media™ Audio files DVD-RW/-R recorded in non compatible recording format Blu-ray Disc · HD DVD Performance of any
other discs are not guaranteed.*



[You're reading an excerpt. Click here to read official TOSHIBA](#)

[RDXV-49-DTKF user guide](#)

<http://yourpdfguides.com/dref/3873126>

· Toshiba is not liable for any damage or loss caused directly or indirectly by the malfunction of this unit, including, without limitation, any one of the following: · Failure to record contents intended to be recorded by the consumer. · Failure to edit contents as intended by the consumer.

· When a DVD-RW/-R, DVD+RW/+R disc created on this unit is used (e.g., insertion, playback, recording or editing) in another DVD player, recorder or personal computer drive. · When a DVD-RW/-R, DVD+RW/+R disc that is used in the manner described in the immediately preceding bullet point is used again in this unit. · When a DVD-RW/-R, DVD+RW/+R disc that was recorded in another DVD recorder, or in a personal computer drive is used in this unit.

· Some functions may not work with personal computer discs. · Discs recorded in this unit may not operate as expected on other DVD players, recorders or personal computer drives. Because of problems and errors that can occur during the creation of DVD and CD software and/or the manufacture of DVD and CD discs, Toshiba cannot guarantee that product will play every feature of every DVD bearing the DVD logo and/or every CD bearing the CD logo. As one of the creators of DVD technology, Toshiba DVD players are manufactured using the highest standards of quality, and as a result, such incompatibilities are rare. Playback On the following disc, the sound may not be heard.

· Super audio CD - Only the sound on the CD layer can be heard. The sound on the high-density super audio CD layer cannot be heard. Editing Colour Systems This unit uses the PAL system. However, it is also possible to play back DVDs using other colour systems, such as NTSC. Function Setup Region Codes This unit has been designed to play DVD with region 2. If these region symbols do not appear on your DVD, you cannot play back the DVD in this unit. The number inside the globe refers to region of the world. 2 VHS Functions Others EN 9 E3TK0FD_EN.book Page 10 Monday, March 9, 2009 10:00 AM Functional Overview Front Panel 1 2 3 4* OPEN/CLOSE 5 6 ON/STANDBY VCR REC REC VCR PROGRAM DUBBING VCR DVD HDD DVD VCR VCR HDD HDD SELECT DVD DVD HDD HDD DVD REC HDD/DVD USB DV IN 23 21* 19* 17 16 24 22 20* 18 You can also turn on the unit by pressing these buttons. 15 13 11 9 14 12 10* 13 14 15 16 17 18 19 20 21 22 23 24 8 7 1 2 3 4 5 6 7 8 9 10 11 12 B ON/STANDBY button Cassette compartment DUBBING indicator A OPEN/CLOSE button* (DVD) REC indicators (HDD/DVD) Disc tray DV IN jack (AV3) USB input jack I REC button (HDD/DVD) PLAY B button* (HDD/DVD) STOP C button (HDD/DVD) Device select buttons / indicators (HDD/DVD/VCR) DUBBING VCR M DVD button DUBBING HDD M DVD button PROGRAM G \ H buttons Display Infrared sensor window I REC button (VHS) PLAY B button* (VHS) FWD D button* (VHS) REV E button* (VHS) EJECT/STOP A / C button (VHS) REC indicator (VHS) Power indicator Button names described in the Owner's Manual The instructions in this manual are described mainly with the operations using the remote control.

Some operations can be carried out using the buttons on the front panel. Rear Panel 1 2 3 4 2 34 5 6 7 8 9 56 78 9 Mains cable HDMI OUT jack (HDD/DVD/VHS) DIGITAL AUDIO OUT (COAXIAL) jack (HDD/DVD/VHS) AUDIO OUT (L/R) jacks (HDD/DVD/VHS) COMPONENT VIDEO OUT jacks (HDD/DVD/VHS) AV2 (DECODER) socket (HDD/DVD/VHS) AV1 (TV) socket (HDD/DVD/VHS) ANTENNA IN ANTENNA OUT Note · Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the unit. · After turning off the unit, leave the mains cable plugged for about one minute. Otherwise it may cause data loss or the unit may not work properly. · This unit does not have an RF modulator. 10 EN E3TK0FD_EN.book Page 11 Monday, March 9, 2009 10:00 AM Remote Control 19 1 2 20 21 3 22 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 30 31 32 33 34 35 36 37 38 23 24 25 26 27 28 29 1 2 3 4 5 6 7 8 9 10 OPEN/CLOSE A button (DVD/VHS) INPUT SELECT F button Number buttons SETUP button TEXT button VARIABLE REPLAY button (HDD/DVD) TOP MENU button (HDD/DVD) Direction K / L / { / B buttons DISPLAY button RED/GREEN/YELLOW/BLUE button MODE (YELLOW) button (VHS) SEARCH (BLUE) button (VHS) Introduction Connections Basic Setup / TV View Operation 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 REV E button PLAY B button SKIP H button (HDD/DVD) VCR button PAUSE F button TIME SLIP button (HDD) DUBBING button SUBTITLE button HDMI button B ON/STANDBY button PROG. G \ H buttons TIMER PROG. button INFO C button CLEAR button GUIDE button VARIABLE SKIP button (HDD/DVD) DISC MENU button (HDD/DVD) ENTER/OK button RETURN button FWD D button STOP C button SKIP G button (HDD/DVD) HDD button DVD button REC I button REC MODE button SAT. LINK button (HDD) AUDIO D button Recording Playback Editing Function Setup VHS Functions Button names described in the Owner's Manual The instructions in this manual are described mainly with the operations using the remote control. Some operations can be carried out using the buttons on the front panel. Note · If you turn off this unit, [OPEN/CLOSE A] on the remote control is not available. Be sure to use [A OPEN/CLOSE] or [EJECT/STOP A \ C] on the unit. Others EN 11 E3TK0FD_EN.

book Page 12 Monday, March 9, 2009 10:00 AM Installing Batteries in the Remote Control Install two R6 (AA) batteries (supplied) into the remote control, carefully match with the polarity indicated inside the battery compartment. Switching HDD / DVD / VHS mode Because this unit is a combination of an HDD, a DVD and a VHS recorder, you must select which component you want to operate first. indicator 1 2 3 button VCR HDD SELECT DVD OPEN/CLOSE ON/STANDBY VCR REC REC VCR PROGRAM DUBBING DUBBING VCR DVD HDD DVD VCR VCR HDD HDD SELECT DVD DVD HDD HDD DVD REC HDD/DVD Caution · Incorrect use of batteries can result in hazards such as leakage and bursting. · Do not mix new and old batteries together. · Do not use different kinds of batteries together.

· Make sure that the plus (+) and minus (-) ends of each battery match the indications inside the battery compartment. · Remove batteries if the equipment will not be used for a month or more. · When disposing used batteries, please comply with governmental regulations or the public instructions for environmental protection that apply in your country or area. · Do not recharge, short-circuit, heat, burn or disassemble batteries. USB DV IN Device select indicators VCR button HDD button DVD button HDD Press [HDD] on the remote control or the front panel. (Verify that the HDD indicator is lit in blue.



[You're reading an excerpt. Click here to read official TOSHIBA RDXV-49-DTKF user guide](http://yourpdfguides.com/dref/3873126)
<http://yourpdfguides.com/dref/3873126>

) DVD About the Remote Control · Make sure there is no obstacle between the remote control and the remote control sensor on the unit. · Use within the operating range and angle as shown. OPEN/CLOSE Press [DVD] on the remote control or the front panel. (Verify that the DVD indicator is lit in green.

) VHS Press [VCR] on the remote control or the front panel. (Verify that the VCR indicator is lit in orange.) ON/STANDBY VCR REC DUBBING VCR HDD DVD HDD DVD 7 m (30°) 7m 7 m (30°) Within about 7 m · The maximum operable range as follows: Line of sight: approximately 7 m Either side of centre: approximately 7 m within 30 degrees · Remote control operation may become unreliable if the remote control sensor of the unit is being exposed by the strong sunlight or fluorescent light. · Remote controls for different devices can interfere with each other. Be careful when using remote controls for other equipment located close to the unit. · Replace the batteries when the operating range of the remote control reduces. 12 EN E3TK0FD_EN.book Page 13 Monday, March 9, 2009 10:00 AM Guide to On-Screen Displays DISPLAY Menu HDD DVD With a disc inserted into the unit, press [DISPLAY] to display the on-screen display. The on-screen display shows information about what is recorded on the disc. Press [DISPLAY] repeatedly while the display menu is displayed to display the following information.

<Title / File Name Information> Title name information Title Name My Title Introduction Connections 5 6 T 1/5 C 1/5 0:01:00 / 1:23:45 1 -RW 3 VR 1 TF1 ORG 8 2 (only when DVD+RW/+R, VR mode DVD-RW, unfinalised video mode DVD-RW/-R disc or HDD is in playback) File name information Basic Setup /TV View Operation (only when MP3/JPEG/DivX® files is in playback) 7 4 DVD SP 1:53 <MP3 Tag Information> (only when MP3 file is in playback) This is an example screen for explanation. Displayed items vary depending on the actual mode. Recording Title name information 1 2 3 4 5 6 Indicates a disc type and format mode. (DVD mode only) Indicates a type of titles for HDD and VR mode DVD-RW disc. Indicates a channel number, station name (analogue channel only) or selected external input mode.

Indicates a media, recording mode and possible recording time left. Indicates the current title number/total number of titles, the current chapter number/total number of chapters, and time lapse of the current title playback/total duration of the title. Each icon means: : Search : Audio : Subtitle : Angle : Repeat : Marker : Noise Reduction : Zoom : Surround Artist name information Playback Album name information Editing <HDMI Information> Function Setup (only for the images output through the HDMI output) 1 2 3 7 8 Indicates an operation status. Indicates the component in use. : HDD : DVD : USB device Indicates the resolution of the HDMI output image.

Indicates the HDMI video format. Indicates the HDMI audio format. VHS Functions · "-" · "-" will be displayed, when it does not have any information. Note · For some descriptions on this manual, only one disc type is indicated as an example. Others EN 13 E3TK0FD_EN.book Page 14 Monday, March 9, 2009 10:00 AM VHS While in the VHS mode, the on screen display of the VHS mode is displayed. Press [VCR] first. Press [DISPLAY] to display the on screen display. · Main Menu Press [SETUP] to display the main menu.

Then use [K\L] to select a menu and press [ENTER\OK] to display the sub menu. Press [RETURN] to return to previous screen. Setup General Setting Timer Programming Title List DVD Menu HDD Menu 1 2 STEREO 3 12:00 AV2 7 6 SP Dubbing DISC Playback Mode 0:00:00 5 STEREO 4 · USB Playback Mode This is an example screen for explanation. Displayed items are depending on the actual mode. 1 2 3 4 5 6 7 Current time Position number Audio status of the receiving broadcast or external equipment Audio status of the currently playing back videotape Tape counter Recording or playing back speed Status of the current tape is displayed when a disc with CD-DA/VCD/MP3/JPEG is inserted. · is displayed when a USB flash memory with MP3/JPEG is plugged. General Setting INFO Menu DVB Press [INFO C] while viewing a DVB programme to display the programme information. 1 2 3 4 5 6 7 8 9 10 1 2 3 4 5 6 7 8 9 10 General Setting Playback Display Video Recording Clock Channel DivX HDMI DVB Setting Reset All Parental Lock Audio Out Disc Menu Language Audio Language Subtitle Language Angle Icon Still Mode Variable Skip/Replay TV System 3 2 1 13 Channel 4+1 English 4 11:53 Mon 6 5 1 2 3 4 5 6 NOW: Castle Stereo AD Sub Entertainment NEXT: Burning Questions 11:23 12:20 27 min left 12:20 12:25 Playback: [E Page 68] Display: [E Page 70] Video: [E Page 71] Recording: [E Pages 30-32, 38, 45] Clock: [E Page 71] Channel: [E Pages 21-26] DivX: [E Pages 49, 72] HDMI: [E Page 72] DVB Setting: [E Page 73] Reset All: [E Page 73] DVB Setting Audio language Channel number Channel name Current time and day Next programme information Current programme information General Setting Playback Display Video Recording Clock Channel DivX HDMI DVB Setting Reset All Adult Lock Maturity Lock Language About 1 2 3 4 The window will automatically exit after 4 seconds, or press [RETURN] to exit. While the window appears, press [INFO C] again to display more information. Press [RETURN] to exit.

1 2 3 4 Adult Lock: [E Page 73] Maturity Lock: [E Page 73] Language: [E Page 73] About: [E Page 73] 14 EN E3TK0FD_EN.book Page 15 Monday, March 9, 2009 10:00 AM Introduction Timer Programming To programme a timer recording. [E Page 33] Title List To call up the title list. [E Page 58] DVD Menu DISC Playback Mode Audio CD / video CD DISC Playback Mode 1 2 3 1 2 3 Random Play Programme Play PBC (Video CD only) Connections DVD Menu 1 Format 2 Finalise Disc Protect OFF ON 3 Delete All Playlists 4 1 Format (DVD-RW, DVD+RW only): [E Pages 30, 31] Random Play: [E Page 55] Programme Play: [E Page 56] PBC (Video CD only): [E Page 51] CD-RW/-R with MP3 / JPEG files Basic Setup / TV View Operation 2 3 4 Finalise: [E Page 45] Disc Protect (VR mode DVD-RW, DVD+RW/+R disc only): [E Page 45] Delete All Playlists (VR mode DVD-RW disc only): [E Page 63] HDD Menu 4 5 1 6 4 5 6 DISC Playback Mode Music Photo Random Play Slide Show Music (MP3 files): [E Page 55] Photo (JPEG files): [E Pages 55, 56] Slide Show: [E Page 56] USB Playback Mode Recording HDD Menu 1 2 3 1 2 3 USB Playback Mode Delete All Titles Delete All Unprotected Titles Delete All Playlists 1 2 1 2 Music Photo Playback Random Play Slide Show Delete All Titles: [E Page 64] Delete All Unprotected Titles: [E Page 64] Delete All Playlists: [E Page 63] Dubbing Music (MP3 files): [E Page 55] Photo (JPEG files): [E Pages 55, 56] Editing Dubbing HDD DVD HDD VCR DVD VCR DVD HDD VCR HDD VCR DVD 1 Function Setup 1 Dubbing menu: [E Page 43] VHS Functions Others EN 15 E3TK0FD_EN.



[You're reading an excerpt. Click here to read official TOSHIBA RDXV-49-DTKF user guide](http://yourpdfguides.com/dref/3873126)
<http://yourpdfguides.com/dref/3873126>

book Page 16 Monday, March 9, 2009 10:00 AM Front Panel Display Guide 1 2 3 DTV DB 4 1 DTV indicator : Appears when the channel is in digital mode.
: Appears when a disc is in this unit. : Appears when a videotape is in this unit. 2 Title / Track and Chapter number : : Title / track number Chapter number
DB : 4 Appears during dubbing. Displays the following Playing back time Current title / chapter / track / file number Recording time / remaining
time Clock Channel number One-touch Timer Recording (OTR) remaining time Selected HDMI video resolution 3 Current status of the unit Appears when
playback is paused. Appears during step by step playback.

B: Appears when playing back an HDD or disc. F B: Appears during slow forward / reverse playback. : Appears when the timer programming or Onetouch
Timer Recording (OTR) is set and operating. Appears when the unit goes into the satellite link standby or recording mode. Flashes when timer programming
and satellite recording was not executed because of some error. I: Appears during recording. Flashes when recording being paused. F: Display Messages
The disc tray is opening. Appears when HDMI video resolution (480p) is selected. Appears when HDMI video resolution (576p) is selected.

Appears when HDMI video resolution (720p) is selected. Appears when HDMI video resolution (1080i) is selected. Appears when HDMI video resolution
(1080p) is selected. The PBC function of the video CD is activated. The disc tray is closing. A disc is loading. Data is being recorded on a disc. Appears when
the satellite link recording is in standby. 16 EN E3TK0FD_EN.book Page 17 Monday, March 9, 2009 10:00 AM Introduction Connections Connecting to a TV

Connect the unit to a TV after considering the capabilities of your existing equipment.

· Analogue teletext can only be output in VHS mode through AV1 (TV) out. Use TV remote control to decode the analogue teletext. · When changing the
"Video Out" setting ("SCART (RGB)", "Component (Interlace)" or "Component (Progressive)"), connect to the corresponding jack on the TV. If the setting is
changed, for example, to "Component (Interlace)" or "Component (Progressive)" while the scart cable is connected to the TV, a distorted video signal may be
output. Connections Before installation, unplug your TV and this unit.

Cable Signal Antenna or Basic Setup / TV View Operation Using the COMPONENT VIDEO OUT Jacks and the AUDIO OUT (L/R) Jacks If your TV has
component video input jacks, use a component video cable and an audio cable (to connect the AUDIO OUT (L/R) jacks). When using this type of connection,
"Video Out" setting should be set to "Component (Progressive)" or "Component (Interlace)". Refer to "Video Out" on page 71. · Component connection
provides the better quality picture. To Aerial jack RF cable (supplied) Audio IN Component video IN Y PB/CB PR/CR RF cable (not supplied) Recording 1 2
Playback 1 Connect the antenna or cable to the ANTENNA IN jack of this unit.

Audio cable (not supplied) 2 Component video cable (not supplied) 1 2 Connect the ANTENNA OUT jack of this unit to the Aerial jack of your TV. Using the
Scart socket Audio/video cable (not supplied) Editing 1 Connect the COMPONENT VIDEO OUT jacks of Function Setup Scart/RCA cable (not supplied)
Scart cable (not supplied) this unit to the component video input jacks of your TV. 2 Connect the AUDIO OUT (L/R) jacks of this unit to the analogue audio
input jacks of your TV. · After you have made the connections, set the "Video Out" setting. (See page 71.) Scart adaptor (not supplied) Selecting Progressive
Scan (576p/480p or Interlaced 576i/480i) Playback · If your TV is compatible with progressive scanning (576p/ 480p), connect the TV to the COMPONENT
VIDEO OUT jacks of this unit and set "Video Out" setting to "Component (Progressive)" in "Setup" menu. (See page 71.) Next, set your TV to the progressive
scan mode. · If your TV is not compatible with progressive scan, set "Video Out" setting to "Component (Interlace)". · Use a commercially available adaptor
if the video input jacks of your TVs or monitors are the BNC type.

· Only component and HDMI connections are compatible with the Progressive Scan. VHS Functions Connect AV1 (TV) Scart socket of this unit to the Scart
socket of your TV. Note · If your TV does not have a Scart socket, use a Scart/RCA cable to connect. · Connect this unit directly to the TV. If the AV cables are
connected to a VHS, pictures may be distorted due to the copy protection system. Others EN 17 E3TK0FD_EN.book Page 18 Monday, March 9, 2009 10:00
AM Using an HDMI Compatible Port [HDMI CONNECTION] · HDMI outputs the video / audio signals without converting to analogue signals. · No audio
connections is required. · Use the HDMI cable (commercially available) for connection. · Connect the HDMI output jack of this unit to the HDMI input jack of
TV.

HDMI cable (not supplied) To HDMI input jack Note · Because HDMI is an evolving technology, it is possible that some devices with an HDMI input may not
operate properly with this unit. · When using an HDCP-incompatible display device, the image will not be viewed properly. · Among the devices that support
HDMI, some devices can control other devices via the HDMI connector; however, this unit cannot be controlled by another device via the HDMI connector. ·
The audio signals from the HDMI connector (including the sampling frequency, the number of channels and bit length) may be limited by the device that is
connected. · Among the monitors that support HDMI, some do not support audio output (for example, projectors).

In connections with device such as this unit, audio signals are not output from the HDMI output connector. · When this unit's HDMI connector is connected to
a DVI-D compatible monitor (HDCP compatible) with an HDMI-DVI conversion cable, the signals are output in digital RGB. · If the connected equipment is
not compatible with HDMI BITSTREAM, DTS sound will not be output. · When the power failure occurs, or when you unplug the unit, some problems in the
HDMI setting might occur. Please check and set the HDMI setting again.

HDMI IN this unit TV Selecting HDMI video resolution Press [HDMI] to select the HDMI video resolution. The video resolution changes as follows every
time [HDMI] is pressed. 576p (PAL) / 480p (NTSC) 720p 1080i 1080p (An HDMI video resolution that is not supported by the display device will be skipped.)
Actual Output Modes by Media Dolby Digital / DTS / Audio recording format of MPEG setting of this the disc unit PCM Dolby Digital Stream PCM LPCM
Stream DVD-video ON DTS OFF PCM MPEG Stream PCM Dolby Digital Stream PCM MP3 DivX® Stream PCM MP2 Stream Actual output 2 channel PCM
Dolby Digital 2 channel PCM DTS 2 channel PCM MPEG 2 channel PCM Dolby Digital 2 channel PCM 2 channel PCM MPEG For audio CD, video CD
and MP3 files, 2 channel PCM will be output regardless of the "Dolby Digital" setting.



[You're reading an excerpt. Click here to read official TOSHIBA](#)

[RDXV-49-DTKF user guide](#)

<http://yourpdfguides.com/dref/3873126>

If the connected device is not compatible with HDMI BITSTREAM, audio will be output as PCM even if you select "Stream" in "Dolby Digital" setting. (See page 69.) Copyright protection system To play back the digital video images of a DVD via an HDMI connection, it is necessary that both the player and the display device (or an AV amplifier) support a copyright protection system called HDCP (high-bandwidth digital content protection system). HDCP is copy protection technology that comprises data encryption and authentication of the connected AV device. This unit supports HDCP. Please read the operating instructions of your display device (or AV amplifier) for more information.

* HDMI: High Definition Multimedia Interface 18 EN E3TK0FD_EN.book Page 19 Monday, March 9, 2009 10:00 AM Introduction Connecting to an External Equipment This unit has three input terminals. Press [INPUT SELECT F] repeatedly to select the external input mode, then press [PROG. G \ H] repeatedly to select AV1, AV2 or DV(AV3). Be sure that all the units are switched off before making connections. Digital Audio for Better Sound Quality Dolby Digital decoder, DTS decoder or MPEG decoder, etc. Digital audio input jack COAXIAL Connections Recording from a DVD player, Satellite Box or other Audio-Video equipment with a Scart output socket (AV2) AV output jack (Scart) Scart cable (not supplied) Coaxial cable (not supplied) COAXIAL Basic Setup / TV View Operation AV2 (DECODER) The connections illustrated above are optional for better sound. For clear digital sound quality, use the DIGITAL AUDIO OUT (COAXIAL) jack to connect your digital audio equipment. Note · When you record a TV programme from a Satellite Box, you must connect a Scart cable to AV2 (DECODER). (See page 37.

) · When AV2 is connected, the signal from the AV2 will be output automatically. If you want to monitor the signal from other input, you must press [DISPLAY] first. Press [INPUT SELECT F] repeatedly to select the external input mode, then press [PROG. G \ H] repeatedly to select AV1, AV2 or DV(AV3). If the audio format of the digital output does not match the capabilities of your receiver, the receiver will produce a strong, distorted sound or no sound at all.

Recording Playback Connecting a Dolby Digital™ decoder, DTS decoder or MPEG decoder · Connecting multi-channel Dolby Digital decoder allows you to enjoy the Multi-channel Dolby Digital surround system as well as DTS decoder, Multi-channel surround system. · After connecting to a Dolby Digital decoder, set "Dolby Digital" to "Stream" in "Audio Out" menu. (See pages 68-69.) · After connecting to a DTS decoder, set "DTS" to "ON" in "Audio Out" menu. (See pages 68-69.

) · After connecting to a MPEG decoder, set "MPEG" to "Stream" in "Audio Out" menu. (See pages 68-69.) Editing Recording from a DV-camcorder (DV(AV3)) When connecting a DV-camcorder, use DV input jack of DV(AV3) (Front). DV(AV3) (Front) Connecting to an MD deck or DAT deck · The audio source recorded in Dolby Digital Multi-channel surround format cannot be recorded using an MD or DAT deck as a digital sound. · If not connected to a Dolby Digital decoder, set "Dolby Digital" to "PCM" in "Audio Out" menu. Playing back a DVD using incorrect settings may generate noise distortion and damage speakers. · Set "Dolby Digital" and "MPEG" to "PCM" and set "DTS" to "OFF" in "Audio Out" menu for connecting to an MD or DAT deck. · You can use AUDIO OUT (L/R) jacks for the connection of your audio system. Function Setup OPEN/CLOSE DUBBING DUBBING PROGRAM VCR DVD HDD DVD VCR VCR HDD HDD SELECT DVD DVD HDD HDD DVD REC HDD/DVD VHS Functions USB DV IN DV cable (4-pin) (not supplied) DV OUT Others EN 19 E3TK0FD_EN.book Page 20 Monday, March 9, 2009 10:00 AM Basic Setup / TV View Operation Initial Setting When you turn on this unit for the first time, you need to follow these steps.

Note · After "Initial Setting", if you need to unplug the mains cable, make sure to turn off the power first and leave it in standby mode for at least 1 minute before attempting to unplug. Otherwise, it may cause data loss. If you want to set each item of "Initial Setting" again, you can set them at "General Setting". · Refer to "OSD Language (Default: Français)" on page 70. · Refer to "Country Setting" on page 23. · Refer to "Auto Tuning (DVB & ANALOG)" on page 21. · Refer to "Auto Tuning (ANALOG)" on page 21. · Refer to "Auto Tuning (DVB)" on page 22. · Refer to "Clock" on page 71. Also you can customize the memorised channel at "General Setting".

Refer to following pages for details. · Refer to "Manual Tuning (ANALOG)" on page 21. · Refer to "Manual Tuning (DVB)" on page 23. · Refer to "Skip a Preset Channel" on page 22. · Refer to "Move" on page 22.

1 2 3 Press [B ONSTANDBY]. Turn the TV on. Select the input to which the unit is connected. "Réglage initial" will automatically appear. Select your desired language for the OSD using [K \ L].

Then press [ENTER\OK] to go to the next step. Langue Aff. écran Français English Español Deutsch Italiano 4 Select your desired country for receiving your local channels properly using [K \ L]. Then press [ENTER\OK] to go to the next step. Country France Spain - Peninsula Spain - Canary Islands Germany Italy Switzerland Selecting the TV Aspect Ratio Use this feature to adjust the aspect ratio of the video source which is different from your TV's ratio to fit your TV monitor without distorting the picture. 1 2 3 5 Select your desired tuning type according to your area using [K \ L], then press [ENTER\OK]. Auto Tuning Make sure the antenna is connected to "ANTENNA IN" jack. Digital tuning Digital & Analog tuning Analog tuning In stop mode, press [SETUP]. Select "General Setting" using [K \ L], then press [ENTER\OK]. Select "Video" using [K \ L], then press [ENTER\OK].

Select "TV Aspect" using [K \ L], then press [ENTER\OK]. TV Aspect Video Out 4 The unit will start getting channels available in your area. Digital tuning: Only the DVB channels receivable in your area are automatically scanned and memorised. Digital & Analog tuning: Both analogue and DVB channels receivable in your area are scanned and memorised automatically. Analog tuning: Only the analogue channels receivable in your area are automatically scanned and memorised.



[You're reading an excerpt. Click here to read official TOSHIBA RDXV-49-DTKF user guide](http://yourpdfguides.com/dref/3873126)
<http://yourpdfguides.com/dref/3873126>

· If no channel has been memorised, the antenna confirmation display will appear. Press [ENTER\OK] to start auto scanning again or press [RETURN] to cancel the initial settings. Select the desired option using [K\L], then press [ENTER\OK]. 5 Press [SETUP] to exit. Note If you have a standard TV: · Select "4:3 Letter Box" for a full width picture with black bars at the top and bottom.

· Select "4:3 Pan & Scan" for a full height picture with both sides trimmed. If you have a wide screen TV: · Select "16:9 Wide". 6 After finishing channel setting, "Clock Setting" will appear. · The current date and time will appear automatically. · If the current date and time are correct, press [RETURN] to exit, if they are incorrect, press [ENTER\OK] and follow to "Clock Setting" on page 71.

20 EN E3TK0FD_EN.book Page 21 Monday, March 9, 2009 10:00 AM 4 Channel Setting You can retune this unit or edit the channel setting with following methods. Select "Auto Tuning" using [K\L], then press [ENTER\OK]. The unit will start storing channels available in your area. Introduction Auto Tuning (DVB & ANALOG) DVB ANALOG Wait for several minutes to finish channel storing.

Connections Programme the tuner to scan both analogue and DVB channels you can receive in your area. 5 Press [SETUP] to exit. You can select only the channels memorised in this unit by using [PROG. G\H]. 1 2 3 In stop mode, press [SETUP]. Select "General Setting" using [K\L], then press [ENTER\OK]. "General Setting" menu will appear. To cancel auto tuning Press [SETUP] during scanning. Basic Setup / TV View Operation Select "Channel" using [K\L], then press [ENTER\OK]. Select "Auto Tuning (DVB & ANALOG)" using [K\L], then press [ENTER\OK].

The unit will start storing channels available in your area. General Setting Playback Display Video Recording Clock Channel DivX HDMI DVB Setting Reset All Note · The number of TV channels you can get is different depends on your local area. · If the auto tuning is cancelled during scanning, some channels not yet tuned may not be received. · When "Country" setting is set to "France", sorting of TV channels from 1 to 6 will be performed automatically as follows. 1: TF1 2: F2 3: F3 4: CANAL+ 5: F5/ARTE 6: M6 Recording Country Auto Tuning (DVB & ANALOG) DVB Channel Setup ANALOG Channel Setup Manual Tuning (ANALOG) ANALOG You can preset an analogue channel manually and individually. Playback Wait for several minutes to finish channel storing. 1 2 3 4 5 4 Press [SETUP] to exit. You can select only the channels memorised in this unit by using [PROG. G\H]. In stop mode, press [SETUP].

Select "General Setting" using [K\L], then press [ENTER\OK]. Select "Channel" using [K\L], then press [ENTER\OK]. Select "ANALOG Channel Setup" using [K\L], then press [ENTER\OK]. Select "Manual Tuning" using [K\L], then press [ENTER\OK]. Select "Position" using [K\L], then press [B]. Position System Channel Decoder Skip 1 L 1 OFF ON To cancel auto tuning Press [SETUP] during scanning. Editing Note · The number of TV channels you can get is different depends on your local area. · If the auto tuning is cancelled during scanning, some channels not yet tuned may not be received. Function Setup Auto Tuning (ANALOG) ANALOG Programme the tuner to scan only the analogue channels you can receive in your area. 6 Select the position number you want to use using [the Number buttons] or [K\L], then press [{}].

· You can select position number 1-99. · With [the Number buttons], you only need to enter the last 2-digit numbers. VHS Functions 1 2 3 In stop mode, press [SETUP]. Select "General Setting" using [K\L], then press [ENTER\OK]. Select "Channel" using [K\L], then press [ENTER\OK]. Select "ANALOG Channel Setup" using [K\L], then press [ENTER\OK]. 7 8 Select "System" using [K\L], then press [B]. Select "L" or "BG" using [K\L], then press [{}]. · If your system is SECAM-L, select "L". · If your system is PAL-B/G, select "BG".

Others EN 21 E3TK0FD_EN.book Page 22 Monday, March 9, 2009 10:00 AM 9 Select "Channel" using [K\L], then press [B]. 10 Press [K\L] to start scanning. · The tuner will begin to search up or down automatically. When a channel is found, the unit will stop searching and the picture will appear on the TV screen. · You can select a desired channel number using [the Number buttons]. Refer to the following Channel Plan table and press the three digits to select the channel number. (To select channel 4, press [0] first and then press [0] and [4]. Or press [4] and then "4" appears and wait for 2 seconds.) · If desired channel is found, press [{}].

[L (SECAM-L)] Channel Plan CH Indication TV Channel 1 10 F1 - F10 21 69 E21 E69 74 86 BQ 90 106 S4 S20 121 141 S21 S41 [BG (PAL-B/G)] Channel Plan CH Indication TV Channel 2 12 E2 - E12 13 20 A H (only ITALY) 21 69 E21 E69 74 78 X, Y, Z, Z+1, Z+2 80 99, 100 S1 S20, GAP 121 141 S21 S41 This unit can receive the Hyper and Oscar frequency bands. · If you want to decode scrambled signals, select "Decoder" using [K\L], then press [B]. Select "ON" using [K\L], then press [{}]. · If "Skip" is set to "ON", select "Skip" using [K\L], then press [B]. Select "OFF" using [K\L], then press [{}].

· To store another channel, repeat steps 5 to 10. Move ANALOG You can replace two channels. 1 2 3 4 5 In stop mode, press [SETUP]. Select "General Setting" using [K\L], then press [ENTER\OK]. Select "Channel" using [K\L], then press [ENTER\OK]. Select "ANALOG Channel Setup" using [K\L], then press [ENTER\OK]. Select "Move" using [K\L], then press [ENTER\OK]. Select the position number to change the channel using [K\L], then press [ENTER\OK]. You cannot select a position number where " " appears next to the number, because "Skip" is set to "ON" for that position number. 6 7 Move the channel to another position number using [K\L], then press [ENTER\OK]. · To move another channel, repeat steps 5 to 6. Press [SETUP] to exit. Auto Tuning (DVB) DVB You can programme the tuner to scan only the DVB channels that you can receive in your area. 1 2 3 4 In stop mode, press [SETUP]. Select "General Setting" using [K\L], then press [ENTER\OK].



[You're reading an excerpt. Click here to read official TOSHIBA RDXV-49-DTKF user guide](http://yourpdfguides.com/dref/3873126)
<http://yourpdfguides.com/dref/3873126>

Select "Channel" using [K\L], then press [ENTER\OK]. Select "DVB Channel Setup" using [K\L], then press [ENTER\OK]. Select "Auto Tuning" using [K\L], then press [ENTER\OK]. The unit will start storing channels available in your area. 11 Press [SETUP] to exit. Skip a Preset Channel ANALOG You can set the unit to skip channels. You can no longer receive or watch when you access channels using [PROG. G\H]. 1 2 3 4 5 6 Follow steps 1 to 4 in "Manual Tuning (ANALOG)" on page 21. Select "Position" using [K\L], then press [B].

Select the position number using [the Number buttons] or [K\L], then press [{}]. Select "Skip" using [K\L], then press [B]. Select "ON" using [K\L], then press [{}]. · To skip another channel, repeat steps 2 to 5. Press [SETUP] to exit.

The tuner scans and memorises all the active DVB channels (TV / Radio) in your area. Channel Search S.No. TV Channel 14 13 32 28 75 34 E4 More4 Film4+1 ITV4 CITY SETANTA SPORT S.No.

Radio Channel 102 Teletext Cars 729 RadioMusicShop 728 Heart Channel 69 UHF Progress OK Exit 858000KHz/8M 100% RETURN Back 22 EN E3TK0FD_EN.book Page 23 Monday, March 9, 2009 10:00 AM 5 Press [ENTER\OK] to exit. · After auto tuning is completed, the lowest memorised DVB channels appears on the screen. · You can use [PROG. G\H] to change the DVB channels. Introduction TV View Operation The following operations are available while viewing TV channels through this unit's tuner. Note · If you press [RETURN] or [SETUP] during the scanning, auto tuning will be cancelled. Select a Channel Connections DVB ANALOG To switch DVB, analogue and external input (AV1/AV2/ DV(AV3)) mode. Press [INPUT SELECT F] repeatedly to select DVB, analogue or external input mode. The mode changes as follows: DVB mode Analogue mode External input mode Manual Tuning (DVB) DVB You can preset a DVB channel manually and individually.

1 2 3 Follow steps 1 to 3 in "Auto Tuning (DVB)" on page 22. Select "Manual Tuning" using [K\L], then press [ENTER\OK]. Select your desired position number using [K\L], then press [ENTER\OK]. Channel Auto Basic Setup / TV View Operation You can select external input mode (AV1/AV2/DV(AV3)) by pressing [PROG. G\H] repeatedly. The mode changes as follows: External input mode (with [PROG. G\H] buttons) Recording · The tuner will begin to search up or down automatically. When a DVB channel is found, the unit will stop searching. · When "Auto" is selected, the unit will search for the channels which have not been stored in channels memory. AV1 AV2 DV(AV3) You can select a channel using [PROG.

G\H] or directly enter the channel using [the Number buttons]. Notes on using [the Number buttons]: · For one or two-digit number channels, the channels will be identified for 2 seconds after you press the channel number. You can only select channels 1~899 (Digital) or 1~99 (Analogue). If you cannot get a "Station Name" of Analogue channel, it is not indicated with a channel number. 4 Press [SETUP] to activate the setting.

Playback Service Update DVB This unit has "Service Update" function which searches and stores newly available digital channels automatically at 8:00. If a new channel is found, a message will appear on the screen when you turn on the DVB channel at first time after storing a new channel. Press any button to clear the message. Selecting the Audio Mode ANALOG You can switch between TV audio modes by pressing [AUDIO D]. Each mode is indicated on the TV screen.

Audio mode during reception of analogue bilingual broadcasts: Mode Main Sub Audio output Main audio from both speakers Sub audio from both speakers Display on the TV screen Main Sub Main/Sub Editing Country Setting DVB ANALOG You can set the country for receiving your local channels properly. Function Setup 1 2 3 4 In stop mode, press [SETUP]. Select "General Setting" using [K\L], then press [ENTER\OK]. Select "Channel" using [K\L], then press [ENTER\OK]. Select "Country" using [K\L], then press [ENTER\OK]. Select your desired country using [K\L], then press [ENTER\OK]. Country France Spain - Peninsula Spain - Canary Islands Germany Italy Switzerland · Main audio from the left speaker Main / Sub · Sub audio from the right speaker VHS Functions Others · If the programme does not have more than one sound track, [AUDIO D] is not effective. 5 Press [SETUP] to exit. EN 23 E3TK0FD_EN.book Page 24 Monday, March 9, 2009 10:00 AM Quick Select DVB With "Quick Select" menu, you can select your favourite DVB channel quickly.

Refer to "Edit Group Lists" on this page. 4 Select "Edit Channels" using [K\L], then press [ENTER\OK]. · "Edit Channels" menu will appear. 2 Edit Channels S.No. Channel Name Fav. Skip 2 Lock Del. 1 Press [ENTER\OK] while watching a DVB channel. · "Quick Select" menu will appear. Quick Select Group: All S.

No. Channel Name 2 Channel4 3 ITV2 4 ITV3 13 Channel4+1 19 More4 28 ITV4 29 E4 1 5 1 2 3 5 Five France Réseau Numérial 562000kHz/8M Re Name Skip Lock Delete OK Move RETURN Exit 1...8 Add To Fav.

0 Del. Fav. 3 4 OK View RETURN Exit 2 Press [{} \ B] to select your favourite group list. ("All", "Group1" - "Group8") · "All" shows a list of all the memorised DVB channels. · If the favourite group does not have any channels, the group will be skipped.

4 5 Channel number Channel name Channel setting 1 to 8: The number of the favourite group list : Skip Channels : Adult Lock : Delete Channels Channel information Operation Guide 5 Press [RETURN] to exit. 3 4 Select the DVB channel using [K\L], then press [ENTER\OK]. Press [RETURN] to exit. Edit Group Lists DVB You can sort each DVB channel into 8 different favourite group lists ("Group1" - "Group8"). With "Quick Select" menu, you can select your favourite DVB channel quickly. Refer to "Quick Select" on this page. Edit Channels DVB With "Edit Channels" menu, you can sort all the memorised DVB channels into the group lists ("Quick Select") or set the viewer limitation ("Adult Lock"), etc. 1 2 Follow steps 1 to 4 in "Edit Channels" on this page. Select the DVB channel you want to add to the favourite group list using [K\L], then select the number of the favourite group list you want to add using [the Number buttons] ([1] - [8]). Edit Channels S.

No. Channel Name 5 Five Fav. Skip 2 Lock Del. 1 2 3 In stop mode, press [SETUP]. Select "General Setting" using [K\L], then press [ENTER\OK]. Select "Channel" using [K\L], then press [ENTER\OK].



[You're reading an excerpt. Click here to read official TOSHIBA](http://yourpdfguides.com/dref/3873126)

[RDXV-49-DTKF user guide](http://yourpdfguides.com/dref/3873126)

<http://yourpdfguides.com/dref/3873126>

Select "DVB Channel Setup" using [K\L], then press [ENTER\OK]. France Réseau Numérial 562000kHz/8M Re Name Skip Lock Delete OK Move RETURN Exit 1...

.8 Add To Fav. 0 Del. Fav. · The number you selected will appear. · Press [0] to cancel from the favourite group list.

3 Press [RETURN] to exit. 24 EN E3TK0FD_EN.book Page 25 Monday, March 9, 2009 10:00 AM Skip Channels DVB You can set the unit to skip the unwanted DVB channels when you use [PROG. G\H]. Delete Channels DVB You can delete the DVB channels from the memorised DVB channels.

Introduction 1 2 Follow steps 1 to 4 in "Edit Channels" on page 24. Select the DVB channel you want to skip using [K\L], then press [GREEN]. Edit Channels S.No. Channel Name 5 Five Fav. Skip Lock Del. 1 2 Follow steps 1 to 4 in "Edit Channels" on page 24. Select the DVB channel you want to delete using [K\L], then press [BLUE]. Edit Channels S.No.

Channel Name 5 Five Fav. Skip Lock Del. Connections France Réseau Numérial 562000kHz/8M Re Name Skip Lock Delete OK Move RETURN Exit 1...8 Add To Fav. 0 Del. Fav. France Réseau Numérial 562000kHz/8M Re Name Skip Lock Delete OK Move RETURN Exit 1..

.8 Add To Fav. 0 Del. Fav. Basic Setup / TV View Operation · " " will appear.

· Press [GREEN] to cancel. " " will disappear. · " " will appear. · Press [BLUE] to cancel. " " will disappear.

3 Press [RETURN] to exit. 3 Press [RETURN] to exit. · The channel has been deleted from the "Edit Channels" menu. Adult Lock DVB You can set the unit to limit the access to the DVB channels. Recording Channel Move DVB You can change the order of the DVB channels when you use [PROG. G\H]. 1 2 Follow steps 1 to 4 in "Edit Channels" on page 24. Select the DVB channel you want to limit the access using [K\L], then press [YELLOW]. Edit Channels S.No.

Channel Name 5 Five Fav. Skip Lock Del. 1 2 3 Follow steps 1 to 4 in "Edit Channels" on page 24. Select the DVB channel you want to change the position using [K\L], then press [ENTER\OK]. Pop up window will appear. Playback France Réseau Numérial 562000kHz/8M Re Name Skip Lock Delete OK Move RETURN Exit 1...8 Add To Fav. 0 Del.

Fav. Select the channel you want to replace with using [K\L], then press [ENTER\OK]. S.No. ChannelsName Edit Channel 5 Five Fav.

Skip Lock Del. S.No. Channel Name 16 Five QVC 5 17 UKTV GOLD Francebid tv Réseau Numérial 562000kHz/8M 23 Re price Skip Lock Delete 24 Name - drop tv 26 UKTV STYLE Move RETURN Exit OK 34 E4+1 1..

.8 Add To Fav. 0 Del. Fav. Editing · " " will appear. · Press [YELLOW] to cancel. " " will disappear. 3 Press [RETURN] to exit. · Once you turn off the unit, Pincodes will be required to view the locked channels. · To set the Pincodes, refer to "Adult Lock (Default: OFF)" on page 73.

Function Setup · The channel will be replaced. Note · You need to set the Pincodes first to activate the "Adult Lock" in "DVB Setting". After you set a Pincodes, you have to turn off the power and then turn it on again to activate the setting. 4 Press [RETURN] to exit. VHS Functions Others EN 25 E3TK0FD_EN.book

Page 26 Monday, March 9, 2009 10:00 AM Edit Channel Names DVB You can edit the DVB channel names as you want. Digital Teletext Reception DVB Many broadcasters provide a DVB Teletext service in the form of a dedicated Teletext channel. This Digital service includes high quality text and graphics along with advanced navigation options. 1 2 Follow steps 1 to 4 in "Edit Channels" on page 24. Select the DVB channel you want to edit the name using [K\L], then press [RED].

· Name editing display will appear. @_@ \$# ABC Edit ChannelsDEF 3 1 2 Fav. Skip Lock Del. S.No.

Channel Name GHI Five JKL MNO 5 4 5 6 France Réseau Numérial 562000kHz/8M PQRS TUV WXYZ Re Name Skip Lock Delete 7 9 8 RETURN Exit SPACE OK Move 0 1...8 Add To Fav. 0 Del.

Fav. 0-9 A->a INS DEL A to Z S.No. Channel Name 1 2 3 Press [TEXT] to display Teletext screen. · Teletext for the TV channel will be displayed. Use [RED] / [GREEN] / [YELLOW] / [BLUE] to follow the instructions on screen. Press [TEXT] to switch the Teletext display off. Note · [TEXT] is not available during recording. Multi Audio DVB Many DVB channels transmit Multi Audio information along with their DVB channels. You can select the desired audio mode and audio language.

3 Edit the name using [the Number buttons]. · Press [the Number buttons] repeatedly until the desired letter appears. · Press [{\B} to move the cursor left or right. · Press [RED] to select alphabet or numbers. · Press [GREEN] to select capital or small letters. · Press [YELLOW] to move the letter on the cursor to the right. · Press [BLUE] to delete the letter on the cursor, and move the cursor to the left. 1 While viewing a DVB programme, press [AUDIO D]. 11:53 MON 4 5 After completion, press [ENTER\OK]. Press [RETURN] to exit.

Multi Audio English French Spanish Stereo Note · You can enter up to 19 letters. Signal Information DVB You can check the detailed information of the current DVB channel. 2 3 Select "Stereo", "Right" or "Left" using [{\B}. Select your desired audio language using [K\L]. · The available audio language varies depending on the DVB programmes.

1 2 Follow steps 1 to 3 in "Auto Tuning (DVB)" on page 22. Select "Signal Information" using [K\L], then press [ENTER\OK]. · "Signal Information" display will appear. Signal Information 5 Five France 594000KHz 8M T I 4 Press [ENTER\OK] to activate the settings. Note · If the programme is changed, the audio language will be switched back to the default language you set in the "DVB Setting".

Refer to "Language" on page 73. Réseau Numérial Frequency Bandwidth 20:00 - 20:58 20:58 - 21:00 Signal Quality A.PID 6018 V.PID 6017 P.PID 6017 The Property List; Perfect Villa Five News at 9 51% 77% RETURN Back 3 Press [RETURN] to exit. · "Signal Information" is not available for analogue channel and external input (AV1/AV2/DV(AV3)). · "Signal Information" is also not available while the Pincodes input field for locked DVB channel is displayed. 26 EN E3TK0FD_EN.book Page 27 Monday, March 9, 2009 10:00 AM Subtitle DVB Many DVB channels transmit Subtitle information along with their DVB channels. You can retrieve and display it on the TV screen.

2 Select "EPG" using [K\L], then press [ENTER\OK]. · Select the channel and TV programme using [K\L]{\B}.



[You're reading an excerpt. Click here to read official TOSHIBA](#)

[RDXV-49-DTKF user guide](#)

<http://yourpdfguides.com/dref/3873126>