



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TOSHIBA W1333. You'll find the answers to all your questions on the TOSHIBA W1333 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual TOSHIBA W1333**  
**User guide TOSHIBA W1333**  
**Operating instructions TOSHIBA W1333**  
**Instructions for use TOSHIBA W1333**  
**Instruction manual TOSHIBA W1333**

**TOSHIBA**  
Leading Innovation >>>

## **ON-LINE MANUAL**

24W1333G  
24W1334G  
LED Backlight LCD TV

During the life of your TV firmware updates will be made available to ensure that your TV maintains optimum performance. You can download the latest version of firmware from

[www.toshiba-om.net/firmware.php](http://www.toshiba-om.net/firmware.php)

\*Some features listed in this document are limited due to local legislation and may not be available in all countries.



[You're reading an excerpt. Click here to read official TOSHIBA W1333 user guide](http://yourpdfguides.com/dref/5067282)  
<http://yourpdfguides.com/dref/5067282>

*Manual abstract:*

.....  
.....  
.....  
.....

.....  
.....  
.....

*... 3 Mains Supply.....*

.....  
.....  
.....  
.....

.....  
.....

*... @@3 Do..*

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*3 Do not.....*

.....  
.....  
.....

.....  
.....  
.....  
.....

*..... 3 Installation and Important Information....*

.....  
.....

*..... 4 EXCLUSION CLAUSE...*

.....  
.....  
.....  
.....

*..... 4 Important safety information ...*

.....  
.....  
.....

*.. 5 Removing the pedestal stand...*

.....  
.....

.....  
.....

*. 6 The Remote Control....*

.....

.....  
.....  
.....  
.....

.... 7 Inserting Batteries and Effective Range of the Remote Control.....

.....  
.....  
.....

.....  
.....  
.....

..... 7 Connecting External Equipment.....

.....  
.....  
.....

..... 8 Connecting an HDMI® or DVI Device to the HDMI Input.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... 9 To Connect an HDMI Device...

.....  
.....  
.....

..... 9 To Connect a DVI Device (PC, DVD Player etc)..

... 9 Connecting a Computer..

.....  
.....  
.....

.....  
.....  
.....

... 10 To Connect a Computer.....

.....  
.....  
.....  
.....

10 Connecting a DVD Player.....

.....  
.....  
.....

..... 10 Connecting to a DVD Player via YPbPr...

.....  
.....  
.....

@@ 12 Environmental Information .....

.....  
.....  
.....

.. @@ 13 Switching on.....

.....  
.....

.....  
.....  
.....  
.....  
.....  
.....  
*. 13 Using the Remote Control...*  
.....  
.....  
.....  
.....  
*.... 13 Using the Controls on the TV.*  
.....  
.....  
.....  
.....  
*... @@14 Auto Tuning..*  
.....  
.....  
.....  
.....  
.....  
*... @@15 Manual Tuning, Analogue Fine Tuning..*  
.....  
.....  
.....  
*. 16 Digital Aerial Manual Search.....*  
.....  
.....  
.....  
*16 Digital Cable Manual Search.....*  
.....  
.....  
*..... 16 Analogue Manual Search.*  
.....  
.....  
.....  
.....  
*... 16 Analogue Fine Tune.....*  
.....  
.....  
.....  
.....  
.....  
*16 General Operation.....*  
.....  
.....  
.....  
.....  
.....  
*.... 17 Stereo and Bilingual Transmissions.....*  
.....  
.....  
*.. 17 Displaying Subtitles.....*  
.....  
.....  
.....  
.....

..... 17 Viewing Main Menu.....

.....  
.....  
.....

.....  
.....

... 17 Controlling Volume and Muting Sound..

.....

.. 17 Selecting Programme Positions.....

.....  
.....

..... 17 Standby Notifications...

.....  
.....  
.....  
.....

..... 17 Channel List, Sorting Programmes, Programme Locking...

.....  
.....  
.....

.....  
.....  
.....  
.....

... 18 Viewing Channel List..

.....  
.....

.....  
.....  
.....

.... 18 Moving a Channel.....

.....  
.....  
.....  
.....

.....  
18 Deleting a Channel.....

.....  
.....

.....  
.....  
.....

.... 18 Renaming a Channel.....

.....  
.....  
.....  
.....

..... 18 Locking a Channel.....

.....  
.....  
.....  
.....

.....  
.....  
*18 Viewing Info Banner, Electronic Programme Guide.....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
*..... 19 Viewing Info Banner.*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
*.. 19 Electronic Programme Guide...*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
*19 Language Selection.....*  
.....  
.....  
.....  
.....  
.....  
.....  
*..... 20 Language Settings...*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
*.. 20 Preferred...*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
*..... 20 Current..*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
*..... 20 Digital Settings - Parental Control, Menu Lock, Set PIN..*

.....  
.....  
.....  
.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
*... 21 Viewing Parental Control Menu.*  
.....

.....  
*... 21 Menu Lock.*  
.....  
.....

.....  
*. 21 Maturity Lock (\*)...*  
.....  
.....

.....  
*..... 21 Child Lock.*

.....  
.....  
.....  
.....  
.....  
*..... 21 Set PIN..*

.....  
.....  
.....  
*..... 21 Configuring Picture Settings.*

.....  
*... 22 Configuring Picture Settings.....*  
.....

*... 22 Picture Mode.....*  
.....

.....  
.....  
.....  
*..... 22 Contrast....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
..... 22 *Brightness*...

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
..... 22 *Sharpness*.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
..... 22 *Colour*.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
..... 22 *Power Save Mode*...

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....  
..... 22 *Backlight (optional)*...

.....  
.....  
.....  
.....

..... 22 *Noise Reduction*.....

.....  
.....  
.....  
.....

..... 22 *Advanced Settings*..

.....  
.....



.....  
... 22 Reset.....

.....  
.....  
.....

.....  
.....  
.....

..... 23 Changing Picture Format.

.....  
.....  
.....

..... 24 Configuring PC Picture Settings...

.....  
.....  
.....

..... 25 PC Picture Settings (\*).....

.....  
.....  
.....

.....  
.... 25 PC Position.

.....  
.....

.....  
.....  
.....

.....  
25 Autoposition.....

.....  
.....

.....  
.....  
.....

..... 25 H Position.....

.....  
.....  
.....

.....  
.....  
.....

... 25 V Position.....

.....  
.....  
.....

.....  
.....  
.....

. 25 Dot Clock.....

.....  
.....  
.....

.....  
.....  
.....  
.....

25 Phase.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.... 25 Configuring Sound Settings.....

.....  
.....  
.....

..... 26 Configuring Sound Settings.

.....  
.....  
.....

26 Operating Sound Settings Menu Items.....

.....

.... 26 Volume.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 26 Equalizer (Only for speaker)..

.....  
.....  
.....

..... 26 Balance (Only for speaker)..

.....  
.....  
.....

..... 26 Headphone.

.....  
.....  
.....  
.....

.....  
.....  
.....

..... 26 Sound Mode.....

.....

.....  
.....  
.....

.....  
.....  
.....

.... 26 AVL.

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... 26 Dynamic Bass...

.....  
.....  
.....  
.....

.....  
.....

.... 26 Surround Sound.

.....  
.....  
.....

.....  
.....  
.....

..... 26 Digital Out...

.....  
.....  
.....

.....  
.....  
.....

..... 26 Settings Menu Operation, Conditional Access.....

. 27 Configuring Your TV's Settings....

.....  
.....

..... 27 Viewing Settings Menu...

.....  
.....  
.....

.....  
.....

27 Conditional Access.....

.....  
.....  
.....

..... 27 English English - 1 - Language.

.....  
.....  
.....



.....  
.....  
.....  
.....

.....  
.....  
*. 28 Setting Sleep Timer....*

.....  
.....

.....  
.....  
.....

*.... 28 Setting Programme Timers.....*

.....  
.....  
.....

*..... 28 Configuring Date/Time Settings...*

.....  
.....  
.....

*. 28 Source Settings, Other Controls.....*

.....  
.....

*.... 29 Configuring Source Settings.*

.....

.....  
.....

*.... 29 Input Selection.*

.....

.....  
.....  
.....  
.....

*29 Configuring Other Settings - General.....*

.....

*..... 29 Operation....*

.....  
.....  
.....  
.....

.....  
.....  
.....

*..... 29 Menu Timeout.....*

.....  
.....  
.....  
.....

.....  
.....

*.. 29 Scan Encrypted Channels ...*

.....

.....  
.....

.... 29 Blue Background.

.....  
.....  
.....  
.....  
.....

..... 30 Software Upgrade....

.....  
.....  
.....  
.....  
.....

.. 30 Application Version.....

.....  
.....  
.....  
.....

..... 30 Hard of Hearing....

.....  
.....  
.....  
.....  
.....

..... 30 Audio Description.....

.....  
.....  
.....  
.....

. 30 Auto TV Off....

.....  
.....  
.....  
.....  
.....

..... 30 Broadcast Type (optional)...

.....  
.....  
.....

. 30 Standby Search (\*) ....

.....  
.....  
.....

.... 30 Store Mode.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
*30 Power Up Mode.....*

.....  
.....  
.....  
.....  
.....  
*..... 30 Manual Start.*

.....  
.....  
.....  
.....  
.....  
.....  
*... 31 Auto Start.....*

.....  
.....  
.....  
.....  
.....  
.....  
*.. 31 USB Media Browser.....*

.....  
.....  
.....  
.....  
.....  
.....  
*... 31 Playing MP3 Files..*

.....  
.....  
.....  
.....  
.....  
.....  
*.... 32 Viewing JPEG Files.....*

.....  
.....  
.....  
.....  
.....  
.....  
*.. 32 Slideshow Feature...*

.....  
.....  
.....  
.....  
.....  
.....  
*.. 33 Video Playback.....*

	.....
	.....
	.....
	.....
	.....
..	33 Media Browser Settings.....
	.....
	.....
	.....
.....	34 Using MENU button in Media Browser Mode.
	.....
...	34 To Close the Media Player.....
	.....
	.....
	.....
.....	34 Analogue Only Text Services....
	.....
	.....
	.....
.....	35 Using Text Button -TXT.
	.....
	.....
	.....
	.....
	.....
..	35 Accessing Sub-Pages...
	.....
	.....
	.....
.....	35 Revealing Concealed Text..
	.....
	.....
	.....
	.....
.	35 Holding a Page.....
	.....
	.....
	.....
	.....
	.....
	.....
.	35 To display an initial page.....
	.....
	.....
	.....
.....	35 Appendix A: PC Input Typical Display Modes....
....	36 Appendix B: AV and HDMI Signal Compatibility (Input Signal Types).....
	.....
	.....
	.....
	.....
	.....
	.....
	.....
	.....
.	37 Appendix C: PIN Information .....
	.....
	.....
	.....



... 38 Appendix D: Supported File Formats for USB Mode.....

.....  
.....  
.....  
.....  
.....  
.....  
.....

.. 39 Specifications and Accessories.....

.....  
.....  
.....

. 40 License Information.....

.....  
.....  
.....

... 41 Q & A Section..

.....  
.....  
.....  
.....  
.....

.... 42 English English - 2 - Safety Precautions This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured.

Please read the points below for your own safety. They are of a general nature, intended to help with all electronic consumer products and some points may not apply to the goods you have just purchased. English Air Circulation Leave more than 10cm around all edges when wall mounting the television to allow adequate ventilation. This will prevent overheating and possible damage to the television. Dusty places should also be avoided.

Do not DON'T remove any fixed cover as this may expose dangerous voltages. DON'T obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment. DON'T allow electrical equipment to be exposed to dripping or splashing or objects filled with liquids, such as vases, to be placed on the equipment. DON'T place hot objects or naked flame sources, such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires. DON'T use makeshift stands and NEVER fix with wood screws. Use only the manufacturers supplied screws. DON'T leave equipment switched on when it is unattended, unless it is specifically stated that it is designed for unattended operation or has a standby mode. Switch off by withdrawing the plug, make sure your family know how to do this.

Special arrangements may need to be made for people with disabilities. DON'T continue to operate the equipment if you are in any doubt about it working normally, or it is damaged in any way - switch off, withdraw the mains plug and consult your dealer. WARNING - excessive sound pressure from earphones or headphones can cause hearing loss. ABOVE ALL - NEVER let anyone, especially children, push or hit the screen, push anything into holes, slots or any other openings in the case. NEVER guess or take chances with electrical equire left on the television screen for any length of time, they could become conspicuous. It is always advisable to reduce both the brightness and contrast settings. Very long, continuous use of the 4:3 picture on a 16:9 screen may result in some retention of the image at the 4:3 outlines. This is not a defect of the LCD TV and is not covered under the manufacturer's warranty. Regular use of other size modes will prevent permanent retention. EXCLUSION CLAUSE Toshiba shall under no circumstances be liable for loss and/or damage to the product caused by: loss and/or damage caused to theV.

Removing the pedestal stand (1) Carefully lay the front of the unit face down on a flat, cushioned surface with the stand hanging over the edge. (2) Remove the screws. (3) After the screws are removed, hold the pedestal stand in place, then remove the pedestal stand and the plastic moulding from the TV by removing away from the TV. NOTE: Extreme care should always be used when removing the pedestal stand to avoid damage to the LCD panel. For 24W1333G and 24W1334G models English - 6 - Simple at-a-glance reference of your remote control.

The Remote Control English 1. Standby 2. Image size 3. Sleep Timer 4. Mono/Stereo - Dual I-II / Current Language (in DVB channels) 5.



[You're reading an excerpt. Click here to read official TOSHIBA W1333 user guide](http://yourpdfguides.com/dref/5067282)  
<http://yourpdfguides.com/dref/5067282>

No function 6. Numeric buttons 7. Electronic programme guide(in DVB channels) 8. No function 9. Media Browser 10. Navigation buttons (Up/Down/Left/Right) 11. No function 12. No function 13. Programme Down / Page up Programme Up / Page down 14. Mute 15.

No function 16. Pause 17. Rapid reverse 18. Play 19. Red button 20. Green button 21. Picture mode selection 22. No function 23. Teletext / Mix (in TXT mode) 24. Subtitle on-off (in DVB channels) 25.

Previous programme 26. AV / Source selection 27. Menu on-off 28. Okay (Confirm) / Hold (in TXT mode) / Channel List 29. Exit / Return / Index page (in TXT mode) 30.

No function 31. Info / Reveal (in TXT mode) 32. Volume Up / Down 33. No function 34. No function 35.

Rapid advance 36. Stop 37. Blue button 38. Yellow button Inserting Batteries and Effective Range of the Remote Control Remove the back cover to reveal the battery compartment and make sure the batteries are inserted the right way round. Suitable battery types for this remote are AAA, IEC R03 1.5V. Do not combine a used, old battery with a new one or mix battery types. Remove exhausted batteries immediately to prevent acid from leaking into the battery compartment. Dispose of them in a designated disposal area. Warning: Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

The performance of the remote control will deteriorate beyond a distance of five metres or outside an angle of 30 degrees from the IR receiver. If the operating range becomes reduced the batteries may need replacing. English - 7 - Before connecting any external equipment, remove the mains plug from the wall socket. Connecting External Equipment HDMI 1 SIDE AV YPbPr \* a decoder could be Digital Satellite, Free to Air or any other compatible decoder. decoder\* TV SCART Socket Aerial cable:.....

.....  
.....  
.....

.....  
.....  
.....

... Connect the aerial to the ANT. socket on the rear of the TV. SCART lead:.....

.....  
.....  
.....

.....  
.....  
.....

... If you use a decoder\* or a media recorder, it is essential that the scart cable is connected to the TV. Before running first time installation, any connected devices need to be set to standby mode. The DIGITAL AUDIO socket enables the connection of a suitable surround sound system. HDMI® (High-Definition Multimedia Interface) is for using with a DVD decoder or other equipment with digital audio and video output. It is designed for best performance with 1080i and 1080p high-definition video signals but will also accept and display VGA, 480i, 480p, 576i, 576p and 720p signals. PC format signals will also be displayed. NOTE: Although this TV is able to connect to HDMI equipment, it is possible that some equipment may not operate correctly.

When connecting a device via the Side AV input, you must use the supplied connection cable to enable connection. When connecting a device via YPbPr input, you must use the supplied connection cable to enable connection. A wide variety of external equipment can be connected to the TV; therefore, the relevant owner's manuals for all additional equipment must be referred to for exact instructions. If the TV automatically switches over to monitor external equipment, return to normal TV by pressing the desired programme position button. To recall external equipment, press SOURCE button repeatedly to switch between sources.

Regardless of source's property, audio output from the DIGITAL AUDIO socket cannot be copied. English - 8 - MODE o English Side View COMMON INTERFACE The Common Interface is for a Conditional Access Module (CAM). HDMI Input Socket RGB/PC Input Aerial Input USB Input 5Vdc Max:500mA DIGITAL AUDIO Socket SPDIF Coax.OUT USB Input 5Vdc Max:500mA SIDE AV Headphone YPbPr Menu Wheel Connecting an HDMI® or DVI Device to the HDMI Input English To Connect a DVI Device (PC, DVD Player etc) Connect an HDMI-to-DVI cable (HDMI type A connector) to the HDMI input socket and audio cables to the RED and WHITE SIDE AV AUDIO inputs on the Audio/Video connection cable supplied (see illustration). The HDMI input on your TV receives digital audio and uncompressed digital video from an HDMI source device or uncompressed digital video from a DVI (Digital Visual Interface) source device.

This input is designed to accept HDCP (High-Bandwidth Digital-Content Protection) programme material in digital form from EIA/CEA-861-D-compliant [1] consumer electronic devices (such as a set-top box or DVD player with HDMI or DVI output). NOTE: • Some early HDMI equipment may not work properly with your latest HDMI TV. • Supported Audio format: Linear PCM, sampling rate 32/44.1/48kHz. • The maximum recommended HDMI - DVI cable length is 0.6Ft (2m). • An HDMI-to-DVI cable transfers video only. Separate analogue audio cables are required. To Connect an HDMI Device Connect an HDMI cable (type A connector) to the HDMI terminal. For proper operation, it is recommended that you use an HDMI cable with the HDMI Logo ( ).

• If your HDMI connection is capable of 1080p and/or your TV is capable of refresh rates greater than 50Hz, you will need a Category 2 cable. Conventional HDMI/DVI cable may not work properly with this mode. • HDMI cable transfers both video and audio. Separate analogue audio cables are not required (see illustration). • To view the HDMI device video, press SOURCE button to select HDMI1. HDMI 1 HDMI 1 NOTE: To ensure that the HDMI or DVI device is reset properly, it is recommended that you follow these procedures: • When turning on your electronic components, turn on the TV first, and then the HDMI or DVI device. • When turning off your electronic components, turn off the HDMI or DVI device first, and then the TV. HDMI Input Socket (Back) HDMI device English - 9 - Connecting a Computer Connecting a DVD Player English To Connect a Computer With either an RGB/PC or an HDMI connection, you can watch your computer's display on the TV and hear the sound from the TV's speakers. When connecting a PC to the RGB/PC input on TV, use an analogue RGB (15-pin) computer cable and use the SIDE AV socket with a PC audio cable (not supplied) for audio connection, using the supplied Side AV connection

*cable's RED and WHITE inputs (see illustration). Connecting to a DVD Player via YPbPr Some DVD players are connected through COMPONENT SOCKETS (YPbPr).*

*In this case, you must use the supplied Component YPbPr video connection cable for enabling connection. First, plug the single jack of the cable to the TV's YPbPr socket (side). Afterwards, insert your YPbPr cable's (not supplied) connectors into the plural part of the supplied YPbPr video connection cable (see illustration below). Colours of the connected jacks should match. To enable audio connection, use the supplied Side AV connection cable. First, plug single jack of the cable to the Side AV Input of the TV. Afterwards, insert your DVD player's audio cable's connectors into the plural part of the supplied Side AV connection cable (see illustration below). Colours of the connected jacks should match.*



[You're reading an excerpt. Click here to read official TOSHIBA](#)

[W1333 user guide](#)

<http://yourpdfguides.com/dref/5067282>

To use a PC, set the monitor output resolution on the PC before connecting it to the TV. To display the optimum picture, use the PC setting feature.  
NOTE: • Some PC models cannot be connected to this TV. An adaptor is not needed for computers with a compatible mini D-sub15-pin terminal. • Depending on the DVD's title and the specifications of the PC on which you are playing the DVD-Video, some scenes may be skipped or you may not be able to pause during multiangle scenes. English - 10 - Connecting a USB Memory English To Connect a USB Flash Drive • You can connect a USB Flash Drive to your TV by using the USB input of the TV. This feature allows you to display/play music, photo or video files stored in a USB stick. • It is possible that certain types of USB devices (e.g. MP3 Players) may not be compatible with this TV. • You may back up your files before making any connections to the TV set in order to avoid any possible data loss. Note that manufacturer will not be responsible for any file damage or data loss.

• Do not pull out USB module while playing a file. CAUTION: Quickly plugging and unplugging USB devices may cause damage to the USB device. English - 11 - Power Save Mode English Repair Information Environmental Information This television is designed to consume less energy to save environment. You not only help to save the environment but also you can save money by reducing electricity bills thanks to the energy efficiency feature of this TV. To reduce energy consumption, you should take the following steps: You can use Power Save Mode setting, located in the Picture Settings menu. If you set Power Save Mode as Eco, the TV will switch to energy-saving mode and luminance level of TV set will be decreased to optimum level. Note that some picture settings will be unavailable to be changed when the TV is in Power Save Mode. If Picture Off is selected, "Screen will be off in 3 seconds." message will be displayed on the screen. Select PROCEED and press OK to continue.

The screen will be off in 15 seconds. If you disable Power Save Mode, Picture mode will be automatically set to Dynamic. When the TV is not in use, please switch off or disconnect the TV from the mains plug. This will also reduce energy consumption. Disconnect power when going away for longer time.

It is highly recommended to activate Power Save Mode setting to reduce your annual power consumption. And also it is recommended to disconnect the TV from the mains plug to save energy more when you do not use. Please help us to save environment by following these steps. Please refer all servicing to qualified personnel. Only qualified personnel must repair the TV.

Please contact your local dealer, where you have purchased this TV for further information. English - 12 - Controlling the TV A wide variety of external equipment can be connected via the sockets located on the side and back of the TV. Whilst all the necessary adjustments and controls for the TV are made using the remote control, the menu wheel on the left side of the TV may be used for some functions. English 5Vdc Max:500mA IR receiver Standby LED 5Vdc Max:500mA Up Direction Programme / Volume / AV / Standby On selection switch Down Direction Switching on If the standby LED is unlit, check that the mains plug is connected to the power and press the middle of the button on the left side of the TV to switch the television on. To put the television into Standby, press button on the remote control. To view the television, press button again. The picture may take a few seconds to appear. Note: The active Standby LED colour will turn to red in a few moments when the TV is switched off. MODE o YpbPr SIDE AV Using the Remote Control Press the MENU button on the remote control to see the menus. The main menu appears as a group of icons each for a menu option.

Press the Left or Right button to select a topic. In sub menu screen mode the menu appears as a list. Press the Up or Down button to select a topic. To use the options press the Up and Down buttons on the remote control to move up and down through them and OK, Left or Right buttons to select the required choice.

Follow the on screen instructions. The functions of each menu are described in detail throughout the manual. For energy saving: Turning the TV off at its mains supply, or un-plugging it, will cut energy use to nearly zero for all TV's. This is recommended when the TV is not being used for a long time, e.g. when on holiday.

Reducing the brightness of the screen will reduce energy use. Energy efficiency cuts energy consumption and thus saves money. NOTE: Putting the TV into standby mode, will reduce energy consumption, but will still draw some power. Using the Controls on the TV Using the menu wheel on the side of the TV: To change volume: Press the middle button until the volume level OSD appears. Increase the volume by pushing the button up.

Decrease the volume by pushing the button down. change channel: Press the middle button until the To channel information banner appears. Scroll through the stored channels by pushing the button up or down change source: Press the middle button until the To source list appears. Scroll through the available sources by pushing the button up or down. turn the TV off: Press the middle of the button down To and hold it down for a few seconds, the TV will turn into standby mode.

Please always refer to the owner's manual of the equipment to be connected for full details. English - 13 - Before switching on the TV, put your decoder and media recorder to Standby if they are connected and ensure the aerial is connected to your TV. To set up the TV, use the buttons on the remote control as detailed on page 7. Initial Installation English IMPORTANT: Ensure that the aerial is connected and a Common Interface module is not inserted before switching on the TV for the first time installation. 1. Connect the mains plug and switch the TV to on on using the side control switch. If the TV does not switch on, press any numbered or button on the remote control, then the language selection menu will be displayed. This screen will appear the first time that the TV is switched on and each time the TV is reset. 5. Press OK button on the remote control to continue and the following message will be displayed on the screen:

6.

Select Yes button by using Left or Right button and press OK button to continue. Afterwards, the following OSD will be displayed on the screen: 7. If you select Cable option, the following screen will be displayed: 2. By pressing Up or Down button, highlight the language you want to set and press OK button. The following message will be displayed next: 3. By pressing Left or Right button, select the country you want to set and press Down button to highlight the Search Type option. Use Left or Right to set the desired search type. Available search types are digital only, analog TV only and full. 4. When set, Down button to select Teletext Language.



[You're reading an excerpt. Click here to read official TOSHIBA W1333 user guide](http://yourpdfguides.com/dref/5067282)  
<http://yourpdfguides.com/dref/5067282>

Use Left or Right button to select desired Teletext Language. 8. You can select frequency ranges from this screen. For highlighting lines you see, use Up or Down button. You can enter the frequency range manually by using the numeric buttons on the remote control.

Set Start and Stop Frequency as desired by using numeric buttons on the remote control. After this operation, you can set Search Step as 8000 kHz or 1000 kHz. If you select 1000 kHz, the TV will perform search process in a detailed way. Searching duration will thus increase accordingly. When finished, press OK button to start automatic search.

9. If you select Aerial option from the Search Type screen, the television will search for broadcasts. English - 14 - Initial Installation - continued Auto Tuning English 10. The Auto tuning screen will appear and the television will start to search for available stations. The progress bar will move along the line. You must allow the television to complete the search. The following OSD will be displayed on the screen and the television will search for the selected broadcasts:

Auto Tuning As new services are broadcast, it will be necessary to retune the television in order to view them. • Auto Tuning will completely retune the television and can be used to update the channel list. It is recommended that Auto Tuning is run periodically to ensure that all new services are added. All current channels and settings, i.

e. locked channels, will be lost. • Press MENU button on the remote control and select Install and Retune by using Left or Right button. Press OK button and the following menu screen will be displayed. Note: You can press MENU button to cancel. After the available stations are stored, Channel List will be displayed on the screen. If you like the sort channels, according to the LCN, please select Yes and then press OK button (if available). • Select Automatic Channel Scan (Retune) by using Up or Down button and press OK button. Automatic Channel Scan options will be displayed. You can select options by using Up or Down and OK buttons.

Auto Channel Scan Menu Operation Digital: Searches and stores aerial DVB stations. Analogue: Searches and stores analogue stations. Full: Searches and stores both analogue and aerial DVB stations. • Whenever you select an automatic search type and press OK button, a confirmation screen will appear on the screen. To start installation process, select Yes, to cancel select No by using Left or Right and OK button. • After auto channel scan type is set and selected and confirmed, installation process will start and progress bar will move along. Press MENU button to cancel process. In such a case, located channels are not stored. The television will start to search for all available stations. You must allow the television to complete the search.

• Press OK button to quit channel list and watch TV. Note: Do not turn off the TV while initializing first time installation. Keep the menu of Store Mode Disabled and do not change it, when using at home. • Press the Left or Right button to choose the required language region. • After the Teletext language is selected, press MENU button to exit. English - 15 - Manual Tuning, Analogue Fine Tuning The television can be tuned-in manually using Manual Search feature. English Digital Aerial Manual Search The feature is available for service engineers or can be used for direct channel entry if the multiplex channel is known. • Select Manual channel scan from the Install and Retune menu and press OK. Analogue Manual Search The television can be tuned-in manually. For example: if the television cannot be connected to a media recorder/decoder with a SCART lead or to tune-in a station on another System.

To allocate a programme position on the television for a decoder and media recorder: turn the decoder on, insert a pre-recorded film into the media recorder and press PLAY, then manually tune. After selecting search type as Digital Aerial, you can enter the multiplex or frequency number using the numeric buttons and press OK button to search. • Enter the multiplex number using the numeric buttons. The television will automatically search for that multiplex. When the multiplex is found any channels not currently on the programme list will be added and the programme information at the top of the screen will be updated. • Repeat as necessary. After selecting search type as Analogue, you can use Up or Down button to highlight an item and then press Left or Right button to set an option. Enter the channel number or frequency using the numeric buttons. You can then press OK button to search. When the channel is located, any new channels that are not on the list will be stored.

Digital Cable Manual Search • In cable manual scan, you can enter frequency, modulation, symbol rate and network channel scan options. After selecting search type as Digital Cable, you can set the desired options and press OK button to search. Analogue Fine Tune • Select Analogue Fine Tune from the Install and Retune menu by using Up or Down and OK buttons. Analogue fine tune screen will be displayed. Analogue Fine Tune feature will not be available if there are no analogue channels, only digital channels and external sources stored.

• Use Left or Right button to set Fine Tune. When finished, press OK button. English - 16 - General Operation English Stereo and Bilingual Transmissions If stereo or dual language broadcasts are transmitted, the word Stereo or Dual will appear on the screen each time positions are changed, disappearing after a few seconds. If the broadcast is not in stereo, the word Mono will appear. Stereo... Press LANG.

to select Stereo or Mono. Bilingual... Bilingual transmissions are rare. If they are transmitted, the word Dual will be displayed. Choose the required programme number, and if the word Dual appears, press LANG. to select Dual 1, Dual 2 or Mono. Standby Notifications If the TV switches off while in No Signal mode, the following on-screen message will be displayed on the next switch-on: For DTV broadcasts To view current language and for changing to an alternative language (if available), press LANG. button. Available options will be listed. Displaying Subtitles In digital broadcasts, this feature will show subtitles on the screen in the selected language provided they are being broadcast. Press SUBTITLE button to activate available subtitles.

Press SUBTITLE button again to turn off subtitles. When the Auto Tv Off timeout is reached, the following message will be displayed on the screen. Select YES to shut down the TV. Select NO to cancel. The TV will switch off as well, if you do not make a selection on this screen. Viewing Main Menu • This set has "Menu Wheel". • Press MENU button on the remote control to view main menu. Volume Press V or V button on the remote control to adjust the volume. Sound Mute Press " " button once to turn the sound off and again to cancel.



[You're reading an excerpt. Click here to read official TOSHIBA](http://yourpdfguides.com/dref/5067282)

[W1333 user guide](http://yourpdfguides.com/dref/5067282)

<http://yourpdfguides.com/dref/5067282>



To select a programme position use the numeric buttons on the remote control.

Programme positions can also be selected using CH or CH buttons. Press INFO button to display the on-screen information i.e. programme position, stereo/mono signal and picture format. If the TV switches off owing to the auto power down feature, the following on-screen message will be displayed on the next switch-on: Controlling Volume and Muting Sound Selecting Programme Positions English - 17 - Channel List, Sorting Programmes, Programme Locking

You can view stored channels and sort them by using the Channel List feature.

English Viewing Channel List The channel order may be changed to suit your personal preference. • Selected channel is now moved. Deleting a Channel You can press GREEN button to tag/untag all channels; YELLOW button to tag/untag channel. • Select the channel that you want to delete and select Delete option. Press OK button to continue.

• A warning screen will appear. Select Yes to delete, select No to cancel. Press OK button to continue. • Select Channel List from the main menu and press OK button. The following menu will be displayed: • Select Edit Channel List to manage all stored channels. Use Up or Down and OK buttons to select Edit Channel List. Renaming a Channel • Select the channel that you want to rename and select Edit Name option. Press OK button to continue. • Pressing Left or Right button moves to the previous/ next character. Pressing Up or Down button changes the current character.

Pressing the numeric buttons '0...9' replaces the highlighted character with the characters printed above the button one by one as the button is pressed. • When finished, press OK button to save. Press MENU to cancel. Locking a Channel • Press Up or Down button for selecting a channel. You can press CH or CH button to move page up or page down. • To watch a specific channel, highlight it by using Up or Down button. Afterwards press OK button.

• Press BLUE button to view filtering options. • Press MENU button to exit. Note: The channels listed are mixed at the channel list. Channel types can be differentiated by the icons next to them: DTV (digital tv), HD (HD TV), ATV (Analogue TV), TV (TV), RD (Radio), encrypted, lock, and at the favourite list.

Listed channels can also be sorted by using the active channel list filter.

You can press GREEN button to tag/untag all channels; YELLOW button to tag/untag a single channel. • Select the channel that you want to lock by using Up or Down button. • Select Lock option by using Left or Right button. Press OK button to continue. • You will be asked to enter parental control PIN.

Enter the PIN number. Note: Default PIN is set to 0000. @@@@ • Select Move option in the channel list and press OK button. • Edit Number screen will be displayed. @@@@ • For information on a highlighted programme, press i button. • Use numeric buttons for quickly selecting a broadcast. @@ • Press TXT button to display searching options. @@ This will remain on the screen for a few seconds. @@@@ Note: Factory set default PIN code is 0000.

@@ This may take a few moments to appear.

• For details of other programmes currently available, press navigation buttons to scroll up and down or scroll left/right through the list. As channels are selected, details of the programme currently being broadcast will appear. • Press RED button to view the previous day. • Press GREEN button to view the next day. • Press YELLOW button for zooming to a programme. • Press BLUE button to display filtering options. @@@@ • Otherwise the current settings will be used. Audio: by pressing Left or Right button change the audio language. Subtitle: alter the subtitle language with Left or Right button. The chosen language will be seen in subtitles.

Teletext: changes the preferred teletext language. @@@@ • Press OK button to view Settings menu. @@ Press MENU button and select Settings by using Left or Right button. Press OK button to continue. @@ Enter the pin number.

@@ The default key is set to 0000. Enter the PIN. @@@@ Press OK button to continue. Use Up or Down to select parental and then press OK to continue. Enter the pin number.

Child Lock disables the buttons on the television. @@ Press OK to display the Set PIN window. • Use numeric buttons to enter new pin number.

@@@ • Use Up or Down buttons to go to Menu Lock option. Use Left or Right buttons to choose Menu Lock Mode. OFF : All menus are unlocked. ALL MENUS : All Menus are accessible only with the correct lock key. So the user cannot add, delete, rename, channels, cannot set timers. INSTALLATION MENU: Installation menu is locked. So the user can't add channels.

Note: Factory set default PIN code is 0000. @@ You can customize current picture mode settings as desired. @@ Press MENU button and select Picture by using Left or Right button. @@ Press MENU button and select Picture by using Left or Right button. @@ Press MENU button and select Picture by using Left or Right button. @@ Use Up or Down button to select Power Save Mode. Press Left or Right button to set Power Save Mode as Disabled, Eco or Picture Off. See the section, Environmental Information in this manual for further information on Power Save Mode. Operating Picture Settings Menu Items • Press Up or Down button to highlight a menu item.

• Use Left or Right button to set an item. • Press MENU button to exit. Note: The backlight function will be inactive if Power Save Mode is set to on. Backlight (optional) This setting controls the backlight level and it can be set to Auto, Maximum, Minimum and Medium. Note: Backlight can not be activated in VGA or Media Browser mode or while picture mode is set as Game.

Picture Mode This TV offers the choice of personalising the picture style. Natural, Cinema, Game, Sports, and Dynamic are preset options and affect settings within the TV. Press MENU button and select Picture by using Left or Right button. Press Up or Down button to select Mode. • In the Picture Settings menu, press Up or Down button to select Mode.

Press Left or Right button to select the picture mode you prefer. Noise Reduction Sometimes some words or picture elements may become distorted or pixelated. Using the Noise Reduction feature reduces this effect by smoothing out the edges. Press MENU button and select Picture by using Left or Right button. Press Up or Down button to select Noise Reduction. Contrast Sets the lightness and darkness values of the screen. Press MENU button and select Picture by using Left or Right button. Press Up or Down button to select Contrast. Advanced Settings Some additional controls in the picture menu are grouped under the title Advanced Settings. To view or change, first press Up or Down button to select Advance Settings.

Press OK button to view. Advanced Settings menu controls are as the following: English - 22 - Configuring Picture Settings - continued English Dynamic Contrast: You can change contrast rate by using dynamic contrast function.



[You're reading an excerpt. Click here to read official TOSHIBA W1333 user guide](http://yourpdfguides.com/dref/5067282)  
<http://yourpdfguides.com/dref/5067282>

Dynamic contrast can be set to one of these options: Low, Medium, High or Off. Colour Temp: Colour Temperature increases the 'warmth' or 'coolness' of the picture by increasing the red or blue tint. Picture Zoom: Sets the picture size to Auto, 16:9, Subtitle, 14:9, 14:9 Zoom, 4:3 or Cinema. Press MENU button and select Picture by using Left or Right button. Press Up or Down button to select Picture Zoom. Full Mode (optional): If you connect a device via HDMI or YPbPr connectors and set 1080i/1080p resolutions, Full Mode item will be visible. HDMI True Black (optional): While watching from HDMI source, this feature will be visible in the Picture Settings menu. You can use this feature to enhance blackness in the picture.

You can set this feature as "On" for activating HDMI True Black mode. Note: HDMI True Black On/Off feature functions only when the HDMI device output is set to RGB. @@@@Skin Tone: Adjust the desired skin tone. Colour Shift: Adjust the desired colour tone. Press MENU button and select Picture by using Left or Right button.

Press Up or Down button to select Colour Shift. RGB Gain: Press OK button to edit RGB gain. @@Press MENU button and select Picture by using Left or Right button. @@@@Instead, VGA mode settings will be added to the Picture Settings while in VGA/ PC mode. PC Picture controls Contrast, Brightness and Colour Temperature adjustments in this menu are identical to adjustments defined in TV picture menu.

Select Reset and press OK button to reset the adjustments. Note: For switching to VGA/PC source, press SOURCE button on your remote control and select VGA/PC input. Note that VGA/PC mode menu settings are available only while the TV is in PC source. V Position V (Vertical) Position shifts the image vertically towards the top or bottom of the screen. In the PC Position menu press the Down button until V Position is highlighted. Press the Left or Right button to adjust the value. Dot Clock Dot Clock adjustment corrects the interference that appear as vertical banding in dot intensive presentations like spreadsheets or paragraphs or text in smaller fonts. • In the PC Position menu press the Down button until Dot Clock is highlighted. • Press the Left or Right button to adjust the value. Phase Depending on the resolution and scan frequency that you input to the TV Set, you may see a hazy or noisy picture on the screen.

In such a case you can use this item to get a clear picture by trial and error method. • In the PC Position menu press the Down button until Phase is highlighted. • Press the Left or Right button to adjust the value. PC Position Select this to display PC position menu items. Autoposition If you shift the picture horizontally or vertically to an unwanted position, use this item to put the picture into correct place automatically. • Select the PC Position option from the main menu. Press OK to display the PC Position submenu. • Press the Down button to highlight Autoposition and then press the OK button. H Position H (Horizontal) Position shifts the image horizontally to right hand side or left hand side of the screen. • In the PC Position menu press the Down button until H Position is highlighted.

• Press the Left or Right button to adjust the value. English - 25 - You can configure sound settings of your TV by using Sound Settings menu. Configuring Sound Settings English Configuring Sound Settings Sound settings can be configured according to your personal preferences. Press MENU button and select Sound by using Left or Right button. Press OK button to view Sound Settings menu.

Note: Equalizer menu settings can be changed manually only when the Equalizer Mode is in User. Balance (Only for speaker) This setting is used for emphasizing left or right speaker balance. • Press Left or Right button to change the level of the balance. Balance level can be adjusted between -31 and +31. Headphone This setting is used to set the sound output when headphones are connected.

• Press Up or Down button to select Headphone. • Press Left or Right button to select Volume. Press Right button to increase headphone volume level. Press Left button to decrease headphone volume level. Headphone volume level can be adjusted between 0 and 63. This setting is used to set the sound mode. Highlight Sound Mode by using Up or Down button. Press Left or Right button to set. You can select Mono, Stereo, Dual I or Dual II mode, only if the selected channel supports that mode. Sometimes there can be large changes in volume when switching from a DTV 5.

1ch to a DTV 2ch, an ATV channel, or an external input. Using the AVL feature reduces these volume differences. • In the Sound menu, press Up or Down to highlight AVL. Press Left or Right button to set AVL as On or Off. Dynamic Bass is used to increase bass effect of the TV set. Press MENU button and select Sound by using Left or Right button. Press OK button to continue. Select Dynamic Bass using Up or Down buttons and press Left or Right button to set. • In the Sound menu, press Up or Down to highlight Surround Sound. Press Left or Right button to set Surround Sound as On or Off.

This setting enables you to set Digital Out preference as Compressed or PCM. You should set this feature in accordance with the received broadcast's content. In equalizer menu, the preset can be changed to Music, Press MENU button and select Sound by using Left or Movie, Speech, Flat, Classic and User. Press the Right button. Press OK button to continue.

MENU button to return to the previous menu. Select Digital Out using Up or Down button and then use Left or Right button. English - 26 - Sound Mode Operating Sound Settings Menu Items • Press Up or Down button to highlight a menu item. • Use Left or Right button to set an item. • Press MENU button to exit.

AVL Volume Press MENU button and select Sound by using Left or Right button. Press OK button to continue. Select Volume using Up or Down button and then use Left or Right button to set volume level. Equalizer (Only for speaker) You can customize current sound mode settings. Select the appropriate mode in accordance with the installation location of the TV and adjust the equalizer on-screen as desired. Press OK button to view equalizer submenu. Dynamic Bass Surround Sound Digital Out Settings Menu Operation, Conditional Access English Configuring Your TV's Settings Detailed settings can be configured to suit your personal preferences. Other Settings Displays other setting options of the TV set. Viewing Settings Menu Press MENU button and select Settings by using Left or Right button. Press OK button to view Settings menu.

Using a Conditional Access Module The Common Interface Slot, situated on the side of the television, enables the insertion of a CAM (Conditional Access Module) and card. These are purchased from a service provider and allow additional subscription broadcasts to be viewed. For more information, see a service provider.



[You're reading an excerpt. Click here to read official TOSHIBA W1333 user guide](http://yourpdfguides.com/dref/5067282)  
<http://yourpdfguides.com/dref/5067282>

**IMPORTANT:** Inserting or removing the CAM is only when the TV is SWITCHED OFF. • In order to watch certain digital channels, a conditional access module (CAM) is necessary. This module must be inserted in the CI slot of your TV. • Obtain the Conditional Access Module (CAM) and the viewing card by subscribing to a pay channel company, then insert those to the TV using the following procedure. • Insert the CAM and then the viewing card to the slot that is located in the terminal cover at the rear side of the TV. • The CAM should be correctly inserted, it is impossible to insert fully if reversed. The CAM or the TV terminal may be damaged if the CAM is forcefully inserted.

Connect the TV to the mains supply, switch on and then wait for few moments until the card is activated. • When no module is inserted, “No Common Interface module detected” message appears on the screen. • Refer to the module instruction manual for details of the settings. Viewing Conditional Access Menu (\*)

(\*) These menu settings may change depending on the service provider. Press MENU button and select Settings by using Left or Right button.

Press OK button to view Settings menu. Use Up or Down button to highlight Conditional Access and press OK to view menu items. Operating Settings Menu Items • Press Up or Down button to highlight a menu item. • Press OK button to select an item. • Press MENU button to exit.

Conditional Access This setting controls conditional access modules when available. Select Settings from the main menu by using Left or Right button and press OK button. Afterwards, use Up or Down button to set Conditional Access. Press OK button to continue. Language Configures language settings. See page 20. Parental Configures parental settings. See page 21. Timers Sets timers for selected programmes. See page 28.

**Date/Time** You can configure date/time preferences by using this menu screen. See page 28. Sources Enables or disables selected source options. See page 29.

English - 27 - Setting Timers, Setting Date/Time English Timers To view Timers menu, press MENU button and select Settings by using Left or Right button.

Press OK button to view Settings menu. Use Up or Down button to highlight Timers and press OK to continue: Editing a Timer • Select the timer you want to edit by pressing Up or Down button. • When finished with editing, press GREEN button to save. You can press MENU button to cancel. Deleting a Timer • Select the timer you want to delete by pressing Up or Down button.

• Press RED button. • Select Yes by using Left or Right button to delete the timer. Select No to cancel. Setting Sleep Timer The television can be set to turn itself Off after a certain length of time. • Highlight Sleep Timer by using Up or Down button.

• Use Left or Right button to set. The timer can be programmed between Off and 2.00 hours (120 minutes) in steps of 30 minutes. Configuring Date/Time Settings You can configure date/time preferences by using this menu screen. • Select Date/Time in the Settings menu to configure Date/Time settings.

Press OK button. Setting Programme Timers This feature will set the television to go to a specific channel at a certain time. It can be used to view a particular programme, or by setting the mode to daily or weekly, can be used to view a series of programmes. Press Down button to set timers on an event. Programme timer function buttons will be displayed on the screen. Note: That this feature will be available only when a timer has been programmed. Adding a Timer •

Press YELLOW button on the remote control to add a timer. The following menu appears on the screen: Channel: Changes channel by using Left or Right. Timer/Record Type: This feature is unavailable to be set. Date: Enter a date using the numeric buttons.

**Start:** Enter a starting time using the numeric buttons. **End:** Enter an ending time using the numeric buttons. **Duration:** Displays duration between the starting and ending time. **Repeat:** Sets a timer to be repeated as Once, Daily or Weekly. Use Left or Right button to select an option. **Change/Delete:** Controls parental settings on timers. • Press GREEN button to save the timer. Press RED button to cancel. Use or button to highlight the Time Settings Mode. Time Settings Mode is set using or button.

It can be set to AUTO or MANUAL. When AUTO is selected, Date/Time and Time Zone options will not be available to be set. If MANUAL option is selected as the Time Zone can be altered: • By pressing or button select Time Zone. Use or button to change the Time Zone between GMT-12 or GMT+13. Date/Time on the top of the menu list will then change according to the selected Time Zone.

Note: For countries without Digital channels, only the Date and Time option will be displayed. English - 28 - Source Settings, Other Controls English Configuring Source Settings You can enable or disable selected source options. The TV will not switch to the disabled source options when the SOURCE button is pressed. Configuring Other Settings - General You can configure the settings of your TV. Select Settings from main menu and press OK to view the Settings menu.

Press the MENU button on the remote control to exit. To view general configuration preferences, select Other Settings in the Settings menu and press OK button. • Select Sources in the Settings menu and press OK button. • Press Up or Down buttons to select a source. • Use Left or Right button to enable or disable the selected source. Changes are automatically stored. Input Selection Use the Input Selection window if the television does not switch over to a connected source automatically. • Press SOURCE button on your remote control for directly changing sources. Use the Up or Down button to highlight an input and press Right button to select. Operation • Press Up or Down button to select an item.

• Use Left or Right button to set an option. • Press OK button to view a sub-menu. Menu Timeout To set a specific display timeout for menu screens, set a value for this option. In the Other Settings menu, select Menu Timeout and choose 15 sec, 30 sec or 60 sec using Left or Right button. Scan Encrypted Channels When this setting is on, search process will locate the encrypted channels as well. If it is set as OFF manually, encrypted channels will not be located while in automatic search or manual search. Scan Encrypted Channel feature will always be ON after performing first time installation. • In the Other Settings menu, use Up or Down button to select Scan Encrypted. • Press Left or Right button to set this function as Yes or No. English - 29 - Other Controls - continued English Blue Background If the signal is weak or absent, the TV will automatically change to a blue screen.

To enable this, set Blue Background to On. • In the Other Settings menu, select Blue Background and choose On or Off using Left or Right button. • Press OK button to enter Audio Description submenu.



[You're reading an excerpt. Click here to read official TOSHIBA](http://yourpdfguides.com/dref/5067282)

[W1333 user guide](http://yourpdfguides.com/dref/5067282)

<http://yourpdfguides.com/dref/5067282>



- Use Up or Down button to select Audio Description setup and then press Left or Right button to set this setting. You can set the timeout value of auto off feature.

After the timeout value is reached and the TV is not operated for selected time, the TV will go off. Press MENU button and select Settings by using Left or Right button. Press OK button to continue. Use Up or Down button to select Other Settings and then press OK button. Select Auto TV Off using Up or Down button.

**Auto TV Off Software Upgrade** This feature helps to keep your TV updated. It works automatically and searches for new information when available. Note that this setting is inactive to be modified. To ensure that your TV always has the most updated information, you can use this setting. In order for the proper operation, please ensure that the TV is set to standby mode. **Broadcast Type (optional)** Press MENU button and select Settings by using Left or Right button. Press OK button to continue. Use Up or Down button to select Other Settings and then press OK button. Select Broadcast Type using Up or Down button and use Left or Right button to set. When you set the desired broadcast type by using Left or Right button, the TV will display the selected broadcast type.

You can enable or disable automatic upgrade by setting Automatic Scanning option. You can manually search for new software by selecting Scan for upgrade. **Standby Search (\*) (\*)** This setting is visible only when the Country option is set to Denmark, Sweden, Norway or Finland. If the Standby Search is set to On and the TV is in standby mode, the TV will look for any changes in the saved channels. Press MENU button and select Settings by using Left or Right button. Press OK button to continue. Use Up or Down button to select Other Settings and then press OK button. Select Standby Search using Up or Down button and use Left or Right button to set. **Application Version** Displays the current application version. **Hard of Hearing** If the broadcaster enables any special signal concerning the audio, you can set this setting as On to receive such signals.

- Use Up or Down button to select Hard of Hearing and then press Left or Right button to set this setting as On or Off. **Store Mode** If you set Store Mode to Enabled, your TV's features will be illustrated on the top of the screen. To deactivate this feature, please set to Disabled. **Audio Description** Audio description refers to an additional narration track for blind and visually impaired viewers of visual media, including television and movies. The description narrator talks through the presentation, describing what is happening on the screen during the natural pauses in the audio (and sometimes during dialogue, if deemed necessary).

You can use this feature, only if the broadcaster supports that additional narration track. • Highlight Audio Description by pressing Up or Down button. **English Power Up Mode** This setting configures the power up mode preference. Always On: The TV always switches on when main on/off button is pressed. Standby: The TV always powers up in Standby mode.

**Last State:** The TV always switches on with the last selected channel/source. - 30 - This TV allows you to enjoy photo, music or video files stored on a USB memory **USB Media Browser English Manual Start** • To display Media Browser window, you can press MENU button on the remote control and then select Media Browser by pressing Left or Right button. • You can also select Media Browser from the Quick button menu. • Press OK button to continue. Media Browser menu contents (depending on the contents of your USB memory) will be displayed. • Only limited types of USB device are supported. Therefore, it is suggested not to use USB for playing Media Player. • Non-supported characters will be replaced with a square (□). **Auto Start** • When you plug a USB memory, the following menu will be displayed. You can play music, picture and video files from a USB memory.

- To display All files in a list, select Settings tab and change View Style to Folder. Then go back to main media browser screen and you will see that now All tab will be available. Select All tab and press OK button. Note: Some USB compliant devices may not be supported. If the USB memory is not recognized after power off/on or First Time Installation, plug the USB memory out and power off/on the TV set. Then plug the USB memory in again. • Do not use a USB Hub. • You must obtain any required permission from copyright owners to use copyright content. Toshiba cannot and does not grant such permission. • Depending on the file size and amount in your USB memory, it may take some time for loading to view.

A message will display on-screen when loading files from the USB memory. **English - 31 -** This TV allows you to enjoy photo, music or video files stored on a USB memory **USB Media Browser - continued English** **Playing MP3 Files** To play mp3 files from a USB memory, you can use this menu screen. **Viewing JPEG Files** To view photo files from a USB Memory, you can use this menu screen. When you select Photos from the main options, available image files will be filtered and listed on this screen. • / : Navigate menu button): Starts the playback.

button) : Stops playback. button) : Pauses the selected If you select a subtitle file and press OK button, you can select or deselect that subtitle file. The following menu will be displayed while playing a video file: • Jump (Numeric buttons): Jump to selected file using the numeric buttons. • OK: Views the selected picture in full screen. • / : Navigate menu button): Starts the slideshow using • Slideshow ( all images.

- Play ( • Stop ( • Pause ( playback. • RED button: Sorts files by Title, Artist or Album. • Loop/Shuffle (GREEN button): Press once to disable Loop. Press again to disable both Loop and Shuffle. Press once more to enable only Shuffle. Press again to enable all. You can follow the disabled functions with the change of the icons. • 0..9 (Numeric buttons): The TV will jump to the file starting with the letter you input via the numeric buttons on your remote control.

- Play This (OK button) : Plays the selected file. • Previous/Next (Left/Right buttons) : Jumps to previous or next file to play. • Yellow button: Change viewing style • BLUE button: Changes media options. Note: If the Viewing Style is set to Folder in Media Browser Settings, Music folder will be displayed as sorted and there is no need to sort files again by pressing RED button. • GREEN button: Views images in thumbnails. • RED button: Sorts files by date. • YELLOW button: Change viewing style • BLUE button: Changes media options. **English - 32 -** This TV allows you to enjoy photo, music or video files stored on a USB memory **USB Media Browser - continued English** **Slideshow Feature** You can use this feature to display photos on your TV. • Pause ( • Continue ( button) : Pauses the slideshow.



[You're reading an excerpt. Click here to read official TOSHIBA](http://yourpdfguides.com/dref/5067282)

[W1333 user guide](http://yourpdfguides.com/dref/5067282)

<http://yourpdfguides.com/dref/5067282>

button) : Continues the slideshow.

• Loop/Shuffle (GREEN button): Press once to disable Loop. Press again to disable both Loop and Shuffle. Press once more to enable only Shuffle. Press again to enable all. You can follow the disabled functions with the change of the icons.

• Previous/Next (Left/Right buttons): Jumps to previous or next file on slideshow. • Rotate (Up/Down buttons): Rotates the image using up/down buttons. • RETURN (Exit): Back to file list. • INFO button: Displays help screen. LANG.

(Play Preview): Displays selected file in a small preview screen. RED: Sorts files by name. Play ( button) : Plays all media files starting with the selected one.

YELLOW Button: Change viewing style Loop/Shuffle (GREEN button): Press once to disable Loop. Press again to disable both Loop and Shuffle. Press once more to enable only Shuffle. Press again to enable all. You can follow the disabled functions with the change of the icons. BLUE: Changes media options.

Play ( Stop ( Pause ( button): Starts the video playback.

button): Stops the video playback. button): Pause the video playback. button): Goes backward. button): Goes forward. Video Playback When you select Videos from Media Browser, available video files will be filtered and listed on this screen. You can use Up or Down button to select a video file and press OK button to play a video. Note: If you set View Style from Media Browser Settings menu as 'Folder', media browser main selection screen will include All tab as well. Rewind ( Forward ( Previous/Next (Left/Right button): Plays the previous/ next file. Subtitle/Audio (LANG. button): Sets subtitle/Audio.

Green: Jumps to the selected time. Yellow: Opens subtitle time correction menu. Ret/Back (RETURN button): Back to previous menu. If you select a subtitle file and press OK button, you can select or deselect that subtitle file. Jump (Numeric buttons):The TV will jump to the file starting with the letter you input via the numeric buttons on your remote control.

Play This (OK button) : Plays the selected file. / : Navigate menu Press OK to confirm Press BLUE button for clear Press RET/BACK button to switch back to previous menu. Note: You can set subtitles by using OK button before starting the playback or by using LANG. button during the playback. Selected subtitles may not be displayed correctly in some cases.

English - 33 - This TV allows you to enjoy photo, music or video files stored on a USB memory USB Media Browser - continued English In order to display movie subtitles correctly, you should set a "Movie Subtitle" language. See the section, "Movie Subtitle" in "Language Settings" for selecting Movie Subtitle language. Press RETURN button to switch back to previous menu. Using MENU button in Media Browser Mode Pressing MENU button in Media Browser mode displays the following menu screen: Media Browser Settings You can access Picture, Sound and Settings menu options using this screen. Press MENU again to exit from this screen. To Close the Media Player • Press RETURN button on the remote control. You can set your Media Browser preferences by using the Settings dialogue. Press Up or Down button to highlight an item and use Left or Right button to set. View Style: Sets default browsing mode. Slideshow Interval: Sets slide show interval time.

Show Subtitle: Sets subtitle enabling preference. Subtitle Language: Sets supported subtitle language. Subtitle Position: Sets subtitle position as up or down.

Subtitle Font Size: Sets subtitle font size (max. 54pt). English - 34 - This television has a multi-page text memory, which takes a few moments to load.

Analogue Only Text Services English Before using the text services, the required language region must be chosen. • Select Language from the Settings menu. • Press the Left or Right button to choose the required language region. • After the Teletext language is selected, press MENU button to exit.

Revealing Concealed Text To discover the solutions on quiz and joke pages press the INFO button. Holding a Page At times it is convenient to hold a page of text. Press OK and HOLD will appear in the top left of the screen. The page will be held on screen until the button is pressed again. Using Text Button -TXT • To view text services press TXT.

Press TXT again to superimpose text over a normal broadcast picture. • Press TXT again to return to normal viewing. • Programmes cannot be changed until text is cancelled. • The first text page shown will be the initial page. • Any text page can be accessed by entering the 3 digit page number using the numbered buttons, pressing the coloured buttons or pressing to advance to the next page and to go back to the previous page.

• Four coloured titles will appear at the base of the screen. To access one of the four given subjects, press the relevant coloured button on the remote control.

• For further information on your particular text system(s), see the broadcast text index page or, consult your local Toshiba dealer. Below is a guide to the functions of the remote control text buttons. To display an initial page Press RETURN to access an initial page. The one displayed is dependant on the broadcaster. Accessing Sub-Pages If a text page has sub-pages, press and enter the subpage numbers 01,02,03 etc. which can be selected using Left/ Right buttons at the bottom of the text page under the coloured links. English - 35 - Appendix A: PC Input Typical Display Modes The following table is an illustration of some of the typical video display modes. Some, due to the display native resolution, are scaled automatically to enable correct image to be displayed.

Your TV may not support different resolutions. Supported resolution modes are listed below. If you switch your PC to an unsupported mode, a warning OSD will appear on the screen. English Index 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 Resolution 640x400 640x350 640x400 640x480 640x480

640x480 640x480 640x480 800x600 800x600 800x600 800x600 800x600 800x600 800x600 832x624 1024x768 1024x768 1024x768 1024x768 1024x768 1024x768 1152x864 1152x864 Frequency 70Hz 85Hz 85Hz 60Hz 66Hz 72Hz 75Hz 85Hz 56Hz 60Hz 70Hz 72Hz 75Hz 85Hz 75Hz 60Hz 66Hz 70Hz 72Hz 75Hz 85Hz 60Hz 70Hz 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 1152x864 1152x864 1152x870 1280x768 1360x768 1280x768 1280x768 1280x960 1280x960 1280x960 1280x1024 1280x1024 1280x1024 1400x1050 1400x1050 1400x1050 1440x900 1440x900 1600x1200 1680x1050 1920x1080 1920x1200 75Hz 85Hz 75Hz 60Hz 60Hz 75Hz 85Hz 60Hz 75Hz 85Hz 60Hz 75Hz 85Hz 60Hz 75Hz 85Hz 60Hz 75Hz 85Hz 60Hz 75Hz 85Hz 60Hz 75Hz 60Hz 60Hz 60Hz English - 36 - Appendix B: AV and HDMI Signal Compatibility (Input Signal Types) English Source Supported Signals PAL EXT-1 (SCART1) NTSC 60 RGB 50/60 SECAM PAL EXT-1 (SCART2) NTSC 60 SECAM PAL 50/60 Side AV NTSC 60 SECAM 480I 480P 576I YPbPr 576P 720P 720P 1080I 1080I 480I 480P 576I 576P 720P HDMI 720P 1080I 1080I 60Hz 60Hz 50Hz 50Hz 50Hz 60Hz 50Hz 60Hz 60Hz 60Hz 50Hz 50Hz 50Hz 60Hz 50Hz 60Hz 24Hz 25Hz 1080P 30Hz 50Hz 60Hz O Available O Note: In some cases a signal on the LCD TV may not be displayed properly.



[You're reading an excerpt. Click here to read official TOSHIBA](http://yourpdfguides.com/dref/5067282)

[W1333 user guide](http://yourpdfguides.com/dref/5067282)

<http://yourpdfguides.com/dref/5067282>