



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TOSHIBA WL-768. You'll find the answers to all your questions on the TOSHIBA WL-768 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TOSHIBA WL-768
User guide TOSHIBA WL-768
Operating instructions TOSHIBA WL-768
Instructions for use TOSHIBA WL-768
Instruction manual TOSHIBA WL-768

TOSHIBA
Leading Innovation >>>



WL76* Digital Series
YL76* Digital Series



[You're reading an excerpt. Click here to read official TOSHIBA WL-768 user guide](http://yourpdfguides.com/dref/3873064)
<http://yourpdfguides.com/dref/3873064>

Manual abstract:

.....

... 5 The remote control ..

.....

.....

.....

.....

..... 8 Inserting batteries and effective range

... @@27 Quick Menu

.....

.....

.....

.. 27 Selecting positions ...

.....

.....

.....

.. 27 The Time Display analogue only

... 27 Stereo and Bilingual transmissions

.....

27 Using 3D functions

.....

.....

.....

..... 28 Viewing 3D images

.....

.....

.....

..... @@28 Setting the auto start mode .

.....

.....

.....

. 30 Setting the 3D PIN code

.....

.....

... 30 Setting 3D Start Message ..

.....

.....

... 30 Setting 3D Lock ..

.....

.....

.....

.....

.. 31 Setting 3D Timer Lock

.....

.....

.....

.. 31 Setting Enable 3D Timer

.....
.....
... 31 *Displaying 3D Important Info* ..
.....

..... 31 *Switching left and right images* ...
.....
.....
... 31 *Sound controls*

.....
.....
.....
.....

..... 32 *Volume controls and sound mute* .
.....
.....
... 32 *Dual*

.....
.....
.....
.....

.....
.....
... 32 *Balance* ..
.....

.....
.....
.....
.....

..... 32 *Sound Navi* ..
.....
.....
.....

.....
.....
.....

... 32 *Surround Settings*

.....
.....
.....

..... 32 *Dolby Volume* ® .

.....
.....
.....
.....

..... 33 *Dynamic Range Control* ..

.....
.....
.....

..... 33 *Audio Level Offset*

.....
.....
.....

.....
.....
33 *Audio Description*

.....
.....
.....
.....
.....
. 33 Widescreen viewing
.....

.....
.....
.....
.....
..... 34 Picture controls

.....
.....
.....
.....
.....
. 36 Picture Mode
.....
.....

.....
.....
.....
.... 36 Picture preferences

.....
.....
.....
..... 36 Reset ..

.....
.....
.....
.....
.....
.....
.. 36 Colour Master

.....
.....
.....
.....
... 36 Base Colour Adjustment
.....
.....
.....

37 Colour Temperature
.....
.....
.....

.. 37 Auto Brightness Sensor Settings

.....
... 37 Active Backlight Control ..
.....

.....
.....
38 Black/White Level
.....

.....
.....
.....
. 38 *Static Gamma*

.....
.....
.....
.....
.. 38 *MPEG NR Noise Reduction*

.....
.....
... 38 *DNR Digital Noise Reduction*

.....
38 *Resolution+*

.....
.....
.....
.....
... 38 *Active Vision M200 Pro*

.....
.....
.....
.. 38 *Film Stabilization*

.....
.....
.....
..... 39 *Resetting the advanced picture settings* .

..... 39 *Expert Picture Settings*

.....
.....
.....
..... 39 *Control Visualization*

.....
.....
.....
..... 40 *Automatic Format (Widescreen)*

.....
.....
.....
..... 40 *4:3 Stretch*

.....
.....
.....
..... 40 *Blue Screen* ...

.....
.....
.....
..... 40 *Picture Position*

.....

.....
.....
.....

.. 41 Picture still

.....
.....
.....

.....
.....

... @9 Bundling the cables ..

.....

.....
.....

..... 10 Connecting an HDMI® or DVI device to the HDMI input ...

.....
.....
.....
.....

.....
.....

..... 11 To connect an HDMI device

.....
.....

.. 11 To connect a DVI device ...

.....

.... 11 HDMI's ARC (Audio Return Channel) feature .

.....
.....

.....
.....

.....

... 11 REGZA-LINK connection

.....
.....
.....

..... 12 Connecting a computer

.....
.....
.....

13 To connect a PC to the RGB/PC terminal ... 13 To connect a PC to the HDMI terminal ..

.... 13 Connecting a home network .

.....

.....
.....

. 14 To connect the TV to a home network Wired

.....

.....
.....

.....

.....

..... 14 To connect the TV to a home network with an internet connection - Wireless ...

.....

.....

... 14 Controls and input connections

.....

.....

15 Switching on

.....

.....

.....

..... 15 Using the remote control ..

.....

.....

.....

.... 15 Using the controls and connections

.....

.....

.....

.... @@16 Quick Setup

.....

.....

.....

.....

.... 16 Ant/Cable/Satellite (if available) .

.....

.....

.... 18 Satellite Settings

.....

.....

.....

.....

.. 18 Auto Tuning ...

.....

.....

.....

.....

..... 20 ATV Manual Tuning

.....

.....

.....

.....

..... 21 Tuning

.....

.....

.....

.....

..... 21 Skip ...

.....

.....

.....

.....

.....
.....
.....
... 22 Sorting positions

.....
.....
.....
.....
. 23 DTV Manual Tuning

.....
.....
.....
.....
23 Manual Tuning

.....
.....
.....
.....
23 Manual Tuning for DVB-C

.....
.... 24 Manual Tuning for DVB-S .
.....
.....

..... 24 DTV Settings .
.....
.....
.....

.....
.....
.....
..... 24 Channels (Antenna/Cable) .

.....
.....
.....
.. 24 Channels (Satellite)

.....
.....
.....
.... 25 Standby Channel Update

.....
.....
.....
26 DVB Character Set

.....
.....
.....
.... 26 Dynamic Scan

.....
.....
.....
..... 26 Location setting
.....

.....

.....

.....

.....

.....

26 Analogue switch-off

.....

.....

.....

.....

. @41 Using your home network

.....

.....

.....

. 42 Setting up the Network

.....

.....

.....

43 Wireless Setup

.....

.....

.....

.....

43 Advanced Network Setup

.....

.....

.....

..... 45 DNS Setup

.....

.....

.....

.....

. 46 Network Connection Test

.....

.....

..... 47 Using the software keyboard

.....

.....

.....

.. 47 Setting up the Media Renderer feature

.... 48 Installation .

.....

.....

.....

.....

.....

48 Media Renderer

.....

.....

.....

..... 48 Device Name Setup .

.....

.....

.....

.....
.. 48 Web Password Setup ...
.....

.....
.... 49 Media Controller Setup .
.....

.....
.. 49 Maximum Volume Setup ...
.....

..... 49 Using YouTube™ ..
.....
.....

.....
. 50 Using the Function Menu

.....
.....
. 50 Using the Media Player ...
.....

.....
.....
.....
52 Basic operation

.....
.....
.....
..... 53 Viewing photo files .

.....
.....
.....
.....
.....
... @@@@ 58 Using the Photo Frame feature

.....
.....
.....
..... 59 To open Photo Frame

.....
.....
.....
.....
..... 59 Setting the features ...

.....
.....
.....
.....
.....
.....
60 Other features

.....
.....
.....
.....
.....

.....
.. 61 Panel Lock ...

.....

.....

.....

.....

.....

... 61 The timers

.....

.....

.....

.....

.....

.....

..... 62 Programme Timers digital only

..... 62 On Timer .

.....

.....

.....

.....

.....

.....

..... 62 Sleep Timer ...

.....

.....

.....

.....

.....
.. 63 Energy Saving Settings ...

.....

.....

.....

.....

.. 63 Automatic Power Down ...

.....

.....

.....

63 No Signal Power Down

.....

.....
... 63 Digital on-screen information and Programme Guide ..

.....

.....

.....

.....

.....

.....

.....
64 Information

.....

.....

.....

.....

.....

..... 64 Guide

.....
.....
.....

.....
.....

... 65 Genre selection/searching ..

.....

.....

. 65 Digital settings parental control

.....

..... 66 Setting the PIN .

.....
.....
.....
.....

..... 66 Parental Setup .

.....
.....
.....

.....
.....
.....

66 Network Lock

.....
.....
.....
.....

.. 66 Digital settings Channel Options

.....

.... 67 Selecting favourite channels .

.....

.....

67 Favourite Channel Lists

.....
.....

..... 67 Skip channels ..

.....
.....
.....

.....
.....
.....

67 Locking channels

.....
.....
.....

..... 67 Digital settings other settings ...

.....
.....
.....

68 Subtitles

.....
.....
.....
.....

.....
68 Audio languages

.....
.....

.....
.....
.. 68 Common Interface ...

.....
.....

.....
.....
.. 68 Software Upgrade and Licences

.....
.... 69 Auto Upgrade .

.....
.....

.....
.....
..... 69 Searching for New Software

.....
.....

. 69 Network Upgrade

.....
.....

.....
.....
.. 69 Software Licences

.....
.....

.....
..... 69 System Information and Reset TV ..

.....
.....

... 70 System Information ..

.....
.....

.....
.....
.. 70 Reset TV

.....
.....

.....
.. 70 PC Settings ...

.....
.....

.....
.....

.....
.....
... 70 Horizontal and Vertical Position

.....
.... 70 Clock Phase .
.....

.....
.....
.....
.....
.....
... 70 Sampling Clock

.....
.....
.....

.....
.. 71 Reset ...
.....

.....
.....
.....
.....
.....

..... 71 Input selection and AV connections

.....
.....

... 71 Input selection

.....
.....
.....
.....

... 71 External input skip

.....
.....
.....

..... 72 Labeling video input sources ..

.....
.....

..... 72 Colour Decoding ..

.....
.....
.....
.....

..... 72 PC Audio

.....
.....
.....

.....
.....
.....

... 73 HDMI 2 Audio

.....
.....
.....
.....

....	73 Side Shared Audio

.....	73 HDMI Settings .

	73 Digital Audio Output

. 74	Using REGZA-LINK

. 75	Enable REGZA-LINK

....	75 TV Auto Power

	75 Auto Standby

.....	75 Amplifier Control ...

....	75 Speaker Preference

.....	75 REGZA-LINK input source selection ..

....	75 REGZA-LINK playback device control .
.....	76 REGZA-LINK one touch play ...

... 76	REGZA-LINK system standby ..

.....	76 REGZA-LINK system audio control .

.....
.....
.. 76 Toshiba PC compatible with REGZA-LINK 76 TEXT SERVICES Text services

.....
.....
.....

.....
.....
. 77 Selecting modes

.....
.....
.....
.... 77 Text information

.....
.....
.....

.. 77 Navigating pages using Auto

.....
.....

. 77 Navigating pages using LIST

.....
. 77 Control buttons

.....
.....

.....
.....
.....

78 PROBLEM SOLVING Questions and Answers

.....
.....
.....

79 INFORMATION License Information

.....
.....
.....

..... 82 Information .

.....
.....
.....

.....
.....
.....

84 Specifications and accessories

.....

.... 88 3 INSTALLING YOUR TV English Safety Precautions This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured.

Please read the points below for your own safety. They are of a general nature, intended to help with all electronic consumer products, and some points may not apply to the goods you have just purchased. **DO NOT REMOVE ANY FIXED COVERS AS THIS WILL EXPOSE DANGEROUS AND 'LIVE' PARTS. THE MAINS PLUG IS USED AS A DISCONNECTING DEVICE AND THEREFORE SHOULD BE READILY OPERABLE.** Do not **DO NOT** obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc.

Overheating will cause damage and shorten the life of the equipment. Air Circulation Leave more than 10cm clearance around the television to allow

adequate ventilation. This will prevent overheating and possible damage to the television. Dusty places should also be avoided. DO NOT allow electrical equipment to be exposed to dripping or splashing or objects filled with liquids, such as vases, to be placed on the equipment. DO NOT place hot objects or naked flame sources, such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires. WARNING: To prevent the spread of fire, keep candles or other open flames away from this product at all times. DO NOT use makeshift stands andpriate for the size and weight of the LCD TV. · Two people are required for installation.

· Never use the four screws attached to the TV. · To install a wall-mount from another manufacturer, use the SPACERS (supplied). 1 Unplug and remove any cables and/or other component connectors from the rear of the TV. 2 Carefully lay the front of the unit face down on a flat, cushioned surface such PIN from the PREFERENCES / 3D Setup menu to enter PIN. About the 3D glasses · Do not use the 3D glasses if they are not working properly or broken. Continuing to use them in such a state may cause injury, eye strain, or indisposition. Do not use the 3D glasses if they are broken or have any cracks. · Do not stand or walk while wearing 3D glasses. You may lose your balance which could result in falls or other accidents.



[You're reading an excerpt. Click here to read official TOSHIBA](#)

[WL-768 user guide](#)

<http://yourpdfguides.com/dref/3873064>

· Do not wear the 3D glasses for any purpose other than viewing 3D programming.

3D glasses do not function as sunglasses. · Do not drop, exert pressure on, or step on the 3D glasses. Doing so may damage the glass section, which may result in injury. Exposing the 3D glasses to liquid or excessive heat may damage the liquid crystal shutter function. · If your nose or temple turns red, or you feel pain or discomfort, stop using the 3D glasses.

Such symptoms as above may occur if you keep wearing them for a long time, which may also cause indisposition. · Observe the following for the battery of the 3D glasses: - Do not use any battery other than the one specified. - Do not use any battery with the polarity reversed. - Do not charge, heat, disassemble, or short the battery. Violation of the above may cause explosion or leakage of the battery, and a burn or injury may result.

Cautions on watching 3D images · Some viewers may experience a seizure or blackout when exposed to certain flashing images or lights contained in certain 3D television pictures or video games. Anyone who has had a seizure, loss of awareness, or other symptoms linked to an epileptic condition, or has a family history of epilepsy, should contact a health care provider before using the 3D function. 6 INSTALLING YOUR TV English Notes on handling the 3D glasses' liquid crystal shutter lenses · Do not put excessive force on the lenses. · Do not scratch the surface of the lenses with sharp objects. · Do not drop or bend the 3D glasses. Notes on IR communication · Do not block the IR sensor for 3D glasses on the TV by placing objects in front of it. · Do not cover the IR sensor on the 3D glasses with stickers or labels. · Keep the IR sensor on the 3D glasses clean. · If the 3D glasses interfere with any other IR communication device or 3D TV, the 3D glasses may not work correctly. Also, this TV may interfere with the operation of other IR communication devices.

Use the TV and 3D glasses in a place where they will not interfere with other devices or products. · Use the product in the following temperature range; otherwise, the quality of the 3D image or the reliability of the product cannot be guaranteed. - 3D glasses: 0°C - 40°C (32°F - 104°F) - TV: 0°C - 35°C (32°F - 95°F) · If you use a fluorescent light, it may flicker depending on the frequency of the light. In this case, reduce the brightness of the fluorescent light, or use another light. (It is not recommended to watch the TV in a dark room, especially for children.) · Wear the 3D glasses properly, otherwise you may not see the correct 3D image. · When not viewing 3D images on this unit, take off the 3D glasses; otherwise, it may be difficult to see the display on other products such as PC, digital clock or calculator, etc. About the connecting cable · Use a high-speed and high-quality HDMI cable when you connect a device such as 3D compatible BD player or PC to the TV. When you use a standard HDMI cable, 3D images may not be shown. Notes on watching the TV · If you use any device, such as a mobile phone or mobile wireless device, near the 3D glasses, the 3D glasses may not work correctly.

About the lithium battery · There is danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type. Please take note The digital reception function of this television is only effective in the countries listed in the "Country" section of the "SETUP" menu. Depending on country/area, some of this television's functions may not be available. Reception of future additional or modified services can not be guaranteed with this television.

If stationary images generated by 4:3 broadcasts, text services, channel identification logos, computer displays, video games, on-screen menus, etc. are left on the television screen for any length of time, they could become conspicuous. It is always advisable to reduce both the brightness and contrast settings. Very long, continuous use of the 4:3 picture on a 16:9 screen may result in some retention of the image at the 4:3 outlines. This is not a defect of the LCD TV and is not covered under the manufacturer's warranty.

Regular use of other size modes (eg: Super Live) will prevent permanent retention. EXCLUSION CLAUSE Toshiba shall under no circumstances be liable for loss and/or damage to the product caused by: i) fire; ii) earthquake; iii) accidental damage; iv) intentional misuse of the product; v) use of the product in improper conditions; vi) loss and/or damage caused to the product whilst in the possession of a third party; vii) any damage or loss caused as a result of the owner's failure and/or neglect to follow the instructions set out in the owner's manual; viii) any loss or damage caused directly as a result of misuse or malfunction of the product when used simultaneously with associated equipment; Furthermore, under no circumstances shall Toshiba be liable for any consequential loss and/or damage including but not limited to the following: loss of profit, interruption of business, the loss of recorded data whether caused during normal operation or misuse of the product. NOTE: A Toshiba wall bracket or stand, where available, must be used. 7 INSTALLING YOUR TV English The remote control Simple at-a-glance reference of your remote control. 17 To display the digital on-screen Programme Guide 18 To exit menus 19 To page up, down, left or right 20 When using menus, the arrows move the cursor on the screen up, down, left or right. Press OK to confirm your selection 21 On-screen Menus 22 To return to previous Menu 23 Colour buttons: Text and interactive service control buttons 24 To call up text services 25 To access Media Player Menu 2 3 6 7 1 4 5 8 9 26 Digital Subtitles or Analogue TEXT Subtitle pages if available 27 When in TV mode: r Picture still D Analogue time display When in Text mode: A To reveal concealed text B To hold a wanted page C To enlarge text display size D To select a page whilst viewing a normal picture During Playback: c To PLAY v To STOP W/w To PAUSE/STEP Z To SKIP-BACK CC To REWIND cc To FAST FORWARD z To SKIP-FORWARD 10 12 15 17 19 21 25 24 11 13 16 14 18 20 22 23 26 27 28 When using Programme Guide: Z - 24 hours z + 24 hours CC - 1 page cc + 1 page 1 2 3 4 5 6 7 8 9 For On/Standby mode To select external input sources Selectable Picture preferences Widescreen viewing 28 When using REGZA-LINK: 1 To turn On/Standby AUDIO To access AUDIO Menu SET UP To access SET UP Menu V To EJECT ROOT To access ROOT Menu CONTENTS To access CONTENTS Menu TOP To access TOP Menu DVD To access DVD Menu Inserting batteries and effective range Remove the back cover to reveal the battery compartment and make sure the batteries are inserted the proper way.



[You're reading an excerpt. Click here to read official TOSHIBA](http://yourpdfguides.com/dref/3873064)

[WL-768 user guide](http://yourpdfguides.com/dref/3873064)

<http://yourpdfguides.com/dref/3873064>

Suitable battery types for this remote are AAA, IEC R03 1.5V. Do not combine a used, old battery with a new one or mix battery types. Remove dead batteries immediately to prevent acid from leaking into the battery compartment.

Dispose of them in accordance with instructions on page 83 of this manual. Warning: batteries must not be exposed to excessive heat such as sunshine, fire or the like. The performance of the remote control will deteriorate beyond a distance of five metres or outside an angle of 30 degrees from the centre of the television. If the operating range becomes reduced, the batteries may need replacing. s Stereo/bilingual transmissions To select TV Mode To access the analogue or digital Channel List To switch between 2D and 3D mode Number buttons 10 To switch the Audio Description On/Off 11 To return to previous programme position 12 To alter the TV volume 13 To display on-screen information To access the index page in Text mode 14 To mute the TV sound 15 To access Quick Menu 16 To change programme positions To change TEXT pages 8 CONNECTING YOUR TV English Connecting external equipment Before connecting any external equipment, turn off all main power switches. If there is no switch, remove the mains plug from the wall socket. LAN port COMPONENT VIDEO INPUT* VIDEO INPUT** OPTICAL DIGITAL AUDIO OUTPUT PC/HDMI2 AUDIO (shared) POWER cord HDMI® INPUT SOCKETS FIXING STRAP POWER switch SCART Adaptor cable (supplied) Aerial/Cable media recorder Satellite dish Aerial cables:

. . . .
. . . .
.

. Connect the aerial to the socket on the rear of the television. If you use a decoder and/or a media recorder, it is essential that the aerial cable is connected through the decoder and/or through the media recorder to the television. "F-type" HDMI® (High-Definition Multimedia Interface) is for use with a DVD decoder or electrical equipment with digital audio and video output. For acceptable video or PC signal formats through the HDMI terminals, see page 85. LAN port is used to connect the TV to your home network. This TV can play digital content stored on a DLNA CERTIFIED™ product with server function. A wide variety of external equipment can be connected to the back of the television; therefore, the relevant owner's manuals for all additional equipment must be referred to for exact instructions. If the television automatically switches over to monitor external equipment, return to normal television by pressing the desired programme position button. To recall external equipment, press 0 to select between DTV, EXT 1, EXT 2, EXT 3, HDMI 1, HDMI 2, HDMI 3, HDMI 4, PC or ATV.

When the external input mode is selected while viewing DTV mode, the SCART socket does not output video/audio signals. Satellite cable:

.
.

. Connect the LNB from the satellite dish to the SATELLITE ANTENNA socket on the TV. You can receive TV, radio, interactive TV, and HD TV with clear reception. SCART leads:

.
.
.

. . . Connect the media recorder IN/OUT socket to the television. Connect the decoder TV socket to the television. Use the SCART Adaptor cable (supplied). Before running Auto Tuning, put your decoder and media recorder to Standby. *COMPONENT VIDEO INPUT connection: Use the COMPONENT Adaptor cable (supplied). The AUDIO terminals are shared with the VIDEO INPUT. **VIDEO INPUT connection: Use the AV Adaptor cable or SCART-AV Adaptor cable (supplied).

The AUDIO terminals are shared with the COMPONENT INPUT. The Digital Audio Output socket enables the connection of a suitable surround sound system. NOTE: this output is always active. 9 CONNECTING YOUR TV English Bundling the cables Install the cable clamps, and put the cables in these. Stand type Cable Clamps Wall Mount type Cable Clamps 10 CONNECTING YOUR TV English Connecting an HDMI® or DVI device to the HDMI input The HDMI input on your television receives digital audio and uncompressed digital video from an HDMI source device or uncompressed digital video from a DVI (Digital Visual Interface) source device.

This input is designed to accept HDCP (High-Bandwidth Digital-Content Protection) programme material in digital form from EIA/CEA-861-Dcompliant [1] consumer electronic devices (such as a set-top box or DVD player with HDMI or DVI output). For acceptable video signal formats, see page 85. NOTE: . Some early HDMI equipment may not work properly with your latest HDMI TV, due to the adoption of a new standard. Please unplug your HDMI cable first and then try setting the INSTAPOINT™ and Enable Content Type options to "Off". Your early HDMI source should operate properly with your television. See page 73. . Supported Audio format: Linear PCM, Dolby Digital (AC-3), sampling rate 32/44.1/48kHz. To connect a DVI device Connect an HDMI-to-DVI adaptor cable (HDMI type A connector) to the HDMI 2 terminal and audio cables to the PC/HDMI 2 (AUDIO) socket (see illustration). . The recommended HDMI-to-DVI adaptor cable length is 6.6 ft (2m). . An HDMI-to-DVI adaptor cable transfers video only. Separate analogue audio cables are required. . See "HDMI 2 Audio" on page 73. To connect an HDMI device Connect an HDMI cable (type A connector) to the HDMI terminal.

For proper operation, it is recommended that you use an HDMI cable with the HDMI Logo (). . If your HDMI connection is capable of 1080p and/or your television is capable of refresh rates greater than 50Hz, you will need a Category 2 cable. Conventional HDMI/DVI cable may not work properly with this model. . HDMI cable transfers both video and audio. Separate analogue audio cables are not required (see illustration). . See "HDMI 2 Audio" on page 73. the back of your television Audio cable for HDMI to television connection (not supplied) HDMI-to- DVI adaptor Cable DVI device NOTE: To ensure that the HDMI or DVI device is reset properly, it is recommended that you follow these procedures: . When turning on your electronic components, turn on the television first, and then the HDMI or DVI device. . When turning off your electronic components, turn off the HDMI or DVI device first, and then the television. HDMI's ARC (Audio Return Channel) feature This feature enables the audio signal of the TV to be sent to the AV amplifier via the HDMI cable. It will not be necessary to connect a cable from the audio output of the TV to the audio input of the AV amplifier to reproduce the audio received from the tuner of the TV through the AV amplifier.

HDMI cable AV amplifier that supports ARC HDMI device To view the HDMI device video, press the 0 button to select HDMI 1, HDMI 2, HDMI 3 or HDMI 4 mode. HDMI cable 11 CONNECTING YOUR TV English REGZA-LINK connection You can control the basic functions of connected audio/video devices using the television's remote control if you connect a REGZA-LINK compatible AV amplifier or playback device.

[You're reading an excerpt. Click here to read official TOSHIBA WL-768 user guide](#)



<http://yourpdfguides.com/dref/3873064>

For an explanation of setup and operations, see pages 75-76. the back of your television Playback device AV amplifier Playback device For the setup shown above, you will need three HDMI cables. NOTE: · If several devices are connected, the REGZA-LINK feature may not operate properly. · For proper operation, it is recommended that you use HDMI cables with the HDMI Logo (). · This function is available when one PC and one AV amplifier are connected separately. However, it may not operate properly if the PC is connected via the AV amplifier. Before controlling the device(s): · After completing the above connections, set the REGZA-LINK Setup menu as you desire (see page 75). · The connected devices must also be set. For details, see the operation manual for each device. · The REGZA-LINK feature uses CEC technology as regulated by the HDMI standard. · This feature is limited to models incorporating Toshiba's REGZA-LINK. However, Toshiba is not liable for those operations. Refer to individual instruction manuals for compatibility information. 12 CONNECTING YOUR TV English Connecting a computer With either an RGB/PC or an HDMI connection, you can watch your computer's display on the television and hear the sound from the television's speakers. To connect a PC to the RGB/PC terminal When connecting a PC to the RGB/PC terminal on the television, use an analogue RGB (15-pin) computer cable and a PC audio cable for the PC/HDMI 2 (AUDIO) socket. Select PC from the PC/HDMI 2 Audio options in the AV Connection menu located in the PREFERENCES menu. the back of your television · A band may appear at the edges of the screen or parts of the picture may be obscured. This is due to scaling of the picture by the set, it is not a malfunction.

· When PC input mode is selected, some of the television's features will be unavailable e.g. Colour System in the SETUP menu. · Some PC models may output unique signals that the television may be unable to detect (see page 84). To connect a PC to the HDMI terminal When connecting a PC to the HDMI terminal on the television, use an HDMI-to-DVI adaptor cable and an analogue audio cable. If connecting a PC with an HDMI terminal, use an HDMI cable (type A connector). A separate analogue cable is not necessary. the back of your television Mini D-sub 15 pin connector Computer Audio cable for PC to television connection (not supplied) Computer RGB PC cable (not supplied) Audio cable for PC to television connection (not supplied) HDMI-to-DVI adaptor cable Conversion adaptor if required (not supplied) To use a PC, set the monitor output resolution on the PC before connecting it to the television. For acceptable PC signal formats, see page 84. To display the optimum picture, use the PC setting feature (see page 70).

NOTE: · The PC audio input terminal on the television is shared with the HDMI 2 analogue audio input terminal (see page 73). · Some PC models cannot be connected to this television. · An adaptor is not needed for computers with a compatible mini D-sub 15-pin terminal. · Depending on the DVD's title and the specifications of the PC on which you are playing the DVD-Video, some scenes may be skipped or you may not be able to pause during multiangle scenes. For acceptable PC and video signal formats, see page 85.

NOTE: · The edges of the images may be hidden. · If connecting a certain PC model with a unique PC signal, the PC signal may not be detected correctly. 13 CONNECTING YOUR TV English Connecting a home network The LAN port allows your Toshiba TV to connect to your home network. You can use this revolutionary home entertainment networking system to access photo, video and audio files that are stored on a DLNA CERTIFIEDTM server and play/display them on your TV. NOTE: · If you connect to a shared network outside your home, it is advisable to use a router.

Always use DLNA CERTIFIEDTM products in private network environments. · If you use a hub or switch to connect the TV to your home network, you may not be able to use the automatic setup and will have to manually set up the network address. See page 46. · If you use a router with built-in DHCP functionality, use the automatic setup. Manual setup may not work. · If you connect the TV and PC directly, use a crossover LAN cable. To connect the TV to a home network with an internet connection - Wireless Please refer to "Wireless Setup" section on page 43. TV (Built-in WLAN system) Access point (AP) Wireless LAN router To connect the TV to a home network Wired the back of your television Modem PC Modem (if available) Router with hub [1] [2] [2][3] Cable or Phone jack Server PC [2] [1] Coaxial or telephone cable (depending on your modem type) [2] Standard LAN cable [3] Do NOT connect a phone jack directly to the TV's LAN port. 14 CONNECTING YOUR TV English Controls and input connections A wide variety of external equipment can be connected to the input sockets on the side of the television. Whilst all the necessary adjustments and controls for the television are made using the remote control, the buttons on the television may be used for some functions.

USB 1 port Media Player POWER switch (Full Power Down Option) USB 2 port Photo Viewer COMMON INTERFACE The Common Interface is for a Conditional Access Module (CAM). Contact a service provider. The software updating of CI Plus CAM may be automatically executed. At this time, your Recording/Reminder programming will be canceled. 3D IR sensor (page 7) Control panel (touch sensor) GREEN LED On Timer set Ambient Light Sensor ORANGE LED - Programme timer set (digital only) RED LED Programme timer Active (digital only) RED LED Standby BLUE LED Power on Switching on If the RED LED is not lit, check that the mains plug is connected to the power supply and press the ! (POWER) button on the left side of the television to switch the television on. If the picture does not appear, press 1 on the remote control; it may take a few moments. The BLUE LED will be lit. To put the television into Standby, press 1 on the remote control. To view the television, press 1 again. The picture may take a few seconds to appear.

For energy saving: We recommend that you use the television with the factory settings. The factory settings are for energy saving. Turning the television off at its mains supply, or un-plugging it, will cut energy use to nearly zero for all televisions. This is recommended when the television is not being used for a long time, e.g.

when on holiday. Reducing the brightness of the screen will reduce energy use. Energy efficiency cuts energy consumption and thus saves money by reducing electricity bills. NOTE: Putting the television into standby mode will reduce energy consumption, but will still draw some power.



[You're reading an excerpt. Click here to read official TOSHIBA WL-768 user guide](http://yourpdfguides.com/dref/3873064)
<http://yourpdfguides.com/dref/3873064>

Using the remote control Press MENU on the remote control to display the menu.

The menu appears as a list of five topics. As each symbol is selected by pressing C or c on the remote control, its respective options will appear below. NOTE:

The same menu is displayed in DTV (Digital TV) and ATV (Analogue TV) modes; however, where some items are not available in a mode, they will appear greyed out. To use the option, press B and b on the remote control to move up and down and press C or c to select your desired setting. Follow the on-screen instructions. The functions of each menu are described in detail throughout the manual. Using the controls and connections To alter the volume gently touch 2 +. To alter the programme position touch b p B. Touch MENU and 2 + or b p B to control the sound and picture options. Touch MENU to finish.

The Media Player feature provides access to photo, movie and music files stored on a USB storage device that is connected via USB 1 (USB 2 provides access to photos only). NOTE: The USB socket has limited functionality and Toshiba can take no responsibility for damage to other connected equipment. To select an external input, press o until the appropriate input source is selected. Please always refer to the owner's manual of the equipment to be connected for full details. 15 SETTING UP YOUR TV English Startup Application Before switching on the television, put your decoder and media recorder, if applicable, to Standby. To set up the television, use the buttons on the remote control as detailed on page 8. g Press OK, and the TV Mounting screen will appear, press C or c to select Stand or Wall. TV Mounting If you are mounting the TV on a wall please select [Wall]. [Stand] is recommended for other uses. This setting may be modified later under Sound Navi in the SOUND menu.

Stand Quick Setup a Press the 1 button. The Menu Language screen will appear. This screen will appear the first time that the television is switched on and each time Reset TV is selected. Press B, b, C, or c to select the menu language, and then press OK. Highlight Country and C or c to select.

The television is now set to tune the stations for your country. Quick Setup Country Primary Subtitle Language Secondary Subtitle Language Primary Audio Language Secondary Audio Language Germany English English English English h Press OK, and the AutoView screen will appear, press C or c to select Yes or No. AutoView AutoView mode automatically adjusts picture settings to suit ambient light conditions. Do you wish to enable AutoView mode? No b c i Press OK. If the Ant/Cable/Satellite screen appears, press B or b to select Antenna, Cable or Satellite, and then press OK to check ().

Ant / Cable / Satellite Antenna Cable Satellite Next NOTE: · The following display menus will differ slightly according to the country you selected. · If there is not a country that you want to select in the list, select Others. If DVB-C is not supported in your area, Cable will not be displayed. · When you select Antenna or Cable, follow steps 10 to 13. · When you select Satellite, skip to step 14. · When you select Antenna (or Cable) and Satellite, the Satellite Settings startup screen will appear automatically after completing the Antenna (or Cable) scan and pressing OK. d Press OK, and the Location screen will appear. Location To use the TV for displaying in a store showroom, please select [Store]. [Home] mode is recommended for normal use. Home j e f Press C or c to select Home or Store.

For normal home use, select Home. Press OK. If Store is selected in step 5, a Store mode confirmation window will appear. If you select Yes from that window, the TV will proceed to the Auto Demo setup screen. Select Next and press OK. The Auto Tuning startup screen will appear with the option to select between DTV and ATV, DTV or ATV if available. Use C or c to select the appropriate mode. Press B or b to highlight Start Scan, and then press OK. The television will start to search for available DTV and/or ATV channels. The progress bar will indicate the scan status.

k 16 SETTING UP YOUR TV English You must allow the television to complete the search. Auto Tuning Progress DTV Tune ATV Tune 3% Waiting...

Channel: C7 If your satellite dish is movable, the following Positioning screen will appear.

Positioning Satellite : ASTRA 19.2°E Transponder Go to 0 Go to Stored Position Step Size Positioning W 1 E 1/83 (10743 MHz H) Found 2 When the search is complete, the television will automatically select position one. The Auto Tuning screen will display the total number of services found. Store Position l m Press C or c to view the DTV (digital channel) or ATV (analogue channel) lists. Use B or b to move through the list to select a channel, and then press OK to view.

In ATV mode, some areas may receive duplicate stations. There may not be a clear picture or the signal may be weak, so the station order can be changed using ATV Manual Tuning. REMEMBER: Press TV at any time to select between ATV and DTV (DTV Ant TV/RADIO/TEXT, DTV Cable TV/RADIO/TEXT, DTV Sat TV/RADIO/TEXT if available) modes. NOTE: The time will be set automatically by transmission but can be advanced or decreased by using Local Time Setting in the DTV Settings screen. Select Next and press OK. The Satellite Settings screen will appear. From this window, you can add the satellites that you wish to tune and configure detailed settings for each one individually. See "Satellite Settings" section on page 18. Satellite Settings Switch Type LNB Power None On Signal Level Press B or b to highlight Positioning, and then press C or c to find the dish position with the strongest signal level. Press B or b to highlight Store Position and press OK to store the dish position.

Repeat steps 14 and 15 for the next satellite as needed. If your satellite dish is not movable, the Positioning screen will not appear. Adjust the dish position manually for maximum Signal Level strength. Highlight Done and press OK. If the reception testing completes successfully, the Auto Tuning startup screen will display. Auto Tuning - Satellite Start Scan Satellite Scan Option ASTRA(19.2°E) Free to Air You can select Scan Option from Free to Air and All. Press B or b to highlight Start Scan, and then press OK. No. 1 2 3 4 Satellite ASTRA 19.

2°E Dish 1 LNB 1 The television will start to search for available DVB-S channels. The progress bar will indicate the scan status. When the search is complete, the Auto Tuning results screen will display the total number of services found. Use B or b to move through the list to select a channel, and then press OK to view. Transponder : 1/83 (10743 MHz) Dish Type : Fixed Lower LOF (MHz) : 9600 Upper LOF (MHz) : 10600 Done PLEASE NOTE The Quick Setup menu can also be accessed at any time from the SETUP menu.

Highlight Done and press OK.



[You're reading an excerpt. Click here to read official TOSHIBA](http://yourpdfguides.com/dref/3873064)

[WL-768 user guide](http://yourpdfguides.com/dref/3873064)

<http://yourpdfguides.com/dref/3873064>

17 SETTING UP YOUR TV English Ant/Cable/Satellite (if available) From this menu, you can set the RF input configuration. DTV End Frequency: This sets the frequency at which the scan will end. a b Press MENU, and select SETUP menu. Use b to highlight Ant/Cable/Satellite and use C or c to select Antenna, Cable or Satellite.

NOTE: When you attempt to change the Ant/Cable/ Satellite setting, a warning message will appear followed by PIN entry (if PIN has been set) and a prompt for Auto Tuning. DTV Modulation: You can choose from five QAM modulation settings. DTV Symbol Rate: This is the baud rate (KS/s) of the scan. DTV Network ID: This is the Network ID to be utilized for the scan. This item is greyed out when DTV Scan Type is set to "Full Scan". c When Ant/Cable/Satellite is set to Cable, the following setting options will be provided in the Auto Tuning screen. Press B or b to select an item, and then press C or c to select your desired option. Auto Tuning Tuning Mode Start Scan DTV Scan Type Start Frequency End Frequency Modulation Symbol Rate Network ID Quick Scan Auto Auto Auto Auto DTV and ATV Satellite Settings From the SETUP menu, you can add the satellites that you wish to tune and configure detailed settings for each one individually. To add a satellite: a b Press MENU and use C or c to select SETUP menu. Use b to highlight Satellite Settings.

Press OK. Satellite Settings Switch Type LNB Power None On No. 1 2 3 4 Satellite ASTRA 19.2°E Dish 1 LNB 1 With the exception of DTV Scan Type and DTV Modulation items, all of the following items will have 2 operating modes. The first is Auto where the values for each item are preset by the system. The second is an Input mode where you will be able to enter a single value in place of the pre-set value. If no channel is currently tuned and the Input state is chosen, a system default value will be shown. However, if a channel is currently tuned when the item is accessed, the value of the current channel will be displayed. Transponder : 1/83 (10743 MHz) Dish Type : Fixed Lower LOF (MHz) : 9600 Upper LOF (MHz) : 10600 Done c d DTV Scan Type: This item determines whether a Quick Scan or a Full Scan will be executed. The Quick Scan is a simplified version of the Full Scan that is designed to complete in less time.

Press b to highlight a new line to add another satellite, and press OK. Press b until the required satellite is displayed and press OK. DTV Start Frequency: This sets the frequency from which the scan will begin. 18 SETTING UP YOUR TV English To delete a satellite: c Press B to highlight a new line.

Transponder Settings 76 77 78 79 80 81 82 83 Frequency 12640 12662 12669 12692 12699 12721 12728 Polarisation V H V H V H V Symbol Rate 22000 22000 22000 22000 22000 22000 22000 S/S2 S S S S S S a b c In the Satellite Settings menu, press B or b to highlight the satellite you want to delete.

Press the RED button. A confirmation window will appear. Press C or c to select Yes and press OK. NOTE: It is not possible to delete position No.1.

To edit the satellite settings: a b c In the Satellite Settings menu, press B to highlight Switch Type. Press C or c to select None, ToneBurst, DiSEqC 2way or DiSEqC 4way as your satellite switch type. Press b to highlight LNB Power and press C or c to select On or Off. d Press OK. 83 0 H 0 S e Edit each parameter as required and press OK. See page 19. 83 12731 H 22000 S2 To add a transponder: a In the Satellite Settings menu, press B or b to highlight the line you want to edit and press OK. 1 To delete a transponder: a b a ASTRA 19.2°E 1 1 In the Transponder Settings menu, press B or b to highlight the line you want to delete. Press the RED button.

b Press the GREEN button. The Transponder Settings screen will appear. Transponder Settings 1 2 3 4 5 6 7 8 Frequency 10743 10773 10788 10817 10832 10847 10861 10876 Polarisation H H V V H V H V Symbol Rate 22000 22000 22000 22000 22000 22000 22000 22000 S/S2 S S S S S S S To edit the Transponder Settings: In the Transponder Settings menu, press B or b to highlight the line you want to edit and press OK. Press C or c to select Frequency, Polarisation, Symbol Rate or S/S2, and set the item using the number buttons if necessary. Press OK to save your settings. Repeat steps 1 through 3 for other lines. Press BLUE to finish editing and return to Satellite Settings. Press GREEN to cancel any edits that were made this time. Press YELLOW to reset all transponder settings to their initial default settings. b c d e 19 SETTING UP YOUR TV English To select the Dish Type: a a b In the Satellite Settings menu, press B or b to highlight the required satellite line, and then press OK.

Press C or c to highlight Dish, and then press the GREEN button. Dish Settings Dish : 1 Dish Type Fixed Press MENU and use C or c to select SETUP menu. Use b to highlight Auto Tuning. Press OK. SETUP Menu Language Country Ant/Cable/Satellite Satellite Settings Auto Tuning ATV Manual Tuning DTV Manual Tuning DTV Settings English Germany c Press C or c to select Dish Type.

You can select Movable or Fixed as the Dish Type. b To select the LNB Settings: For DTV/ATV Tuning: A screen will appear warning that previous programmes and settings will be deleted. Auto Tuning Previous settings will be lost! Press EXIT for no change. Tuning Mode DTV and ATV a b In the Satellite Settings menu, press B or b to highlight the required satellite line, and then press OK. Press C or c to highlight LNB, and then press the GREEN button.

LNB Settings LNB : 1 Lower LOF Upper LOF 9750 10600 Start Scan Use C or c to select DTV and ATV, DTV or ATV, if available, then highlight Start Scan and press OK to continue with the Auto Tuning. NOTE: If you have selected "Others" for the Country field in the SETUP menu, and selected a tuning mode other than "DTV", choose the optimum ATV broadcasting system (B/G, I, D/K or L). The television will start to search for all available DTV and/or ATV services. You must allow the television to complete the search. When the search is complete, the Auto Tuning screen will display the services found. c Press B or b to select Lower LOF or Upper LOF and input the appropriate frequencies. Auto Tuning NOTE: As new services are broadcast, it will be necessary to re-tune the television in order to view them. Auto Tuning will completely re-tune the television and can be used to update the channel list. It is recommended that Auto Tuning is run periodically to ensure that all new services are added. All current channels and settings, i.

e. locked channels, will be lost. 20 SETTING UP YOUR TV English For Satellite Tuning: A screen will appear warning that previous programmes and settings will be deleted. Auto Tuning Previous settings will be lost! Press EXIT for no change.



[You're reading an excerpt. Click here to read official TOSHIBA](http://yourpdfguides.com/dref/3873064)

[WL-768 user guide](http://yourpdfguides.com/dref/3873064)

<http://yourpdfguides.com/dref/3873064>

Start Scan Satellite Search Option All Free to Air ATV Manual Tuning Tuning The television can be tuned-in manually using ATV Manual Tuning. For example, you might use the feature if the television cannot be connected to a media recorder/decoder with a SCART lead or when you want to tune-in a station on another System. Use C and c to move across the screen and select any of the ATV Manual Tuning options. Then use B or b to adjust the settings. ATV Manual Tuning System 1 I A C 2 0 VCR Press B or b to highlight Satellite and then press C or c to select the desired satellite (No.1 Sat ~ No. 4 Sat or All). You can select Free to Air or All as the Search Option. Highlight Start Scan and press OK to continue with the Auto Tuning. When the search is complete, the Auto Tuning screen will display the services found. 1 2 3 4 5 6 7 8 1 9 c Use b or B to move through the list to select a channel, and then press OK to view.

Position The number to be pressed on the remote control to tune the channel. System Specific to certain areas. Colour System Factory set to Auto, should only be changed if problems are experienced, i.e. NTSC input from external source.

Skip Set Skip to On (8) or Off () for the selected channel. See page 22 Signal Class The channel classification. Channel The channel number on which a station is being broadcast. Search Search up and down for a signal. Manual Fine Tuning Only used if interference/weak signal is experienced. See page 79. Station Station identification. Use the B or b and C or c buttons to enter up to seven characters. 2 3 4 5 6 7 8 9 To allocate a position on the television for a decoder and media recorder: turn the decoder on, insert a pre-recorded film in the media recorder, press PLAY, and then manually tune. 21 SETTING UP YOUR TV English a Press MENU and use C or c to select the SETUP menu.

Press b to highlight ATV Manual Tuning and press OK to select. g h Each signal will show on the television. If it is not your media recorder, press B or b again to restart the search. When your media recorder signal is found, press c to move along to Station. Use B, b, C and c to put in the required characters, e.g. VCR. ATV Manual Tuning Station 1 I A C 2 0 VCR SETUP Menu Language Country Ant/Cable/Satellite Satellite Settings Auto Tuning ATV Manual Tuning DTV Manual Tuning DTV Settings English Germany i j k Press OK to save. Repeat for each position you want to tune, or press RETURN to return to the list of channels and select the next number to tune. Press EXIT when you have finished.

PLEASE NOTE This television has direct channel entry if the channel numbers are known. Select the ATV Manual Tuning screen in Step 3. Enter the Position number, the System, then C for standard (terrestrial) channels or S for cable channels and the Channel number. Press OK to save. b Use B or b to highlight the desired position.

We suggest Pos. 0 for a media recorder. ATV Manual Tuning Pos. Channel 1 C 2 2 3 4 5 6 7 8 Station S10 C7 S40 C22 C25 C28 C30 Different Channel numbers may be displayed. c d Skip Press OK to select.

If the channel chosen for the media recorder is set to skip, Skip should be removed before storing. Press c to select System and use B or b to change if required. ATV Manual Tuning System 1 I A C 2 0 To prevent certain channels from being viewed, positions can be skipped. a b Select ATV Manual Tuning from the SETUP menu. Use B or b to highlight the position to be skipped and press OK to select. ATV Manual Tuning Pos. Channel 1 C 2 2 3 4 5 6 7 8 Station e f Then press c to select Search. Press B or b to begin the search. The search symbol will flash. ATV Manual Tuning Search 1 I A C 2 0 S10 C7 S40 C22 C25 C28 C30 ABC1 ABC1 22 SETTING UP YOUR TV English c d Press c to select Skip.

Use B or b to turn Skip on. Press OK. DTV Manual Tuning NOTE: The content of this menu varies depending on the DTV input (Antenna, Cable, or Satellite) that is currently selected. 8 on the screen indicates a skipped position. ATV Manual Tuning Skip: On 1 I A C 2 0 Manual Tuning This feature is available for service engineers or can be used for direct channel entry if the multiplex channel is known. e a Press RETURN and repeat from Step 2 or press EXIT. Each position has to be individually selected. To turn Skip off, repeat the procedure for each position. Skipped positions cannot be selected by PU and Pu or by the controls on the television but can still be accessed by the number buttons on the remote control. Select DTV Manual Tuning from the SETUP menu and press OK.

DTV Manual Tuning Signal Strength Quality WEAK GOOD 13 AVERAGE STRONG Channel Start Scan Sorting positions Channels may be moved and saved to the position of your choice. b c Enter the multiplex number using the number buttons or use C or c to adjust the number up or down. Highlight Start Scan, and then press OK. The television will automatically search for that multiplex. DTV Manual Tuning 0 New Channels - Total 6 New Pos.

Name ABC ONE 1 2 a b Select ATV Manual Tuning from the SETUP menu. With the list of channels showing, use B or b to highlight the channel you want to move and press c. ATV Manual Tuning Pos. Channel 2 3 4 5 1 6 7 8 Type ABC TWO ABC THREE ABC NEWS 24 ABCi Station 7 40 51 S10 C7 C40 C22 C2 C25 C28 C30 ABC1 ABC1 When the multiplex is found, any channels that are not currently in the channel list will be added and the channel information at the top of the screen will be updated. c d Use B or b to move through the list to your preferred position.

As you do so, the other channels will move to make room. Press C to save your move. Repeat as necessary, and then press EXIT. d Repeat as necessary. Press EXIT to finish. 23 SETTING UP YOUR TV English Manual Tuning for DVB-C When Ant/Cable/Satellite is set to Cable, DTV Manual Tuning items are as follows: Frequency input a specific frequency to be scanned Modulation choose from one of five QAM modulation options Symbol Rate input a specific baud rate (KS/s) to be used for the manual scan Highlight Start Scan, and then press OK. DTV Settings Channels (Antenna/Cable) The channel order may be changed to suit your personal preference. a b Select DTV Settings from the SETUP menu and press OK. Select Channels and press OK. DTV Settings Channels Manual Tuning for DVB-S When Ant/Cable/Satellite is set to Satellite, DTV Manual Tuning items are as follows: DTV Manual Tuning - Satellite Signal Strength Quality WEAK POOR AVERAGE STRONG Subtitle and Audio PIN Setting Parental Control Local Time Setting Standby Channel Update DVB Character Set Off Standard On Satellite Transponder Frequency Symbol Rate Polarisation Search Option ASTRA 28.

2°E 1/83 10714 MHz 22000 KS/s H Free to Air Dynamic Scan c For your convenience, you can jump to specific places in the list by one of two methods.



[You're reading an excerpt. Click here to read official TOSHIBA](http://yourpdfguides.com/dref/3873064)

[WL-768 user guide](http://yourpdfguides.com/dref/3873064)

<http://yourpdfguides.com/dref/3873064>

Channels Line No. 1/10 Pos. Name 1 ABC ONE 2 7 30 40 51 822 823 ABC TWO ABC THREE CAB Channel ABC NEWS 24 ABCi AA AC TV Start Scan Use B or b to highlight an item (Satellite, Transponder, Frequency, Symbol Rate, Polarisation or Search Option), and then press C or c to select the required option. Highlight Start Scan, and then press OK. Line Number Jump -- Use the number buttons (0-9) to input the line number you want to select, and then press OK. Station Letter Jump -- Press CC or cc to jump to the next station name with a different initial letter. It is also possible to change the Position number of a particular channel. Renumber -- Press the RED button to renumber the highlighted channel. Edit the channel number using the number buttons and press OK.

Pos. --Name ABC ONE - 24 SETTING UP YOUR TV English Move -- Press the GREEN button to activate the Move feature. Use the B or b buttons to select the channel you wish to move and press OK to check. If you wish to move multiple channels at once, select another channel and check in the same way. Repeat as necessary.

Once all desired channels have been checked, use the B or b buttons to place the focus at the position to which you wish to move the channels. The channels will be inserted above the highlighted channel. Press the GREEN button to execute the move. Channels Line No. 1/10 Pos.

Name 1 ABC ONE 2 7 30 40 51 822 823 ABC TWO ABC THREE CAB Channel ABC NEWS 24 ABCi AA AC TV Channels (Satellite) a b Select DTV Settings from the SETUP menu and press OK. Select Channels and press OK. The satellite channel list will appear. Channels Line No. 4/1200 Pos. Station 1 DDD 2 3 801 802 803 822 823 AB E BBC BB BA AA AC Satellite TV Satellite 19.2°E 19.2°E 19.2°E 22.5°E 22.

5°E 22.5°E 25.6°E 25.6°E c For your convenience, you can edit and sort your channel list. Sort -- Press the YELLOW button. A confirmation window will appear. Press C or c to select Yes and press OK. Sort Your existing channel order will be lost. Do you wish to continue? Yes Line Number Jump -- Use the number buttons (0-9) to input the line number you want to select, and then press OK. Station Letter Jump -- Press CC or cc to jump to the next station name with a different initial letter.

Satellite Jump -- Press Z or z to jump to the next channel on a different Satellite. Renumber -- Same as Antenna/Cable channels. See page 24. The Sorting Type selection window will appear. Sort Sorting Type Sort A-Z Press C or c to set the sorting type.

A-Z Station name order (A to Z) Move -- Same as Antenna/Cable channels. See page 25. Sort -- Press the YELLOW button. A confirmation window will appear. Press C or c to select Yes and press OK.

The Sort menu will appear. Sort Group Sorting Type Preset Order Sort By Satellite Channel Number Yes Channel Number Position No. order (numerical sequence) Press b to highlight Sort and press OK. 25 SETTING UP YOUR TV English Group -- Press C or c to select All or By Satellite. Sorting Type -- Press C or c to set the sorting type. A-Z Station name order (A to Z) Dynamic Scan If the broadcast information has changed in your DVB-T receiving area, the TV screen will display the message "Broadcast information has changed. Would you like to rescan now?". Please follow the message. If you do not wish for the TV to detect changes and prompt you to rescan, you should set this feature to "Off". Channel Number Position No.

order (numerical sequence) Preset Order -- Press C or c to set Yes or No. This item is displayed when Country is set to Germany, and only applies to the Astra 19.2°E satellite. Press b to highlight Sort and press OK. a b Select DTV Settings from the SETUP menu and press OK. Press b to select Dynamic Scan and use C or c to select On. Standby Channel Update If the Standby Channel Update is set to On, when the TV is in standby mode, Digital Tuning is automatically executed and any new channels are saved. Location setting You can select either Home or Store mode. Home is recommended for normal home use. Select Store when using the television for displaying in a shop, etc.

a b Select DTV Settings from the SETUP menu and press OK. Press b to select Standby Channel Update and use C or c to select On. a b Select Location from the SETUP menu. Press C or c to select Home or Store. DVB Character Set This feature allows you to manually select the character set (Standard = Table 0, West = Table 5 or Latin alphabet 9) to be used for DVB-C or DVB-T channels.

Analogue switch-off This is a digital television which is integrated to allow the use of both digital and analogue services. However, during the lifetime of this set it is very likely that analogue services will be switched off to allow for more new digital services. This 'switch-off' will happen in a number of phases, which will be advertised in your area well in advance. It is recommended that at each phase the television is re-tuned to ensure that existing and new digital services can be viewed without disruption. a b Select DTV Settings from the SETUP menu and press OK.

Press b to select DVB Character Set and use C or c to select Standard, West or Latin alphabet 9. 26 CONTROLS AND FEATURES English General controls Quick Menu Quick Menu helps you access some options quickly, such as Picture Mode, Picture Size, More Information, Sleep Timer etc. Press QUICK to display the Quick Menu and use B or b to select the option. Quick Menu Picture Mode Picture Size 3D Settings More Information Channel Options YouTube Media Player Photo Frame Sleep Timer Speakers Wireless Information 00:00 TV Speakers AutoView Super Live Selecting positions To select a position, use the numbered buttons on the remote control. Positions can also be selected using PU and Pu. To display on-screen information such as position, input mode or stereo/mono signal, press . Press again to cancel. The Time Display analogue only The time display facility allows the current (text service) time to be seen on the television screen. Press D whilst watching a normal television broadcast to see the time display from the broadcaster. It will remain on screen for about 5 seconds.

NOTE: This display may not be available in some cases. Stereo and Bilingual transmissions For ATV programmes If stereo or dual language broadcasts are transmitted, the word Stereo or Dual will appear on the screen each time positions are changed, disappearing after a few seconds. If the broadcast is not in stereo, the word Mono will appear. Stereo... Press s to select Stereo or Mono. Description See page 36. See page 34. See page 28.

See page 64. See page 67. See page 50. See page 52. See page 59.

See page 63. See page 75. See page 45. See page 65. See page 65.

See page 55. See page 55. See page 55. See page 55. See page 45. See page 36. For multi-audio track broadcasts, press s repeatedly to change the audio language (see 'Audio language' on page 68).



[You're reading an excerpt. Click here to read official TOSHIBA](#)

[WL-768 user guide](#)

<http://yourpdfguides.com/dref/3873064>

