



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRANSCEND MP320. You'll find the answers to all your questions on the TRANSCEND MP320 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual TRANSCEND MP320**  
**User guide TRANSCEND MP320**  
**Operating instructions TRANSCEND MP320**  
**Instructions for use TRANSCEND MP320**  
**Instruction manual TRANSCEND MP320**

**MP320**

**User's Manual**



[You're reading an excerpt. Click here to read official TRANSCEND MP320 user guide](http://yourpdfguides.com/dref/3700744)  
<http://yourpdfguides.com/dref/3700744>

*Manual abstract:*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*..... 25 Daylight Saving Time (DST) ...*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*... 26 FM Reset ..*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.26 Language .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*...26 Music Transfer Protocol (MTP) .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*27 Player Info .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*27 Driver Installation .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.....28 Connecting to a Computer ....*

.....  
.....

.....  
.....

.....  
.....  
.....

.....  
.....

*..29 Transferring Files to the MP320..*

.....  
.....  
.....  
.....

.....  
.....  
.....

.....

*...29 Disconnecting from a Computer ..*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.....30 Transcend Digital Music Player Utility Software ...*

.....  
.....  
.....

.....  
.....  
.....

*..31 Installing the Transcend Digital Music Player Utility Program .....*

.....  
.....  
.....

*.....31 3 PC-Lock..*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....

*..32 Partition .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.....34 Log In / Log Out .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.....35 Changing your Password ...*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*...36 Forgotten Passwords .....*

.....  
.....  
.....

.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*37 Troubleshooting .....*

.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*...38 Specifications .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.....40 Ordering Information .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.....40 Recycling & Environmental Considerations .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

42 4 Introduction Thank you for purchasing Transcends MP320, a next-generation MP3 Player that combines all the advantages of lightweight portable music with the benefits of a USB flash drive, and includes many extra features such as an FM radio, advanced digital voice recording, karaoke-style lyrics display, A-B repeat functions and variable track playback speeds. Your MP320 is equipped with a Hi-speed USB 2.0 interface to transfer data and music files to and from your computer quickly and easily. @@@@The MP320s internal Li-ion battery will begin charging. Figure 3.

Connecting to a Computer Power ON Press and hold the button to turn on the player. An animated Transcend logo will appear on the screen. After the startup screen disappears, the Main Menu will appear. You can now start using the MP320. The Main Menu will appear. It takes a few seconds for the MP320 to power up. If the Lock icon appears on the display while powering on the MP320, this means that the switch is enabled. You must switch off the Hold mode before you can power on the player. Power OFF Press and hold the button to turn off the MP320. It takes a few seconds to completely power down.

The power OFF animation will be displayed: 10 Play a Song Press to play the currently selected MP3, WMA, or WAV track. Pause a Song Press to pause and un-pause a track during playback. Next Track Press to skip to the next available song. Previous Track Press to go back to the previous song. Fast Forward Press and hold the button to fast-forward. Rewind Press and hold the button to rewind. Increase Volume Press once or press and hold the button until you reach the desired volume level. Decrease Volume Press once or press and hold the button until you reach the desired volume level. Main Menu Press in any mode to bring up the Main Menu. The Main Menu gives you access to the MUSIC, RADIO, RECORD modes and the SETTINGS menu.

Voice Recording The MP320 records using its built-in microphone located near the button. 1. Press and hold the button for 2 seconds in any mode (except the FM Radio mode) to activate the MP320s built-in microphone and begin recording. 2. Press and hold for 2 seconds again to finish the recording.

3. Recorded audio files can be found in the Record mode. A-B Repeat 1. While listening to a song or recording in the Music or Record modes, press the mark the beginning of the portion you wish to repeat. 2.

Press the button again to mark the end of the section you wish to repeat. button once to 3. The marked section of the track will playback the marked A-B section in a continuous loop. 4. Press the button once more to stop the A-B repeat function. 11 Hold When the switch enabled, all of the MP320s buttons will be disabled, and cannot accidentally be pressed while in your pocket. Reset If the MP320 is not functioning properly, you can reboot by pressing for 3 to 5 seconds. 12 MUSIC Mode Before buying DRM (Digital Rights Management) protected music online, please be advised that the MP320 only supports WMA-DRM10 file protection. Playing MP3, WMA, or WMA-DRM10 Music 1. Press and hold the button to power ON the MP320.

The Main Menu will appear. button to enter the Main Menu. If the MP320 is already on, press the 2. Use the and buttons to select the "MP3" icon automatically find available music files. 3. Select the song you want to listen to with the and and press to confirm. The player will buttons or use the File Navigator. If MP320 cannot find any MP3, WMA, or DRM10 files, a "No Music Files" message will appear. WAV files can only be played in the Record mode. 4.

Press the button to play the music file. MP320 supports Mpeg I Layer 3 and WMA files compressed at between 32Kbps 320Kbps. File Navigator The File Navigator is a fast and convenient way of moving between tracks, files and folders. 1. In the MUSIC mode, press and hold the button, then highlight File Navigator and press .

2. A list of files or folders will appear. Use the and buttons to move up and down the list. 3. Press 4.

Press or to play the highlighted song or to enter the selected folder. icon and press . to move up one folder level. or select the 5. To exit, press and hold Playlists For quick and easy playback of your favorite songs, the MP320 supports M3U, PLA, and WPL playlist formats, and also includes its own user-editable playlist (My Playlist). 1. In the MUSIC mode, press and hold the button, then highlight Playlists and press . 13 2. Select either "My Playlist" or an imported playlist file (if available) and press . 3.

Use the and buttons to move up and down the list of available songs. Press or to play the highlighted song. When the song ends, the rest of the files in the playlist will then be played. 4. To exit playlist playback, simply select a new music file from the File Navigator. Adding a Song to My Playlist 1. In the MUSIC mode, press and hold , then highlight File Navigator and press . 2. Use the / and / buttons to navigate to the song you want to add. 3.

With the file highlighted, press the button and select "Add to My Playlist." Removing a Song from My Playlist 1. In the MUSIC mode, press and hold , then highlight Playlists and press . 2. Select "My Playlist" and press .

3. Use the / buttons to find the song you want to remove. button and select "Remove from My Playlist." A confirmation 4. With the file highlighted, press the will appear.

14 5. To remove all songs, highlight "My Playlist" and press the button, then select "Yes" to confirm. Deleting Music Files 1. In the MUSIC mode, press and hold to enter the File Navigator. 2. Navigate to the file you want to delete with the 3. With the file highlighted, press the / and / buttons. button and select "Delete." A confirmation will appear. 4.

Use the button to highlight "yes" and press to permanently delete the file. 15 RADIO Mode Listening to the Radio 1. Plug in the earphones 2. Press the 3. Use the . (Earphones must be plugged-in to listen to the Radio) buttons to select the "FM" icon button to go to the Main Menu. and and press . 4. The current FM radio frequency will be displayed. The first time you use the Radio, the MP320 will automatically scan all frequencies and save the 20 strongest stations as channel presets (CH).



[You're reading an excerpt. Click here to read official TRANSCEND  
MP320 user guide](http://yourpdfguides.com/dref/3700744)  
<http://yourpdfguides.com/dref/3700744>



To rescan, select "FM Reset" in the SETTINGS menu. Selecting a Radio Station To manually select a radio station, press or (the FM frequency will increase or decrease in 0.1MHz increments) until you reach the desired station. Alternatively, you can press and hold either or to auto-scan for the next available station. Adjusting the Volume Press once or press and hold the or buttons until you reach a comfortable volume level.

Saving a Radio Station The MP320 lets you save (preset) your 20 favorite radio stations (CH 01 to CH 20). To save a station: 1. Use or to select the radio station (FM frequency) that you want to save. button to display the preset channel selector 2. Press (dont hold) the 3.

Use the and buttons to select the channel number (CH 01 to CH 20) to save the station to. again to save the current station to that channel number. 4. Press (dont hold) Recalling a Saved Station 1. In the RADIO mode press (dont hold) to display your saved stations (CH 01 to CH 20). 16 2. Use the 3. Press and buttons to select the channel you want to listen to. to listen to the selected channel. Recording the Radio 1.

Select a radio station that you want to record. 2. Press and hold the button for 2 seconds to begin recording the station. 3. An automatically generated file name for your recording will appear. FM Recordings are named in this format: "MonthDayF###.WAV" Ex: &ence. 1. In the SETTINGS menu, use and to select "EQ" and press . 2.

In the EQ menu, use and to select "User EQ" and press . 3. Use the and buttons to switch between 5 bands: 80Hz, 250Hz, 1KHz, 4KHz, and 12KHz. The "ALL" setting move all 5 bands up or down together. 20 4.

Press or to increase or decrease levels in 1.0dB steps (Adjustment range: -7dB to +8dB) 5. Press to save the new User EQ settings and return to the SETTINGS menu. Repeat Mode There are seven Repeat modes to choose from: Normal Repeat One Repeat All Shuffle (plays all music files available one time, in consecutive order) (continuously repeats the current song), (continuously repeats playback of all music files available, in consecutive order) (continuously repeats playback of all music files available, in random order) Normal in Folder (plays all music files in a folder one time, in consecutive order) Repeat in Folder (continuously repeats playback of all music files in a folder, in consecutive order) Shuffle in Folder (continuously repeats playback of all music files in a folder, in random order) 1. In the SETTINGS menu, use and to select the "Repeat" icon and press .

2. Use the and buttons to select the desired repeat mode and press to confirm. Play Speed The speed at which an audio file is played can be increased or decreased. Playback speeds can be set to: 0.67 X (very slow), 0.80x (slow), or 1.00x (normal), 1.14x (fast) , 1.33x (very fast), and press .

1. In the SETTINGS menu, use to select the "Play Speed" icon 2. Use or to select one of the 5 playback speed settings and press to confirm. 21 Record Settings Record Quality The quality of an audio recording can be set to Low (8,000Hz), Medium (16,000Hz), or High (32,000Hz). Higher recording quality settings require more memory space to save the recorded WAV files. 1. In the SETTINGS menu, use or to select the "Record Settings" icon and press . 2. Use or to select "Record Quality" and press . 3.

Use or to switch between "Low", "Medium", or "High" and press to confirm. Maximum Record Time / Quality Table Record Quality FM Radio Recording Low (32 Kbps) Med (48 Kbps) High (64 Kbps) 2GB 128 hrs 85 hrs 64 hrs 4GB 256 hrs 170 hrs 128 hrs 8GB 512 hrs 340 hrs 256 hrs Record Quality MIC Recording Low (32 Kbps) Med (64 Kbps) High (128 Kbps) 2GB 128 hrs 64 hrs 32 hrs 4GB 256 hrs 128 hrs 64 hrs 8GB 512 hrs 256 hrs 128 hrs Note: The above recording times may not be possible if space is limited or the battery power is low. For best results, try to position the MP320's Microphone as close as possible to the source of the sound or voice you are recording. RADIO recordings are recorded in Stereo. Voice recordings are recorded in Mono.

22 VAD (Voice Activity Detection) VAD allows the MP320 to make gapless voice recordings. This means during voice recording with the internal microphone, the player will only record when it detects voices. If the person(s) pauses or stops speaking, the MP320 will temporarily stop recording until the person(s) starts speaking again. This allows for more concise, easier to understand recordings and smaller recording files. 1.

In the SETTINGS menu, use or to select the "Record Settings" icon and press . 2. Use or to select "VAD" icon and press . 3. Use or to switch between "Enable" or "Disable" and press . Contrast The contrast of the OLED display can be adjusted for brighter or darker text. Higher contrast levels will drain the battery faster, while lowering the contrast level will provide better battery life. 1. In the SETTINGS menu, use and to select the "Contrast" icon and press . 2.

Use and to increase or decrease contrast. @@@@Use or to select a Screen Saver delay and press . @@@@1. In the SETTINGS menu, use and to select "Sleep Timer" and press . 2. Use or to select a Sleep delay time and press . You can choose from "15 Min", "30 Min", "60 Min" or "Disable". @@@@1. @@@@Use the and buttons to adjust the values of each field. 5.

@@@@1. @@@@@The Time Zone setup screen will appear. 4. @@@1. @@@@@1.

@@@@The player supports 13 different languages. 1. @@@@This setting lets you switch between MTP or USB transfer modes. @@In the SETTINGS menu, use or and press . 2.

@@1. @@@@@Plug your MP320 into an available USB port and Windows® will install the necessary files. A Removable Disk drive with a newly assigned drive letter will appear in the My Computer window. Driver Installation for Mac® OS 10.0 or Later No drivers are required. Plug your MP320 into an available USB port and your computer will automatically detect it. Figure 4. Mac Installation Driver Installation for Linux® Kernel 2.4 or Later No drivers are required. Plug your MP320 into a USB port and mount it.

1. Create a directory for the MP320. Example: mkdir /mnt/MP320 2. Mount the MP320. Example: mount a t msdos /dev/sda1/mnt/MP320 Plug the MP320 directly into a USB port on your computer. Connecting the MP320 through a USB hub is strongly discouraged. Audio files (MP3/WMA/WMA-DRM10/WAV) must be no more than 4 folder levels away from the "[/Root /]" directory. The MP320 is limited to 128 characters for a file name. NEVER format your MP320 in Windows. 28 Connecting to a Computer If you are using Windows Media Player 10 and want to play WMA-DRM10 music files, you must set the MP320's Music Transfer Mode to MTP to transfer and synchronize music files between the computer and your MP320.



[You're reading an excerpt. Click here to read official TRANSCEND MP320 user guide](http://yourpdfguides.com/dref/3700744)  
<http://yourpdfguides.com/dref/3700744>

*Transferring Files to the MP320* If you want to use your MP320 to listen to music other than the Radio, you must transfer MP3, WMA, or WMA-DRM10 music files to the player. When the MP320 is connected to a computer it is locked into transferring files. You will not be able to play or record any music at this time. Please disconnect your MP320 from the computer when you want to use the player. 1.

Remove the MP320s cap and plug its USB connector directly into an available USB port on your desktop or notebook computer. While the MP320 is connected to a computer, it can only be used for transferring files. The MP320s rechargeable Li-ion battery will begin charging. Figure 5. Connecting to a Computer 2.

When connected to a computer the MP320s screen will display a "READY" message, indicating that files can be loaded onto the player. You cannot play or record music when the MP320 is connected to a computer. If you are using Windows® a new Removable Disk drive with a newly assigned drive letter representing the MP320 will appear in the My Computer window. Figure 6. The MP320 shows up as a Removable Disk in the My Computer window \*Note: "(F:)" is an example drive letter your "My Computer" window may differ 3. To transfer normal MP3 and WMA music files to the MP320, the MTP (see Music Transfer Protocol) mode in the Settings menu must be set to "USB." You can transfer music and data files to the MP320 by simply dragging them onto the MP320s "Removable Disk" drive letter. 29 4. While files are being transferred to the MP320, the screen will display a "WRITE" message. After files have been successfully transferred, the "READY" message will be displayed again.

5. If you choose to transfer files or folders to the computer, the MP320 will display a "READ" message indicating that files are being transferred to the computer. After files have been successfully transferred, the "READY" message will be displayed again. NEVER unplug the MP320 during file transfer. @@Removing the MP320 in Windows® Me, 2000, XP and Vista 1. Select the Hardware icon in the system tray. 2. The Safely Remove Hardware pop-up window will appear. Select it to continue. Figure 7.

Safely Remove Hardware 3. @@Safe to Remove Hardware 4. @@Drag the Disk icon that corresponds to your MP320 into the trashcan. 2. @@Execute unmount /mnt/MP320 to un-mount the device.

2. @@@@Choose a language 2. The "InstallShield Wizard" window will appear. Click the "Next" button to continue. @@@@Installation complete The Transcend Digital Music Player Utility program can be found in: " Transcend -> Digital Music Player Utility.

" -> Programs -> PC-Lock With PC-Lock, you can use your MP320 as a key to temporarily lock your computer while you are away. 1. Start the Transcend Digital Music Player Utility ( Music Player Utility) 2. Click on the "PC-Lock" button menu. -> Programs -> Transcend -> Digital in the Transcend Digital Music Player Utility window or Task Bar Figure 13. Transcend Digital Music Player Utility PC-Lock 3. The PC-Lock Settings window will appear. Select the "Enable PC-Lock" checkbox. 32 Figure 14. Enable PC-Lock 4.

You can change the text displayed on the screen while the computer is locked in the "Screen Saver Message" field. Figure 15. PC-Lock Screen Saver text 5. You can adjust the period of time that your computer will be locked for with the "Enable Timer" option. Set the Unlock Timer in Hours and Minutes. When this time elapses, your computer will automatically unlock and be available for use. 33 Figure 16. PC-Unlock Timer 6. Click the "OK" button to start the PC-Lock. Figure 17.

Start PC-Lock When PC-Lock is enabled, your computer will be locked when the MP320 is unplugged While your computer is locked, the screen will display the "Screen Saver Message" text To unlock the computer, you must reconnect your MP320 to your computer. The PC-Lock message text will disappear and you will be free to use your computer again. The computer will also unlock itself automatically when the lock timer expires. Partition This feature allows you to create a secure password-protected area on the MP320 for your personal files. You can adjust the size of Public and Private areas, and add a password to protect the Private area.

Data stored in the Private area will be kept secure and can only be accessed with your password. WARNING! Creating a Private area or adjusting the partition size will erase all data on MP320! Please back up your data before using this feature. 34 1. Connect the MP320 to your computer. 2. Start the Transcend Digital Music Player Utility ( Music Player Utility) 3. Click on the "Partition" button menu. -> Programs -> Transcend -> Digital in the Transcend Digital Music Player Utility window or Task Bar Figure 18. Transcend Digital Music Player Utility Partition 4. The Partition window will appear. Move the slider left and right to adjust the size of the Public and Private areas on your MP320. Figure 19. Create a Partition 5. To protect the Private area, choose a password and a "Hint" (in case you forget your password) Figure 20. Password and Hint 6.

Click the "Start" button to complete Partition & Security setup. The process may take a few minutes. 7. Click the "Start" button to complete the Partition & Security setup. Log In / Log Out This function lets you access the files stored on the Private partition of your MP320. If you do not log in, your protected files will be invisible. 1. Connect the MP320 to your computer. 2. Start the Transcend Digital Music Player Utility ( Music Player Utility) 35 -> Programs -> Transcend -> Digital 3.

Click on the "Login/Logout" button Bar menu. in the Transcend Digital Music Player Utility window or Task Figure 21. Transcend Digital Music Player Utility Login/out 4. The Login/out window will appear. Input your password and click "Login.

" Figure 22. Enter your password 5. When successfully logged in, the "Public Area" message will change to "Private Area." The files in your Private Area will no longer be hidden and can be accessed normally. 6.

When you are finished using the Secure Area and no data is being transferred between the MP320 and the computer, click the "Login/Logout" button again to log out. Figure 23. Transcend Digital Music Player Utility Login/out Changing your Password 1. Start the Transcend Digital Music Player Utility ( Music Player Utility) 2. Click on the "Password" button menu. -> Programs -> Transcend -> Digital in the Transcend Digital Music Player Utility window or Task Bar Figure 24. Transcend Digital Music Player Utility Password 3.



**You're reading an excerpt. Click here to read official TRANSCEND MP320 user guide**

<http://yourpdfguides.com/dref/3700744>

The New Password window will appear. Input your current Password and New Password, then confirm the new password. Use the "New Hint" field to give yourself a hint in case you forget your new password.

36 Figure 25. Change Password 4. Click on the "OK" button to complete the New Password setup. Forgotten Passwords If you forget your password, use the password hint to help you remember your password. If you are still unable to remember your password, you will have to use the Partition function to reset the Public and Private areas. THIS WILL ERASE ALL DATA ON THE MP320. Although the data in the Private area will be lost, you can back up all data on the Public area before using the Partition function.

37 Troubleshooting If a problem occurs with your MP320, please first check the information listed below before taking your MP320 for repair. If you are unable to remedy a problem from the following hints, please consult your dealer, service center, or local Transcend branch office. We also have FAQ and Support services on our website at <http://www.transcendusa.com>. Operating system cannot detect the MP320 Check the following: 1. Is your MP320 properly connected to the USB port? If not, unplug it and plug it in again. 2.

Is your MP320 connected to the Mac keyboard? If yes, unplug it and plug it into an available USB port on your Mac Desktop. 3. Is the USB port enabled? If not, refer to the users manual of your computer (or motherboard) to enable it. Cannot Power ON Check the following: 1. Is the MP320 connected to your computer? If yes, unplug it.

2. Is the Hold switch enabled? If yes, switch it to the "OFF" position. 3. Is the battery out of power? If yes, please recharge the battery. Cannot transfer MP3, WMA, WMA-DRM10, or WAV files to the MP320 Uninstall and re-install the driver. If this doesnt work, try Resetting the MP320. Buttons aren't working Is the Hold switch enabled? If yes, set it to the "OFF" position. Cannot hear track playback 1. Have you downloaded any music files onto the MP320? If no, then you must first do so from your computer or the Internet. (Only Mpeg I Layer 3 and WMA files compressed at a rate of 32Kbps/320Kbps are supported.

) 2. Are the earphones properly connected to the earphones jack? If not, reconnect them. 3. Is the volume loud enough? If not, increase the volume level until the music can be heard. Track name does NOT display correctly on the screen 1. The default language of the MP320 is English. Please set the language option first. 2. ID3 tag information has display priority on the screen of the MP320. You can modify the ID3 tag by using Windows Media Player or Winamp. 3. If the ID3 tag is empty, just the file name will be displayed on the screen. Cannot enter the RECORD Mode To make sure the recorded file will not be lost, two safety mechanisms are provided. 1. If the remaining battery capacity is less than 10%, you cannot enter the RECORD Mode.

2. During recording, if the remaining battery capacity goes below 10% the MP320 will automatically save the recording. Track playback sounds intermittent 38 Plug the earphones into the earphones jack again to make sure they are properly connected. MP320 Powers OFF automatically MP320 features a SLEEP Mode, which acts as a Power Saving feature. @@@@ Open your Windows Media Player program.

2. @@@3. The version of your Windows Media Player will be displayed on the computer screen. Cannot listen to DRM music on my MP320? 1. The MP320 only supports WMA-DRM10 protected music files, is this the file type you are using? 2. Did you use the MTP "Music Transfer Protocol" to transfer music to the MP320? Lyrics Sync: Why can't I see the words of the song I am listening to? For detailed Lyrics Sync instructions, please

<http://www.transcendusa.com/Support/FAQ> see the FAQ section on our website at: 39 Specifications Size (L x W x H): Weight: Music Formats: Recording Format: Estimated Battery Life: Compression Rates: Data Retention: Erase Cycles: Signal-to-Noise Ratio: Certificates: Warranty: 85.5 mm x 25.5 mm x 13 mm 29g (with Li-ion battery) MP3, WMA and WMA-DRM10 (Subscription music) IMA\_ADPCM (WAV) 15 hours (fully charged battery) 32Kbps to 320Kbps Up to 10 years 100,000 times 90dB CE, FCC, BSMI 2-years Ordering Information Device Description MP320 MP3 Music Player MP320 MP3 Music Player MP320 MP3 Music Player Memory Size 2GB 4GB 8GB Transcend P/N TS2GMP320 TS4GMP320 TS8GMP320 40 Recycling & Environmental Considerations Recycling the Product (WEEE): Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC: Never dispose of your product with other household waste. @@@@ For products with non-exchangeable built in batteries: The removal of (or the attempt to remove) the battery invalidates the warranty. This procedure is only to be performed at the end of the products life. 41 Transcend Limited Warranty "Above and Beyond" is the standard we set ourselves for customer service at Transcend. We consistently position ourselves to be significantly above the industry norm, which is all part of our commitment to Customer Satisfaction. All Transcend information, Inc. (Transcend) products are warranted and tested to be free from defects in material and workmanship and to conform to the published specifications. During the warranty period should your Transcend MP320 fail under normal use in the recommended environment due to improper workmanship or materials, Transcend will repair the product or replace it with a comparable one. This warranty is subject to the conditions and limitations set forth herein. Duration of Warranty: The Transcend MP320 is covered by this warranty for a period of two (2) years from the date of purchase.

Proof of purchase including the date of purchase is required for warranty service. Transcend will inspect the product and decide whether to repair or replace it. Transcend reserves the right to provide a functional equivalent or refurbished replacement product. Limitations: This warranty does not apply to product failure caused by accidents, abuse, mishandling, improper installation, alteration, acts of nature, improper usage, or problems with electrical power. In addition, opening or tampering with the product casing, or any physical damage, abuse or alteration to the products surface, including all warranty or quality stickers, product serial or electronic numbers will also void the product warranty.

Transcend is not responsible for recovering any data lost due to the failure of a flash memory device. Transcend's MP320 must be used with devices that conform to the recommended industry standards. Transcend will not be liable for damages resulting from a third party device that causes the Transcend MP320 to fail.



[You're reading an excerpt. Click here to read official TRANSCEND MP320 user guide](http://yourpdfguides.com/dref/3700744)  
<http://yourpdfguides.com/dref/3700744>

*Transcend shall in no event be liable for any consequential, indirect, or incidental damages, lost profits, lost business investments, lost goodwill, or interference with business relationships as a result of lost data. Transcend is also not responsible for damage or failure of any third party equipment, even if Transcend has been advised of the possibility.*

*This limitation does not apply to the extent that it is illegal or unenforceable under applicable law. Disclaimer: The foregoing limited warranty is exclusive. There are no other warranties, including any implied warranty of merchantability or fitness for a particular purpose. This warranty is not affected in any part by Transcend providing technical support or advice. Online Registration: To expedite the warranty service, please register your Transcend Product within 30 days of purchase. Register online at <http://www.transcendusa.com/productregister> The specifications mentioned above are subject to change without notice.*

*Transcend Information, Inc. www.*

*transcendusa.com \*The Transcend logo is a registered trademark of Transcend Information, Inc. \*All logos and marks are trademarks of their respective companies. 42 .*



[You're reading an excerpt. Click here to read official TRANSCEND MP320 user guide](http://yourpdfguides.com/dref/3700744)

<http://yourpdfguides.com/dref/3700744>