



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRANSCEND MP330. You'll find the answers to all your questions on the TRANSCEND MP330 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRANSCEND MP330
User guide TRANSCEND MP330
Operating instructions TRANSCEND MP330
Instructions for use TRANSCEND MP330
Instruction manual TRANSCEND MP330

User's Manual

Digital Music Player



MP330

 **Transcend**[®]



[You're reading an excerpt. Click here to read official TRANSCEND MP330 user guide](http://yourpdfguides.com/dref/3700697)
<http://yourpdfguides.com/dref/3700697>

Manual abstract:

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

8 General Use

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

8 Backing Up Data

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....8 Caution: Risk of Deafness...

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
...8 Reminders .

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.9 Player Controls

.....
.....
.....
.....

.....
.....
.....

..... 10 Music Playback Screen

.....
.....
.....

.....
.....
.....

. 11 Basic Operation

.....
.....

.....
.....
.....

.....
.....
.....

..... 12 Charging the Battery .

.....
.....
.....
.....

.....
.....

.....
.....

.....
.....
.....

..12 Power ON ...

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

....12 Power Off .

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.12 Play a Song....

.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
13 Pause a Song
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
13 Next Track
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
13 Previous Track
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

...13 Fast Forward
.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....13 *Rewind*

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....13 *Increase Volume*

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....13 *Decrease Volume*

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....13 Main Menu .

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....13 A-B Repeat.

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....13 Hold .

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....14 Reset

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

....14 MUSIC Mode

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 15 Playing Audio Files ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

....15 File Navigator .

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
.....15 Deleting Music Files .

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....15 Playlists

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....16 Adding a Song to My Playlist ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....16 Removing a Song from My Playlist ...

.....
.....
.....

.....
.....
.....

.....
.....
..16 RADIO Mode ...
.....

.....
.....
.....
.....
.....
.....
.....

.....
. 18 Listening to the Radio
.....

.....
.....
.....
.....
.....
.....

.....
.....
.....

..18 Selecting a Radio Station

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....

.....18 2 Saving a Radio Station ..

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
.....

.....18 Recalling a Saved Station ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....21 FM Radio Recording

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

21 Settings

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 22 Equalizer (EQ) Mode

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....22 User EQ Customization

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

....22 Repeat Mode.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.23 Play Speed

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.23 REC Settings

.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

.....
.....
.....
.....
.....23 Record Source ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 23 Record Quality ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 24 VAD (Voice Activity Detection) .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 24 Contrast

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
25 Screen Saver

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
25 Lyrics Sync

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
26 Sleep Timer.....

.....
.....
.....

.....
.....
.....
.....

.....

.....
.....
.....
.....
.....
.....
.....

....26 Auto Power Off

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....26 Date / Time Settings...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..26 FM Band ...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.27 FM Reset

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

....27 Language .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.27 Music Transfer Protocol (MTP)

.....

.....

.....

.....

.....

.....

.....

.....

.....

...28 Player Info ..

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
...28 Driver Installation ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

... 29 Driver Installation for Windows® 2000, XP and Vista

.....
.....
.....
.....
.....
.....

.....29 Driver Installation for Mac® OS 10.0 or Later ...

.....
.....
.....
.....
.....
.....
.....
.....

..29 Driver Installation for Linux® Kernel 2.4 or Later

.....
.....
.....
.....
.....
.....
.....

.29 Connecting to a Computer

.....
.....
.....
.....
.....
.....
.....

.. 30 Transferring Files to the MP330.....

.....
.....
.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....30 Disconnecting from a Computer ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
... 32 Troubleshooting

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
33 Specifications
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

. 35 Ordering Information
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
. 35 Recycling & Environmental Considerations
.....
.....

.....
.... 36 3 Transcend Limited Warranty .
.....
.....
.....
.....
.....

.....
.. 37 4 Introduction Thank you for purchasing Transcend's MP330, a next-generation MP3 Player that combines all the advantages of lightweight portable music with the benefits of a USB flash drive, and includes many extra features such as an FM radio, advanced digital voice recording, direct Line-In recording, karaoke-style lyrics display, A-B repeat functions and variable track playback speeds. Your MP330 is equipped with a High-speed USB 2.0 interface to transfer data and music files to and from your computer quickly and easily.

The A-B repeat and variable track playback speed features allow you to continuously replay specific sections of an audio file at slower or faster speeds ideal for learning foreign languages and reviewing an important part of a song or recording. In addition, you can make personal memos and record meetings or class lectures using the advanced digital voice recorder with the built-in microphone. The stylish MP330 from Transcend will change the way you think about digital music forever. Package Contents The MP330 package includes the following items: MP330 Sport Clip Earphones Line-In Recording Cable Quick Start Guide 6 Features Supports MP3, WMA, FLAC, and WMA-DRM10 (subscription music), WAV music files Vivid all-white OLED screen displays clear text at any angle and in any light Recordable FM Radio with 20 station presets Built-in microphone and direct Line-In recording (for CD players, or other devices) Playlist Builder Karaoke-style synchronized lyrics display VAD (Voice Activity Detection) for high quality gapless audio recordings A-B repeat allows continuous replay of a designated section of a track Variable track playback speeds Supports 14 languages including menus, song/album title, artist name and lyrics USB flash drive capabilities for data transfer and storage Adjustable sleep timer Power-saving screen savers and auto-shutoff function 7 Equalizer effects, including a customizable USER EQ setting Internal Li-polymer battery provides up to 12 hours of continuous music playback* Built-in USB 2.0 connector for easy computer connectivity and fast file transfers Time and date display * Max.

playback time achieved with screen saver set to "10-Sec/Blank" and "Lyrics Sync" disabled. System Requirements A desktop or notebook computer with a working USB port One of following operating systems: Windows 2000 Windows XP Windows Vista Windows 7 Mac OS 10.0 or later Linux Kernel 2.4 or later 7 Safety Precautions These usage and safety guidelines are IMPORTANT! Please follow them carefully. General Use Unpack the contents of the MP330 package carefully. Ensure USB connectors are the same size and shape before connecting never force them Always use the Transcend-provided power adapters and cables. Using incompatible cables may permanently damage your MP330. Never connect the MP330 to a USB hub. USB hubs connect to multiple devices at the same time, resulting in inadequate or unstable power supply. This may cause damage to your digital music player.

Known problems caused by connecting to a USB hub include reduced playback time, random resets, and in the worst case, permanent damage to the player's firmware. Do not allow your MP330 to get wet or come in contact with water or any other liquids Do not use a damp/wet cloth to wipe or clean the exterior case. Do not use or store your MP330 in any of the following environments: o o o Direct sunlight Next to an air conditioner, electric heater or other heat sources In a closed car that is in direct sunlight Always unplug the player once it is fully charged. Avoid charging t Please plug the MP330 directly into your computer's built-in USB port or use the Transcend USB Power Adapter (optional). Power ON Press and hold the for use. button to turn on the player. An animated logo will appear, followed by the player status information. After the startup sequence, the Main Menu will be displayed, indicating the MP330 is ready It takes a few seconds for the MP330 to power up. If the lock icon that the switch is enabled (appears on the display while powering on the MP330, this means). You must switch off the Hold mode () before you can power on the player.

Power Off Press and hold the button to turn off the MP330. It takes a few seconds to completely power down. 12 The power off animation will be displayed: Play a Song Press the button to play a selected music or recording file. Pause a Song Press to pause and un-pause a song or recording during playback. Next Track Press to skip to the next available song.

Previous Track Press to go back to the previous song. Fast Forward Press and hold the button to fast-forward. Rewind Press and hold the button to rewind. Increase Volume Press once or press and hold the button until you reach the desired volume level. Decrease Volume Press once or press and hold the button until you reach the desired volume level.

Main Menu Press in any mode to enter the Main Menu. The Main Menu gives you access to the MUSIC, RADIO, RECORD modes and the SETTINGS menu. A-B Repeat 1. While listening to a song or recording in the Music modes, press the the beginning of the portion you wish to repeat. 2. Press the button again to mark the end of the section you wish to repeat. button once to mark 3. The marked section of the track will playback the marked A-B section in a continuous loop.



[You're reading an excerpt. Click here to read official TRANSCEND MP330 user guide](http://yourpdfguides.com/dref/3700697)
<http://yourpdfguides.com/dref/3700697>

4. Press the button once more to stop the A-B repeat function.

13 Hold When the switch is enabled, all of the MP330s buttons will be disabled, and cannot accidentally be pressed while in your pocket. Reset If the MP330 is not functioning properly, you can reboot by pressing RESET for 3 to 5 seconds. 14 MUSIC Mode Before buying DRM (Digital Rights Management) protected music online, please be advised that the MP330 only supports WMA-DRM10 file protection. Playing Audio Files 1. Press and hold the button to power ON the unit. The Main Menu will appear. button to enter the Main Menu. . The player will If the MP330 is already on, press the 2. Use the and buttons to select "MUSIC" and press automatically find available music files.

3. Select the song you want to listen to with the and buttons or use the File Navigator. 4. Press to begin listening to a music file. Please see the Specifications section for a list of all music file formats the MP330 supports.

If the music player cannot find any compatible files, a "No Music Files" message will be displayed. File Navigator The File Navigator is a fast and convenient way of moving between tracks, files and folders. 1. In the MUSIC mode, press and hold the . button, then highlight File Navigator and press Hold 2.

A list of available files or folders will be shown. 3. Use the / buttons to move up and down the list of files. 4. Highlight the file you want to play and press 5. To enter a folder or subfolder, highlight it and press either 6. To exit a folder, press or select the icon and press or . to move up one folder level. Deleting Music Files 1. In the MUSIC mode, press and hold to enter the File Navigator.

15 2. Navigate to the file you want to delete with the 3. With the file highlighted, press the / and / buttons. button and select "Delete." A confirmation will appear. Click 4. Use the button to highlight "yes" and press to permanently delete the file. Playlists For quick and easy playback of your favorite songs, the MP330 supports M3U, PLA, and WPL playlist formats, and also includes its own user-editable playlist (My Playlist). 1. In the MUSIC mode, press and hold the button, then highlight "Playlists" and press .

2. Select either "My Playlist" or an imported playlist file (if available) and press . 3. Use the played. / buttons to move up and down the list of available songs. Press or to play the highlighted song. When the song ends, the rest of the files in the playlist will then be 4. To exit playlist playback, simply select a new music file from the File Navigator. Adding a Song to My Playlist 1. In the MUSIC mode, press and hold , then highlight File Navigator and press .

2. Use the / and / buttons to navigate to the song you want to add. 3. With the file highlighted, press the button and select "Add to My Playlist." Removing a Song from My Playlist 1. In the MUSIC mode, press and hold , then highlight Playlists and press 16 . 1. Select "My Playlist" and press . 2. Use the / buttons to find the song you want to remove.

button and select "Remove from My Playlist." 3. With the file highlighted, press the 4. Use the / buttons to highlight "Yes" and press to remove the file from My Playlist, or select "No" to go back without altering the Playlist. (note: this will only remove the selected song from the current playlist, and will not actually delete the file from the internal memory). 5. To remove all songs, highlight "My Playlist" and press the confirm. button, then select "Yes" to 17

RADIO Mode Listening to the Radio 1. Plug in the earphones 2. Press the 3.

Use the / . (Earphones must be plugged-in to listen to the Radio) button to enter the Main Menu. buttons to select the "RADIO" and press . 4. The current FM radio frequency will be displayed.

The first time you use the Radio, the MP330 will automatically scan all frequencies and save the 20 strongest stations as channel presets (CH). To rescan, select "FM Reset" in the SETTINGS menu. Selecting a Radio Station To manually select a radio station, press / (the FM frequency will increase or decrease in 0.1MHz increments) until you reach the desired station. Alternatively, you can press and hold or to auto-scan for the next available station.

Saving a Radio Station The MP330 lets you save your 20 favorite radio stations (CH 01 to CH 20). To save a station: 1. Use or to select the radio station (FM frequency) that you want to save. 2. Press (dont hold) the button to display the preset channel selector. 3. Use the / buttons to select a channel number (CH 01 ~ CH 20) to save the station to. 4. Press (dont hold) again to save the current station to that channel number. 18 Recalling a Saved Station 1.

In the RADIO mode press (dont hold) to display your saved stations (CH 01 to CH 20). 2. Use the / buttons to select a channel number and press to listen to it. Recording the Radio 1. Select a radio station that you want to record. 2. 3. Press and hold the button for 2 seconds to begin recording the station. An automatically generated file name for your recording will appear. 4.

Press to pause the recording, and press again to resume. 5. Press and hold again to finish the recording and return to the RADIO mode. FM Recordings are named and numbered in this format: "MonthDayF###.WAV" Ex: " 0101F012.

WAV " would be the twelfth FM recording made on January 1 st FM recording are saved in the / FMIN.DIR folder. Use the File Navigator in MUSIC mode to locate and play back recordings To adjust the FM recording sample rate, please see "Settings / REC Settings / Record Quality" 19 RECORD Mode There are two ways to use the players record functions: Press the button to open the Main Menu and select RECORD. Press and hold the button for 2 seconds in any mode. Hold The MP330 supports three different types of recording: Voice Recording Line-in Recording FM Radio Recording All recordings can be accessed by using the File Navigator in MUSIC mode Voice Recording 1.

Press and hold the button for 2 seconds in any mode (except Radio) or select RECORD from the Main Menu to activate the MP330s built-in microphone and begin voice recording. 2. An automatically generated file name for your recording will appear on the screen. 3. Press to pause the recording, and press again to resume. 4. Press and hold the Main Menu. button again to finish the recording. The player will return to the Voice recordings are named and numbered in this format: "MonthDayM###.WAV" Ex: " 0113M012.

WAV " would be the twelfth Voice recording made on January 13th Voice recording are saved in the / MICIN.DIR folder.



[You're reading an excerpt. Click here to read official TRANSCEND MP330 user guide](http://yourpdfguides.com/dref/3700697)

<http://yourpdfguides.com/dref/3700697>

Use the File Navigator in MUSIC mode to locate and play back recordings To adjust the recording sample rate, please see "Settings / REC Settings / Record Quality" 20 For best results, try to position the MP330's Microphone as close as possible to the source of the sound or voice you are recording. Line-in Recording The MP330s default record source is its built-in microphone. To enable Line-in recording, please see "Settings / REC Settings / Record Source" 1. Press and hold the button for 2 seconds in any mode (except Radio) or select RECORD from the Main Menu to activate the MP330s Line-In recording. 2. An automatically generated file name for your recording will appear on the screen. 3. Press to pause the recording, and press again to resume. 4. Press and hold the Main Menu. button again to finish the recording. The player will return to the Line-In Recordings are named and numbered in this format: "MonthDayL###.WAV" Ex: " 0113L012.

WAV " would be the twelfth Line-In recording made on January 13th Line-In recordings are saved in the /LINEIN.DIR folder. Use the File Navigator in MUSIC mode to locate and play back recordings To adjust the recording sample rate, please see "Settings / REC Settings / Record Quality" FM Radio Recording Please see the "Recording the Radio" section in the RADIO mode for detailed instructions. 21 Settings 1. Press the 2. Use the button to enter the Main Menu. or buttons to select "SETTINGS" and press . 3. To exit the SETTINGS menu, press the button. Equalizer (EQ) Mode There are seven equalizer modes to choose from: Normal, 1. Use the / Pop, Rock, Classical, Jazz, . Bass, and User EQ buttons to select "EQ" and press 2. Use the / buttons to select an equalizer mode. If music is playing, you will instantly hear the difference between each mode through the earphones. 3.

Press to confirm the new EQ setting. User EQ Customization The User EQ allows you to customize the 5-band equalizer to your personal preference. 1. Use / buttons to select "EQ" and press . 2. In the EQ menu, use / to select "User EQ" and press . 3. @@@@Use / to select "Repeat" and press . 2. @@@@1. Use / to select "Play Speed" and press . 2. @@1. In the REC Settings menu, use the . / buttons to select "Record Source" and press 2. @@@@1. In the REC Settings menu, use the . / to select the "Record Quality" and press 2. @@@@1. @@@@1. @@@@1. Use / to select "Contrast" and press . 2. Use level. / to increase or decrease contrast. @@Blank Clock 1. @@Use / to select a Screen Saver delay and press . @@@@1. @@@@1. @@@@1. Use / to select "Lyrics Sync" and press . 2. Use / to switch between "Enable" or "Disable" and press . If lyrics are disabled, the album, artist, and song title information will be displayed during music playback.

Sleep Timer This function sets a time delay to automatically power-off the MP330, regardless of playback status. 1. Use / to select "Sleep Timer" and press . 2. Use off. / to select a Sleep delay time and press . You can choose from "Disable", "15 min", "30 min", or "60 min". When the selected time is reached, the MP330 will automatically power Auto Power Off This function sets a time delay to automatically power-off the MP330 after a certain period of time with no user input. 1. Use / to select "Auto Power Off" and press . 2. Use / to select a Power Off delay time and press . You can choose from "Disable", "15 min", "30 min", or "60 min". When the selected time is reached, the MP330 will automatically power off Date / Time Settings This option lets you adjust the local date and time. 1. Use / to select "Date/Time Settings" and press . 26 2. Use AM/PM. / to move between 12/24Hr, Year, Month, Day, Hour, Minute, Second, and 3. Adjust the values of each field with the / buttons. 4. Press to confirm your new time settings. in the Main Menu. Tip: You can view a full-screen version of the player's internal clock by pressing FM Band The MP330 allows (76.0MHz~90.0MHz). 1. Use / you choose World FM Band (87.5MHz~108.0MHz) .

or Japan FM Band to select "FM Band" and press 2. Use confirm. / to select "World FM Band" or "Japan FM Band," then Press to FM Reset This function resets all saved Radio stations (CH 01 to CH 20). If you use this feature, the next time you enter the RADIO mode, the MP330 will automatically re-scan and save the 20 strongest stations. 1. Use / to select the "FM Reset" and press . 2. Use confirm. / to select "Yes" to reset your FM stations or "No" to keep them. Press to Language Sets the MP330s display language, including menus, song/album titles, artist names, and lyrics.

The player supports 14 User languages. 27 1. Use / to select the "Language" and press . 2. Select your language with the / buttons and press to confirm. Music Transfer Protocol (MTP) If you own WMA-DRM10 music files or if you want to use Windows Media Player (version 10 or higher) to synchronize music between your computer and the MP330, the Music Transfer Protocol (MTP) must be enabled. This setting lets you switch between MTP or USB transfer modes. USB MTP Use this mode for normal transfer of all other files or if using Mac® or Linux® Use this mode for transferring DRM10 protected WMA music files with Windows Media Player 1. Use / to select the "MTP" and press . 2. Use / to switch between "MTP" or "USB" and press . Note: In MTP transfer mode, all files will be stored in the "MTPMEDIA" folder. Player Info Displays the MP330s firmware version and available memory capacity. 1. Use / to select "Player Info" and press . 2. Press any button to return to SETTINGS menu. 28 Driver Installation Driver Installation for Windows® 2000, XP and Vista No drivers are required. These Windows® Operating Systems have built-in drivers to support the MP330. Plug your MP330 into an available USB port and Windows® will install the necessary files.

A "Removable Disk" drive with a newly assigned drive letter will appear in the My Computer window. Driver Installation for Mac® OS 10.0 or Later No drivers are required. Plug your MP330 into an available USB port and your computer will automatically detect it. Driver Installation for Linux® Kernel 2.4 or Later No drivers are required. Plug your MP330 into a USB port and mount it. 1. Create a directory for the MP330. Example: mkdir /mnt/MP330 2. Mount the MP330. Example: mount a t msdos /dev/sda1/mnt/MP330 NEVER format your MP330 in Windows.



[You're reading an excerpt. Click here to read official TRANSCEND MP330 user guide](http://yourpdfguides.com/dref/3700697)
<http://yourpdfguides.com/dref/3700697>

29 *Connecting to a Computer* If you are using Windows Media Player 10 and want to play WMA-DRM10 music files, you must set the MP330's Music Transfer Mode to MTP to transfer and synchronize music files between the computer and your MP330. *Transferring Files to the MP330* If you want to use your MP330 to listen to music other than the Radio, you must transfer music files to the player. When the MP330 is connected to a computer it is locked into transferring files.

You will not be able to play or record any music at this time. Please disconnect your MP330 from the computer when you want to use the player. NEVER plug the MP330 into a USB hub or an external USB port located on a keyboard, monitor or other peripheral. This may cause damage to your MP330. When connecting to a computer, Please plug the MP330 directly into your computer's built-in USB port.

1. Remove the MP330's cap and plug its USB connector directly into an available USB port on your desktop or notebook computer. While the MP330 is connected to a computer, it can only be used for transferring files. The MP330's rechargeable Li-ion battery will begin charging. 2. When connected to a computer the MP330's screen will display a "CONNECTED" message, indicating that files can be loaded onto the player. You cannot play or record music when the MP330 is connected to a computer. 3. If you are using Windows®, a new Removable Disk drive with a newly assigned drive letter representing the MP330 will appear in the My Computer window. 30 *Note: "(F:)" is an example drive letter your "My Computer" window may differ 4.

To transfer MP3, FLAC, and non-protected WMA music files to the MP330, the USB Connection Type in the "Settings / MTP" menu must be set to "USB." With this connection type, you can transfer files by simply dragging them onto the MP330's Removable Disk drive letter. You can also create your own folders within the MP330 and copy files directly to the folders. 5. To transfer WMA-DRM10 music files to the MP330, please set the player's USB Connection Type in the "Settings / MTP" menu to "MTP (for DRM)." In MTP mode, please use Windows Media Player 10 to transfer and synchronize WMA-DRM10 music files with the MP330. 6. Always disconnect the MP330 from a computer by selecting the "Safely Remove Hardware" icon in the Windows® System Tray at the bottom of the computer screen. While files are being transferred from a computer to the MP330, the screen will display a "WRITING..

." message. After files have been successfully transferred, the "CONNECTED" message will be displayed again. When you copy files or folders from the MP330 to your computer, the player will display a "READING..

." message indicating that files are being transferred to the computer. After files have been successfully transferred, the "CONNECTED" message will be displayed again. NEVER unplug the MP330 during file transfer. Unplug the MP330 only when Windows informs it is safe to do so.

31 *Disconnecting from a Computer* Always follow the procedures listed below before you disconnect the MP330. *Disconnecting the MP330 in Windows 2000, XP and Vista* 1. Select the Hardware icon in the system tray. 2. The Safely Remove Hardware pop-up window will appear. Select it to continue. 3. A message window will appear stating: "The USB Mass Storage Device device can now be safely removed from the system." 4. Unplug the MP330 from your computer.

Disconnecting the MP330 in Mac OS 10.0 or Later 1. Drag the Disk icon that corresponds to your MP330 into the trashcan. 2. Unplug your MP330 from the USB port *Disconnecting the MP330 in Linux Kernel 2.4 or Later* 1. Execute `umount /mnt/MP330` to un-mount the device. 2. Unplug your MP330 from the USB port. 32 *Troubleshooting* If a problem occurs with your MP330, please first check the information listed below before taking your MP330 for repair. If you are unable to remedy a problem from the following hints, please consult your dealer, service center, or local Transcend branch office. We also have FAQ and Support services on our website. *Operating system cannot detect the MP330* Check the following: Is your MP330 properly connected to the USB port? If not, unplug it and plug it in again. Is your MP330 connected to the Mac keyboard? If so, unplug it and plug it into an available USB port on your Mac computer. Is the USB port enabled? If not, refer to the users manual of your computer (or motherboard) to enable it.

The MP330 will not Power ON Check the following: Is the MP330 connected to your computer? If so, unplug it. Is the switch engaged? (). If it is, switch it to the off position (). Is the battery out of power? If so, please recharge the player. Cannot transfer files to the MP330 Unplug the MP330 from your computer, wait a moment, and plug it back in.

If this does not work, use a paperclip or pencil tip to hold down the "Reset" button for 3 to 5 seconds. *Buttons aren't working* Is the Hold switch enabled ()? If so, set it to the off position (). *Cannot hear audio playback* Have you transferred any music files to the MP330? If not, then you must first do so. (Only Mpeg I Layer 3 and WMA files compressed at a rate of 32Kbps, WAV, and FLAC files are supported.) Are the earphones properly connected to the earphones jack? If not, reconnect them. Is the volume loud enough? If not, increase the volume level until the music can be heard. *Song/album/artist name is not displayed correctly on the screen* The default language of the MP330 is English. Please change the player's Language setting to the appropriate language for the content you are trying to display. EX: if your player's language is set to English and you want to display Japanese characters, you must first select "Japanese" in the Settings / Language menu to display the Japanese text correctly. ID3 tag information has display priority on the screen of the MP330.

You can modify the ID3 tag by using Windows Media Player or Winamp. If the ID3 tag is empty, just the file name will be displayed on the screen. 33 *Cannot RECORD voice, Line-In, or the FM radio* To make sure recorded files do not get lost, two safety mechanisms are built into the MP330: If remaining battery capacity is less than 10%, you cannot enter the RECORD Mode. While recording, if the remaining battery capacity goes below 10% the MP330 will automatically stop and save the recording. *Track playback sounds intermittent* Unplug the earphones and plug them back in again to make sure they are securely connected. MP330 powers off automatically The MP330 features SLEEP Mode and Auto Power Off functions, which are power-saving features. You can preset your MP330 to power-off automatically. Please refer to the SETTINGS section for more information. *MP330 just isn't working properly* If your MP330 ever stops working properly, or locks up, try powering it on and off a few times, if this does not correct the problem you can Reset the MP330 by using a paperclip or pencil tip to hold down the "Reset" button for 3 to 5 seconds.



[You're reading an excerpt. Click here to read official TRANSCEND MP330 user guide](http://yourpdfguides.com/dref/3700697)

<http://yourpdfguides.com/dref/3700697>

Cannot find the file that was just copied to the MP330 Re-copy the file and refer to the "Disconnecting from a Computer" section to remove the MP330 after the copy process is completed.

A File that was just deleted still appears Re-delete the file and refer to the "Disconnecting from a Computer" section to remove the MP330 after the delete process is completed. MP330 does not operate after formatting in Windows® Formatting the MP330 using the "Quick Format," or "Full Format" option in Windows® erases the default system information that the MP330 requires to operate. To re-install the system information, please visit <http://www.transcend.com>.

tw/ and download a Firmware Update for your MP330. How do I find out what Windows Media Player version I am using? Open your Windows Media Player program. Click on the "Help" menu and select the "About Windows Media Player" option. The version of your Windows Media Player will be displayed on the computer screen. Cannot listen to DRM music on my MP330? The MP330 only supports WMA-DRM10 music files, is this the file type you are using? You must use Windows Media Player 10 to transfer and synchronize your WMA-DRM10 music files with the MP330s MTPMEDIA Folder. Lyrics Sync: Why can't I see the words of the song I am listening to? 3. For detailed Lyrics Sync instructions, please see the FAQ section on our website at: <http://www.transcend.com.tw/Support/FAQ> An "Insufficient Power" message is displayed on the screen 34 If your MP330 displays an "Insufficient Power" message, this means the device supplying USB power to your digital music player is not outputting stable or adequate voltage to charge the players internal battery (usually a result of a USB hub or extension cable used. This message does not indicate a problem with the music player. Plug the MP330 directly into your computers USB port or a Transcend USB Power Adapter to properly charge its internal battery. Specifications Size (L x W x H): Weight: Music Formats: Recording Format: Estimated Battery Life: Compression Rates: Data Retention: Erase Cycles: Signal-to-Noise Ratio: Certificates: Warranty: 83 mm x 25.5 mm x 11.5 mm 25g MP3, WMA, WMA-DRM10, FLAC and WAV IMA_ADPCM (WAV) 12 hours (fully charged battery) 32Kbps to 320Kbps Up to 10 years 100,000 times 90dB CE, FCC, BSMI, C-tick 2-years Ordering Information Device Description MP330 Digital Music Player MP330 Digital Music Player MP330 Digital Music Player Memory Size 2GB 4GB 8GB Transcend P/N TS2GMP330 TS4GMP330 TS8GMP330 35 Recycling & Environmental Considerations Recycling the Product (WEEE): Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC: Never dispose of your product with other household waste. @@@@ For products with non-exchangeable built in batteries: The removal of (or the attempt to remove) the battery invalidates the warranty. This procedure is only to be performed at the end of the products life. 36 Transcend Limited Warranty "Above and Beyond" is the standard we set ourselves for customer service at Transcend. We consistently position ourselves to be significantly above the industry norm, which is all part of our commitment to Customer Satisfaction. All Transcend information, Inc. (Transcend) products are warranted and tested to be free from defects in material and workmanship and to conform to the published specifications. During the warranty period should your Transcend MP330 fail under normal use in the recommended environment due to improper workmanship or materials, Transcend will repair the product or replace it with a comparable one. This warranty is subject to the conditions and limitations set forth herein. Duration of Warranty: The Transcend MP330 is covered by this warranty for a period of two (2) years from the date of purchase.

Proof of purchase including the date of purchase is required for warranty service. Transcend will inspect the product and decide whether to repair or replace it. Transcend reserves the right to provide a functional equivalent or refurbished replacement product. Limitations: This warranty does not apply to product failure caused by accidents, abuse, mishandling, improper installation, alteration, acts of nature, improper usage, or problems with electrical power. In addition, opening or tampering with the product casing, or any physical damage, abuse or alteration to the products surface, including all warranty or quality stickers, product serial or electronic numbers will also void the product warranty.

Transcend is not responsible for recovering any data lost due to the failure of a flash memory device. Transcend's MP330 must be used with devices that conform to the recommended industry standards. Transcend will not be liable for damages resulting from a third party device that causes the Transcend MP330 to fail. Transcend shall in no event be liable for any consequential, indirect, or incidental damages, lost profits, lost business investments, lost goodwill, or interference with business relationships as a result of lost data. Transcend is also not responsible for damage or failure of any third party equipment, even if Transcend has been advised of the possibility.

This limitation does not apply to the extent that it is illegal or unenforceable under applicable law. Disclaimer: The foregoing limited warranty is exclusive. There are no other warranties, including any implied warranty of merchantability or fitness for a particular purpose. This warranty is not affected in any part by Transcend providing technical support or advice. Online Registration: To expedite the warranty service, please register your Transcend Product within 30 days of purchase. Register online at <http://www.transcend.com.tw/productregister> Transcend Information, Inc. <http://www>.

www.transcend.com.tw/ *The Transcend logo is a registered trademark of Transcend Information, Inc. *The specifications mentioned above are subject to change without notice. *All logos and marks are trademarks of their respective companies. 37.



[You're reading an excerpt. Click here to read official TRANSCEND MP330 user guide](http://yourpdfguides.com/dref/3700697)
<http://yourpdfguides.com/dref/3700697>