



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRANSCEND MP850. You'll find the answers to all your questions on the TRANSCEND MP850 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRANSCEND MP850
User guide TRANSCEND MP850
Operating instructions TRANSCEND MP850
Instructions for use TRANSCEND MP850
Instruction manual TRANSCEND MP850

MP850

User's Manual



 **Transcend**

1



[You're reading an excerpt. Click here to read official TRANSCEND MP850 user guide](http://yourpdfguides.com/dref/3700722)

<http://yourpdfguides.com/dref/3700722>

Manual abstract:

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

7 General Use

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

....7 Backing Up Data .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.7 Caution: Risk of Deafness

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
..23 PHOTO Mode..

.....
.....

.....
.....
.....

.....
.....
.....

..... *24 Displaying JPG and BMP Photos*

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... *24 E-book Mode*

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... *25 Reading E-books and Text files*

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....
.....25 Settings

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 26 The Settings Menu...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....26 Equalizer (EQ) Mode.
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....26 User EQ Customization..

.....
.....
.....

.....
.....
.....
.....

.....

.....
.....
.....
.....
.....
.....
.....
..26 Repeat Mode

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

...27 Play Speed

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....28 Record Quality ...

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....29 VAD (Voice Activity Detection)

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....30 Sleep Timer ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

31 Screen Saver

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.31 Slideshow Interval

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

...32 Lyrics Sync

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....33 Date/Time Settings

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..33 Time Zone ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....
.....
....38 Connecting to a Computer .

.....
.....

.....
.....
.....
.....

.....
.....

39 Transferring Files to the MP850

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

39 Disconnecting from a Computer

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
....41 Removing the MP850 in Windows Me, 2000, XP and Vista .

.....
.....

.....
.....
.....
.....

.....
. 41 Removing the MP850 in Mac OS 10.0 or Later ...

.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 41 Removing the MP850 in Linux Kernel 2.4 or Later..

.....
.....
.....
.....
.....
.....
.....
.....

..... 41 Included Software .

.....
.....
.....
.....
.....
.....
.....
.....

... 42 Software System Requirements

.....
.....
.....
.....
.....
.....
.....
.....

...42 Installing the MP850 Software

.....
.....
.....
.....
.....
.....
.....
.....

.....42 Transcend MTV Converter ...

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
.....

.....43 *Slide Show Maker*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....45 *Transcend Digital Music Player Utility*.

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

....47 *PC-Lock* .

.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 48 *Partition*.....

.....
.....
.....

.....
.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 49 Log In / Log Out

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 50 Password

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

51 Forgotten Passwords

.....
.....

.....
.....
.....

.....
.....
.....
.....
.....
.....
.....
.....

..... 52 Troubleshooting

.....
.....
.....
.....
.....
.....

... 53 Specifications

.....
.....
.....
.....
.....
.....
.....

.... 56 Ordering Information .

.....
.....
.....
.....
.....
.....
.....

.... 56 Recycling & Environmental Considerations

.....
.....
.....

..... 57 Transcend Limited Warranty ...

.....
.....
.....
.....

..... 58 4 Introduction Thank you for purchasing Transcends MP850, an advanced MP3 Player that can play music and display videos and photos. The MP850 combines all the advantages of a great sounding portable MP3 player with the benefits of a USB flash drive, and includes many extra features such as a Recordable FM Radio, advanced digital voice recording karaoke-style lyrics display, A-B repeat functions and variable track playback speeds. Your MP850

can also be used to read E-books and supports High-speed USB 2.0 for faster uploading and downloading of files when connected to a computer. The A-B repeat and variable track playback speed features allows you to continuously replay specific sections of an audio file at slower or faster speeds ideal for learning foreign languages and reviewing an important part of a song or recording.

In addition, you can make personal memos and record meetings or class locations are compatible with the original set. Reminders Make sure the switch is not enabled before turning on the player. Never use the "Quick Format" or "Full Format" functions in Windows® to format your MP850. Follow the procedures in the "Disconnecting from a Computer" section to properly remove your MP850 from a computer. Transcend occasionally releases firmware updates for certain product, RECORD, VIDEO, PHOTO, or E-book mode, press and hold 2. Navigate to the file you want to delete with the 3. With the file highlighted, press the 4. Use the button to highlight "Yes" and press / and / to enter the File Navigator. buttons. button.

A "Delete? Yes / No" message will appear. to permanently delete the file. Voice Recording 1. Press and hold the button for 2 seconds in any mode (except Radio) to activate the MP850s built-in microphone and begin voice recording. 2.

Press to pause the recording, and press again to resume. 3. Press and hold for 2 seconds again to finish the recording. 4. Recordings can be found in the RECORD mode.

13 Repeat / Shuffle Functions Please see the "REPEAT Mode" in the Settings section for detailed instructions. A-B Repeat 1. During playback In the MUSIC or RECORD modes, press want to repeat. once to mark the beginning of the section you 2. Press again to mark the end of the section you want to repeat. The marked section of the song will playback in a continuous loop 3. Press the button once more to stop the A-B repeat function. Hold When the switch enabled, all of the MP850s buttons will be disabled, and cannot accidentally be pressed while in your pocket. Reset If the MP850 is not functioning properly, you can reboot by pressing for 3 to 5 seconds. 14 MUSIC Mode Before buying DRM (Digital Rights Management) protected music online, please be advised that the MP850 only supports WMA-DRM10 file protection.

Play MP3, WMA and WMA-DRM10 Music 1. Press and hold to power ON the unit. The Main Menu will appear. button to enter the Main Menu. If the MP850 is already on, press the 2. Use the and available music files. 4. Press buttons to select "Music" mode and press and . The player will automatically find 3. Select the song you want to listen to with the to begin listening to a music file.

buttons, or use the File Navigator. MP850 supports Mpeg I Layer 3 and WMA files compressed at between 32Kbps 320Kbps. If MP850 cannot find any MP3, WMA, or DRM10 files, a "No Files" message will be displayed. 15 Playlists For quick and easy playback of your favorite songs, the MP850 supports, M3U, PLA, and WPL playlist formats, and also includes a built-in user editable playlist (My Playlist). 1.

In the MUSIC mode, press and hold the button, then highlight Playlists and press . 2. Select either "My Playlist" or an imported playlist file (if available) and press . 3. Use the and buttons to move up and down the list of available songs.

Press or highlighted song. When the song ends, the rest of the files in the playlist will then be played. to play the 4. To exit playlist playback, simply select a new music file from the File Navigator. Adding a Song to My Playlist 1. In the MUSIC mode, press and hold , then highlight File Navigator and press . 16 2.

Use the / and / buttons to navigate to the song you want to add. 3. With the file highlighted, press the button and select "Add to My Playlist.

" Removing a Song from My Playlist 1. In the MUSIC mode, press and hold , then highlight Playlists and press . 2. Select "My Playlist" and press . 17 3. Use the / buttons to find the song you want to remove. 4. With the file highlighted, press the appear. button and select "Remove from My Playlist." A confirmation will 5.

To remove all songs, highlight "My Playlist" and press the button, then select "Yes" to confirm. 18 RADIO Mode Listen to the Radio 1. Plug in the earphones 2. Press the 3. Use the .

(Earphones must be plugged-in to listen to the Radio) buttons to select "Radio" and press button to enter the Main Menu. and . 4. The current FM Radio frequency will be displayed. The first time you use the Radio, all the FM channels will be automatically scanned and the first 20 channels with a strong signal will be preset.

This feature also works if you activate the "FM Reset" function in the SETTINGS menu. Selecting a Radio Station To manually select a radio station, press or (the FM frequency will increase or decrease in 0.



[You're reading an excerpt. Click here to read official TRANSCEND](http://yourpdfguides.com/dref/3700722)

[MP850 user guide](http://yourpdfguides.com/dref/3700722)

<http://yourpdfguides.com/dref/3700722>

IMHz increments) until you reach the desired station. Alternatively, you can press and hold either or to auto-scan for the next available station. 19 Adjusting the Volume 1. Press once or press and hold or until you reach the desired volume level. Saving a Radio Station The MP850 lets you save (preset) your 20 favorite radio stations (CH01 to CH20). To save a station: 1. Use 2. Press the or to select the radio station (FM frequency) that you want to save.

button to bring up the saved channel list. 3. Use the and buttons to select your desired channel number, and press current radio station to that channel. again to save the Recalling a Saved Station 1. In the RADIO mode press to display your saved stations (CH01 to CH20). 2. Use the 3. Press and buttons to select a channel number. to listen to the selected channel. Recording the Radio 1.

Select a radio station that you want to record. 2. Press and hold the button for 2 seconds to begin recording the station. 3. An automatically generated file name for your recording will appear at the top of the screen.

20 FM Recordings are named and numbered in this format: "MonthDayF###.WAV" Ex: " 0123F012.WAV " would be the twelfth FM recording made on January 23 rd 4. Press to pause the recording, and press again to resume. 5.

When finished, press and hold again to save the recording and return to the RADIO mode. FM recordings are saved in the /FMIN.DIR/ folder FM recordings can be accessed by using the File Navigator in RECORD mode To adjust the recording sample rate, please see the "Record Settings" section of this manual.

21 RECORD Mode The MP850 can record from 2 different sources: FM Radio or the built-in microphone. The RECORD mode is for creating voice recordings and playing back both FM and voice recordings. To record from the FM Radio, please see the previous section on "Recording the Radio." Making Voice Recordings With the Built-In Microphone 1. Press and hold the button for 2 seconds in any mode (except Radio) to activate the MP850's built-in microphone and begin voice recording. 2. An automatically generated file name for your recording will appear at the top of the screen.

Voice recordings are named and numbered in this format: "MonthDayM###.WAV" Ex: 1216M003.WAV represents the third voice recording made on December 16th 3. Press to pause the recording, and press again to resume. 4. When finished, press and hold again to save the recording and return to the RADIO mode. Voice recordings are saved in the /MICIN.DIR/ folder Voice recordings can be accessed by using the File Navigator in RECORD mode To adjust the recording sample rate, please see the "Record Settings" section of this manual. For best results, try to position the MP850's Microphone as close as possible to the source of the sound or voice you are recording. Playing Voice or FM Recordings 1.

Press 2. Use the to bring up the Main Menu. or buttons to select "Record" and press . 3. All voice and FM radio recordings can be found in the RECORD mode.

Use the find your desired recording and press to listen to it. or buttons to 22 VIDEO Mode Video files must be converted to .MTV format before they can be played on the MP850 Playing MTV Files 1. Press the 2. Use the button to enter the Main Menu.

and buttons to select "Video" and press . 3. The File Navigator will open, and a list of available .MTV files will be shown. 4. Use the / and / buttons to navigate to the video you want to play and press . 5. Press to pause the video, and press again to resume. In order to maximize the screen's resolution, video playback is displayed horizontally. The // directional controls will be adjusted to function horizontally.

to go to the next available video, and press . To rewind, press and hold and . to go back. 6. During video playback press 7. To fast forward, press hold 8. To adjust the volume, press MP850 only supports ".mtv" video files. You must use the "Transcend MTV Converter" Software to convert ".MPEG4," ".

DivX," ".AVI" and ".xVID" video files to the ".mtv" format. 23 PHOTO Mode To display photos on your MP850 you must first transfer a .

JPG or .BMP to the player. Displaying JPG and BMP Photos 1. Press the 2. Use the button to enter the Main Menu.

and buttons to select "photo" and press . 3. The File Navigator will open, and a list of available .JPG and .BMP files will be shown. 4. Use the / and / buttons to navigate to the photo you want to view and press to go to the next available photo, and press to go back. . 5. While viewing a photo, press MP850 only supports ".

jpg" and ".bmp" photo files. 24 E-book Mode To read E-books on your MP850, you must first transfer .TXT files to the player Reading E-books and Text files 1. Press the 2. Use the button to enter the Main Menu. and buttons to select "E-book" and press . 3. The File Navigator will open, and a list of available .TXT files will be shown.

4. Use the / and / buttons to navigate to the file or E-book you want to read and press . 5. Press to go to the next page. Press to go back one page.

MP850 only supports ".txt" format text files. 25 Settings The Settings Menu 1. Press the 2. Use the button to enter the Main Menu.

and buttons to select "Settings" and press or . . 3. To exit the SETTINGS menu, press Equalizer (EQ) Mode There are several EQUALIZER Modes to choose from: Normal, Pop, Rock, Classical, Jazz, Bass, User EQ. 1. In the SETTINGS menu, Use the and buttons to select "EQ" and press . 2. Use the and buttons to select an equalizer mode. If music is playing, you will instantly hear the difference between each mode through the earphones. 3.

Press to confirm the new EQ setting and return to the SETTINGS menu. User EQ Customization The User EQ allows you to customize the 5-band equalizer to your personal preference. 26 1. In the SETTINGS menu, Use the 2. Highlight "User EQ" and press . and buttons to select "EQ" and press . 3. Use the and buttons to switch between 5 bands: 80Hz, 250Hz, 1KHz, 4KHz, and 12KHz. The "ALL" setting move all 5 bands up or down together. 4.

Press or to increase or decrease levels in 1.0dB steps (Adjustment range: +8dB to -7dB) 2. Press to save the new User EQ settings and return to the SETTINGS Menu. Repeat Mode There are seven Repeat modes to choose from: Normal Repeat One Repeat All Shuffle (plays all music files available one time, in consecutive order) (continuously repeats the current song) (continuously repeats playback of all music files available, in consecutive order) (continuously repeats playback of all music files available, in random order) Normal in Folder (plays all music files in a folder one time, in consecutive order) Repeat in Folder (continuously repeats playback of all music files in a folder, in consecutive order) Shuffle in Folder (plays all music files in a folder, in random order) 1.



[You're reading an excerpt. Click here to read official TRANSCEND MP850 user guide](http://yourpdfguides.com/dref/3700722)

<http://yourpdfguides.com/dref/3700722>

In the **SETTINGS** menu, Use the and buttons to select "Repeat" and press .

27 2. Use the and buttons to select a repeat mode and press to confirm. Play Speed The speed at which an audio file is played can be increased or decreased. Playback speeds can be set to: 0.67X (very slow), 0.

80X (slow), 1.00X (normal), 1.14X (fast), 1.33X (very fast). 1. In the **SETTINGS** menu, Use the and buttons to select "Play Speed" and press . 2. Use the and buttons to select one of the five playback speeds and press Default is 1.0x (normal speed) to confirm. 28 Record Quality The quality of an audio recording can be set to Low (8,000Hz), Middle (16,000Hz), or High (32,000Hz).

Higher recording quality settings require more memory space to save the recorded WAV files. 1. In the **SETTINGS** menu, Use the and buttons to select "Record Quality" and press . 2. Use the and buttons to select Low, Middle, or High quality and press to confirm. 29 Maximum Record Time / Quality Table

Sample rate	Voice Recording	Low (8KHz)	Med (16KHz)	High (32KHz)	Channels	1 (mono)	1 (mono)	1 (mono)	4GB	256 hrs	128 hrs	64 hrs	8GB	512 hrs	256 hrs
128 hrs	Sample rate	FM Recording	Low (8KHz)	Med (16KHz)	High (32KHz)	Channels	2 (stereo)	2 (stereo)	2 (stereo)	4GB	128 hrs	64 hrs	32 hrs	8GB	256 hrs

hrs 128 hrs 64 hrs Note: The above recording times may not be possible if space is limited or the battery power is low. FM Radio recordings are recorded in Stereo. MIC recordings are recorded in Mono. For best voice recording results, try to position the MP850's microphone as close as possible to the source of the sound or voice you are recording. VAD (Voice Activity Detection) VAD allows the MP850 to make gapless audio recordings. This means that while making a voice recording, the player will only record when it detects voices. If the person(s) pauses or stops speaking, the MP850 will temporarily stop recording until the person(s) starts speaking again. This allows for more concise, easier to understand recordings and smaller recording files. 1. @@@@1.

@@Use and to select a Sleep Timer delay and press . @@@@@@In the **SETTINGS** menu, Use the 31 2. Use and to select a Screen Saver delay time and press . @@@@@@Please see the "Slide Show Maker" section in Software Setup for more information. 1.

In the **SETTINGS** menu, Use the and buttons to select "Slide Show Interval" and press . 2. Use and to select the speed that you want your pictures to be displayed and press Available interval times are.: "1 Sec", "3 Sec", "5 Sec", "10 Sec". 32 Lyrics Sync This function displays synchronized lyrics (if available) on the screen during music playback. Note: For Lyrics Sync to work, an ".LRC" file with the exact same file name as its corresponding .MP3 song must be transferred to the MP850. Ex: for the MP3 file "GM-Last_Christmas.

mp3", the LRC lyrics file must be named "GM-Last_Christmas.lrc" 1. In the **SETTINGS** menu, Use the and buttons to select "Lyrics Sync" and press . 2. Select "Enable" to use Lyrics Sync, or "Disable" to turn the function off. @@@1. @@@@Adjust the values of each field with the 4. @@@1. @@@(the Time Zone 2. @@@1.

@@@@@The player supports 13 User languages. 1. @@@@@@@1. @@@@@@@@1. @@@@@@@@1. @@@@@@@@Plug your MP850 into an available USB port and your computer will automatically detect it.

Figure 3: Mac Driver Installation Driver Installation for Linux Kernel 2.4, or Later No drivers are required. Plug your MP850 into a USB port and mount it. 1. Create a directory for the MP850.

Example: mkdir /mnt /MP850 2. Mount the MP850. Example: mount a t msdos /dev/sda1 /mnt /MP850 NEVER use Windows to format your MP850. 38 Connecting to a Computer Transferring Files to the MP850 If you want to use your MP850 to do more than listen to the radio, you must transfer MP3 / WMA / DRM10 music files, JPG / BMP pictures, MTV movies or TXT files to the MP850. You can also use the MP850 as a portable flash drive to transfer your important documents and other files. Note: If you are using a Windows computer and want to listen to WMA-DRM10 music, please find out which version of Windows Media Player is installed on your computer. For Windows Media Player 10, please see "Music Transfer Mode" 1. Plug the small end of the USB cable into the Mini USB port on the MP850 and plug the large end of the cable into an available USB port on your desktop or notebook computer. The internal Li-ion battery will begin charging. While the MP850 is connected to a computer, its audio and video functions will not be available.

Figure 4: Connecting to a Computer 2. When connected to a computer the MP850s screen will display a "READY" message, indicating that files can be loaded onto the player. If you are using Windows®, a new Removable Disk drive with a newly assigned drive letter representing the MP850 will appear in the "My Computer" window. 39 Figure 5: The MP850 Removable Disk in the My Computer Window *Note: (F:) is an example drive letter your "My Computer" window may differ 3. To transfer photos, videos, e-book text files, and standard-format MP3 and WMA music to the MP850, the MTP (Media Transfer Protocol) mode in the Settings menu must be set to "USB." In this mode, files can be transferred by simply dragging them onto the MP850s Removable Disk drive letter. You can also create your own folders within the MP850 and copy files directly to the folders. 4. To transfer WMA-DRM10 music files to the MP850, please set the players MTP (Media Transfer Protocol) mode in the Settings menu to "MTP." In MTP mode, please use Windows Media Player 10 to transfer and synchronize WMA-DRM10 music files with the MP850.

5. While files are being transferred to the MP850, the screen will display a "WRITE" message. After files have been successfully transferred, the "READY" message will be displayed again. 6. If you choose to transfer files or folders to the computer, the MP850 will display a "READ" message indicating that the files are being transferred to the computer.

After files have been successfully transferred, the "READY" message will be displayed again. 7. @@@@@@Select the Hardware icon on the system tray. 2. The Safely Remove Hardware pop-up window will appear.

Select it to continue. Figure 7: Safely Remove Hardware 3. @@@@@@@2. @@@Execute amount /mnt /MP850 to un-mount the device. 2. @@@@@@@2.

@@Select "Multimedia Converter" and follow the instructions that follow to install the MTV Converter and the Slideshow Maker, or click the "Utility" button to install extra functions for your MP850. 4. Choose your setup language and click the "OK" button to continue. 42 Figure 10: Select a language 5.

The "InstallShield Wizard" window will appear.



[You're reading an excerpt. Click here to read official TRANSCEND](http://yourpdfguides.com/dref/3700722)

[MP850 user guide](http://yourpdfguides.com/dref/3700722)

<http://yourpdfguides.com/dref/3700722>

Click the "Next" button to continue. The InstallShield Wizard will guide you through the installation process. Figure 11: Select a Software Program 6. When the Transcend Digital Music Player Utility is finished installing, click the "Finish" button to exit the wizard. 7. The Transcend Digital Music Player Utility, the MTV Converter, and the Slideshow Maker can all be found in: > Programs > Transcend > Transcend MTV Converter If you want to play videos on your MP850, you must first convert your video files to the ".mtv" file format using the Transcend MTV Converter. 1. Run the program (Start > Programs > Transcend > MP850 > MTV Converter) 43 Figure 12: MTV Converter main screen 2.

Click the triangle button next to "Video Input" 3. The Open Video Input File window will appear. Select the "MPEG4," "DivX," "AVI," or "xVID" video file that you want to convert to the ".mtv" format. Click the "Open" button to continue.

Figure 13: Select video files for conversion 4. Click the triangle button next to "Video Output" button to select a destination for the converted file. Figure 14: Select a Destination for the „.mtv file 5. Click "Start Conversion.

" 44 Figure 15: Start Conversion 6. When the process is finished, a "Conversion Complete" message window will appear. Click the "OK" button to return to the MTV Converter main window and convert another file. Figure 16: Conversion Complete 7. Click the "X" in the upper-right hand corner of the MTV Converter window to exit. 8. Transfer the newly created .MTV file to the MP850 (See Transferring Files to the MP850) The MP850 only supports ".MTV" video files. You must use the Transcend MTV Converter to convert your MPEG4, DivX, AVI, or xVID video files to the "

mtv" format. Slide Show Maker To view slideshows on your MP850, you must first create an ".SLS" slideshow using the Slide Show Maker. 1. Run the program (Start > Programs > Transcend > MP850 > Slide Show Maker) 2. Click the "Load Image" button. Figure 17: Slideshow Maker main screen 3. Select the ".JPG," ".BMP," or "

GIF" image files that you want to include in your slideshow and click "Open." 45 Figure 18: Select image files for conversion 4. Choose a slideshow transition effect from the drop-down menu underneath the Preview window. Available effects are "Circle," "Normal," "Shutter(Left to Right), and "Shutter(Right to Left)" 5. Click the "Preview" button to see a preview slideshow of your selected images.

6. Use the "Up" and "Down" buttons to change the display order of your images. 7. After you have loaded all images that you want to include in the slideshow, click the "Transform" button. Figure 19: Preview and Start Converting 8.

The Save As window will appear. Choose a name for your slideshow and click "Save." The slideshow will be saved in the MP850s "SLS" folder. If your MP850 is not connected, you can choose a different save location and transfer the file to your MP850 at a later time. The MP850 only supports one SLS slideshow at a time. To ensure the T.shoic finds your slideshow, remove all other .SLS files from the MP850's SLS folder except for your newly created .SLS file. 46 Figure 20: Select a Destination for the „,

sls file 9. After the slideshow is successfully created, a Transfer Complete message will appear. Click the "OK" button. Figure 21: Transfer Complete 10. Click the "X" in the upper-right hand corner of the Slide Show Maker window to exit. 11. Transfer the newly created .SLS file to the MP850 (See Transferring Files to the MP850) The MP850 will only display "sls" file format slideshows. You must use first the Slideshow Maker software to convert your ".JPG," ".BMP," or ".GIF" photo files to the ".SLS" format. Transcend Digital Music Player Utility The Transcend Digital Music Player Utility has four functions: PC-Lock Partition Login/out Password (Use the MP850 to temporarily lock your computer) (Divide your MP850s memory into Public and Private areas) (Log in to the Private area to access your personal files) (Change the password to the Private area on your MP850) Figure 22: Transcend Digital Music Player Utility Menu The Transcend Digital Music Player Utility is only supported in Windows® Me, 2000, XP and Vista The Transcend Digital Music Player Utility is not supported on MacTM, or LinuxTM Operating Systems To use the Transcend Digital Music Player Utility, you must log in to the Windows® OS with Administrator rights. 47 PC-Lock With PC-Lock, you can use your MP850 as a key to temporarily lock your computer while you are away.

1. Start the Transcend Digital Music Player Utility (Player Utility) -> Programs -> Transcend -> Digital Music 2. Click on the "PC-Lock" button in the Transcend Digital Music Player Utility window. Figure 23: Transcend Digital Music Player Utility PC-Lock 3. The PC-Lock Settings window will appear. Select the "Enable PC-Lock" checkbox. Figure 24: Enable PC-Lock 4. You can change the text displayed on the screen while the computer is locked in the "Screen Saver Message" field. 48 Figure 25: PC-Lock Screen Saver Text 5. You can adjust the period of time that your computer will be locked for by checking the "Enable Timer" box. Set the Unlock Timer in Hours and Minutes. When this time elapses, your computer will automatically unlock and be available for use. Figure 26: PC-Lock Timer 6. Click on the "OK" button to start PC-Lock. Figure 27: Start PC-Lock When PC-Lock is enabled, your computer will be locked when the MP850 is unplugged While your computer is locked, the screen will display the "Screen Saver Message" text.

7. To unlock the computer, you must reconnect your MP850 to your computer. The PC-Lock message text will disappear and you will be free to use your computer again. The computer will also unlock itself automatically when the lock timer expires. Partition This feature allows you to create a secure password-protected area on the MP850 for your personal files. You 49 can adjust the size of Public and Private areas, and add a password to protect the Private area.

Data stored in the Private area will be kept secure and can only be accessed with your password. WARNING! Creating a Private area or adjusting the Public/Private partition size will erase all data on MP850! Please back up your data before using this feature. 1. Connect the MP850 to your computer.

2. Start the Transcend Digital Music Player Utility (Player Utility) -> Programs -> Transcend -> Digital Music 3.



[You're reading an excerpt. Click here to read official TRANSCEND](http://yourpdfguides.com/dref/3700722)

[MP850 user guide](http://yourpdfguides.com/dref/3700722)

<http://yourpdfguides.com/dref/3700722>

Click on the "Partition" button in the Transcend Digital Music Player Utility window (or the Transcend Digital Music Player Utility icon in the Task Bar) Figure 28: Transcend Digital Music Player Utility Partition 4. The Partition window will appear. Move the slider left and right to adjust the size of the Public and Private areas on your MP850.

Figure 29: Create a Partition 5. Click the "Start" button to complete the Partition & Security setup. The process may take a few minutes. 6. You must unplug your MP850 when the process is finished.

Log In / Log Out This function lets you access the files stored on the Private partition of your MP850. If you do not log in, Your protected files will be invisible. 1. Connect the MP850 to your computer. 2. Start the Transcend Digital Music Player Utility (Player Utility) -> Programs -> Transcend -> Digital Music 3. Click on the "Login/Logout" button in the Transcend Digital Music Player Utility window. Figure 31: Transcend Digital Music Player Utility Login/out 4. The Login/out window will appear. Input your password and click "Login.

" 50 Figure 32: Enter your password 5. When successfully logged in, the "Public Area" message will change to "Private Area." The files in your Private Area will no longer be hidden and can be accessed normally. 6. When you are finished using the Private Area and no data is being transferred between the MP850 and the computer, click on the "Logout" button to switch back to the Public Area. Figure 33: Transcend Digital Music Player Utility Logout Password 1. 2.

Start the Transcend Digital Music Player Utility (Player Utility) -> Programs -> Transcend -> Digital Music Click on the "Password" button in the Transcend Digital Music Player Utility window. Figure 34: MP850Utility Password 51 3. The New Password window will appear. Input your current Password and New Password, then confirm the new password. Use the "New Hint" field to give yourself a hint in case you forget your new password. Figure 35: Change Password Forgotten Passwords If you forget your password, use the password hint to help you remember your password. If you are still unable to remember your password, you will have to use the Partition function to reset the Public and Private areas. THIS WILL ERASE ALL DATA ON THE MP850.

Although the data in the Private area will be lost, you can back up all data on the Public area before using the Partition function. 52 Troubleshooting If a problem occurs with your MP850, please first check the information listed below before taking your MP850 for repair. If you are unable to remedy a problem from the following hints, please consult your dealer, service center, or local Transcend branch office. We also have FAQ and Support services on our websites. Software CD does not auto-run in Windows® Go to the Device Manager in the Control Panel and enable the Auto-Insert function for the CD-ROM drive.

Alternatively, you can manually run the "MP850.EXE" file on the software CD. Operating system cannot detect the MP850 Check the following: Is your MP850 properly connected to the USB port? If not, unplug it and plug it in again. Is your MP850 connected to the Mac keyboard? If yes, unplug it and plug it into an available USB port on your Mac Desktop. Is the USB port enabled? If not, refer to your computer (or motherboard) users manual to enable it. The MP850 will not Power ON Check the following: Is the MP850 connected to your computer? If yes, unplug it. Is the LOCK switch set to "LOCK"? If yes, set it to the "OFF" position. Is the battery out of power? If yes, please recharge the battery. Cannot transfer MP3, WMA, WMA-DRM10, or WAV files to the MP850 As required, uninstall and re-install the driver. If this doesnt work, try Resetting the unit.

Buttons aren't working Is the LOCK switch set to "LOCK"? If yes, set it to the "OFF" position. Cannot hear track playback Have you downloaded any music files onto the MP850? If no, then you must first do so from your computer or the Internet. (Only Mpeg I Layer 3 and WMA files compressed at a rate of 32Kbps/320Kbps are supported.) Are the earphones properly connected to the earphone jack? If not, reconnect them. Is the volume loud enough? If not, increase the volume level until the music can be heard. Track name does NOT display correctly on the screen The default language of the MP850 is English. Please set the language option first. ID3 tag information has display priority on the screen of the MP850. You could modify the ID3 tag by using Windows Media Player or Winamp. If the ID3 tag is empty, just the file name will be displayed on the screen.

Cannot enter the RECORD Mode To make sure the recorded file will not be lost, two safety mechanisms are provided. If the remaining battery capacity is less than 10%, you cannot enter the RECORD Mode. 53 During recording, if the remaining battery capacity goes below 10% the MP850 will automatically save the recording. Track playback sounds intermittent Plug the earphones into the earphones jack again to make sure they are properly connected. MP850 Powers OFF automatically MP850 features a SLEEP Mode, which acts as a Power Saving feature.

You can preset your MP850 to Power OFF automatically after 15, 30, or 60 minutes. Please refer to the "Sleep" section in SETTINGS. MP850 just isn't working properly If your MP850 ever stops working properly, or locks up, try Powering it ON and OFF a few times, if this does not correct the problem you can Reset the unit by pressing the "Reset" button for 3 to 5 seconds. Cannot find the file that was just copied to the MP850 Re-copy the file and refer to the "Disconnecting from a Computer" section to remove the MP850 after the copy process is completed. A File that was just deleted still appears Re-delete the file and refer to the "Disconnecting from a Computer" section to remove the MP850 after the delete process is completed.

MP850 cannot operate after formatting in Windows® Formatting the MP850 using the "Quick Format," or "Full Format" option in Windows® erases the default format of the MP850. To retrieve the default format, you must link to <http://www.transcendusa.com/> and download a Firmware Update for your MP850. How do I find out what Windows Media Player version I am using? Open your Windows Media Player program. @ @ @ @ @ @ @ @ Size (L x W x H): 2. Weight: 3. Music Formats: 4. Video Formats 5. Photo Formats 6.

Recording Format: 7. Estimated Battery Life: 8. Compression Rates: 9. Data Retention: 10. Erase Cycles: 11. Signal-to-Noise Ratio: 12. Certificates: 13. Warranty: 81.5 mm × 41.5 mm × 12.

7 mm 48g (with Li-ion battery) MP3 WMA and WMA-DRM10 (Subscription music) MTV JPG, BMP IMA_ADPCM (WAV) 22 hours Music playback (fully charged battery) 32Kbps to 320Kbps Up to 10 years 100,000 times 90dB CE, FCC, BSMI 2-years Ordering Information Device Description MP850 MP3 Music Player MP850 MP3 Music Player Memory Size 4GB 8GB Transcend P/N TS4GMP850 TS8GMP850 56 Recycling & Environmental Considerations Recycling the Product (WEEE): Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



[You're reading an excerpt. Click here to read official TRANSCEND](#)

[MP850 user guide](#)

<http://yourpdfguides.com/dref/3700722>

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC: Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potential negative consequences on the environment and human health. Battery Disposal: Your product contains a built-in rechargeable battery covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

@@@@@@@We consistently position ourselves to be significantly above the industry norm, which is all part of our commitment to Customer Satisfaction. All Transcend information, Inc. (Transcend) products are warranted and tested to be free from defects in material and workmanship and to conform to the published specifications. During the warranty period should your Transcend MP850 fail under normal use in the recommended environment due to improper workmanship or materials, Transcend will repair the product or replace it with a comparable one. This warranty is subject to the conditions and limitations set forth herein.

Duration of Warranty: The Transcend MP850 is covered by this warranty for a period of two (2) years from the date of purchase. Proof of purchase including the date of purchase is required to collect on the warranty. Transcend will inspect the product and decide whether to repair or replace it. Transcend reserves the right to provide a functional equivalent product, or a refurbished replacement product. *Limitations:* This warranty does not apply to product failure caused by accidents, abuse, mishandling, improper installation, alteration, acts of nature, improper usage, or problems with electrical power. In addition, opening or tampering with the product casing, or any physical damage, abuse or alteration to the products surface, including all warranty or quality stickers, product serial or electronic numbers will also void the product warranty. Transcend is not responsible for recovering any data lost due to the failure of a flash memory device. Transcend's MP850 must be used with devices that conform to the recommended industry standards. Transcend will not be liable for damages resulting from a third party device that causes the Transcend MP850 to fail. Transcend shall in no event be liable for any consequential, indirect, or incidental damages, lost profits, lost business investments, lost goodwill, or interference with business relationships as a result of lost data.

Transcend is also not responsible for damage or failure of any third party equipment, even if Transcend has been advised of the possibility. This limitation does not apply to the extent that it is illegal or unenforceable under applicable law. *Disclaimer:* The foregoing limited warranty is exclusive. There are no other warranties, including any implied warranty of merchantability or fitness for a particular purpose. This warranty is not affected in any part by Transcend providing technical support or advice. Please read Transcend's Warranty Policy in full to understand your rights. Transcend Warranty Policy: <http://www.transcendusa.com/Support/Warranty.asp> *Online Registration:* To expedite the warranty service, please register your Transcend Product within 30 days of purchase.

Register online at <http://www.transcendusa.com/registration> All specifications are subject to change without notice. Transcend Information, Inc. www.transcendusa.com *The Transcend logo is a registered trademark of Transcend Information, Inc. *All logos and marks are trademarks of their respective companies. 58.



[You're reading an excerpt. Click here to read official TRANSCEND MP850 user guide](#)

<http://yourpdfguides.com/dref/3700722>