



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRANSCEND MP860. You'll find the answers to all your questions on the TRANSCEND MP860 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual TRANSCEND MP860**  
**User guide TRANSCEND MP860**  
**Operating instructions TRANSCEND MP860**  
**Instructions for use TRANSCEND MP860**  
**Instruction manual TRANSCEND MP860**

## **User's Manual**

### **Digital Music Player**



**MP860**



1



[You're reading an excerpt. Click here to read official TRANSCEND MP860 user guide](http://yourpdfguides.com/dref/3700709)  
<http://yourpdfguides.com/dref/3700709>

*Manual abstract:*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.9 General Use .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.9 Caution: Risk of Deafness.....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.....9 Reminders ..*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....10 MP860 Controls ..

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.. 11 Music Playback Screen .....

.....  
.....  
.....

.....  
.....  
.....

..... 12 Basic Operation .....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... 13 Charging the Battery .

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....13 Power ON...

.....  
.....

.....  
.....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
*...13 Power OFF .*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
*...14 Play a Song.*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
*...14 Pause a Song ..*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....14 Next Track..

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....14 Previous Track .

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..14 Fast Forward .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....14 Fast Rewind..

.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....*14 Increase Volume*.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

.....*14 Decrease Volume*.....

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....*14 Main Menu*.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....  
.....

*.....14 File Navigator .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*15 Deleting Files.....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.....15 Repeat / Shuffle Functions....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*16 A-B Repeat.....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*16 Hold.....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.16 Reset ....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*16 Inserting / Removing the microSD Card .....*

.....  
.....  
.....  
.....

.....  
.....





.....  
.....  
.....  
.....19 Repeat Mode.

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....20 Equalizer (EQ) Mode ....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
21 2 Custom Settings .....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

21 Playback Speed.....

.....  
.....  
.....

.....  
.....



.....  
*..25 Removing a Song from My Playlist .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*..26 Delete .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*27 File Information .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*..28 Record Mode .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
*29 Voice Recording.....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
*.29 Line-in Recording ....*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.....30 Recording the Radio.*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*...31 RADIO Mode ..*

.....  
.....

.....  
.....  
.....

.....  
.....

.....  
.....

.....  
.. 32 Listen to the Radio...

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....32 Selecting a Radio Station .

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....32 Adjusting the Volume .....

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....  
.....

..33 Saving a Radio Station ...

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....  
.....

.....  
.....  
.....  
.....33 Auto Search...

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....34 Recalling a Saved Station .....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

35 FM Band.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....36 Mute .....

.....  
.....  
.....

.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....

.....*36 Recording the Radio.*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....*37 PHOTO Mode ..*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....*39 Displaying Photos...*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....

.....*39 Browse Mode.*

.....



.....

.....

.....

.....

.....

.....

.....

.....

.....

*40 Rotate.....*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*...40 Zoom In / Zoom Out ..*

.....

.....

.....

.....

.....

.....

.....

.....

.....

*...41 Slideshow Interval .....*

.....

.....

.....

.....

.....

.....  
.....  
.....  
.....

*41 Slideshow Effects .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.....42 Set as Desktop Background ..*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*.....43 Delete .*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*..43 File Information ...*

.....  
.....  
.....  
.....

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....44 VIDEO Mode .

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... 45 Playing Video Files ..

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

....45 Repeat Mode.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

.46 Add Bookmark .....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
*...47 Delete .*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*..47 File Information .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*...48 3 E-BOOKS Mode .*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

..... *49 Reading E-Books and Text files ..*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*...49 Advance to.....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*...49 Auto Page Turn Interval .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*..50 Font Size ....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....

.....

.....

.....

.....

.....

....51 Add Bookmark .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....51 Delete ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

51 File Management.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 53 Browsing the Internal Memory or microSD Card ..

.....

.....

.....

.....  
.....  
.....  
.....

.....53 Moving & Copying Files / Folders ....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....53 Deleting Files..

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

....54 Settings.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

56 The Settings Menu .....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

.....  
.....  
.....  
.....  
*..56 Record Quality ...*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*56 Record Source .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*...57 Record Gain.....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.57 Screen Saver .....*

.....  
.....  
.....



.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....58 Sleep Timer...

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

.....59 Auto Power Off...

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

.....59 Brightness .

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....

.....  
.....  
.....  
.....  
.....  
.....  
*....60 USB Connection Type .*  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

*60 Menu Animation .....*

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*.61 Default Background Image.....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*....62 Format Internal Memory .....*

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....

*...63 Format microSD Card.....*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

*63 Date & Time .....*

.....  
.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*...64 Language ..*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

*65 Player Information.....*

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

..... 65 Driver Installation.

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*P Windows 2000 Mac OS 10.0 or later Linux Kernel 2.4 or later 8 Safety Precautions These usage and safety guidelines are IMPORTANT! Please follow them carefully. General Use Unpack the contents of the MP860 package carefully. Ensure USB connectors are the same size and shape before connecting never force them Always use the Transcend-provided power adapters and cables. Using incompatible cables may permanently damage your MP860. Never connect the MP860 to a USB hub. USB hubs connect to multiple devices at the same time, resulting in inadequate or unstable power supply. This may cause damage to your digital music player. Known problems caused by connecting to a USB hub include reduced playback time, random resets, and in the worst case, permanent damage to the player's firmware.*

*Do not allow your MP860 to get wet or come in contact with water or any other liquids Do not use a damp/wet cloth to wipe or clean the exterior case. Do not use or store your MP860 in any of the following environments: o o o Direct sunlight Next to an air conditioner, electric heater or other heat sources In a closed car that is in direct sunlight Always unplug the player once it is fully charged. Avoid charging the player for more than 12 hours. Do not charge in high-temperature environments or while exposed to direct sunlight. To maintain battery health, be sure to complete at least one full discharge/charge cycle per month. Backing Up Data Transcend does NOT take any responsibility for data loss, or damage during operation. If you decide to store data on your MP860 we strongly advise that you regularly backup the data to a computer, or other storage medium. To ensure High-Speed USB 2.0 data transfer rates when connecting to a computer, please ensure the computer has the necessary USB drivers installed. If you are unsure how to check this, please consult your computer or motherboard User's Manual for USB driver information.*

*Caution: Risk of Deafness Repeated or regular use of headphones or earphones at volume levels above 80 decibels can give a false impression that the audio level is not high enough. Users may try to progressively increase the volume control therefore risking a dangerous noise level for their ears. To protect your health and your hearing, keep the volume of your MP3 player below 80 decibels and do not use for an extended period of time. Stop use if symptoms like headaches, nausea, or hearing disorders occur. Your MP3 player is limited to a volume level of 100 decibels.*

*9 Both the MP3 player and its accompanying earphones are compliant with the French regulation concerning portable music devices (24th July 1998 Order). Before using other earphones, confirm that their technical specifications are compatible with the original set. Reminders Make sure the switch is not enabled before turning on the player. Never use the "Quick Format" or "Full Format" functions in Windows® to format your MP860. If you leave the digital music player plugged into a notebook computer that is running on battery power, the player will gradually drain power from your notebook's battery.*

*Follow the procedures in the "Disconnecting from a Computer" section to properly remove your MP860 from a computer. Transcend occasionally releases firmware updates for certain products. We suggest you visit <http://www.transcendusa.com> and download the latest firmware version for your device. 10 MP860 Controls A B C D E F G H I J K L M N O P Q 2.4" Full-Color TFT Display Microphone Speaker Option / Record Button Reset Switch Hold Switch Back / Menu Button Next / Fast Forward Volume Down Volume Up Power / Play / OK Button Previous / Rewind Headphone Jack High-Speed Mini USB 2.0 Port Line-In Port Lanyard Attachment Hole microSD Card Slot 11 Music Playback Screen ICON 1 2 3 4 5 6 7 8 9 Date & Time Sleep Auto Power Off microSD Card Lock Battery Play Status Track Info Track Time & Progress bar Sleep Timer is enabled INDICATION Displays current date and time (RTC) Auto Power Off function is enabled microSD Card is inserted Hold switch is enabled (controls are locked) Battery power level (Play), (Pause), (Stop) status (Fast Forward), (Rewind), or Current track number and total number of tracks available The total length (play time) of the file and current position Normal, Repeat One, Repeat All, Shuffle & Repeat, Normal in Folder, Repeat in Folder, Shuffle in Folder Normal, Rock, Pop, Classical, Soft, Jazz, Bass Boost, User EQ, SRS WOW, SRS WOWHD and SRS Custom Mode Text lyrics are available for the current song (see Lyrics Sync) The current playback speed A (start segment), B (end segment), AB (segment repeat) Artist / singer of the current song The title of the album the current song comes from The current file name and song title Displays an image of the album cover (if available) 12 10 Repeat Modes 11 EQ Mode 12 Song Lyrics 13 Play Speed 14 A-B Repeat 15 Artist 16 Album 17 Filename / Title 18 Cover Art Basic Operation Charging the Battery Plug the small end of the USB cable into the Mini USB port on the bottom of the MP860, and plug the large end of the cable into an available USB port on your desktop or notebook computer.*



[You're reading an excerpt. Click here to read official TRANSCEND MP860 user guide](http://yourpdfguides.com/dref/3700709)  
<http://yourpdfguides.com/dref/3700709>

The MP860's internal Li-Polymer battery will automatically begin charging. A battery charging indicator will appear in the upper right hand corner of the player's screen.

Leave the player plugged in until the battery charging animation stops. NEVER plug the MP860 into a USB hub or an external USB port located on a keyboard, monitor or other peripheral. This can permanently damage your digital music player. When charging the battery, Please plug the MP860 directly into your computer's built-in USB port or use the Transcend USB Power Adapter (optional). Power ON Press and hold the ready for use. button to turn on the player. An animated logo will appear, followed by the player status information. After the startup sequence, the Main Menu will be displayed, indicating the MP860 is It takes a few seconds for the MP860 to power up. If the Hold icon appears on the display while powering on the unit, this means that the MP860's 13 is enabled. You must switch off the Hold mode before you can operate the player.

Power OFF Press and hold the button to turn off the MP860. It takes a few seconds for the MP860 to completely power down. The power OFF animation will be displayed: Play a Song Press the button to play a selected music, video, photo, E-book, or recording file. Pause a Song Press to pause and un-pause a song, recording, or video during playback. Next Track Press to skip to the next available song.

Previous Track Press to go back to the previous song. Fast Forward Press and hold the button to fast-forward. Fast Rewind Press and hold the button to rewind. Increase Volume Press once or press and hold the button until you reach the desired volume level. Decrease Volume Press once or press and hold the button until you reach the desired volume level.

Main Menu Press and hold in any mode to enter the Main Menu. The Main Menu gives you access to the MUSIC, RECORD, RADIO, PHOTO, VIDEO, E-BOOKS, File Management modes and the SETTINGS menu. 14 File Navigator The File Navigator is a fast and convenient way of moving between tracks, files and folders. 1. Choose FILE MANAGEMENT from the Main Menu or select Internal Memory / microSD Card in the MUSIC, VIDEO, PHOTO, or E-Books modes to open the File Navigator. 2. Once the source device is chosen (Internal Memory or microSD Card), a list of available files for the current mode will be shown (except in FILE MANAGEMENT mode, which displays all files). 3. Use the / buttons to move up and down the list of files. .

or . 4. Highlight the file you want to play and press 6. To exit a folder, press Deleting Files or . 5. To enter a folder or subfolder, highlight it and press either 1. In the File Management mode, navigate to the file you want to delete with the / buttons. button to open Options menu. / and 2. With the file highlighted, press the 3.

Use the appear. / buttons to highlight "Delete" and press . A "OK / Cancel" message will 15 4. Use the / buttons to highlight "OK" and press select "Cancel" to return to File Navigator mode without deleting. to permanently delete the file, or Repeat / Shuffle Functions Please see the "REPEAT" section in the Music mode for detailed instructions.

A-B Repeat Please see the "A-B REPEAT" section in the Music mode for detailed instructions. Hold When the switch is enabled, all of the MP860's buttons will be disabled, and cannot accidentally be pressed while in your pocket. Reset If the MP860 is not functioning properly, you can reboot by pressing for 3 to 5 seconds. Inserting / Removing the microSD Card 1. Open the microSD card slot cover with your fingernail.

16 2. Insert the microSD card completely into the slot, applying gentle pressure with your fingertip until it clicks securely into place. 3. To remove the microSD card, gently push the card inward with your fingernail until it springs free, then pull it directly out of the slot. For best results and compatibility, we strongly recommend using a Transcend microSD Card. Transcend is not responsible for any damage caused by using a non-Transcend brand memory card in the MP860 music player. Do not remove a microSD card while accessing files (playback or browsing) on the card. This can cause accidental deletion of data, product malfunction or damage to the microSD card. 17 MUSIC Mode Before buying DRM (Digital Rights Management) protected music online, please be advised that the MP860 only supports WMA-DRM10 file protection. Playing Audio Files 1.

Press and hold to power ON the unit. The Main Menu will appear. button to enter the Main Menu. If the MP860 is already on, press and hold the 2. Use the 3. Use the / / / / buttons to select "Music" mode and press . ("Internal buttons to select the source location of the song you want to play Memory" or "microSD Card") and press MANAGEMENT mode) . (Alternatively, you can find all files in the FILE / and / buttons. 4. Navigate to the file you want to play by using the 5.

Press to begin listening to a music file. Please see the Specifications section for a list of all music file formats the MP860 supports. If the music player cannot find any compatible files, a "No Files Found" message will be displayed. 18 Adjusting the Volume While playing a song, press once or press and hold or until you reach the desired volume level. A-B Repeat 1.

While playing a song in the MUSIC mode, press the 2. Select "A-B Repeat" and press button to open the Options menu. to enable this function. 3. Press the button to mark the beginning of the section you want to repeat. 4. Press the button again to mark the end of the section you want to repeat. 19 5. The marked section of the song will playback in a continuous loop. 6. Press the button once more to stop the A-B repeat function. Repeat Mode There are seven Repeat modes to choose from: Normal Repeat One Repeat All Shuffle & Repeat (plays all music files available one time, in consecutive order) (continuously repeats the current song) (continuously repeats playback of all music files available, in consecutive order) (continuously repeats playback of all music files available, in random order) Normal in Folder (plays all music files in a folder one time, in consecutive order) Repeat in Folder (continuously repeats playback of all music files in a folder, in consecutive order) Shuffle in Folder (plays all music files in a folder, in random order) 1. While playing a song in the MUSIC mode, press the 2. Use the / button to open the Options menu. .

buttons to select "Repeat Mode" and press 3. Select a repeat mode and press to confirm. 20 Equalizer (EQ) Mode There are many preset Equalizer Modes to choose from: Normal, Rock, Pop, Classical, Soft, Jazz, Bass Boost, User EQ, SRS WOW, SRS WOWHD, and SRS Custom Mode.



[You're reading an excerpt. Click here to read official TRANSCEND MP860 user guide](http://yourpdfguides.com/dref/3700709)  
<http://yourpdfguides.com/dref/3700709>

1. While playing a song in the MUSIC mode, press the 2. Use the / button to open the Options menu. . buttons to select "EQ Mode" and press 3. Use the / buttons to select an equalizer mode. If music is playing, you will instantly hear the difference between each mode through the earphones. 4. Press to confirm the new EQ setting. Custom Settings This menu contains customizable audio settings: User EQ, SRS Custom Settings, and Fade In / Fade Out. 21 A. User EQ: The User EQ allows you to customize a 5-band equalizer to your personal preference.

1. While playing a song in the MUSIC mode, press the 2. Use the / button to open the Options menu. . buttons to select "Custom Settings" and press . 3. Select "User EQ" and press 4. Press 5. Press // buttons to switch between five bands: 80Hz, 200Hz, 1KHz, 4KHz, and 8KHz. to increase or decrease levels of each frequency range 6. Press to confirm and return to the "Custom Settings" menu. B. SRS Custom Settings: This menu lets you customize the "SRS Custom" Equalizer Mode. The following settings can be adjusted: SRS 3D, TruBass, Focus, Center, Definition, Speaker, and Limiter. 1.

While playing a song in the MUSIC mode, press the 2. Use the / button to open the Options menu. . buttons to select "Custom Settings" and press . 22 3. Select "SRS Custom Settings" and press 4. Use the / buttons to select the SRS mode you want to adjust, then press to enter. 5. Press the 6. Press / buttons to adjust the value.

to confirm and return to the "SRS Custom Settings" menu. C. Fade In / Fade Out: When this function is enabled, the volume will gradually decrease at the end of each song, and gradually increase as the next song starts. 1. While playing a song in the MUSIC mode, press the 2.

Use the / button to open the Options menu. . buttons to select "Custom Settings" and press . 3. Select "Fade In / Fade Out" and press 4.

Select "On" to turn on this function, or "Off" to turn the function off. 23 5. Press to confirm and return to the "Custom Settings" menu. Playback Speed The speed at which an audio file is played can be increased or decreased. Note: this function only works when playing MP3 format files. (Adjustment range: -4 ~ +4. Normal speed is 0) 1. While playing a song in the MUSIC mode, press the 2. Use the / button to open the Options menu. .

buttons to select "Playback Speed" and press 3. Press / until you reach the desired level of playback speed. 4. Press to confirm the new playback speed. Lyrics Sync This function displays synchronized lyrics (if available) on the screen during music playback. Note: For Lyrics Sync to work, an "xxxx.lrc" lyrics file with the exact same name as its corresponding music file must be transferred to the MP860. 24 Ex: for the MP3 file "GM-Last\_Christmas.mp3", the LRC lyrics file must be named "GM-Last\_Christmas.lrc" 1.

In the MUSIC mode, press the 2. Use the / button to open the Options menu. . buttons to select "Lyrics Sync" and press 3. Select "On" to use Lyrics Sync, or "Off" to turn the function off.

4. Press to confirm. Add Bookmark This function can be used to mark a specific part of song so you can easily return to it in the future. 1. While playing a song in the MUSIC mode, press the 2.

Use the / buttons to select "Add Bookmark". button to open the Options menu. 3. Press the button to bookmark the current position of the song. Add to My Playlist The MP860 includes five built-in playlists that can be used to sort your favorite songs into different groups. Ex: you may choose to add "dance music" to My Playlist 1, and "love songs" to My Playlist 2. 1. In the MUSIC mode, press the button to open the Options menu. 25 2. Use the / buttons to select "Add to My Playlist" and press .

3. Select the playlist you want to add the song to. (My Playlist 1" ~ "My Playlist 5") 4. Press the button to add the currently playing song to the highlighted playlist. Removing a Song from My Playlist 1. Press and hold the 2. Use the 3. Use the // button to enter the Main Menu. // buttons to select "Music" mode and press . .

buttons to select "Playlists" and press 4. Select the playlist you want to edit and press . 26 5. Highlight the song you want to remove and press the button. 6.

Use the / buttons to select "OK" and press to remove the song (note: this will only remove the selected song from the current playlist, and will not actually delete the file from the microSD card or internal memory). 7. Press to return to My Playlist. Delete 1. While playing a song in the MUSIC mode, press the 2.

Use the will appear. / button to open the Options menu. . A "Confirm File Delete" message buttons to highlight "Delete" and press 27 / buttons to highlight "OK" and press to permanently delete the currently 3. Use the playing file, or select "Cancel" to return to the Options menu without deleting. File Information

This option will display all information about the audio file currently playing (Song Title, Album, Artist, Genre, Year, Total Time, Bit Rate, Sample Rate, File Format). 1. While playing a song in the MUSIC mode, press the 2. Use the / button to open the Options menu. .

buttons to select "File Information" and press 3. Press to return to the Options menu. 28 Record Mode Use the /// buttons to select "Record" and press .

There are three recording modes: All recordings can be accessed in FILE MANAGEMENT mode or by using the File Navigator in MUSIC mode To adjust the recording sample rate, please see the "Settings / Record Quality" section of this manual. Voice Recording 1. Press and hold the button for 2 seconds in any mode (except Radio) to activate the MP860's built-in microphone and begin voice recording. 2. An automatically generated file name for your recording will appear on the screen. 3. Press to pause the recording, and press again to resume.

4. Press button. A "Stop Recording" message will appear. 29 5. Use the / buttons to highlight "OK" and press to finish the recording.

Voice recordings are named and numbered in this format: "MYearMonthDay###.WAV" Ex: M091216003.WAV represents the third voice recording made on December 16th, 2009 Voice recordings are saved in the INTERNAL MEMORY / RECORD / MIC For best results, try to position the MP860's Microphone as close as possible to the source of the sound or voice you are recording. Line-in Recording To adjust the Record Source, please see the "Settings / Record Source" section of this manual.



[You're reading an excerpt. Click here to read official TRANSCEND](http://yourpdfguides.com/dref/3700709)

[MP860 user guide](http://yourpdfguides.com/dref/3700709)

<http://yourpdfguides.com/dref/3700709>

1.

Press and hold the Line-in recording. 2. An automatically generated file name for your recording will appear on the screen. button for 2 seconds in any mode (except Radio) to activate the MP860's 3. Press to pause the recording, and press again to resume. 4. Press button. A "Stop Recording" message will appear. 30 5. Use the / buttons to highlight "OK" and press to finish the recording.

Line-In recordings are named and numbered in this format: "LYearMonthDay###.WAV" Ex: L091216003.WAV represents the third Line-In recording made on December 16th, 2009 Line-In recordings are saved in the INTERNAL MEMORY / RECORD / LINE IN Recording the Radio Please see the "Recording the Radio" section in the RADIO mode for detailed instructions. 31 RADIO Mode Listen to the Radio 1. Plug in the earphones . (Earphones must be plugged-in to listen to the Radio). 2. Press and hold the 3. Use the / button to enter the Main Menu. // buttons to select "Radio" and press .

4. The current FM Radio frequency will be displayed. Selecting a Radio Station To manually select a radio station, press to auto-scan for the next available station. or (the FM frequency will increase or decrease in or 0.1MHz increments) until you reach the desired station.

Alternatively, you can press and hold either 32 Note: If you have already saved your favorite stations to the Station List, you can press / buttons to quickly switch between your saved stations. Press frequency manually. and then use the again to adjust the Adjusting the Volume Press once or press and hold or until you reach the desired volume level. Saving a Radio Station The MP860 lets you save your 20 favorite radio stations (CH01 to CH20). To save a station:

1.

Use or to select the radio station (FM frequency) that you want to save. 33 2. Press the 3. Use the list. / button to open the Options menu. buttons to select "Save Station" and press to bring up the saved channel / buttons to select your desired channel number, and press 4. Use the the current radio station to that channel. again to save Auto Search 1. In the RADIO mode press 2. Use the / to open the Options menu.

, then all the FM channels will be buttons to select "Auto Search" and press automatically scanned and the 20 channels with a strong signal will be saved. 34 The previous 20 channels in station list will be reset first when using this function. Recalling a Saved Station 1. In the RADIO mode press 2. Use the / (CH01 to CH20). to open the Options menu. to display your saved stations buttons to select "Station List" and press 3. Use the / buttons to select a channel number.

4. Press to listen to the selected channel.

35 FM Band The MP860 allows you choose World FM Band (87.5MHz~108.0MHz) or Japan FM Band (76.0MHz~90.0MHz).

1. In the RADIO mode press 2. Use the / to open Option menu. . buttons to select "FM Band" and press 3.

Select "World FM Band" or "Japan FM Band," then press to confirm. Mute 1. In the RADIO mode press 2. Use the / to open the Options menu. . buttons to select "Mute" and press 3. To un-mute the radio, select "Start Playing" from the Options menu. 36 Recording the Radio 1. Select a radio station that you want to record. 2.

Press and hold the button for 2 seconds to begin recording the station. 3. An automatically generated file name for your recording, along with the current record quality, FM frequency, and file destination will appear on the screen. FM Recordings are named and numbered in this format: "FYearMonthDay###.WAV" Ex: " F090123012.WAV " would be the twelfth FM recording made on January 23, 2009 FM recordings are saved in the Internal Memory / RECORD / FM to pause the recording, and press again to resume. 4. Press 5. Press button. A "Stop Recording" message will appear.

buttons to highlight "OK" and press to save the recording and return to the 6. Use the / RADIO mode. 37 38 PHOTO Mode Displaying Photos 1. Press and hold the 2. Use the / button to enter the Main Menu.

// buttons to select "Photo" and press . 3. The File Navigator will open. Use the files in the FILE MANAGEMENT mode) 4. Use the press . / and // buttons to select the source location of the photo . (Alternatively, you can find all you want to view ("Internal Memory" or "microSD Card") and press buttons to navigate to the photo you want to view and 5. Press photo. to go to the next available photo, and press to go back to the previously viewed 6. Pressing while viewing a photo will start the Slideshow function. 39 Browse Mode This option lets you adjust the way files are displayed on the screen when browsing for a specific photo. 1. In the PHOTO mode, select "Browse Mode." and press . 2.

Use the / buttons to select "List" or "Thumbnail" and press . Rotate 1. While viewing an image in the PHOTO mode, press the 2. Use the / buttons to select "Rotate" and press button to open the Options menu. . 3. Choose the degree amount that way you want to rotate the image by (90, 180, 270) and press confirm. to 40 Zoom In / Zoom Out 1. When viewing an image in the PHOTO mode, press the 2. Use the / buttons to select "Zoom" and press button to open the Options menu.

. 3. Select "Zoom In" or "Zoom Out" and press to confirm. 4. While zoomed-in, press 5.

Press / and / to move around. to view the image at its normal size. Slideshow Interval This option adjusts the amount of time in between each picture displayed when viewing slideshows. 1. When viewing an image in the PHOTO mode, press the 2.

Use the / button to open the Options menu. . buttons to select "Slideshow Interval" and press 41 3. Use the / buttons to select the desired interval time, press to confirm. @@@@@1. While viewing an image in the PHOTO mode, press the 2. Use the / button to open the Options menu. . buttons to select "Slideshow Effects" and press 3. @@@1.

When viewing an image in the PHOTO mode, press the 2. Use the / button to open the Options menu. @@When viewing an image in the PHOTO mode, press the 2. Use the appear. @@. @@@@1. While displaying an image file in the PHOTO mode, press the 2. Use the / button to open the Options menu. . buttons to select "File Information" and press 3.

@@@Press and hold the 2. Use the / button to enter the Main Menu. // buttons to select "Video" and press . 3. @@@@Navigate to the file you want to play by using the press .

5. @@The horizontally. /// directional controls will be adjusted to function 45 6. During video playback press 7. To fast forward, press and hold 8.

@@@To rewind, press and hold . @@While viewing a file in the VIDEO mode, press the 2.



[You're reading an excerpt. Click here to read official TRANSCEND MP860 user guide](http://yourpdfguides.com/dref/3700709)  
<http://yourpdfguides.com/dref/3700709>



Use the / button to open the Options menu. . buttons to select "Repeat Mode" and press 46 3. @@1. While viewing a file in the VIDEO mode, press the 2. @@@@While viewing a file in the VIDEO mode, press the 2. Use the appear. / button to open the Options menu.

. @@@@1. While viewing a file in the VIDEO mode, press the 2. Use the / button to open the Options menu. . buttons to select "File Information" and press 3. @@Press and hold the 2. Use the / button to enter the Main Menu. // buttons to select "E-Books" and press . 3. The File Navigator will open. Use the files in the FILE MANAGEMENT mode) 4. Use the . @@@@Press .A manually to go to the next page. Press . to go back one page. @@While reading a text file in the E-BOOKS mode, press the 2. Use the / button to open the Options menu. . buttons to select "Advance to" and press 49 3. Press / to increase or decrease percentage in 5% steps and press to confirm. (Adjustment range: 0% ~100%) Auto Page Turn Interval Sets the speed at which pages are automatically turned. 1. While reading a text file in the E-BOOKS mode, press the 2. Use the / button to open the Options menu. . buttons to select "Auto Page Turn Interval" and press 3. Use the press / buttons until you reach the desired interval time of pages turning automatically and to confirm. (Adjustment range: 3 Sec, 6 Sec, 9 Sec, 12 Sec, 15 Sec) 50 Font Size 1.

While reading a text file in the E-BOOKS mode, press the 2. Use the / buttons to select "Font Size" and press button to open the Options menu. . 3. Use the / buttons to select the font size (Small, Medium, Large) you want, press to confirm and continue reading. Add Bookmark This function can be used to mark a specific place within a text file so you can easily return to it in the future. 1. While reading a text file in the E-BOOKS mode, press the 2. Use the / buttons to select "Add Bookmark". button to open the Options menu.

3. Press the button to bookmark the current page that you are reading. Delete 1. With a file open in the E-BOOKS mode, press the 2. Use the appear. 51 button to open the Options menu. . A "Confirm File Delete" message will / buttons to select "Delete" and press / buttons to highlight "OK" and press 3. Use the select "Cancel" to return to the Options menu without deleting, to delete the text file currently open, or 52 File Management Browsing the Internal Memory or microSD Card 1.

Press and hold the 2. Use the / button to enter the Main Menu. // buttons to select "File Management" and press . 3. Use the or . / buttons to select either "Internal Memory" or "microSD Card" and press 4. Use the / buttons to scroll up and down through the available folders and files in the root directory of the selected storage device. 5. To open a folder or file, highlight it and press either 6. To exit a folder and move up one level, press or or .

. Moving & Copying Files / Folders 1. In the File Management menu use the folder and press the / and / buttons to highlight a file or button to open the Options menu. 53 2. Use the / buttons to select "Move" or "Copy" and press . (Note: "Move" will transfer the selected item to a new location and deletes it from the original location. "Copy" will copy the item to the new location without deleting the original) 3. Select the destination storage device and press . 4. Use the / buttons to highlight your desired destination folder or the Root (default) directory.

5. Press the button to perform the move or copy and return to the previous screen. Deleting Files 1. In the File Management menu use the folder and press the 2. Use the appear.

// and / buttons to highlight a file or button to open the Options menu. buttons to select "Delete" and press . A "Confirm File Delete" message will 54 / buttons to highlight "OK" and press 3. Use the return to the previous screen. to delete the file, or select "Cancel" to 55 Settings The Settings Menu 1.

Press and hold the 2. Use the / button to go to the Main Menu. // buttons to select "Settings" and press button. . 3. To exit the SETTINGS menu, press the Record Quality The quality of an audio recording can be set to Low, Medium, or High. require more memory space to save the recorded WAV files. 1. In the SETTINGS menu, use the / buttons to select "Record Quality" and press . Higher recording quality settings 2.

Use the / buttons to select Low, Medium, or High quality and press to confirm. FM Radio and Line In are recorded in Stereo. MIC voice recordings are recorded in Mono. For best voice recording results, try to position the MP860's microphone as close as possible to the source of the sound or voice you are recording. 56 Maximum Record Time / Quality Table Sample rate MIC Low (8KHz) Med (16KHz) High (32KHz) Channels 1 (mono) 1 (mono) 1 (mono) 4GB 256 hrs 128 hrs 64 hrs 8GB 512 hrs 256 hrs 128 hrs Sample rate FM / Line In Low (8KHz) Med (16KHz) High (32KHz) Channels 2 (stereo) 2 (stereo) 2 (stereo) 4GB 128 hrs 64 hrs 32 hrs 8GB 256 hrs 128 hrs 64 hrs Record Source Select between MIC (Built-In Microphone) or LINE-IN (for CD Players or other sources) as the Audio Recording method used by the MP860. 1. In the SETTINGS menu, use the / buttons to select "Record Source" and press . 2. Use the / buttons to select MIC or Line-In and press to confirm. Record Gain This option allows you to increase the input volume when recording voice or audio. 1. In the SETTINGS menu, use the / buttons to select "Record Gain" and press . 57 2. Use the / buttons to select your desired amount of gain and press to confirm. Adjustment range: 1 ~ 7 or Off (7=highest gain, 1=lowest gain) Screen Saver This function lets you enable/disable the screen saver, and set the screen saver's auto-activation time delay.

1. In the SETTINGS menu, use the / buttons to select "Screen Saver" and press . 2. Use / buttons until you reach the desired time delay and press to confirm. (Adjustment range: 10 Sec ~ 180 Sec or Off) 58 Sleep Timer This function sets a time delay to automatically power OFF the MP860, regardless of playback status.

1. In the SETTINGS menu, use the / buttons to select "Sleep Timer" and press . 2. Use / buttons until you reach the desired time delay and press to confirm. (Adjustment range: 10 Minute ~ 180 Minute or Off) Auto Power Off This function sets a time delay to automatically power-OFF the MP860 after a certain period of time with no user input. 1. In the SETTINGS menu, use the / buttons to select "Auto Power Off" and press . 2. Use / buttons until you reach the desired time delay and press to confirm.



[You're reading an excerpt. Click here to read official TRANSCEND](http://yourpdfguides.com/dref/3700709)

[MP860 user guide](http://yourpdfguides.com/dref/3700709)

<http://yourpdfguides.com/dref/3700709>



(Adjustment range: 10 Minute ~ 180 Minute or Off) 59 Brightness This option lets you adjust the brightness of the screen.

1. In the **SETTINGS** menu, use the / buttons to select "Brightness" and press . 2. Use / buttons until you reach the desired level of brightness and press to confirm. (Adjustment range: 1 ~ 5) **USB Connection Type** If you own WMA-DRM10 protected music files or if you want to use Windows Media Player 10 to synchronize music between your computer and the MP860, the Music Transfer Protocol (MTP) must be enabled. This function lets you switch between MTP or USB transfer modes. 60 **MTP USB** (Use this mode for transferring DRM10 music files with Windows Media Player 10) (Use this mode for normal drag-and-drop transfer of all other files, or if using a Mac® or Linux® computer) / buttons to select "USB Connection Type" and press 1. In the **SETTINGS** menu, use the . 2. Use the confirm.

/ buttons to select either "MTP (for DRM)" or "USB" and press to Note: In MTP transfer mode, all files will be stored in the "MTP" folder. **Menu Animation** Changes the effect displayed during menu interface transitions. 1. In the **SETTINGS** menu, use the / buttons to select "Menu Animation" and press . 61 2.

Use the / buttons to select "Normal", "Zoom" or "Push" and press to confirm. **Default Background Image** When a user-selected picture is set as the background image, this option can be used restore the original look of the MP860 menu. 1. In the **SETTINGS** menu, use the . / buttons to select "Default Background Image" and press 2.

Select "OK" and press menu. to confirm and restore the default background image, then return to Main 62 **Format Internal Memory** This option will permanently delete all files stored in the player's internal memory. Please be sure to backup any songs, pictures, or other files you want to save before proceeding. 1. In the **SETTINGS** menu, use the . / buttons to select "Format Internal Memory" and press 2. Use the / buttons to select "OK" and press . 3. A confirmation screen will appear. Select "OK" again only if you are sure you want to erase all files stored in the player's internal memory and press **SETTINGS** menu.

, or select "Cancel" to return to the **Format microSD Card** This option will permanently delete all files stored on the microSD card. If there are any songs or pictures you want to save, please use the **File Management** to copy them to the player's internal memory before proceeding. 1. In the **SETTINGS** menu, use the . / buttons to select "Format microSD Card" and press 63 2. Use the / buttons to select "OK" and press . 3. A confirmation screen will appear. Select "OK" again only if you are sure you want to erase all data on the microSD card and press , or select "Cancel" to return to the **SETTINGS** menu. **Date & Time** This option lets you adjust the local date and time.

1. In the **SETTINGS** menu, use the / buttons to select "Date & Time" and press . 2. Use / to move between Year, Month, Day, 12hr/24hr, Hour, Minute, and AM/PM. 64 3.

Adjust the values of each field with the 4. Press / buttons. to confirm your new time settings. **Language** Sets the MP860's display language, including menus, song/album titles, artist names, and lyrics. The player supports 13 User languages.

1. In the **SETTINGS** menu, use the / buttons to select "Language" and press . 2. Select your language with the / buttons and press to confirm. **Player Information** This displays the MP860's firmware version and available memory capacity. 1. Press and hold the 2. Use the 3. Press the / button to go to the **Main Menu**. buttons to select "Player Information" and press .

button to return to **Main menu**. 65 66 **Driver Installation** Driver Installation for Windows 7, Vista, XP and 2000 No drivers are required. These Windows® Operating Systems have built-in drivers to support the MP860. Plug your MP860 into an available USB port and Windows® will install the necessary files.

Two "Removable Disk" drives (one for the microSD slot & one for the MP860 internal memory) with a newly assigned drive letter will appear in the **My Computer** window. **Driver Installation for Mac OS 10.0, or Later** No drivers are required. Plug your MP860 into an available USB port and your computer will automatically detect it. **Driver Installation for Linux Kernel 2.4, or Later** No drivers are required.

Plug your MP860 into a USB port and mount it. 1. Create a directory for the MP860. Example: `mkdir /mnt /MP860` 2. Mount the MP860.

Example: `mount a t msdos /dev/sda1 /mnt /MP860` NEVER use Windows to format your MP860. 67 **Connecting to a Computer** Transferring Files to the MP860 If you want to use your Digital Music Player to do more than listen to the radio, you must transfer music files, pictures, movies or TXT files to the MP860. You can also use the MP860 as a portable flash drive to transfer your important documents and other files. Note: If you are using a Windows computer and want to listen to WMA-DRM10 music, please find out which version of Windows Media Player is installed on your computer. Please see "USB Connection Type" NEVER plug the MP860 into a USB hub or an external USB port located on a keyboard, monitor or other peripheral.

This may cause damage to your digital music player. When connecting to a computer, Please plug the MP860 directly into your computer's built-in USB port. 1. Plug the small end of the USB cable into the Mini USB port on the MP860 and plug the large end of the cable into an available USB port on your desktop or notebook computer. The internal Li-Polymer battery will begin charging. 2. When connected to a computer a USB connection screen will appear. 68 **USB Data Transfer:** For transferring files to and from the player's internal memory. **USB Charge & Playback:** For charging the battery while continuing to use the music playback functions of the player. No data transfer is possible in this mode.

Note: Both connection modes will charge the internal battery, however when "USB Data Transfer" is chosen, the player's audio and video functions will not be available. 3. Use the / buttons to select your desired connection mode. If you are using Windows®, Two "Removable Disk" drives (one for the microSD slot & one for the MP860 internal memory) with a newly assigned drive letter will appear in the **My Computer** window. \*Note: (F:) and (G:) are example drive letters your "My Computer" window may differ 4. To transfer photos, videos, e-book text files, and non-protected music to the MP860, the USB Connection Type in the Settings menu must be set to "USB."



[You're reading an excerpt. Click here to read official TRANSCEND](http://yourpdfguides.com/dref/3700709)

[MP860 user guide](http://yourpdfguides.com/dref/3700709)

<http://yourpdfguides.com/dref/3700709>

" With this connection type, you can transfer files by simply dragging them onto the MP860's Removable Disk drive letter. You can also create your own folders within the MP860 and copy files directly to the folders. 5. To transfer WMA-DRM10 music files to the MP860, please set the player's USB Connection Type in the Settings menu to "MTP (for DRM).

" In MTP mode, please use Windows Media Player 10 to transfer and synchronize WMA-DRM10 music files with the MP860. 6. Always disconnect the MP860 from a computer by selecting and following the instructions for the "Safely Remove Hardware" icon that can be found on the Windows® Toolbar at the bottom of the computer screen. NEVER unplug the MP860 during file transfer. Unplug the MP860 only when Windows informs it is safe to do so. Disconnecting the MP860 in Windows 7, Vista, XP and 2000 1. Select the Hardware icon on the system tray. 2. The Safely Remove Hardware pop-up window will appear. Select it to continue.

69 3. A window will appear stating "The 'USB Mass Storage Device' device can now be safely removed from the system." 4. Unplug the MP860 from your computer. Disconnecting the MP860 in Mac OS 10.0 or Later 1. Drag and drop the Disk icon that corresponds to your MP860 into the trashcan. 2. Unplug your MP860 from the USB port. Disconnecting the MP860 in Linux Kernel 2.

4 or Later 1. Execute `umount /mnt /MP860` to un-mount the device. 2. Unplug your MP860 from the USB port. 70 Troubleshooting If a problem occurs with your MP860, please first check the information listed below before taking your MP860 for repair. If you are unable to remedy a problem from the following hints, please consult your dealer, service center, or local Transcend branch office. We also have FAQ and Support services on our websites. Operating system cannot detect the MP860 Check the following: Is your MP860 properly connected to the USB port? If not, unplug it and plug it in again. Is your MP860 connected to the Mac keyboard? If yes, unplug it and plug it into an available USB port on your Mac Desktop. Is the USB port enabled? If not, refer to your computer (or motherboard) user's manual to enable it.

The MP860 will not Power ON Check the following: Is the MP860 connected to your computer? If so, unplug it. Is the LOCK switch set to "LOCK"? If yes, set it to the "OFF" position. Is the battery out of power? If yes, please recharge the battery. Cannot transfer files to the MP860 Unplug the MP860 from your computer, wait a moment, and plug it back in. If this does not work, try pressing the "Reset" button for 3 to 5 seconds.

Buttons aren't working Is the LOCK switch set to "LOCK"? If yes, set it to the "OFF" position. Cannot hear audio playback Have you downloaded any music files onto the MP860? If no, then you must first do so from your computer or the Internet. Are the earphones properly connected to the earphone jack? If not, reconnect them. Is the volume loud enough? If not, increase the volume level until the music can be heard. Song/album/artist name is not displayed correctly on the screen The default language of the MP860 is English.

Please set the player to the appropriate language first. The MP860 music playback screen displays song details based on each file's ID3 tag information. You can modify the ID3 tags of your music files by using Windows Media Player or Winamp. If no ID3 tag data is available, only the file name will be displayed on the music playback screen. Cannot RECORD voice, music, or the FM radio To make sure recorded files do not get lost, two safety mechanisms are built into the MP860: 1. If remaining battery capacity is less than 10%, the player will not enter the record mode. 71 2. While recording, if the remaining battery capacity goes below 10% the MP860 will automatically save the recording. Intermittent music playback Unplug the earphones and plug them back in again to make sure they are securely connected. MP860 Powers OFF automatically The MP860 features SLEEP Mode and Auto Power Off functions, which are power-saving features.

You can preset your MP860 to Power-OFF automatically after 0~180 minutes. Please refer to the SETTINGS section for more information. MP860 just isn't working properly If your MP860 ever stops working properly, or locks up, try Powering it ON and OFF a few times, if this does not correct the problem you can Reset the unit by pressing the "Reset" button for 3 to 5 seconds. Cannot find the file that was just copied to the MP860 Re-copy the file and refer to the "Disconnecting from a Computer" section to remove the MP860 after the copy process is completed. A File that was just deleted still appears Re-delete the file and refer to the "Disconnecting from a Computer" section to remove the MP860 after the delete process is completed. MP860 does not operate after formatting in Windows® Formatting the MP860 using the "Quick Format," or "Full Format" option in Windows® erases the default system information that the MP860 requires to operate. To re-install the system information, please visit <http://www.transcendusa.com/> and download a Firmware Update for your MP860. How do I find out what Windows Media Player version I am using? Open your Windows Media Player program.

Click on the "Help" menu and select the "About Windows Media Player" option. The version of your Windows Media Player will be displayed on the computer screen. Cannot listen to DRM music on my MP860 The MP860 only supports WMA-DRM10 music files, is this the file type you are using? You must use Windows Media Player 10 to transfer and synchronize your WMA-DRM10 music files with the MP860's MTP Folder. Cannot view Photo files on my MP860 The MP860 only supports ".JPG," ".

BMP", ".GIF", and ".PNG" Photo files, please ensure that the photo is one of these files types. Cannot read E-book files on my MP860 The MP860 only supports ".TXT" E-book files, please ensure that the E-book is saved in Unicode UTF-8 or UTF-16 format.

Lyrics Sync: Why can't I see the words of the song I am listening to? 72 For detailed Lyrics Sync instructions, please link to the FAQ section on our website <http://www.transcendusa.com/Support/FAQ/> An "Insufficient Power" message is displayed on the screen If your MP860 displays an "Insufficient Power" message, this means the device supplying USB power to your digital music player is not outputting stable or adequate voltage to charge the player's internal battery. This message does not indicate a problem with the music player. 73 Specifications 1. Size (L x W x H): 2. Weight: 3. Music Formats: 94 mm x 50 mm x 12.0 mm 62g MP3, WMA, WMA-DRM10, OGG, FLAC and WAV MPEG4 SP(Xvid), FLV(H).



[You're reading an excerpt. Click here to read official TRANSCEND MP860 user guide](http://yourpdfguides.com/dref/3700709)  
<http://yourpdfguides.com/dref/3700709>

263) JPEG, BMP, GIF and PNG IMA\_ADPCM (WAV) 22 Hours of continuous music playback 4 Hours of continuous video playback 32Kbps to 320Kbps Up to 10 years 100,000 times 90dB CE, FCC, BSMI 2-years 4.

Video Formats 5. Photo Formats 6. Recording Format: 7. Estimated battery) 8. Compression Rates: 9. Data Retention: 10. Erase Cycles: 11. Signal-to-Noise Ratio: 12. Certificates: 13. Warranty: Battery Life: (fully charged Ordering Information Device Description MP860 Digital Music Player MP860 Digital Music Player Memory Size 4GB 8GB Transcend P/N TS4GMP860 TS8GMP860 74 Recycling & Environmental Considerations Recycling the Product (WEEE): Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC: Never dispose of your product with other household waste. @@@@ For products with non-exchangeable built in batteries: The removal of (or the attempt to remove) the battery invalidates the warranty. This procedure is only to be performed at the end of the product's life. 75 Transcend Limited Warranty "Above and Beyond" is the standard we set ourselves for customer service at Transcend. We consistently position ourselves to be significantly above the industry norm, which is all part of our commitment to Customer Satisfaction.

All Transcend information, Inc. (Transcend) products are warranted and tested to be free from defects in material and workmanship and to conform to the published specifications. During the warranty period should your Transcend MP860 fail under normal use in the recommended environment due to improper workmanship or materials, Transcend will repair the product or replace it with a comparable one. This warranty is subject to the conditions and limitations set forth herein. Duration of Warranty: The Transcend MP860 is covered by this warranty for a period of two (2) years from the date of purchase.

Proof of purchase including the date of purchase is required to collect on the warranty. Transcend will inspect the product and decide whether to repair or replace it. Transcend reserves the right to provide a functional equivalent product, or a refurbished replacement product. Limitations: This warranty does not apply to product failure caused by accidents, abuse, mishandling, improper installation, alteration, acts of nature, improper usage, or problems with electrical power. In addition, opening or tampering with the product casing, or any physical damage, abuse or alteration to the product's surface, including all warranty or quality stickers, product serial or electronic numbers will also void the product warranty. Transcend is not responsible for recovering any data lost due to the failure of a flash memory device. Transcend's MP860 must be used with devices that conform to the recommended industry standards. Transcend will not be liable for damages resulting from a third party device that causes the Transcend MP860 to fail. Transcend shall in no event be liable for any consequential, indirect, or incidental damages, lost profits, lost business investments, lost goodwill, or interference with business relationships as a result of lost data. Transcend is also not responsible for damage or failure of any third party equipment, even if Transcend has been advised of the possibility.

This limitation does not apply to the extent that it is illegal or unenforceable under applicable law. Disclaimer: The foregoing limited warranty is exclusive. There are no other warranties, including any implied warranty of merchantability or fitness for a particular purpose. This warranty is not affected in any part by Transcend providing technical support or advice. Please read Transcend's Warranty Policy in full to understand your rights. Transcend Warranty Policy: <http://www.transcendusa.com/Support/Warranty.asp> Online Registration: To expedite the warranty service, please register your Transcend Product within 30 days of purchase. 76 Register online at <http://www.transcendusa.com/registration>

All specifications are subject to change without notice. Transcend Information, Inc. [www.transcendusa.com](http://www.transcendusa.com) \*The Transcend logo is a registered trademark of Transcend Information, Inc. \*All logos and marks are trademarks of their respective companies. 77 .



[You're reading an excerpt. Click here to read official TRANSCEND](http://yourpdfguides.com/dref/3700709)

[MP860 user guide](http://yourpdfguides.com/dref/3700709)

<http://yourpdfguides.com/dref/3700709>