



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRANSCEND PF710. You'll find the answers to all your questions on the TRANSCEND PF710 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRANSCEND PF710
User guide TRANSCEND PF710
Operating instructions TRANSCEND PF710
Instructions for use TRANSCEND PF710
Instruction manual TRANSCEND PF710

USB2.0

PF710
User's Manual

Transcend
Exceeding Your Expectations



[You're reading an excerpt. Click here to read official TRANSCEND PF710 user guide](http://yourpdfguides.com/dref/3700320)
<http://yourpdfguides.com/dref/3700320>

Manual abstract:

.....
.....
.....
.....

.....
.....
.....

...10 System connection for MacTM OS 10.0 or later

.....
.....
.....
.....

.....
.....
.....
.....

.11 System connection for LinuxTM Kernel 2.4 or later.....

.....
.....
.....

.....
.....
.....
.....

...12 Home

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.... 13 Photo .

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....13 Music ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
13 Clock and Calendar

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

13 Settings

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....13 Photo .
.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

14 Thumbnail Mode.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

14 Photo View Mode.....

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.....15 Slideshow Mode .

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

...16 Music

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

19 Music Explorer.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

...19 Music Player ..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

....20 Clock and Calendar.

.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....24 Orientation ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..25 Display.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

...25 Restore defaults ..

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....26 Firmware upgrade ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

26 Troubleshooting

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 27 Specifications

.....
.....
.....

.....
.....
.....

.....
.....
.....

28 Warranty.....

.....
.....
.....

.....
.....

control you should always aim it directly at the front of your PF710 and make sure there are no obstacles in the way. All icons like PF710. shown in this User's Manual and the Quick Start Guide represent functions that you can access directly from the remote control for easy, straightforward operation of your : These menus can be directly accessed by pressing one of these shortcut buttons no matter what menu/mode the PF710 is currently in.



[You're reading an excerpt. Click here to read official TRANSCEND PF710 user guide](http://yourpdfguides.com/dref/3700320)

<http://yourpdfguides.com/dref/3700320>

: Switch between Thumbnail and Slideshow modes. : Select the item you want to view or function you want to perform. : Show additional functions available for the current mode. : Jump back to the Home menu no matter what menu/mode the PF710 is currently in. : Go back to the last page or menu. : Play/pause, or stop music.

: Rotate or zoom-in on photos displayed in Photo View mode. : Adjust music volume (up / down / mute). : Cycle between music play modes. Figure 8: Remote control 9 First Time Use Connecting to a Computer If you want to transfer pictures and music between the PF710 and your computer, connect the PF710 to a USB port on your computer using the provided Mini-B to A-Type USB cable. 1. Turn on PF710. 2. Plug the small end of the USB cable into the Mini-B USB port located on the left side of the PF710. Figure 9: Mini USB to USB A-Type Cable 3. Plug the large o open the Music Explorer.

Clock and Calendar The "Clock and Calendar" option turns your PF710 into an attractive desk clock/calendar with pictures. In this mode you can mark important dates and holidays, and even choose a festive theme to go with them (i.e. hearts for Valentine's day). Use the OSD to select "Calendar" or press calendar mode.

to enter Clock and Settings This option allows you to adjust the PF710's many settings, such as switching languages or setting the clock. Use the OSD to select the "Settings" icon or press to enter this menu option. Note: The On-Screen Display navigation menu will appear in the top area of the screen whenever any button is pressed. The menu options displayed in the OSD are mapped to the navigation buttons located behind each icon. The OSD menu will disappear after 10 seconds without button input.

13 Photo Photo has three modes: (Thumbnail mode, Photo View mode and Slideshow mode). You can use the remote control to access these modes directly or navigate to them using the OSD. Thumbnail Mode Select Photo from the Home menu or press to enter this mode. The Thumbnail Mode allows you to browse thumbnails of all photos in the current source (SD card, USB flash drive, etc.). Eight thumbnails per page will be displayed. Use the UP, DOWN, LEFT and RIGHT buttons to navigate to the thumbnail you want to view, then press OK or OSD to view the selected photo in Photo View mode. Options Figure 17: Thumbnail mode options menu Switching to Photo View mode: 1. Navigate to the photo you want to view by using the UP, DOWN, LEFT and RIGHT buttons. 2.

Click OK or to switch to Photo View mode. Note: If current item highlighted is a Motion-JPEG file it will start to play when this button is pressed. PF710 will go back to the Thumbnail mode after finishing playback of a Motion-JPEG file. Options : This menu shows list of options available in the Thumbnail mode: Add/Remove from My Favorites (PF710's internal storage), Slideshow, Photo View and Select source. 1. Click OPTION or 2. Click OK or , and use the LEFT and RIGHT buttons to select the desired function. to access the highlighted function or open its sub-menu. a. Add to My Favorites / Remove from My Favorites: Copies the currently selected photo in the Thumbnail viewer to the PF710's internal memory when the source is a memory card or USB flash drive. To remove a photo from the internal memory, select "My Favorites" as the viewing source, navigate to the desired thumbnail to remove, and then choose "Remove from 14 Photo My Favorites." b. Slideshow: Switch to Slideshow mode. c. Photo View: Switch to Photo View mode.

d. Select Source: Select the source to browse thumbnails from. The available sources are: My Favorites (internal memory), SD/MS/MMC, CF and USB flash drive. Use the LEFT and RIGHT buttons to highlight the desired storage media and click OK or Exit : Click EXIT or to go back to the Home menu. to select it. Photo View Mode You can view, zoom-in, or rotate a single photo in Photo View mode. Use the LEFT and RIGHT buttons to view the next or previous photo available. OSD Options Figure 18: Photo View options menu Switching to Slideshow mode: Click OK or while viewing a photo to switch to Slideshow mode.

Note: Motion-JPEG files will be skipped in Slideshow mode. Options: This menu shows a list of options available in the Photo View mode: Slideshow, Thumbnail, Zoom, Rotate, Themes, Background Music, Set as Clock and Calendar Picture, Save to file and Select source. 1. Click OPTION or 2. Click OK and use the LEFT and RIGHT buttons to select the desired function. to access the highlighted function or open its sub-menu. a.

Slideshow: Select this menu option or simply click mode. 15 on the remote to enter Slideshow Photo b. Thumbnail: Select this item or click on the remote to enter Thumbnail mode. c. Zoom: Select this item to choose between x1, x2 and x4 zoom modes in the Zoom submenu. You can also press on the remote to automatically zoom-in on the current photo. You . can go back to Photo View mode by pressing EXIT or d. Rotate: Select this item and choose between clockwise 90o, 180o and 270o in the Rotate submenu. Pressing will rotate the current photo clockwise 90o each time you press it.

(Rotate function only enabled at x1 zoom) e. Themes: This option brings up a submenu that lets you select theme frames to wrap around your photos while viewing in Slideshow or Photo View. Use the LEFT or RIGHT buttons to highlight None, X'mas, Halloween, Valentine's Day or New Year's Day, then click OK or to confirm. Calendar mode (and copies it to internal memory). g.

Save to file: Copy current photo (with theme) to "My Favorites." The photo and its theme will be saved as a new file in the internal memory for future access. Exit : Click EXIT or to go back to the Home menu. Slideshow Mode This mode starts slideshow playback of all photos in the selected source. Slideshow mode will play based on the settings in the Options menu.

Click the LEFT or RIGHT buttons to switch to the previous or next photo available. OSD Options Figure 19: Slideshow options menu 16 Photo f. Set as Clock and Calendar Picture: Sets current photo as the wallpaper in Clock and Switching to Thumbnail mode: Click OK or while viewing a slideshow to switch to Thumbnail mode. Options: This menu shows a list of options available in the Slideshow Mode: Thumbnail, Photo View, Background Music, Slideshow order, Slideshow Interval, Slideshow transition effects, Themes and Select Source. 1. Click OPTION or 2. Click OK or , and use the LEFT or RIGHT buttons to highlight the desired function. to access the highlighted function or open its sub-menu. a. Thumbnail: Select this item or click on the remote to jump to Thumbnail mode.

b. Photo View: Select this item to switch to Photo View mode for zoom-in and other functions. c. Background Music: Select this item to turn background music on/off, or simply click on the remote.



[You're reading an excerpt. Click here to read official TRANSCEND PF710 user guide](http://yourpdfguides.com/dref/3700320)
<http://yourpdfguides.com/dref/3700320>

Slideshow mode will remember your background music setting for next time: Selecting "Stop" or clicking will stop playing background music, and it will not play the will turn the function next time Slideshow is started. Selecting "Play/Pause" or clicking back on and music will play the next time Slideshow is started. d. Slideshow order: Select this to change the slideshow playback mode. Use the LEFT or RIGHT buttons to select Normal (continuous sequential playback) or Random (continuous random playback) in the submenu, and click OK or to confirm. e.

Slideshow Interval: Adjust the amount of time each picture stays on the screen. In the Slideshow interval submenu, use LEFT or RIGHT to highlight either: 5 secs, 10 secs, 30 secs, 1 min, 10 mins or 30 mins. Click OK or f. to confirm. Slideshow transition effects: Change the way the screen transitions between each photo.

In the Transition effects submenu, Use the LEFT or RIGHT buttons to select the desired effect and press OK or to confirm. 17 Photo Exit : Click EXIT or to go back to the Home menu. 18 Photo Music Music Explorer Choose "Music" from the Home menu or press to open the Music Explorer. The Music Explorer lets you browse for individual songs in specific folders. The directory path is shown at the top of the screen.

@@Use the UP and DOWN buttons to move to the desired folder. @@@@2. Set as My Alarm: Set the selected song as your alarm clock sound. @@@@4. Select source: Select the media source to browse and play music from. @@@@Total playing time is indicated just below the progress bar. @@@@Press to play music and again to pause. 2. Press to stop the music. 3.

@@@@@Press LEFT or RIGHT to switch to the previous or next month. @@Set Alarm: Set the alarm time as follows: a. @@b. @@The time format can be either "24H" or "AM/PM," which can be set in "Options" -> "12H/24H". c. After setting the desired alarm time, press OK or 2. Alarm on/off: Enable or disable the alarm. 3. Alarm sounds: Select the alarm sound you want to be played from a choice of five default alarm sounds or your custom "My Alarm" sound (can be any song you want). The "My Alarm" sound can be chosen in: Home -> Music -> Options -> "Set as My Alarm." 4. 12H/24H: Switch the time display style between 12-Hour (AM/PM) and 24-Hour. This setting affects all time displayed in PF710 (alarm, system time, auto on/off). 5. Important Dates: You can earmark your important dates on the calendar screen.

Follow the steps below to highlight important dates on the calendar: a. Select Important Dates from the Options menu. b. Move the cursor on the desired date and press OK to mark that day. c.

Four mark types are available and are represented by different colors: None, Birthday, Party, and Date. Choose one and press OK to confirm. 6. Picture Display Mode: Change the way pictures are shown next to the calendar: Still Picture (single photo) or Slideshow. Slideshow in clock and calendar mode will play all pictures in the selected media. The calendar still picture can be chosen in: Home -> Photo View -> Options -> "Set as Clock and Calendar Picture." to save. Figure 24: Mark important dates 22 Clock Settings In the Settings menu, you can inspect your PF710's current device status Product name, Firmware version, and free space of My Favorites (onboard memory). You can also adjust PF710's interface settings like setting the clock and changing languages. OSD Options Current firmware version Free space Figure 25: Settings menu The settings menu will appear when you select it from the Home menu or by pressing Use LEFT and RIGHT to select the setting function that you want to adjust and press OK or the submenu for that setting.

The following settings are available: on the remote. to view Language Use this function to change the interface language of PF710 (13 languages are currently available). The default language is "English." To change the Language: 1. Select the Language option from the Settings menu. 2. Use LEFT or RIGHT to highlight the desired language. 3. Press OK or immediately. to confirm the new language setting.

The new setting will be applied 4. Pressing EXIT or while in the Language menu will return to the Settings menu. 23 Settings Date/Time Setting Use this function to adjust the date/time, set auto power on/off time, and enable or disable auto power on/off on the PF710 Figure 26: Date/Time Settings Set Time: 1. Select Date/Time from the Settings menu, and use the UP or DOWN buttons to select between date, time, auto on, auto off or auto on/off timer. 2.

Press OK or to modify the selected item. a. Current Date: Change the PF710's date. Press LEFT or RIGHT to select year/month or day and UP or DOWN to adjust the value. b.

Current Time: Change the PF710's internal time. Press LEFT or RIGHT to select hour or minute and UP or DOWN to adjust the value. c. Auto on at: Set an auto power-on time for your PF710. Press LEFT or RIGHT to select hour or minute and UP or DOWN to adjust the value. d. Auto off at: Set an auto power-off time for your PF710. Press LEFT or RIGHT to select hour or minute and UP or DOWN to adjust the value. e. Auto on/off timer: Enable or disable auto power on/off.

Press UP or DOWN to adjust the value. 3. After making adjustments, press OK or to save. 24 Settings Setting Orientation You can choose whether you want PF710 to display photos vertically or horizontally with this convenient function (note: the orientation setting only applies to Photo View, Thumbnail, and Slideshow modes.) There are two orientation modes that you can put your PF710 in: Landscape mode and Portrait mode. If you want to view your PF710 photos horizontally, you can set to Landscape mode to change the orientation of PF710. If you want to stand or hang your PF710 up vertically, you should choose Portrait mode. In the Photo View mode or Slideshow mode, the picture is displayed according to the picture file's orientation information and PF710's orientation setting. If the PF710 orientation is horizontal, a landscape picture fills most of the screen and a portrait picture is shown as a pillarboxed image with black bars on either side of the picture. If the PF710 orientation is vertical, a landscape picture is shown as a letterboxed image with black bars on top and bottom, and a portrait picture fills most of the screen (If a picture file does not have any orientation information, the PF710's orientation setting will not have any effect.

) Note: PF710 preserves the original aspect ratio of all images and does not stretch them to fill the entire screen. To set the Orientation function: 1. Select Orientation from the Settings menu. 2. Use LEFT or RIGHT to highlight either "Landscape" or "Portrait.

" 3. Press OK or to confirm the new orientation. Display Use this function to adjust brightness and contrast of the screen.



[You're reading an excerpt. Click here to read official TRANSCEND PF710 user guide](http://yourpdfguides.com/dref/3700320)
<http://yourpdfguides.com/dref/3700320>

Figure 27. Display settings To adjust display settings: 1.

Select Display from the Settings menu to open the Display settings, and use the UP and DOWN buttons to highlight "brightness", "contrast" and "fullscreen."
2. Press OK or a. b. c. to modify the selected item. Brightness: Press LEFT or RIGHT to fine-tune the brightness of the screen. Contrast: Press LEFT or RIGHT to make adjustments to the screen's contrast. Fullscreen: Press UP or DOWN to enable/disable. If disabled, PF710 will preserve the 25 Settings Setting original photo aspect ratio showed in the screen.

If enabled, PF710 will enlarge the photo to fit the screen, while preserving the original aspect ratio. Depending on its dimensions, some parts of the photo may not be displayed in fullscreen mode. Note: fullscreen is only applied on horizontal photos displayed in landscape orientation or vertical photos displayed in portrait orientation. 3. After making your adjustments, press the OK button to save. Restore defaults This function is available if you want to reset your PF710's settings. Note: All settings that have been changed will return to the factory defaults. To restore default settings: 1. Select Restore defaults from the Settings menu. 2.

Use LEFT or RIGHT to highlight "Yes." 3. Press the OK button or to confirm. 4. After the process is finished, the Settings menu will be displayed again.

Firmware upgrade Use this function to keep your PF710 up to date. To upgrade the firmware: 1. Insert a storage device such as a USB flash drive or SD/SDHC/MMC/MS/CF memory card that contains a newer version of firmware. 2. Select Firmware upgrade from the Settings menu and press OK to start the firmware detection process.

PF710 will automatically find the new firmware file. 3. If PF710 finds that a newer version of firmware is available, a "Yes / No" selection message will be shown. Use LEFT or RIGHT to select "Yes" and press OK or 4. The latest firmware version is available on the Transcend website. Note: Do not remove the power cord or any storage devices while the firmware is being upgraded. If firmware upgrade fails and the PF710 will not turn on, please contact Transcend customer support. to perform the system upgrade. If you do not want to upgrade, press "No" to return to the Settings menu. 26 Settings Troubleshooting FAQ
If a problem occurs with your PF710 please first check the information listed below before sending your PF710 in for repair.

If you are unable to remedy a problem from the following hints, please consult your dealer, service center, or local Transcend branch office. We also have FAQ and Support services on our websites. For any Hardware issues please consult the PF710 User's Manual. Q: I cannot turn my Transcend PF710 on. You may not be holding down the Power button long enough. Please press and hold the Power button for at least 3 seconds. If that doesn't solve the problem, please check to make sure your PF710 is connected securely to the DC adapter, and that the adapter is plugged into a wall socket. Q: My computer's operating system cannot detect my PF710. Check the following: 1. Is your PF710 properly connected to the USB port? If not, unplug it and plug it in again. Make sure the USB port is connected on both ends, as shown in the User's Manual. 2. Is your PF710 connected to the Mac keyboard? If yes, unplug it and plug it into an available USB port on your Mac Desktop. 3. Is the USB port enabled? If not, refer to the user's manual of your computer (or motherboard) to enable it.

Q: I was using my PF710, now no buttons are responding (hangs/lags/stalls). Try unplugging the DC power adapter from your PF710, then reconnecting it to your PF710 again. Q: I have connected my PF710 to the computer, but the PF710 does not appear as a new drive in my operating system? Verify the DC power adapter is connected to your PF710 and that the PF710 power is turned on. If not, turn it on and then connect the PF710 to the computer again. Please make sure your operating system meets the Transcend PF710 system requirements described in the "Introduction" section.

Q: My PF710 cannot read photos on my memory card or the built-in memory. 1. Make sure the memory card that is supported by the PF710. 2. Ensure that the memory card is correctly inserted all the way into its appropriate slot. 3. Edited and deformed photos may not display properly on PF710. Some digital cameras save images into non-standard formats - please check your camera's user manual for specifics. 27 Troubleshooting Specifications Panel: Speaker: Headphone: USB Interface: Storage: Data Retention: Navigation: Remote control: Dimension: Weight: Power Supply Input: Picture Formats: Music Formats: Compression Rates: Certificates: Warranty: Device: 2-years 7" TFT LCD, 480x234 pixels L / R speaker, 0.5w 3.

5mm, 32 ohm A-Type x1, mini-B x1 1GB NAND Up to 10 years 7 buttons, volume control wheel Infrared, NEC protocol 219.0 mm × 156.0 mm × 28.0 mm 430g 100 ~ 240 V 1.0A, Output: 5V DC 2.0A DSC JPEG, motion JPEG, BMP(W:800 x H:600) MP3, WMA (No DRM support), WAV 32Kbps320Kbps CE, FCC, BSMI Panel: 1-year, no more than 4 defect pixels Ordering Information Device Description PF710 PF710C Memory Size 1GB 1GB Transcend P/N TS1GPF710 TS1GPF710C 28 Specifications Transcend Limited Warranty "Above and Beyond" is the standard we set ourselves for customer service at Transcend. We consistently position ourselves to be significantly above the industry norm, which is all part of our commitment to Customer Satisfaction. All Transcend information, Inc. (Transcend) products are warranted and tested to be free from defects in material and workmanship and to conform to the published specifications. During the warranty period should your Transcend PF710 fail under normal use in the recommended environment due to improper workmanship or materials, Transcend will repair the product or replace it with a comparable one.

This warranty is subject to the conditions and limitations set forth herein. Warranty Period: The Transcend PF710 warranty period is two years from the date of purchase (One-year screen warranty: Within one year of the purchase date, Transcend will replace or repair PF710 screens with four or more defective pixels). Transcend reserves the right to determine whether repair or replacement is suitable upon inspection of the product. The decision made by Transcend whether to repair or replace the product will be final. Additionally, Transcend reserves the right to provide a functionally equivalent refurbished replacement product.

Limitations: This warranty does not apply to product failure caused by accidents, abuse, mishandling, improper installation, alteration, acts of nature, improper usage, or problems with electrical power. @@@@Transcend shall in no event be liable for any consequential, indirect, or incidental damages, lost profits, lost business investments, lost goodwill, or interference with business relationships as a result of lost data.



[You're reading an excerpt. Click here to read official TRANSCEND PF710 user guide](http://yourpdfguides.com/dref/3700320)
<http://yourpdfguides.com/dref/3700320>

Transcend is also not responsible for damage or failure of any third party equipment, even if Transcend has been advised of the possibility. This limitation does not apply to the extent that it is illegal or unenforceable under applicable law. Disclaimer: The foregoing limited warranty is exclusive. There are no other warranties, including any implied warranty of merchantability or fitness for a particular purpose. This warranty is not affected in any part by Transcend providing technical support or advice. Please read Transcend's Warranty Policy in full to understand your rights. Transcend Warranty Policy: <http://www.transcendusa.com/Support/Warranty.asp> Online Registration: To expedite the warranty service, please register your Transcend Product within 30 days of purchase. Register online at <http://www.transcendusa.com/registration> The specifications mentioned above are subject to change without notice.

www.transcendusa.com *The Transcend logo is a registered trademark of Transcend Information, Inc. *All logos and marks are trademarks of their respective companies. 29 Warranty Transcend Information, Inc. Terminology desktop

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....7 Desktop...

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....2 This is a single user stationary computer running the Windows®, Mac™, or Linux™ Operating System. driver.....

.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.3 drivers....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

3 A software program that allows a hardware device to communicate with a computer operating system. FAQ

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

..2, 9 Linux is one of the most prominent examples of free software and open source operating system. Mac OS..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..2, 8 Macintosh is a personal computer made by Apple. Mac OS is the operating system. Mini USB .

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

....7 notebook.

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
2, 7 A portable lightweight computer capable of running off of battery power. OSD

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.10, 11 On Screen Display icon. USB ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.....
.....
.....2, 3, 5, 7, 11,13 USB A-Type ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..7 USB port

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..7 Universal Serial Bus is a hardware interface found on all modern computers for connecting peripherals. USB 2.0 is Hi-Speed version of USB interface, capable of data transfer speeds up to 480Mbits per second. Windows

.....
.....
.....

.....
.....
.....

.....
.....

.....
.....
.....
.....
.....
.....
.....
.....
.....

.2, 7 Computer Operating System developed by Microsoft. 30 Terminology .



[You're reading an excerpt. Click here to read official TRANSCEND PF710 user guide](http://yourpdfguides.com/dref/3700320)
<http://yourpdfguides.com/dref/3700320>