



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRANSCEND PF830. You'll find the answers to all your questions on the TRANSCEND PF830 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual TRANSCEND PF830**  
**User guide TRANSCEND PF830**  
**Operating instructions TRANSCEND PF830**  
**Instructions for use TRANSCEND PF830**  
**Instruction manual TRANSCEND PF830**

## User's Manual

 **Digital Photo Frame**



PF830

 **Transcend®**

Version 1.3



[You're reading an excerpt. Click here to read official TRANSCEND PF830 user guide](http://yourpdfguides.com/dref/3700765)  
<http://yourpdfguides.com/dref/3700765>

**Manual abstract:**

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*... 7 Using a memory card or USB flash drive .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.. 7 Built-in Speaker .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*.. 8 Navigation Buttons .....*

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

*. 8 Quick Menu....*

.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*... 8 Options Menu .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....

*..... 9 Adjusting the Volume....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....

*.. 9 Remote Control ...*

.....

.....  
.....  
.....  
.....

.....  
.....

.....  
.....

.....  
.....  
.....

.....  
.....

*10 Connecting to a Computer .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

*11 Windows® 2000, XP, Vista and 7 .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....

*. 11 Mac® OS 10.0 or later .....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*12 Linux® Kernel 2.4 or later ....*

.....  
.....

.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
*... 13 Photo Modes .....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
*14 Thumbnail Mode.....*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
*.. 14 Photo View Mode...*

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....

.....  
.....  
.....  
.....



.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*...29 Troubleshooting..*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*36 Specifications .....*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*.....37 Ordering Information .....*

.....

.....

.....

.....

.....

.....

.....

.....

.....





Once the stand is attached, the Photo Frame may be positioned vertically or horizontally (Landscape or Portrait orientation) 3. Connect the power adapter cable to the DC power input jack on your Photo Frame. 4. Plug the power adapter into a wall outlet. 5. The Photo Frame will automatically turn on. If it is already plugged in, press the power button on the back of Photo Frame, or press on the remote control. 6. To remove the Tabletop Stand, simply twist it counter-clockwise to unscrew it from the Photo Frame. 6 Switching between Portrait and Landscape mode The Photo Frame can be placed on a table vertically (Portrait mode) or horizontally (Landscape mode).

When the Photo Frame is rotated, its intelligent AOS (Automatic Orientation Sensor) will automatically adjust images and the graphical user interface for correct display. The directional buttons will also automatically adjust for easy menu navigation. Using a memory card or USB flash drive 1. Insert a memory card or USB flash drive into its appropriate slot on the Photo Frame.



[You're reading an excerpt. Click here to read official TRANSCEND](#)

[PF830 user guide](#)

<http://yourpdfguides.com/dref/3700765>





"/ or buttons to highlight "Brightness", "Contrast", "Fullscreen", "Optimize My Favorites Image to process modification or enter submenu of the selected item (Brightness and Contrast changes take effect immediately) Brightness: press / or on the remote to fine-tune the brightness of the screen. 29 Contrast: Press / to make adjustments to the screen's contrast. Fullscreen: Press or to enable or disable.

If disabled, Photo Frame will preserve the original dimensions of the image on the screen. If enabled, Photo Frame will enlarge the photo to fit the screen, while preserving its original aspect ratio. Depending on its dimensions, some parts of the photo may not be displayed in fullscreen mode. Note: fullscreen is only applied on horizontal photos displayed in landscape orientation or vertical photos displayed in portrait orientation. Fullscreen displayed image Undisplayed portion Fullscreen disabled Fullscreen enabled Optimize My Favorites Image Size: When this option is enabled, the "Add to My Favorites" function will resize all photos to the Photo Frame's native 800x600 resolution to maximize storage space. Color Mode: This setting adjusts the color of the Photo Frame's screen. Highlight Color Mode and press OK to display a preview image of what your photos will look like. Use the confirm. 3. After making your adjustments, press to save.

or keys to choose between the three Color Modes: Natural, Standard, and Vivid, then press OK to NOTE: The Photo Frame always preserves the original aspect ratio of all images based on each picture file's orientation information (EXIF), and NEVER stretches them to fill the entire screen. An easy, distortion-free way to remove the black bars from the top/bottom or sides of an image is to use the Fullscreen option mentioned above, or the Zoom function. The way photos are displayed depends on the Photo Frame's orientation (see graph below) 30 Detected Photo Type (EXIF) Fullscreen Mode Photo Frame Orientation Horizontal Vertical Disabled Enabled Disabled Enabled Landscape (A) Portrait (B) Alarm The alarm function lets you use your Photo Frame like an alarm clock you can even wake up to your favorite MP3 song in the morning. 1. Select Alarm from the Settings menu, and use the 2. Press ··· to modify the selected item. / or / buttons to highlight alarm on/off, alarm time, alarm sound, alarm volume, alarm mode or sleep timer. Alarm On/Off: Enable (on) or disable (off) the alarm. Alarm Time: Press or to switch between hour and minute, and or to adjust the value. NOTE: "24H" or "AM/PM" can be changed in "Settings > Date/Time > 12H/24H" Alarm Sound: Press / or / to select from a choice of five default alarm sounds or your own personalized "Music Alarm" (can be any song you want).

The "Music Alarm" sound can be chosen in: Music > Options > Set as Music Alarm. Alarm Volume: Press or to adjust the alarm volume. ·· Alarm Mode: This function allows you to adjust how often you want the alarm to go off. You can select from 4 reoccurring alarm modes: Daily (Default), Weekdays, Weekends, and Once. 31 · Sleep Timer: Press / or / to enable a sleep timer to shutdown the Photo Frame on the remote.

When the after a specified amount of time. Available options are: 15 / 30 / 45 / 60 / 90 / 120 minutes and Disable. You can also enable the sleep timer by pressing specified time is about to expire, a "Press [SLEEP] button on remote to disable" message will appear. NOTE: To set Photo Frame to turn on or off automatically on a daily basis, please use the "Auto-ON/OFF" feature in: Settings > Date / Time > Auto ON/OFF 3. After making adjustments, press to save. Date / Time This option lets you adjust the current date and time and set your Photo Frame to automatically turn on and off every day at a specific time. The Auto-ON/OFF timer is a convenient way to save power at night. 1. Select Date/Time from the Settings menu, and use the /// buttons to select between current date, current time, 12H/24H, auto-on, auto-off or auto-on/off timer. 2. Press ·· to modify the selected item. or or to select between year, month or day, and press to select hour or minute and or or Current Date: Press to adjust the value. Current Time: Press to adjust the value. · 12H / 24H: Press or to switch between 12-Hour (AM/PM) and 24-Hour clock display. This setting affects all time displayed in Photo Frame (alarm, system time, auto-on/off).

32 ··· Auto On at: Set a daily auto power-on time. Press or or to adjust the value. Auto Off at: Set a daily auto power-off time. Press to adjust the value. or Auto On/Off timer: Press or or to select hour or minute and to select hour or minute and to enable or disable the auto power on/off function. to save. 3. After making adjustments, press Startup Mode This option lets you set the default mode (Slideshow, Photo View or Video) that you want the Photo Frame to start using each time it is powered on. 1. Select Startup mode from the Settings menu 2.

Use the 3. Press / buttons to select between Slideshow, Photo View or Video. to confirm the new startup mode. Language Use this function to change the interface language of Photo Frame (13 languages are currently available). The default language is "English.

" To change the Language: 1. Select the Language option from the Settings menu. 2. Use /// buttons to highlight the desired language. 33 3.

Press to confirm the new language setting. The new setting will be applied immediately. Restore Defaults This function is available if you want to reset your Photo Frame's settings. Note: All settings that have been changed will return to the factory defaults. 1. Select Restore defaults from the Settings menu. 2. Use the 3. Press or buttons to highlight "Yes." to confirm.

4. After the process is finished, the Settings menu will be displayed again. Upgrade Firmware Use this function to keep your Photo Frame up to date with the latest version from Transcend (available on the Transcend website. 1. Insert a storage device such as SD/SDHC memory card that contains a newer firmware version for your Photo Frame. 2. Select Firmware upgrade from the Settings menu and press process. Photo Frame will automatically find the new firmware file. 3. If Photo Frame finds that a newer version of firmware is available, a "Yes / No" selection message 34 to start the firmware detection will be shown. Press or to select "Yes" and press to perform the system upgrade. If you do not want to upgrade, press "No" to return to the Settings menu. Note: NEVER remove the power cord or any storage devices while the firmware is being upgraded.



[You're reading an excerpt. Click here to read official TRANSCEND](http://yourpdfguides.com/dref/3700765)

[PF830 user guide](http://yourpdfguides.com/dref/3700765)

<http://yourpdfguides.com/dref/3700765>

If firmware upgrade fails and the Photo Frame will not turn on, please Photo Frame contact Transcend customer support. 35 Troubleshooting If a problem occurs with your Photo Frame please first check the information listed below before sending your Photo Frame in for repair.

If you are unable to remedy a problem from the following hints, please consult your dealer, service center, or local Transcend branch office. We also have FAQ and Support services on our websites. For any Hardware issues please consult the Photo Frame User's Manual. I cannot turn my Transcend Photo Frame on Your remote control's battery may be low. Try pressing the power button located on the back of the Photo Frame.

If that doesn't solve the problem, please check to make sure your Photo Frame is connected securely to the AC adapter, and that the adapter is plugged into a wall socket. My computer's operating system cannot detect my Photo Frame Check the following: 1. Is your Photo Frame properly connected to the USB port? If not, unplug it and plug it in again. Make sure the USB port is connected on both ends, as shown in the User's Manual. 2. Is your Photo Frame connected to the Mac keyboard? If yes, unplug it and plug it into an available USB port on your Mac Desktop. 3. Is the USB port enabled? If not, refer to the user's manual of your computer (or motherboard) to enable it. I was using my Photo Frame, now no buttons are responding (hangs/lags/stalls) Try unplugging the AC adapter from your Photo Frame, then reconnecting it to your Photo Frame again. I have connected my Photo Frame to the computer, but the Photo Frame does not appear as a new drive in my operating system Verify the AC adapter is connected to your Photo Frame and that the Photo Frame power is turned on.

If not, turn it on and then connect the Photo Frame to the computer again. Please make sure your operating system meets the Transcend Photo Frame system requirements described in the "Introduction" section. My Photo Frame cannot read photos on my memory card or the built-in memory 1. Make sure the Photo Frame supports the memory card type. 2. Ensure that the memory card is correctly inserted all the way into its appropriate slot. 3. Edited and deformed photos may not display properly on Photo Frame. Some digital cameras save images into non-standard formats - please check your camera's user manual for specifics. How can I display video files on my Photo Frame? The Photo Frame only displays certain video formats.

Please see the Photo Frame FAQ on the Transcend website for instructions how to encode your video files to the Photo Frame's format. Can I delete files on my USB flash drive or memory card with the Photo Frame? The Photo Frame cannot directly delete any files on a USB flash drive or memory card. However, you can connect the Photo Frame to a computer and use the computer to delete files on memory devices that are plugged-in to the Photo Frame. Why does the time and date reset after unplugging the AC adapter? If you unplug the Photo Frame for a long time, its internal backup battery will eventually drain.

Typically, the Photo Frame can keep your time and date for about 2~3 days after unplugging the AC power adapter.

36 Specifications Panel: Speaker: USB Interface: Internal Storage: Data Retention: Navigation: Remote Control: Dimensions: Power Supply: Operating Temperature Image Formats: Video Formats: Music Formats: Supported Music Bit Rates: Certificates: Warranty: 8" 4:3 TFT LCD, 800x600 pixels Single 0.5W speaker 1 x standard A-type, 1 x mini B-type 2GB NAND Flash Up to 10 years 8 rear-mounted buttons and remote control Infrared, NEC protocol 212mm x 172mm x 39mm Input: 100V~ 240V 0.3A, Output: 5V DC 2.0A 0°C (32°F) ~ 40°C (104°F) DSC JPEG (up to 9000 x 6750), Motion JPEG. (AVI & MOV; up to 720x480 @ 30FPS) MP3, WMA (Non-DRM), WAV 32Kbps/320Kbps (MP3) 32Kbps/192Kbps (WMA) CE, FCC, BSMI Panel: 1-year Device: 2-years Ordering Information Device Description PF830 White PF830 Black PF830 White (Japan version) PF830 Black (Japan version) Memory Size 2GB 2GB 2GB 2GB Transcend P/N TS2GPF830W TS2GPF830B TS2GPF830W-J TS2GPF830B-J 37 Recycling & Environmental Considerations Recycling the Product (WEEE): Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC: Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potential negative consequences on the environment and human health. Battery Disposal: Your product contains a built-in rechargeable battery covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health. @@@@All Transcend information, Inc. @@During the warranty period should your Transcend Photo Frame fail under normal use in the recommended environment due to improper workmanship or materials, Transcend will repair the product or replace it with a comparable one. This warranty is subject to the conditions and limitations set forth herein. Warranty Period: The Transcend Photo Frame warranty period is two years from the date of purchase (Note: Power Adapter warranty period is one year from the date of purchase).

Pixel Policy: Within one year of the purchase date, Transcend will replace or repair an LCD-equipped product when less than 99.99% of its pixels are functional). Transcend reserves the right to determine whether repair or replacement is suitable upon inspection of the product. The decision made by Transcend whether to repair or replace the product will be final. Additionally, Transcend reserves the right to provide a functionally equivalent refurbished replacement product. Limitations: This warranty does not apply to product failure caused by accidents, abuse, mishandling, improper installation, alteration, acts of nature, improper usage, or problems with electrical power. In addition, opening or tampering with the product casing, or any physical damage, abuse or alteration to the product's surface, including all warranty or quality stickers, product serial or electronic numbers will also void the product warranty. This warranty only applies to the product itself, and excludes all product accessories, including, but not limited to: card adapters, cables, earphones, power adapters, and remote controls, which must be exchanged within seven days of the purchase date if defective. Transcend is not responsible for recovering any data lost due to the failure of a hard drive device.



[You're reading an excerpt. Click here to read official TRANSCEND PF830 user guide](http://yourpdfguides.com/dref/3700765)  
<http://yourpdfguides.com/dref/3700765>



*Transcend's Photo Frame must be used with devices that conform to the recommended industry standards.*

*Transcend will not be liable for damages resulting from a third party device that causes the Transcend Photo Frame to fail. Transcend shall in no event be liable for any consequential, indirect, or incidental damages, lost profits, lost business investments, lost goodwill, or interference with business relationships as a result of lost data. Transcend is also not responsible for damage or failure of any third party equipment, even if Transcend has been advised of the possibility. Disclaimer: The foregoing limited warranty is exclusive. There are no other warranties, including any implied warranty of merchantability or fitness for a particular purpose.*

*This warranty is not affected in any part by Transcend providing technical support or advice. Please read Transcend's Warranty Policy in full to understand your rights. Transcend Warranty Policy: <http://www.transcendusa.com/Support/Warranty>.*

*asp Online Registration: To expedite the warranty service, please register your Transcend Product within 30 days of purchase. Register online at <http://www.transcendusa.com/productregister> The specifications mentioned above are subject to change without notice. Transcend Information, Inc. [www.transcendusa.com](http://www.transcendusa.com) \*The Transcend logo is a registered trademark of Transcend Information, Inc. \*All logos and marks are trademarks of their respective companies. 39 .*



[You're reading an excerpt. Click here to read official TRANSCEND PF830 user guide](http://yourpdfguides.com/dref/3700765)

<http://yourpdfguides.com/dref/3700765>