



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRENDNET TEW-638PAP. You'll find the answers to all your questions on the TRENDNET TEW-638PAP in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRENDNET TEW-638PAP
User guide TRENDNET TEW-638PAP
Operating instructions TRENDNET TEW-638PAP
Instructions for use TRENDNET TEW-638PAP
Instruction manual TRENDNET TEW-638PAP



[You're reading an excerpt. Click here to read official TRENDNET TEW-638PAP user guide](http://yourpdfguides.com/dref/3180956)
<http://yourpdfguides.com/dref/3180956>

Manual abstract:

01 Table of Contents English 1. Before You Start 2. Hardware Installation 3. Power-over-Ethernet Installation Troubleshooting 1 1 2 8 10 Version 01.08.2010 1. Before You Start Package Contents TEW-638PAP ? ? Multi-Language Quick Installation Guide ? CD-ROM (Utility and User's Guide) ?Adapter (12V DC, 0.5A) AC Power ? Cat. 5 Ethernet Cable (0.6m / 2ft.)
) System Requirements Web Browser: Internet Explorer (6 or higher) ? ? with a network adapter or wireless adapter properly installed A computer ? an available network LAN port A router with ? DHCP Server routers usually have a built-in DHCP server An available ? Ethernet (PoE) Switch (e.g. TPE-80WS) (Optional) Power over ? TPE-111GI) (Optional) Injector (e.g. Note: The TEW-638PAP only works with Power over Ethernet (PoE) devices that follow the IEEE 802.
3af standard. 1 2. Hardware Installation Note: 1. Locate an optimum location for the Access Point. The best place for the Access Point is usually at the center of your wireless network.
2. Disable any anti-virus and firewall programs before starting hardware installation. 3. For Power-Over-Ethernet installation instructions, please refer to section 3. Power-Over-Ethernet installation. For Windows Users 1. Insert Utility CD-ROM into your computer's CD-ROM drive. 2. Click Run Setup.exe (Windows 7/Vista only) 3.
Click Setup Wizard. 4. @@@@Then click Next. 6. @@@@Select the TEW-638PAP from the list and then click Configure. 3 9. Enter a password and then click Login. The default password is admin. 10. Select Access Point and then click Next.
Note: For AP Client setup, please refer to the User's Guide for step by step instructions. The User's Guide can be found on this product's CD-ROM. 11. Select Dynamic IP Address Configuration and then click Configure. 12.
Select Manual setup and then click Next. 4 13. Enter a SSID and then click Next. By default, the SSID is TRENDnet638PAP. 14.
Select the desired Wireless Mode and then click Next. 15. Select a Security Mode and then click Next (example shows WPA-PSK). 16. Select the desired WPA mode, enter characters for your Pre-Shared key and then click Next. For WPA-PSK or WPA2-PSK, the Pre-Shared Key must be between 8 and 63 ASCII or 64 HEX characters. Make sure to copy down the Pre-Shared Key. 5 17. Click Save (optional). 18.
Give the file a name, then click Save (optional). 19. Click Configure to apply the settings. 20. Click Exit. 6 21. Click Yes to exit. 22. Connect the 2dBi detachable antennas to the TEW-638PAP. Note: to connect a wireless computer to the TEW-638PAP, please refer to the first question in the troubleshooting section.
Your Installation is complete For detailed information regarding the TEW-638PAP's configuration and advanced settings, please refer to the Troubleshooting section, User's Guide on the Utility CD-ROM, or TRENDnet's website at <http://www.trendnet.com>. Register Your Product To ensure the highest level of customer service and support, please take a moment to register your product Online at: www.trendnet.com/register Thank you for choosing TRENDnet 7 3. Power-over-Ethernet Installation Using the TEW-638PAP with a PoE switch 1. Connect a RJ-45 cable from the Power-OverEthernet Switch (e.g. TRENDnet TPE-80WS) to the LAN port on the Access Point.
2. Verify that the wireless, LAN, and power LEDs are on. 8 Using the TEW-638PAP with the TPE-111GI 1. Connect the Power Cord to the Injector. 2. Connect the Injector to the DC 48V IN connector on the TPE-111GI. Then connect the Power Cord to an outlet. 3. Connect a CAT-5 cable from a switch to the TPE-111GI's DATA IN port. 4.
Connect a CAT-5 cable from the TEW-638PAP's LAN port to the TPE-111GI's POE OUT port 5. Verify that the wireless, LAN, and power LEDs are on. 9 Troubleshooting 1. All the settings are correct, but I can not make a wireless connection to the Access Point. 1. Double check that the wireless LED on the Access Point is lit. 2. Power cycle the Access Point. Unplug the power to the Access Point. Wait 15 seconds, then plug the power back in.
3. Contact the manufacturer of your wireless network adapter. Make sure the wireless network adapter is configured with the proper SSID. The default SSID of the Access Point is TRENDnet638PAP. If you have enabled any encryption on the Access Point, make sure to configure the wireless network adapter with the same Pre-shared key.
2. @@What should I do? From a wired computer, log on to the access point configuration page. Click Wireless -> Security. The encryption key will be listed here. 3.
@@How do I setup WPS between the TEW-638PAP and my wireless adapter? 1. @@2. Refer to your wireless adapters for instructions on setting up WPS. 4. @@What should I do 1. @@@@3. @@@@What should I do? 1. @@@@2. @@6. I followed the Quick Installation Guide and setup a new password.
@@What should I do? The default user name is admin and the default password is admin. @@Do not leave the user name field blank. 7. How do I configure AP Client mode on the TEW-638PAP? Please refer to the User Guide. The User Guide is on the provided CD-ROM. 8. @@What should I do? 1. @@2. Power cycle the PoE switch. @@3.
Plug the device into a different port on the PoE switch. 4. Try using another Cat-5e cable. @@@@TRENDnet does not provide technical support for these codes. @@@@You could also request the source codes by contacting TRENDnet.
20675 Manhattan Place, Torrance, CA 90501, USA. Tel: +1-310-961-5500 Fax: +1-310-961-5511. Informations gnrales GPL/LGPL Ce produit TRENDnet comprend un logiciel libre crit par des programmeurs tiers. Ces codes sont sujet la GNU General Public License ("GPL" Licence publique gnrale GNU) ou la GNU Lesser General Public License ("LGPL" Licence publique gnrale limite GNU). Ces codes sont distribus SANS GARANTIE et sont sujets aux droits d'auteurs des programmeurs.
TRENDnet ne fournit pas d'assistance technique pour ces codes. Les dtails concernant les GPL et LGPL GNU sont repris sur le CD-ROM du produit. Veuillez galement vous rendre en (<http://www.gnu.org/licenses/gpl.txt>) ou en (<http://www.gnu.org/licenses/lgpl.txt>) pour les conditions spcifiques de chaque licence. Les codes source sont disponibles au tlchargement sur le site Internet de TRENDnet web site (http://trendnet.com/downloads/list_gpl.asp) durant au moins 3 ans partir de la date d'expdition du produit. Vous pouvez galement demander les codes source en contactant TRENDnet. 20675 Manhattan Place, Torrance, CA 90501, USA. Tel: +1-310-961-5500 Fax: +1-310-961-5511 Allgemeine Informationen zu GPL/LGPL Dieses Produkt enthlt die freie Software "netfilter/iptables" (2000-2004 netfilter project <http://www.netfilter.org>) und die freie Software „Linux „mtd" (Memory Technology Devices) Implementation (2000 David Woodhouse), erstmals integriert in Linux Version 2.4.0-test 3 v. 10. 07.2000 (<http://www.kernel.org/pub/linux/kernel/v2.4/old-test-kernels/linux-2.4.0test3.tar.bz2>), sowie weitere freie Software.



[You're reading an excerpt. Click here to read official TRENDNET
TEW-638PAP user guide
http://yourpdfguides.com/dref/3180956](http://yourpdfguides.com/dref/3180956)

Sie haben durch den Erwerb dieses Produktes keinerlei Gewährleistungsansprüche gegen die Berechtigten an der oben genannten Software erworben; weil diese die Software kostenfrei lizenzieren gewähren sie keine Haftung gem unten abgedruckten Lizenzbedingungen.
Die Software darf von jedermann im Quell-und Objektcode unter Beachtung der Lizenzbedingungen der GNU General Public License Version 2, und GNU Lesser General Public License (LGPL) vervielfältigt, verbreitet und verarbeitet werden. Die Lizenz ist unten im englischsprachigen Originalwortlaut wiedergegeben. Eine nichtoffizielle Übersetzung in die deutsche Sprache finden Sie im Internet unter (<http://www.gnu.de/documents/gpl-2.0.de.html>). Eine allgemeine öffentliche GNU Lizenz befindet sich auch auf der mitgelieferten CD-ROM. Sie können Quell-und Objektcode der Software für mindestens drei Jahre auf unserer Homepage www.trendnet.com im Downloadbereich (http://trendnet.com/langen/downloads/list_gpl.asp) downloaden. @@@@Estos cdigos son distribuidos SIN GARANTIA y estn sujetos a las leyes de propiedad intelectual de sus desarrolladores. TRENDnet no ofrece servicio técnico para estos cdigos. Los detalles sobre las licencias GPL y LGPL de GNU se incluyen en el CDROM del producto. Consulte también el (<http://www.gnu.org/licenses/gpl.txt>) para ver las cláusulas específicas de cada licencia. Los cdigos fuentes estn disponibles para ser descargados del sitio Web de TRENDnet (http://trendnet.com/downloads/list_gpl.asp) durante por lo menos tres años a partir de la fecha de envío del producto. También puede solicitar el código fuente llamando a TRENDnet. 20675 Manhattan Place, Torrance, CA 90501, USA. Tel: +1-310-961-5500 Fax: +1-310-961-5511 GPL/LGPL TRENDnet . . GNU General Public License.



[You're reading an excerpt. Click here to read official TRENDNET TEW-638PAP user guide](#)
<http://yourpdfguides.com/dref/3180956>