



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRENDNET TEW-715APO. You'll find the answers to all your questions on the TRENDNET TEW-715APO in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual TRENDNET TEW-715APO**  
**User guide TRENDNET TEW-715APO**  
**Operating instructions TRENDNET TEW-715APO**  
**Instructions for use TRENDNET TEW-715APO**  
**Instruction manual TRENDNET TEW-715APO**



**N150 Wireless Outdoor PoE Access Point  
TEW-715APO**

• Quick Installation Guide (1)

TEW-715APO (V1.0R) / 08.23.2012



[You're reading an excerpt. Click here to read official TRENDNET TEW-715APO user guide](http://yourpdfguides.com/dref/4574553)  
<http://yourpdfguides.com/dref/4574553>

**Manual abstract:**

0R) / 08.23.2012 1. Before You Start Package Contents □ TEW-715APO □ CD-ROM (User's Guide) □ Multi-Language Quick Installation Guide □ PoE injector □ Power cord □ Pole mounting clamp □ Grounding wire Minimum Requirements □ Computer with an Ethernet port and Web Browser □ A network switch or router with an available network LAN port □ 2 x RJ-45 network cables Note: The TEW-715APO does not support IEEE 802.3af. You must use the proprietary Power over Ethernet injector that is supplied with the TEW-715APO. 2. Hardware Configuration Note: 1. The default IP address of the

TEW-715APO is 192.168.

10.100. To configure the TEW-715APO, your network adapter must have an IP address within the 192.168.10.  
x subnet (e.g. 192.168.10.

50). Please refer to the Appendix in the User's Guide for more information. 2. @@@@ (5 meters) apart from one another. 2. Configure and connect the devices before mounting. TEW-715APO 2 1. Write the MAC address of the two TEW-715APOs. The MAC address can be found on the back of the unit. 9.

Open your web browser, type the IP address of the access point in the address bar, and then press Enter. The default IP address is 192.168.10.100 2. Pinch the tab and slide the cover down. 10. Enter the User name and Password, and then click Login. By default: User Name: admin Password: admin Note: User Name and Password are case sensitive. 11.

Click Wireless and then click Basic Settings. 3. Connect one end of a network cable into the TEW-715APO #1. □ Remove the bottom cover and connect a network cable to the PoE port. 4.

@@5. @@6. @@7. Connect the power adapter into the Power over Ethernet Injector. Then connect the power adapter into a power outlet. 8. Assign a Static IP address to your computer's network adapter in the subnet of 192.168.10.x (e.g. 192.168.10.25) and a subnet mask of 255.

255.255.0. 12. Select Bridge for Operation Mode. 13. Click Apply. 3 14. Click OK. 21.

Click Back. 15. Click Wireless and then click WDS Settings. 22. Click System and then click Network Settings.

23. Select Use Fixed IP Address. 16. Click Enabled for WDS Separation. 17.

Enter the MAC address of the TEW-715APO that you are connecting to. 18. Click Apply. 24. Configure the TEW-715APO's IP address to a valid IP address within the subnet defined by the Router. Avoid using an IP address within the DHCP pool of your router. In this example, we will assume the following:  
Router IP Address: 192.168.10.1 Subnet Mask: 255.

255.255.0 DHCP Pool: 192.168.10.100~192.168.10.199 The TEW-715APO will be setup with the following IP address assignment: 19. Click OK.

20. Please refer to the user manual for the steps in setting up wireless encryption. Note: To protect your network from any unauthorized access it is recommended to enable wireless encryption. 4 IP Address: 192.168.

10.200 Subnet Mask: 255.255.255.0 Gateway IP Address: 192.

168.10.1 DNS 1: 192.168.10.1 25. Click Apply. 26. Click OK. 27.

@@@ Leave TEW-715APO #2 connected to your computer. 2. Connect TEW-715APO #1 to a LAN port of a router on your network. 3. @@@@ Refer to the above diagram. 2. Mount the TEW-715APOs in your desired location. See Pole Mounting the TEW-715APO for mounting instructions. 3. Connect the TEW-715APOs to their respective network. 4. Confirm that the TEW-715APOs are facing each other. 5. @@@@ Loosen and remove the metal O-ring on the N-type connector.

2. @@@@ Connect the grounding wire to a grounding object. e.g. Earth driven rod or grounded electrical system.

7 Pole Mounting the TEW-715APO Note: The pole mounting clamp supports poles with a maximum diameter of 63mm (2.48 inches). 1. Turn the screw on the pole mounting clamp counter clockwise. 3. Wrap the mounting clamp around a pole. 2. Insert the pole mounting clamp through the middle of the TEW-715APO. 4. Secure the TEW-715APO to pole by turning the screw clockwise.

Wireless outdoor access point installation is now complete. For detailed information regarding the TEW-715APO's configuration and advanced settings and mounting instructions, please refer to the User's Guide on the provided CD-ROM. 8 GPL/LGPL General Information This TRENDnet product includes free software written by third party developers. These codes are subject to the GNU General Public License ("GPL") or GNU Lesser General Public License ("LGPL"). These codes are distributed WITHOUT WARRANTY and are subject to the copyrights of the developers. TRENDnet does not provide technical support for these codes. @@@@ You could also request the source codes by contacting TRENDnet. 20675 Manhattan Place, Torrance, CA 90501, USA.

@@@@@ TRENDnet ne fournit pas d'assistance technique pour ces codes. @@@@@@ 20675 Manhattan Place, Torrance, CA 90501, USA.

@@@@@ Die Lizenz ist unten im englischsprachigen Originalwortlaut wiedergegeben. Eine nichtoffizielle Übersetzung in die deutsche Sprache finden Sie im Internet unter (<http://www.gnu.de/documents/gpl-2.0>.

de.html). Eine allgemeine öffentliche GNU Lizenz befindet sich auch auf der mitgelieferten CD-ROM. Sie können Quell- und Objektcode der Software für mindestens drei Jahre auf unserer Homepage [www.trendnet.com](http://www.trendnet.com)

com im Downloadbereich ([http://trendnet.com/langen/downloads/list\\_gpl.asp](http://trendnet.com/langen/downloads/list_gpl.asp)) downloaden. @@@@@@ TRENDnet no ofrece servicio técnico para estos códigos. @@@@ Los códigos fuentes están disponibles para ser descargados del sitio Web de TRENDnet ([http://trendnet.com/downloads/list\\_gpl.asp](http://trendnet.com/downloads/list_gpl.asp)) durante por lo menos tres años a partir de la fecha de envío del producto. También puede solicitar el código fuente llamando a TRENDnet. 20675 Manhattan Place, Torrance, CA 90501, USA. Tel: +1310-961-5500 Fax: +1-310-961-5511 **Общая информация о лицензиях GPL/LGPL В состав данного продукта TRENDnet входит бесплатное программное обеспечение, написанное сторонними разработчиками.**

Это ПО распространяется на условиях лицензий GNU General Public License ("GPL") или GNU Lesser General Public License ("LGPL"). Программы распространяются БЕЗ ГАРАНТИИ и охраняются авторскими правами разработчиков. TRENDnet не оказывает техническую поддержку этого программного обеспечения. Подробное описание лицензий GNU GPL и LGPL можно найти на компакт-диске, прилагаемом к продукту.

@@@@@ 20675 Manhattan Place, Torrance, CA 90501, USA. @@@@@@ Estes códigos são distribuídos SEM GARANTIA e estão sujeitos aos direitos autorais dos desenvolvedores. TRENDnet não presta suporte técnico a estes códigos. Os detalhes do GNU GPL e do LGPL estão no CD-ROM do produto.

Favor acessar <http://www.gnu.org/licenses/gpl.txt>

ou <http://www.gnu.org/licenses/lgpl.txt> para os termos específicos de cada licença.



[You're reading an excerpt. Click here to read official TRENDNET  
TEW-715APO user guide](http://yourpdfguides.com/dref/4574553)  
<http://yourpdfguides.com/dref/4574553>