



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRENDNET TPE-S160. You'll find the answers to all your questions on the TRENDNET TPE-S160 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual TRENDNET TPE-S160**  
**User guide TRENDNET TPE-S160**  
**Operating instructions TRENDNET TPE-S160**  
**Instructions for use TRENDNET TPE-S160**  
**Instruction manual TRENDNET TPE-S160**



[You're reading an excerpt. Click here to read official TRENDNET TPE-S160 user guide](http://yourpdfguides.com/dref/3828367)  
<http://yourpdfguides.com/dref/3828367>

**Manual abstract:**

01 Table of Contents English 1. Before You Start 2. LEDs 3. Hardware Installation Technical Specifications Troubleshooting 1 1 2 3 7 8 Version 03.23.2010

1. Before You Start Package Contents Y TPE-S160 Y Multi-Language Quick Installation Guide Y Power cord (1.8m / 6ft) Y Rackmount Kit System Requirements Y Computer with Network adapter installed Y RJ-45 Network Cable Y The surface must support at least 3.8 kg (8.4 lb) for the Switch. @@@@Hardware Installation 1. Connect the Power Cord to the TPE-S160 and then to a power outlet. 2. Move the Power switch to the on position. 3. Connect a RJ-45 network cable from the computer to an available Ethernet port on the TPE-S160. 3 4. Connect a RJ-45 cable from a PoE port (1~16) on the TPE-S160 to the LAN port of the PoE device (e.g. TEW-638PAP) 5.

Verify that the following TPE-S160 LED are on: Power, PoE and Link/ACT. 4 Using a non-PoE device with the TPE-S160 and the TPE-112GS (PoE Splitter) Note: Take note of the power requirements for your non-PoE device. The TPE-112GS only supports non-PoE devices with an output power of 5V, 7.5V, 9V or 12V DC. 1. Select the voltage (5V, 7.5V, 9V or 12V) on the TPE-112GS that is required for your non-PoE device. 2. Connect an Ethernet cable from a port (1~16) on the TPE-S160 switch to the PoE IN port on the TPE-112GS. 3.

Connect the built-in Ethernet cable on the TPE-112GS to the non-PoE device's LAN port (e.g. TEW-637AP). 4. Connect the provided Jumper cable to your non-PoE device's power jack (e.g. TEW-637AP) and to the TPE-112GS's power jack. 5. Verify that the following TPE-S160 panel lights are on: Power, PoE and Link/ACT. 5 Rack Mount The Switch can be mounted in an EIA standard-size, 19-inch rack, which can be placed in a wiring closet with other equipment. 1. Attach the mounting brackets to both sides of the chassis and secure them with the provided screws. 2. Carefully position the chassis onto the rack. @@(no Power Device (PD) connected) 6 Y 260 Watts max.

@@@1. @@2. Verify that the power switch is set to the On position. 3. Check that the power outlet is receiving power. 2. After I connect my PCs to the Switch, I am unable to share files. 1. Check the LEDs on the Switch. Make sure the Link/ACT LED is on. 2. Check the network cable. @@3. Disable any software firewall program. 4.

Verify that you have file sharing enabled. Please contact your Operating System support for more information. 3. @@@@You need to get an Internet router such as the TW100-S4W1CA. 4. @@What should I do? 1. Verify that the PoE device supports IEEE 802.3af protocol. 2. Verify that the power switch is set to the on position.

3. Power cycle the PoE switch. Move the power switch to the off position. Wait 15 seconds, then move the power switch back to the on position. 4. Plug the device into a different port on the PoE switch. 5. Try using another RJ-45 network cable. 5. Where is the uplink port located on the Switch? @@@@All products that are replaced become the property of TRENDnet.

Replacement products may be new or reconditioned. TRENDnet does not issue refunds or credit. Please contact the point-of-purchase for their return policies. @@There are no user serviceable parts inside the product. @@@@An RMA number is required in order to initiate warranty service support for all TRENDnet products. Products that are sent to TRENDnet for RMA service must have the RMA number marked on the outside of return packages and sent to TRENDnet prepaid, insured and packaged appropriately for safe shipment. Customers shipping from outside of the USA and Canada are responsible for return shipping fees. Customers shipping from outside of the USA are responsible for custom charges, including but not limited to, duty, tax, and other fees. 9 WARRANTIES EXCLUSIVE: IF THE TRENDNET PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT TRENDNET'S OPTION, REPAIR OR REPLACE. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

TRENDNET NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION MAINTENANCE OR USE OF TRENDNET'S PRODUCTS. TRENDNET SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR OR MODIFY, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD. LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW TRENDNET ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATE, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT TRENDNET'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE. Governing Law: This Limited Warranty shall be governed by the laws of the state of California. @@@@These codes are distributed WITHOUT WARRANTY and are subject to the copyrights of the developers. TRENDnet does not

provide technical support for these codes. Please go to <http://www.gnu.org/licenses/gpl.txt> or <http://www.gnu.org/licenses/lgpl.txt> for specific terms of each license. 10 Copyright ©2011.

All Rights Reserved. TRENDnet. .



[You're reading an excerpt. Click here to read official TRENDNET](http://yourpdfguides.com/dref/3828367)

[TPE-S160 user guide](http://yourpdfguides.com/dref/3828367)

<http://yourpdfguides.com/dref/3828367>