




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRENDNET TPL-111BR. You'll find the answers to all your questions on the TRENDNET TPL-111BR in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual TRENDNET TPL-111BR**  
**User guide TRENDNET TPL-111BR**  
**Operating instructions TRENDNET TPL-111BR**  
**Instructions for use TRENDNET TPL-111BR**  
**Instruction manual TRENDNET TPL-111BR**

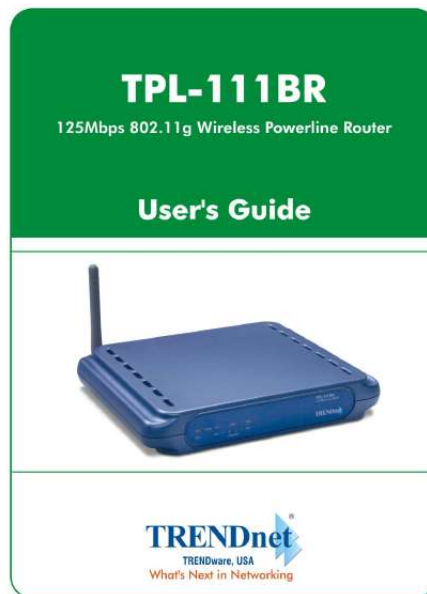

[You're reading an excerpt. Click here to read official TRENDNET TPL-111BR user guide](http://yourpdfguides.com/dref/3182537)  
<http://yourpdfguides.com/dref/3182537>

*Manual abstract:*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

..... @ 1 2.1 2.

*2 Connect to TPL-111BR.....*

.....  
.....  
.....

.....  
.....  
.....

.....  
.....  
.....

*.....1 Configure the TCP/IP Settings of your PC.....*

.....  
.....  
.....

.....  
.....  
.....

*.2 3 4 5 6 7 8 9 10 11 12 BASIC & HOMEPLUG NETWORK KEY SETTING ....*

.....  
.....

.....  
.....

*... @@@@5 ROUTER STATUS ..*

.....

.....  
.....  
.....

.....  
.....  
.....

*.... 6 FILTERS SETTING .*

.....  
.....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 7 ROUTING SETTING.

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

... 8 WIRELESS SETTING.....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

..... 9 POWERLINE .....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....

..... @@@@ Connect the power cable to the TPL-111BR, and then plug the power cable into a power outlet. 1 2.

2 Configure the TCP/IP Settings of your PC Before you begin Make sure that you get setup information you need from your Internet Service Provider (ISP). To set up Windows 2000 1. Right-click on My Network Places icon on the desktop and then click Properties in menu. 2. Double-click Local Area Connection icon and then click Properties button. 3. Select Internet Protocol (TCP/IP) and click Properties button. There are two ways to assign an IP address. You can either obtain an IP address automatically or specify an IP address. If you want to obtain an IP address automatically 4.

5. Check the radio button for Obtain an IP address automatically. @@@@6. Check the radio button for Specify an IP address. In the IP address box, type the assigned IP address.

The default IP is 10.0.0.XXX.[any one besides 10.

0.0.2]. In the Subnet mask box, type the subnet mask of your network. The default is 255.255.255.0. In the Default gateway box, set the gateway address.

@@@@@A Login window will appear.

@@@Set the LAN IP and subnet mask 2. Set the LAN DHCP server enable or disable 3. After setting press Apply to let the setting work 4 5 WAN SETTING 1. The WAN can set to DHCP client, static IP, PPPoE or Disabled 2. After setting ok, press Apply to let the setting work 5 6 Router Status Show the router

status information 6 7 Filters Setting 1. Set LAN MAC filter to allow or deny. to use the router 2. After setting, press Apply to let the setting work 7 8 Routing setting 1. Set the router routing mode to RIPV1 or RIPV2 2. @@Set the wireless SSID, country, channel, etc.

(Default SSID was "default") 2. @@Set the Powerline network encryption key. 10 11 Security 1. Set the router wireless security (802.1X, WEP, etc. ..) 2. @@Upgrade the router firmware 2. @@All products that are replaced will become the property of TRENDware.

Replacement products may be new or reconditioned. TRENDware shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to TRENDware pursuant to any warranty. There are no user serviceable parts inside the product. Do not remove or attempt to service the product by any unauthorized service center. This warranty is voided if (i) the product has been modified or repaired by any unauthorized service center, (ii) the product was subject to accident, abuse, or improper use (iii) the product was subject to conditions more severe than those specified in the manual. Warranty service may be obtained by contacting TRENDware office within the applicable warranty period for a Return Material Authorization (RMA) number, accompanied by a copy of the dated proof of the purchase. Products returned to TRENDware must be pre-authorized by TRENDware with RMA number marked on the outside of the package, and sent prepaid, insured and packaged appropriately for safe shipment. **WARRANTIES EXCLUSIVE: IF THE TRENDWARE PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT TRENDWARE'S OPTION, REPAIR OR REPLACEMENT.** @@@@Governing Law: This Limited Warranty shall be governed by the laws of the state of California. AC/DC Power Adapter, Cooling Fan, and Power Supply carry 1 Year Warranty .



[You're reading an excerpt. Click here to read official TRENDNET TPL-111BR user guide](http://yourpdfguides.com/dref/3182537)  
<http://yourpdfguides.com/dref/3182537>