



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRENDNET TU2-PCLINK. You'll find the answers to all your questions on the TRENDNET TU2-PCLINK in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual TRENDNET TU2-PCLINK**  
**User guide TRENDNET TU2-PCLINK**  
**Operating instructions TRENDNET TU2-PCLINK**  
**Instructions for use TRENDNET TU2-PCLINK**  
**Instruction manual TRENDNET TU2-PCLINK**



[You're reading an excerpt. Click here to read official TRENDNET TU2-PCLINK user guide](http://yourpdfguides.com/dref/3180375)  
<http://yourpdfguides.com/dref/3180375>

**Manual abstract:**

01 Table of Contents English 1. Before You Start 2. How to Install 3. Using the Utility 4. Quick Reference Guide Technical Specifications Troubleshooting 1 1  
3 4 6 9 10 Version 10.02.2009 1. Before You Start Package Contents TU2-PCLINK/TU2-PMLINK ? ? Multi-Language Quick Installation Guide System  
Requirements CPU: 300MHz or above / 800MHz or above (Windows Vista) / 1GHz or above ? (Windows 7) ? @@ Computer with an available USB 1.1 or 2.0  
slot ? Windows 7/Vista(32/64-bit)/2000/XP(32/64-bit) (TU2-PCLINK) ? @@ How to Install Hardware Installation 1.

Connect the TU2-PCLINK/TU2-PMLINK to your computer. 2. Drivers will install automatically. 3. @@ Register Your Product To ensure the highest level of  
customer service and support, please take a moment to register your product Online at: [www.trendnet.com/register](http://www.trendnet.com/register) Thank you for choosing TRENDnet. 3 3. Using the Utility For Window Users 1. Click Run ShareLink\_PC.

exe (Windows Vista only). 2. Click here to start. 3. Use your mouse to drag and drop files from the Local Host to the Remote Host. You can also drag and

drop files from the Remote Host to the Local Host. Note: For additional information regarding the ShareLink utility, please see section 4. Quick Reference  
Guide. 4 For Mac Users 1. Double click on the ShareLink icon.

This icon will appear on the desktop. 2. Double click on the ShareLink\_Mac icon. 3. Use your mouse to drag and drop files from the Local Volume to the  
Remote Volume. You can also drag and drop files from the Remote Volume to the Local Volume. Note: For additional information regarding the ShareLink  
utility please see section 4. Quick Reference Guide. 5 4. Quick Reference Guide For Window Users Icon USB Status Icons Description If the USB port on the  
computer is 2.

0, the USB 2.0 status icon will illuminate and the USB 1.1 icon will be grayed out. If the USB port on the computer is 1.1 the USB 1.

1 icon will be active and the USB 2.0 icon will be grayed out. Read Only When this icon is active, Read Only mode is enabled. TX/RX When data is being  
transferred between Local and Remote computers, this icon will illuminate. Refresh Refreshes the ShareLink windows.

Cut Cut the selected file or folder Copy Copy the selected file or folder Paste Paste the copied file or folder Delete Delete the selected file or folder About  
Displays information about the ShareLink Utility 6 Menu Bar Options System Options Setup Exit Description Enable/Disable Read Only mode Exit the  
ShareLink program Cut the selected file or folder Copy the selected file or folder Paste the copied file or folder Delete the selected file or folder Show/Hide  
Toolbar Show/Hide Status Bar Displays files and folders in the Remote Host and Local Host windows as Large icons. Displays files and folders in the Remote  
Host and Local Host windows as small icons. Displays the Remote Host and Local Host in List mode. Displays the Remote Host and Local Host in Detail  
mode. Refreshes the Remote Host and Local Host windows. Arranges your window so that the local and remote window title bars are visible. Tiles the Remote  
and Local windows side by side. Splits the window into two parts so that you can view the Remote and Local windows simultaneously. Makes Local Host the  
active windows. Makes Remote Host the active windows.

@@ The right icon refers to the remote computer. @@@@ Green Flashing Light: Data is being transferred. @@ What should I do? @@ Then  
double click on ShareLink. @@ Then double-click on ShareLink. My computer does not detect the TU2-PCLINK/TU2-PMLINK. What should I do? 1. @@ 2.  
@@@@ All products that are replaced become the property of TRENDnet. Replacement products may be new or reconditioned. TRENDnet does not  
issue refunds or credit.

Please contact the point-of-purchase for their return policies. @@ There are no user serviceable parts inside the product. @@@@ An RMA number  
is required in order to initiate warranty service support for all TRENDnet products. Products that are sent to TRENDnet for RMA service must have the RMA  
number marked on the outside of return packages and sent to TRENDnet prepaid, insured and packaged appropriately for safe shipment. Customers shipping  
from outside of the USA and Canada are responsible for return shipping fees.

Customers shipping from outside of the USA are responsible for custom charges, including but not limited to, duty, tax, and other fees. 11 WARRANTIES  
EXCLUSIVE: IF THE TRENDNET PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT  
TRENDNET'S OPTION, REPAIR OR REPLACE. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL  
OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING  
WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. TRENDNET NEITHER ASSUMES NOR AUTHORIZES ANY  
OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION MAINTENANCE OR USE OF  
TRENDNET'S PRODUCTS. TRENDNET SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT  
THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE,  
IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR OR MODIFY, OR ANY OTHER CAUSE BEYOND THE RANGE OF  
THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW TRENDNET ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY  
LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL,  
OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATE, OR  
OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE,  
FAILURE, OR INTERRUPTION OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND  
OF THE PURCHASE PRICE PAID, AT TRENDNET'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY  
REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE. Governing Law: This Limited Warranty shall be governed by the laws of the  
state of California. @@@@ These codes are distributed WITHOUT WARRANTY and are subject to the copyrights of the developers. TRENDnet does not  
provide technical support for these codes. Please go to <http://www.gnu.org/licenses/gpl.txt> or <http://www.gnu.org/licenses/lgpl.txt> for specific terms of each license. PWP05202009v2 12 .



[You're reading an excerpt. Click here to read official TRENDNET  
TU2-PCLINK user guide  
<http://yourpdfguides.com/dref/3180375>](http://yourpdfguides.com/dref/3180375)