



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY AW1053W. You'll find the answers to all your questions on the TRICITY AW1053W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual TRICITY AW1053W
User guide TRICITY AW1053W
Operating instructions TRICITY AW1053W
Instructions for use TRICITY AW1053W
Instruction manual TRICITY AW1053W

TRICITY BENDIX

OPERATING & INSTALLATION
INSTRUCTIONS



WASHING MACHINE

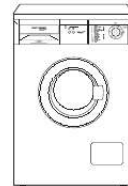

AW 1053 W

35.292.494.0



[You're reading an excerpt. Click here to read official TRICITY AW1053W user guide](http://yourpdfguides.com/dref/947075)
<http://yourpdfguides.com/dref/947075>

Manual abstract:

@@Care should be taken when moving it. @@All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in instructions. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. @@@@Pets and children have been known to climb into washing machines. Please check your drum before use. The glass door becomes very hot during the washing cycle. Keep children away from the vicinity of the appliance whilst it is in operation. Keep all packaging well away for children. Keep all detergents in a safe place out of children's reach. s s s Always unplug the appliance and turn off the water after use. Do not overload the appliance. See relevant section in instruction book. Always look through the glass door to check if water has drained before opening the door. The user should always check that they have not left their gas lighter (disposable or otherwise) in their clothing Only wash fabrics which are designed to be machine washed. If in doubt, consult the care label on the clothes. Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed. Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. Only use the advised quantities of fabric softener. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities. As some duvets and eiderdowns should be washed in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine. Leave the porthole door slightly ajar between washes to preserve the door seal. Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Tricity Bendix Service Centre. Always insist on genuine Tricity Bendix spare parts. 3 i Your New Washing Machine Your new washing machine, meets all modern needs for effective treatment of laundry with low water, energy and detergent consumption. s s s Automatic cooling of the wash water to 60°C before draining, with the 90°C programme. This reduces thermal shock to fabrics, helping to prevent any creasing. The special wool programme with its new delicate wash system treats your woollens with extreme gentleness. The anti-unbalance device ensures that the washing machine remains stable when spinning. In the interest of the environment s s s Ecological hints To save water and energy and help protect the environment, we recommend that you follow these hints: s Adjust the quantity of detergent according to the hardness of your water supply, the amount of laundry and the degree of soiling. s Select an "ECO" programme for normally soiled laundry. s A programme without prewash is sufficient for normally soiled laundry. s Materials marked with the symbol are recyclable. Check with your local Council or Environmental Health Office to see if there are facilities in your area for re-cycling this appliance. When the appliance is to be scrapped, cut off the power supply cable and make the door closing device unusable to prevent young children from being trapped inside. Help to keep your country tidy - use authorised disposal sites for your old appliance. How do we help to protect the environment? We use recycled paper! 4 Contents For the User Important Safety Information Your New Washing Machine Description of the Appliance The Control Panel Operating sequence Washing 4,5 kg of white cotton at 90 °C Load the laundry Measure out the detergent Measure out the additive Select the required programme Start the machine At the end of the programme Washing 2 kg of mixed fabrics at 50 °C Load the laundry Measure out the detergent Measure out the additive Select the required option Select the required programme Start the machine At the end of the programme 3 4 6 7 8-11 8 8 8 8 9 9 10 10 10 10 11 11 11 12-14 13 14 14 15 16-17 18-19 18 18 18 18 19 19 20-21 21 21 22 For the Installer Installation Instructions Technical Specifications Unpacking Positioning Water inlet Water drainage Levelling Special conditions In the interest of the environment Electrical connections Permanent connection Tricity Bendix Service Force Addresses 23 23 24 25 25 26 27 27 27 28 28 29-30 Washing Hints Which detergent to use?... . And in which form? How much detergent and fabric softener? Using a water softening agent Wash Care Symbols Washing Programmes Maintenance and Cleaning Descaling After each wash External cleaning Cleaning the dispenser drawer Cleaning the drawer recess Cleaning the filter The dangers of freezing Something Not Working Service & Spare Parts Customer Care Peace of Mind for Twelve Months Guide to use the Instruction Book The following symbols will be found in the text to guide you throughout the instructions: Safety instructions i Hints and tips s Step by step instructions 5 Description of the Appliance 1 2 3 4 5 6 7 8 Detergent dispenser drawer "Mains-on" light "Options" buttons Programme guide Program selector dial & ON/OFF switch Door opening handle Filter Adjustable feet advanced ECO SHOWER system Detergent dispenser drawer Prewash Main Wash Fabric softener AL035 6 The Control Panel advanced ECO SHOWER system 1 Detergent dispenser drawer 2 Mains-on light This light illuminates when the appliance is operating. 4 HALF LOAD button Available for programmes 1 to 5. Pressing this button before starting the programme there will be one rinse less which leads to energy and water saving. 3 RINSE HOLD button Press this button to make the machine stop with water in the drum after the synthetic or delicate wash cycles. This prevents any creasing which may take place if the clothes are left damp in the drum. When it is convenient for you to empty the machine, simply press this button again so that the machine can proceed to drain and short spin, or turn the dial to the drain programme "14".



[You're reading an excerpt. Click here to read official TRICITY AW1053W user guide](http://yourpdfguides.com/dref/947075)
<http://yourpdfguides.com/dref/947075>

If this button is not activated, the washing programmes will end with a short spin. Do not press this button for woollens: wool items should be gently spun. 5 ECO WASH button By pushing in this button prior to selecting wash programmes "2" and "3".

You will obtain a reduction of the temperature from 90°C to 60°C and from 60°C to 40°C. This will ensure a substantial saving in electricity consumption. It is advisable to use ECO WASH when washing fabrics which are lightly soiled. 6 Programme Guide 7 Programme Selector To select the required program turn the control clockwise until the marker on the top coincides with the number of the required programme. If you pass the required number NEVER TURN THE

CONTROL ANTICLOCKWISE just continue clockwise until the required number is reached again. 7 Operating Sequence Before your first wash, we recommend that you run a cotton cycle at 60°C, without any laundry in the machine, to remove any manufacturing residue from the drum and tub. Pour 1/2 a measure of detergent into the dispenser drawer and start the machine. WASHING 4.5 KG OF WHITE COTTON AT 90°C Suppose you have 4.5 kg of heavily soiled laundry to wash.

It is white cotton and is suitable for high temperature washing 1. Load the laundry Open the door. @@Close the door. P0004 2. @@Measure out the amount of detergent recommended by the manufacturer in a graduated cup and pour it into the main wash compartment .

If you wish to carry out a prewash(*), pour detergent into the compartment marked (*) Prewash is available in programme "1". AL025 3. @@Close the drawer gently AL023 4. Select the required option(S) Depress HALF LOAD button WASH if required. and/or ECO 8 5.

Select the required programme Turn the programme selector dial CLOCKWISE to the required programme. 1 P0215 6. @@Pull the programme selector dial outwards The operating pilot light will illuminate and the machine will start operating 1 P0216 7. @@The door is controlled by a safety device which releases 3 minutes after the end of the programme. Before opening the door ensure there is no water in the drum. Switch the machine off by pushing in the programme selector dial. When the programme has finished, you are advised to unplug the appliance and turn off the water taps. Leave the door open to prevent the formation of mildew and unpleasant smells. 9 WASHING 2 KG OF MIXED FABRICS AT 50 °C Suppose you have 2 kg of MIXED FABRICS to wash. They are rather delicate fabrics and should not be washed at a high temperature.

1. Load the laundry Open the door. @@Close the door. P0004 2. @@@@Close the drawer gently. AL023 4. @@@@Ace is suitable for all washable fabrics including silks, woollens and coloureds. Non Biological If you prefer to use a non biological detergent, which does not contain enzymes we recommend Fairy. Fairy provides good cleaning and stain removal. Coloureds For coloured items you should use a detergent which is designed to clean while maintaining the original colomeans «DO NOT» Important Notes For best results, always use the dispenser drawer for dispensing detergents and liquid additives.

Once the dispenser has been filled, close it by pushing it in gently. @@@@Separate rinse cycle for hand washed garments.

@@Programme dial position Description Possible options Max. @@@@Clean the control panel using a damp cloth only.

@@@@To do this, unhook the drain hose from the standpipe or sink and hold the end of the hose over a bowl on the floor.

The water should drain by gravity into the bowl. When the bowl is full, hook the hose back up and empty the bowl. Repeat the procedure until water stops flowing out. Unscrew and remove the filter. Clean carefully under a fast running tap.

Replace the filter turning now clockwise and tighten it. AL012 AL015 Warning When the appliance is in use and depending on the programme selected there can be hot water in the filter. Never remove the filter during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the filter, ensure it is securely retightened so as to stop leaks and young children being able to remove it. AL017 P0040 The water inlet filters If your water is very hard or contains traces of lime deposit, the water inlet filters may become clogged. It is therefore a good idea to clean it from time to time. Turn off the water taps. Unscrew the water inlet hoses. Remove and clean the filters using a hard bristle brush. Replace the filters and tighten up the inlet hoses.

P0090 P0021 The dangers of freezing If the machine is exposed to temperatures below 0°C, certain precautions should be taken. s Turn off the water taps. s Unscrew the inlet hoses. s Unhook the drain hose from the rear support and position the end of this hose and that of the inlet hose in a bowl. Run the draining programme. s Disconnect the appliance. s Screw the inlet hoses and reposition the drain hose. s When you intend to start the machine up again, make sure that the room temperature is above 0°C. 19 Something Not Working Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your Tricity Bendix Service Force Centre, please carry out the checks listed below.

Important: If you call out an engineer to a fault if listed below or to repair a fault caused by incorrect use or installation a charge will be made even if the appliance is in guarantee. Symptom The machine does not start Possible causes s s s s s The door has not been closed. The plug is not properly inserted in the power socket. There is no current at the socket The main fuse has blown. The selector dial is not correctly positioned and pulled out No water is entering the machine (see: the machine does not fill) Ensure the water taps are open and the water supply has not been disconnected The filter in the inlet hoses are blocked.

The inlet hoses may be squashed or kinked. The water pressure is too low The end of the drain hose is too low. The end of the drain hose is submerged in water. There is no vent in the end of the drain hose. The drain hose may be squashed or kinked The RINSE HOLD option has been selected.

The drain filter may be blocked The drain hose extension is not correct. Follow the instructions for connecting to the waste. The drainage system pipes are blocked. Too much detergent or unsuitable detergent has been used (creates too much foam). Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. The drain hose may be damaged or not securely positioned. The detergent dispenser drawer or recess is clogged. The drainage system pipes are blocked. Too little detergent or unsuitable detergent has been used.

An insufficient amount of detergent leaves the laundry looking grey and causes lime scale to form.



[You're reading an excerpt. Click here to read official TRICITY](#)

[AW1053W user guide](#)

<http://yourpdfguides.com/dref/947075>

Stubborn stains have not been treated prior to washing The correct temperature to suit the wash programme has not been selected. Too much laundry has been placed in the drum. The internal packing has not been removed. The machine is in contact with the wall or furniture. The machine is not level. The washing load is badly distributed in the drum. Maybe there is very little laundry in the drum. The machine is overloaded The machine does not fill s s s s s The machine fills then empties immediately The machine does not empty and/or does not spin s s s s s There is water on the floor s s s s s Unsatisfactory washing results s s s s s The machine vibrates or is noisy s s s s s 20 Symptom The door will not open Possible causes s s s s s The programme is still running. The door lock has not yet released The water level in the drum is too high or the machine is heating.

The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the load is evenly distributed and spinning can resume eventually at a lower speed, if the wash load is still not sufficiently balanced distributed, after 10 minutes, the machine will not spin. @@@@ This information can be found on the rating plate (see picture). @@@@.

....
.... Ser. Mod.
..... Prod. No. ..
.....
.... P0042 Ser.

No. @@@@ Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a charge will be made. Exclusions This guarantee does not cover: s Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic. s Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom. s Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements. s Products of Tricity Bendix manufacture which are NOT marketed by Tricity Bendix Ltd. European guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications: s The guarantee starts from the date you first purchased your product s The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products s This guarantee relates to you and cannot be transferred to another user s Your new home is within the European Community (EC) or European Free Trade Area s The product is installed and used in accordance with our instructions and is only used domestically, i.

e. a normal household Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances. France Germany Italy Sweden UK Senlis Nurnberg Pordenone Stockholm Newbury +33 (0)3 44 62 28 28 +49 (0)911 323 2600 +39 (0) 1678 47053 +46 (0)20 78 77 50 +44 (0)1635 525 542 22 Installation Instructions @@Care must be taken to ensure that the appliance does not stand on the electrical supply cable. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Technical Specifications DIMENSIONS Height Width Depth 85 cm (33.5") 60 cm (23.6") 55 cm (22.7") 230-240 V/50 Hz 2600 W (13A) Minimum (cold) Minimum (hot) Maximum Cotton, linen Synthetics Delicate fabrics Wool Maximum 5 N/cm2 (7 psi) 3 N/cm2 (4 psi) 80 N/cm2 (110 psi) 4.

5 kg (10 lbs) 2 kg (4.5 lbs) 2 kg (4.5 lbs) 1 kg (2.2 lbs) 1000 rpm POWER SUPPLY VOLTAGE MAX. POWER ABSORBED WATER PRESSURE MAXIMUM RECOMMENDED LOAD SPIN SPEED This appliance complies with the following E.

E.C. Directives: - 73/23 EEC of 19.2.73 (Low Voltage Directive) and subsequent modifications; - 89/336 EEC of 3. 5.89 (Electromagnetic Compatibility Directive) and subsequent modifications. 23 Unpacking All transit bolts and packing must be removed before using the appliance You are advised to keep all the packaging for re-use in case the appliance has to be transported again. s Unscrew and remove the three rear transit bolts (using a spanner). P0287 s Lay the machine gently on its back, making sure that the hoses are not squashed. We suggest a polystyrene angle bracket from the packing is placed on the floor before tilting it back to avoid the hoses being squashed. P0018 s Carefully remove the polyethylene bags located at the base of the machine by pulling them toward the centre of the machine. 1 2 AL009 s Place the machine in an upright position and remove the three plastic bolts. P0001 s Plug the 3 holes with the plastic plugs which you can find in the envelope containing the instruction booklet. P0002 24 Positioning Your new Tricity Bendix washing machine has been designed to be permanently plumbed in to your home's water supply and drainage system.

However, if this is not possible, it may be connected to suitable existing taps, with the drain hose discharging into the sink. The appliance has two inlet hoses, hot and cold, with female 3/4" BSP thread connectors. If this connection is not compatible with the plumbing of the existing installation, a variety of connectors are available from good hardware stores and plumbers merchants to suit most domestic plumbing. Any alterations to your existing plumbing must be carried out by a competent person, or qualified plumber. HOT WATER SUPPLY COLD WATER SUPPLY Water inlet The inlets on the back of the appliance are colour coded, blue for cold and red for hot. Before connecting the hoses, be sure to fit the black washers supplied as per diagram. If only a cold water supply is available, connect the two hoses to a cold water outlet by means of a 'Y' connection piece. Installation should comply with local water authority and building regulation requirements. The appliance must be given a separate cold water supply and not be connected to a mixer tap, a single outlet water heater or a booster pump. A minimum water pressure of 7psi is required for safe operation of the appliance.

If you cannot make the cold water connection direct from the rising mains, you may be able to operate the appliance from your cold water storage system. There should be a minimum distance of 5.02m (16 1/2ft) between the appliance's inlet and the bottom of the tank. There will be sufficient pressure for the hot water supply from the hot water cylinder if the height between the appliance's inlet and the bottom of the cold water storage cistern (not between the appliance and the hot water cylinder) is at least 2.



[You're reading an excerpt. Click here to read official TRICITY AW1053W user guide](http://yourpdfguides.com/dref/947075)
<http://yourpdfguides.com/dref/947075>

74m (9ft).

Set the hoses correctly by loosening the ring nuts. After positioning the inlet hoses, be sure to tighten the ring nuts again to prevent leaks. A AL013 P0021 25 Water drainage This appliance is designed to be permanently plumbed into your home's water supply and drainage system. 3 pin Max. 90 cm. (35.4") P1039 When discharging into a standpipe ensure that the top of the curve in the hose end is no more than 90cm (35.4") and no less than 60cm (23.6") above floor level. The upright standpipe should have a minimum length of 30cm (12") from the bottom of the elbow to the top of the pipe (see diagram). P1040 Min. @@@@The drain hose may be extended to a maximum of 3 metres. @@@@ (23.6") The appliance drain hose should hook (use the plastic "U-piece" supplied) into a standpipe with an internal diameter of approximately 38mm (see diagram) thus ensuring there is an air break between the drain hose and standpipe. Levelling Level the washing machine by loosening or tightening the feet.

Once in the right position fix the feet by pushing the nuts against the base of the case. Accurate levelling prevents vibration, noise and displacement of the machine during operation. After levelling the machine, secure the feet by tightening the ring nuts with the aid of a screwdriver. @@ Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder. @@@@ Warning The machine should NOT be placed on deep pile carpeting. @@ It is essential that these appliances are not connected to the surface water drainage system as this water is discharged directly into a river or stream and may cause pollution. If you require any further advice please contact your local authority drainage department. RAINWATER 'RUN-OFF' SHOWER SINK BATH TOILET BIDET WASHING MACHINE DISHWASHER FOUL DRAIN SURFACE WATER DRAINS & SEWERS FOUL SEWERS UNTREATED DISCHARGE SEWAGE TREATMENT WORKS TREATED DISCHARGE RIVER RIVER P0987 27 Electrical connections Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person WARNING: THIS APPLIANCE MUST BE EARTHED.

The manufacturer declines any liability should this safety measure not be observed. Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance rating plate (the plate is stuck to the rear of the appliance). The appliance is supplied with a 13 amp plug fitted. In the event of having to change the fuse in the plug supplied, use a 13 Amp BS1362 fuse. Only ASTA or BSI approved fuses must be used.

Should the plug need to be replaced for any reason, proceed as described below. The wires in the mains lead are coloured in accordance with the following code: Green and Yellow - Earth Blue - Neutral Brown - Live Connect the green and yellow (earth) wire to the terminal in the plug which is marked with the letter «E» or the earth symbol or coloured green and yellow. Connect the blue (neutral) wire to the terminal in the plug which is marked with the letter «N» or coloured black. Connect the brown (live) wire to the terminal in the plug which is marked with the letter «L» or coloured red. The plug must not be used if the fuse cover/carrier is lost.

The cover/carrier is indicated by the coloured insert at the base of the plug. A replacement cover/carrier must be obtained from your local Tricity Bendix Service Centre, whose address are listed at the back of this instruction manual. WARNING: a cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely. GREEN & YELLOW E 13 A N L BROWN BLUE P1041 CORD CLAMP Permanent connection In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3 mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations.

The switch must not break the yellow and green earth cable at any point. 28 TRICITY BENDIX SERVICE FORCE To contact your local Tricity Bendix Service Centre telephone 0990 CHANNEL ISLANDS GUERNSEY Guernsey Electricity PO Box 4 Vale, Guernsey Channel Islands Jersey Electricity Company PO Box 45 Queens Road St Helier Jersey Channel Islands JE4 8NY ISLE OF LEWIS (M69) ND Macleod 16 James Street Stornoway Isle of Lewis PA87 2QW 2-8 Wood Market Kelso Borders TD5 7AX Corsie Domestics 7 King Street Kirkwall Orkney KW15 Tait Electronic Systems Ltd. Holmsgarth Road Lerwick Shetland ZE1 0PW Bolts Shetland Ltd 26 North Road Lerwick Shetland ZE1 0PE Leask Electrical Harlsdale Symbister, Whalsay Shetland ZE2 9AA GRIMSBY (M42) 929929 Unit 356a Dukesway Court Dukesway Team Valley Gateshead NE11 0BH Unit 2 Cromwell Road Grimsby South Humberside DN31 2BN Unit 1 Boulevard Industrial Estate Hull HU3 4AY 64-66 Cross Gates Road Leeds LS15 7NN Unit 16 Gurney Way Aycliffe Ind Estate Newton Aycliffe DL5 6UJ Pennine House Roman Ridge Ind. Roman Ridge Road Sheffield S9 1GB NORTH EAST GATESHEAD (M39) KELSO (M08) JERSEY ORKNEY (M65) SHETLAND (OWN SALES) HULL (M41) SCOTLAND ABERDEEN (M05) 8 Cornhill Arcade Cornhill Drive Aberdeen AB2 5UT 33A Burnside Auchtermuchy Fife KY14 7AJ Unit 5 Block 2 Auchentraith Ind Estate Rosendale Way Blantyre G72 0NJ 93 Irish Street Dumfries Scotland DG1 2PQ Briar Hill 7 Hill Street, Dunoon Argyll PA23 7AL 20 Cunningham Road Clyde Estate Rutherglen, Glasgow, G73 1PP Unit 3B Smithton Indust. Est.

Smithton Inverness IV1 AJ Arran Domestics Unit 4 The Douglas Centre Brodick Isle of Arran KA27 8AJ J Zerfah 244 Bruernish Isle of Barra Western Islands HS9 5QY Walker Engineering Glenmhor Upper Serpentine Road Rothesay Isle of Bute PA20 9EH SHETLAND (OWN SALES) WHALSAY LEEDS (M37) NEWTON AYCLIFFE (M45) AUCHTERMUCHY (M03) (OWN SALES) NORTHERN IRELAND BELFAST (M27) Owenmore House Kilwee Industrial Estate Upper Dummury Lane Belfast BT17 0HD BLANTYRE (M07) SHEFFIELD (M38) DUMFRIES (M01) NORTH WEST WALES CARDIFF (M28) Guardian Industrial Estate Clydesmuir Road Tremorfa, Cardiff CF2 2QS Unit 6-7 Coed - Parc Abergele Road Rhuddlan Clwyd Wales LL18 5UG Plas Funnon Warehouse Middleton Road Oswestry SY11 2PP Maes y Coen High Mead Llanybydder Dyfed SA40 8UL Cromlech Lodge Amerision Haverfordwest SA62 5DS BIRKENHEAD (M11) 1 Kelvin Park Dock Road Birkenhead L41 1LT Unit 8 South John Street Carlisle CA2 5AJ South Quay Ind Estate Douglas Isle of Man Unit 1 Honeys Green Precinct Honeys Green Lane Liverpool L12 9JH Unit 30, Oakhill Trading Estate Devonshire Road Worsley Manchester M28 3PT Unit 250 Dawson Place Walton Summit Bamber Bridge Preston Lancashire PR5 8AL Unit 20 Haigh Park Haigh Avenue Stockport SK4 1QR DUNOON (M67) CLYWD (M14) CARLISLE (M10) GLASGOW (M04) ISLE OF MAN (M64) INVERNESS (M06) OSWESTRY (M17) LIVERPOOL (M15) DYFED (M77) ISLE OF ARRAN MANCHESTER (M09) (OWN SALES) HAVERFORDWEST (M75) ISLE OF BARRA PRESTON (M13) (OWN SALES) ISLE OF BUTE (M66) STOCKPORT (M16) 29 TRICITY BENDIX SERVICE FORCE To contact your local Tricity Bendix Service Centre telephone 0990 MIDLANDS BIRMINGHAM (M18) 66 Birch Road East, Wyrley Road Industrial Estate Witton Birmingham B6 7DB Manning Road Ind Estate Pinfold Road Bourne PE10 9HT 1 Underhill Street Bridgnorth Salop WV16 4BB 101 Rycroft Street Gloucester GL1 4NB Unit 3 Bank Buildings Cattle Market Hereford HE4 9HX The Old Barn Westfield Terrace Higham Ferrers NN10 8BB Unit 2 Furnace Road Ilkeston DE7 5EP Unit 23-24 Alliance Business Pk Townsend Drive Nuneaton Warwickshire CV11 6RX Unit 8 Stonefield Park Clifton Street Lincoln LN5 8AA 18-21 Croft Road Brampton Industrial Estate Newcastle under Lyme Staffordshire ST5 0TW 19 Ptarmigan Place Townsend Drive Nuneaton CV11 6RX Heming Road Washford Redditch Worcestershire B98 0DH Unit 3 Sterling Park Claymore Tamworth B77 5DO Unit 1 Northbrook Close Gregorys Mill Ind Estate Worcester WR3 8BP COLINDALE (M53) 929929 LONDON & EAST ANGLIA CANVEY ISLAND 2-4 Sandhurst Kings Road Canvey Island SS8 0QY Hanbury Road Widford Ind Estate Chelmsford Essex CM12 3AE UUnit 14 Capital park Capital Way Colindale London NW9 0EQ 284 Alma Road Enfield London EN3 7BB Unit B4, Imperial Business Estate Gravesend Kent DA11 0DL Unit 4 Riverside Estate Coldharbour Lane Harpenden AL5 4UN 16-17 Woodside Ind Est.



[You're reading an excerpt. Click here to read official TRICITY AW1053W user guide](#)

Works Road Letchworth Herts SG6 1LA Reform Road Maidenhead Berkshire SL6 8BY 10 Island Farm Avenue West Molesey Surrey KT8 2UZ PO Box 5627
Newbury Berkshire RG14 5GF Unit 2B Elton Park Business Centre Hadleigh Road Ipswich IP2 0DD 2b Trafalgar Street Norwich NR1 3HN Unit 1a The
Summit Hanworth Road Hanworth Ind Estate Sunbury on Thames TW16 5D Unit 6 Metro Centre Kangley Bridge Road Sydenham SE26 EMSWORTH (M33)
ASHFORD (M58) SOUTH EAST Unit 2 Bridge Road Business Estate Bridge Road Ashford Kent TN2 1BB Unit 1 Redfields Industrial Estate Church
Crookham Fleet Hampshire GU13 0RD 21-25 Bridge Road Haywards Heath Sussex RH16 1UA Unit 30 Deacon Trading Estate Morley Road Tonbridge Kent
TN9 1RA CHELMSFORD (M47) BOURNE (M44) FLEET (M59) BRIDGNORTH (M72) HAYWARDS HEATH (M55) GLOUCESTER (M23) ENFIELD (M49)
TONBRIDGE (M56) HEREFORD (M31) GRAVESEND (M57) HIGHAM FERRERS (M51) HARPENDEN (M46) SOUTH WEST BARNSTAPLE (M30) P.O.
Box 12 Barnstaple North Devon EX31 2YB 63-65 Curzon Road Bournemouth Dorset BH1 4PW 6 Hamp Industrial Estate Bridgewater Somerset TA6 3NT 11
Eldon Way Eldonwall Trading Bristol Avon BS4 3QQ 266 Main Road Southboure Emsworth PO10 8JL Unit 8 Enterprise Court Ryde Business Park Ryde Isle
of Wight PO33 1DB Unit 2 Zealley Industrial Estate Kingsteignton Newton Abbot S. Devon TQ12 3TD 16 Faraday Mill Cattedown Plymouth PL4 0ST Unit
7D Pool Industrial Estate Wilson Way, Redruth, Cornwall TR15 3QW ILKESTON (M43) LETCHWORTH (M50) BOURNEMOUTH (M26) LEICESTER
(M22) MAIDENHEAD (M60) BRIDGEWATER (M35) LINCOLN (M40) BRISTOL (M25) MOLESEY (M61) NEWCASTLE UNDER LYME (M12) NEWBURY
(M24) NUNEATON (M21) IPSWICH (M48) ISLE OF WIGHT (M34) REDDITCH (M20) NORWICH (M52) NEWTON ABBOT (M29) TAMWORTH (M19)
SUNBURY (M63) PLYMOUTH (M32) WORCESTER (M73) SYDENHAM (M62) REDRUTH (M36) 30 Tricity Bendix, 99 Oakley Road, Luton, Beds LU49QQ
Consumer care telephone number 01635 525 542 1 2 3 4 5 6 7 8 9 10 11 12/98 .



[You're reading an excerpt. Click here to read official TRICITY](#)

[AW1053W user guide](#)

<http://yourpdfguides.com/dref/947075>