



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY AW1054W. You'll find the answers to all your questions on the TRICITY AW1054W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual TRICITY AW1054W**  
**User guide TRICITY AW1054W**  
**Operating instructions TRICITY AW1054W**  
**Instructions for use TRICITY AW1054W**  
**Instruction manual TRICITY AW1054W**

**TRICITY BENDIX**

OPERATING & INSTALLATION  
INSTRUCTIONS



WASHING MACHINE

**AW 1054 W**

132996130



[You're reading an excerpt. Click here to read official TRICITY AW1054W user guide](http://yourpdfguides.com/dref/947076)  
<http://yourpdfguides.com/dref/947076>

**Manual abstract:**

@@Care should be taken when moving it. @@All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in instructions. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. @@@@Pets and children have been known to climb into washing machines. Please check your drum before use. The glass door becomes very hot during the washing cycle.

@@Keep all packaging well away from children. @@Do not overload the appliance. See relevant section in the instruction book. Only wash fabrics which are designed to be machine washed. If in doubt, consult the care label on the clothes.

Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed. Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. Garments which have been in contact with volatile petroleum products should not be machine washed.

If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. Only use the advised quantities of fabric softener. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities. As some duvets and eiderdowns should be washed in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine. Leave the porthole door slightly ajar between washes to preserve the door seal. Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Tricity Bendix Service Force Centre.

Always insist on genuine Tricity Bendix spare parts. 2 Contents For the User Important Safety Information Your New Washing Machine Description of the Appliance Detergent dispenser drawer 2 4 5 5 6 7-10 7 7 7 7 7 8 8 9 9 9 9 9 9 10 11-12 12 12 13 14-15 16-17 16 16 16 16 16 16 17 18-19 19 20 21-22

For the Installer Installation Instructions Technical Specifications Unpacking Positioning Water inlet Water drainage Levelling Special conditions In the interest of the environment Electrical connection 23 23 24 24 24 25 26 26 26 27 The Control Panel Operating sequence Washing 4.5 kg of white cotton at 95°C Load the laundry Measure out the detergent Measure out the fabric softener Select the required option Select the required programme Start the machine At the end of the programme Washing 2 kg of mixed fabrics at 50°C Load the laundry Measure out the detergent Measure out the fabric softener Select the required option Select the required programme Start the machine At the end of the programme Washing Hints Which detergent?... And in which form? Wash Care Symbols Washing Programmes Maintenance and Cleaning Descaling After each wash Maintenance Wash External cleaning Cleaning the dispenser drawer Cleaning the drawer recess Cleaning the filter The dangers of freezing Something Not Working Service and Spare Parts Guarantee Conditions Service Force Centres Guide to use the Instruction Book The following symbols will be found in the text to guide you throughout the instructions: Safety instructions Hints and tips Environmental information 3 Your New Washing Machine Your new washing machine meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. I I Automatic cooling of the wash water to 60°C before draining, with the 95°C programme. This reduces thermal shock to fabrics, helping to prevent creasing. The special wool programme with its new delicate wash system treats your woollens with extreme care.

In the interest of the environment I I Ecological hints To save water and energy and help protect the environment, we recommend that you follow these hints: I Adjust the quantity of detergent according to the hardness of your water supply, the amount of laundry and the degree of soiling. I A programme without prewash is sufficient for normally soiled laundry. I The machine works more economically if it is fully loaded. I With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature, so saving energy. I I Materials marked with the symbol are recyclable.

Check with your local Council or Environmental Health Office to see if there are facilities in your area for re-cycling this appliance. When the appliance is to be scrapped, cut off the power supply cable and make the door lock device unusable to prevent young children from being trapped inside. Help to keep your country tidy - use authorised disposal sites for your old appliance. How do we help to protect the environment? We use recycled paper! Important Your machine is fitted with a balance control device, which ensures the machine is stable during the spin. If the wash load appears not to have been spun sufficiently at the end of the wash cycle, because it is not evenly distributed in the drum, the balance control device may have operated.

It will therefore be necessary to redistribute the wash load manually and select a spin programme. For more detailed information see the section headed "Something Not Working". 4 Description of the Appliance 1 2 3 4 5 6 7 8 9 Detergent dispenser drawer Programme guide ON/OFF Button "Mains-on" Light "Option" Buttons Programme selector dial Door opening handle Filter Adjustable feet 2 4 5 6 1 WHITES WITH PREWASH 2 WHITES 2 WHITES ECONOMY 3 FAST COLOURED 4 NON FAST COLOURED 5 LONG SPIN WOOL - DELICATES COTTONS - LINENS MIXED FABRICS - SYNTHETICS 95° 95° 50° 60° 40° 6 MIXED FABRICS 7 WORN ONCE 8 RINSES 9 SOFTENERS 10 SHORT SPIN 50° 30° advanced W A S H E R 1000 SELECTOR ECO SHOWER system 11 WOOL WASH 12 DELICATE WASH 13 SOFTENERS 14 DRAIN 40° 40° MAINS ON ECO WASH HALF LOAD RINSE HOLD AW 1054 W IMPORTANT: PLEASE READ THE INSTRUCTION BOOK BEFORE USE. 1 3 7 8 9 Detergent dispenser drawer Prewash Main wash Fabric softener C0022 5 The Control Panel 1 2 2 3 4 5 11 12 13 14 COTTONS - LINENS WHITES WITH PREWASH WHITES WHITES ECONOMY FAST COLOURED NON FAST COLOURED LONG SPIN WOOL - DELICATES WOOL WASH DELICATE WASH SOFTENERS DRAIN MIXED FABRICS - SYNTHETICS 95° 95° 50° 60° 40° 6 7 8 9 10 MIXED FABRICS WORN ONCE RINSES SOFTENERS SHORT SPIN 50° 30° advanced W A S H E R 1000 SELECTOR ECO SHOWER system 40° 40° MAINS ON ECO WASH HALF LOAD RINSE HOLD AW 1054 W IMPORTANT: PLEASE READ THE INSTRUCTION BOOK BEFORE USE.



[You're reading an excerpt. Click here to read official TRICITY](#)

[AW1054W user guide](#)

<http://yourpdfguides.com/dref/947076>

1 23456 7 1 Programme guide 2 MAINS-ON Light This light illuminates when the machine starts working and goes out when the ON/OFF button is released. 6 RINSE HOLD Button Press this button to make the machine stop with water in the drum after the cotton, synthetic or delicate wash cycles. This prevents any creasing which may occur if the clothes are left damp in the drum. When it is convenient for you to empty the machine, simply press this button again so that the machine can proceed to drain and spin, or turn the dial to the drain programme "14". If this button is not activated, the washing programmes will end with a spin. 3 On/Off Button By depressing this button the machine starts operating.

When depressed again, the machine stops. 4 ECO WASH Button By depressing this button prior to selecting wash programme 2 you will obtain a reduction of the wash temperature from 95°C to 50°C. The duration of the programme will be prolonged by approx. 20 minutes. This will ensure a substantial saving in electricity consumption. 7 Programme Selector Dial Turn the dial clockwise to select the required wash programme. Before setting the dial to any position the machine must be switched off by depressing the ON/OFF button again. 5 HALF LOAD Button Select this button to reduce water consumption on the rinse cycle when washing a smaller load of cottons or linens (maximum load size = 2.25 kg). 6 Operating Sequence Before the first wash, we recommend that you run a cotton cycle at 60°C, without any laundry in the machine, to remove any manufacturing residue from the drum and tub.

Pour 1/2 a measure of detergent into the main wash compartment of the dispenser drawer and start the machine. WASHING 4.5 KG OF WHITE COTTON AT 95°C Suppose you have 4.5 kg of normally soiled laundry to wash. It is white cotton and is suitable for high temperature washing.

3. Measure out the fabric softener If required, pour fabric softener into the compartment marked (the amount used must not exceed the "MAX" mark in the drawer). Close the drawer gently. 1. Load the laundry Open the door by pulling the door handle outwards.

Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door. C0020 4. Select the required option Depress the RINSE HOLD button, if required. ECO WASH HALF LOAD RINSE HOLD P0004 2. Measure out the detergent Pull out the dispenser drawer until it stops. Measure out the amount of detergent required and pour it into the main wash compartment. If you wish to carry out the prewash, pour detergent into the compartment marked. 5. Select the required programme Turn the programme selector dial clockwise to the programme 2 or 1 (if you wish to perform a prewash).

2 P1006S C0021 7 6. Start the machine Before starting up the machine check that: 1 the appliance is plugged in 1 the water supply taps are turned on 1 the drain hose is correctly and securely positioned 1 the door and the detergent dispenser drawer are closed. Depress the ON/OFF button: the mains-on light will illuminate and the machine starts operating. MAINS ON T0001S 7. At the end of the programme The machine stops automatically. If you have depressed the RINSE HOLD button, the machine will stop with the water left in the tub, to prevent the fabric from creasing. To drain the water and spin, release the same button. To drain only, select programme "14". The door is controlled by a safety device which releases 2 minutes after the end of the programme. Switch the machine off by depressing the ON/OFF button again.

The mains-on light goes out. Remove the laundry. When the programme has finished you are advised to unplug the appliance and turn off the water taps. 8 WASHING 2 KG OF MIXED FABRICS AT 50°C Suppose you have 2 kg of Mixed fabrics to wash. They are rather delicate fabrics and should not be washed at a high temperature.

4. Select the required option Depress the RINSE HOLD button if res, ribbons, socks etc) should be washed in a washing bag or a pillow case. Use a good quality detergent suitable for automatic washing machines. Use the correct quantities of detergent. 11 Which detergent?.

... To ensure you obtain the best wash results from your appliance, it is important to use the right detergent in your everyday wash, and only detergents recommended for use in automatic machines. To maintain the appearance of your clothes and household textiles and to make them last longer you should use different types of detergent for different washes, whether for whites, colours or delicates. And in which form? Not only are there different types of detergent, but they are also available in different forms. Whether polyester X A cross through any symbol means «DO NOT» fabric conditioner to avoid the conditioner entering the machine prematurely. When using liquid detergent and a prewash programme, place the detergent into the correct compartment in the dispenser drawer, after the prewash has finished. 13 Important Notes For best results, always use the dispenser drawer for dispensing detergents and liquid additives. Once the dispenser has been filled, close it by pushing it in gently.

This is particularly important if you are using Washing Programmes Programmes for cotton and linen Wash programme/ Washing symbol WHITES WITH PREWASH Degree of soil and type of laundry Programme dial position Description Prewash at 40 °C Wash at 95°C 3 rinses Long spin Possible options RINSE HOLD HALF LOAD RINSE HOLD HALF LOAD RINSE HOLD HALF LOAD RINSE HOLD HALF LOAD RINSE HOLD HALF LOAD Max. Progr. time load mins. For heavy soiled cotton items. 1 4.5 kg 145 WHITES White cotton, for example normally soiled work garments, sheets, household linen, underwear, towels. White cotton economy, for example lightly soiled sheets, household linen. 2 Wash at 95 °C 3 rinses Long spin 4.5 kg 120 WHITES ECONOMY 2 + ECO WASH Wash at 50 °C 3 rinses Long spin 4.5 kg 115 Fast coloured cotton or FAST linen fabrics, shirts, COLOUREDS underwear, towels.

Non fast coloured NON- FAST cotton or linen fabrics, COLOUREDS shirts, blouses, underwear. LONG SPIN Separate spin for cotton and linen items 3(\*) Wash at 60 °C 3 rinses Long spin Wash at 40 °C 3 rinses Long spin Long spin 4.5 kg 125 4 5 4.5 kg 115 4.5 kg 12 (\*) This programme at 60°C with cold water filling and a wash load of 4.

5 kg is the reference programme for the Energy label according to EEC Directive 92/75. Water filling: 30°- 40° programmes: cold water filling 50°- 60°programme: hot and cold filling 95° programme: hot water filling The programme times are intended as a guide only. The actual time will vary depending on incoming water temperature and pressure. 14 Washing Programmes Programmes for synthetics, mixed fabrics, wool and delicates Wash programme/ Washing symbol Type of laundry Synthetic or mixed fabrics, underwear, coloured garments, non-shrink shirts, blouses.



[You're reading an excerpt. Click here to read official TRICITY](#)

[AW1054W user guide](#)

<http://yourpdfguides.com/dref/947076>

Lightly soiled synthetic or mixed fabrics Programme dial position Description Possible options RINSE HOLD Max.  
load Progr. time mins. Wash at 50 °C 3 rinses Short spin MIXED FABRICS 6 2 kg 60 WORN ONCE 7 Wash at 30 °C 3 rinses Short spin 3 rinses Short spin  
RINSE HOLD 2 kg 30 RINSES Separate rinse cycle for hand washed synthetic or mixed fabrics This programme can be used for softening synthetic or mixed  
fabrics Separate spin for hand washed delicate items 8 RINSE HOLD 2 kg 20 SOFTENERS 9 1 rinse Short spin RINSE HOLD 2 kg 10 SHORT SPIN 10  
Draining of water and short spin 2 kg 6 Specially tested programme for wool WOOL WASH garments bearing the "Pure new wool, nonshrink, machine  
washable" label. DELICATE WASH Delicate fabrics, for example curtains. 11 Wash at 40 °C 3 rinses Short spin RINSE HOLD 1 kg 50 12 Wash at 40 °C 3  
rinses Short spin 1 rinse, with fabric softener Short spin RINSE HOLD 2 kg 50 SOFTENERS For hand washed delicates and wool to be softened. For  
emptying out the last rinse water in programmes with the Rinse Hold option. 13 RINSE HOLD 2 kg 9 DRAIN 14 Draining of water - 1 15 Maintenance and  
Cleaning Before any maintenance or cleaning is carried out you must DISCONNECT the appliance from the electricity supply.  
@@@ We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: G The drum should be  
empty of laundry. G Select the hottest cotton wash programme.

@@@ The water should drain by gravity into the bowl. When the bowl is full, hook the hose back up and empty the bowl. Repeat the procedure  
until water stops flowing out. External cleaning Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly. Cleaning the  
dispenser drawer The washing powder and additive dispenser drawer should be cleaned regularly. @@@@ I Turn off the water taps. I Unscrew the inlet  
hoses. @@ Run the draining programme 14. I Disconnect the appliance. I Screw the inlet hoses and reposition the drain hose.

@@@ It is therefore a good idea to clean them from time to time. Turn off the water taps. Unscrew the water inlet hoses. Clean the filters using a hard  
bristle brush. @@@@ The plug is not properly inserted in the power socket.

@@ The selector dial is not correctly positioned. The ON/OFF button has not been depressed. Ensure the water taps are open. The filters in the inlet hoses  
are blocked. The inlet hoses may be squashed or kinked.

The door has not been closed. The end of the drain hose is too low. The end of the drain hose is submerged in water. There is no vent in the end of the drain  
hose. The drain hose may be squashed or kinked. The RINSE HOLD option has been selected. The drain filter may be blocked. The drain hose extension, if  
fitted, is not correct. Follow the instructions for connecting to the waste. The drainage system pipes are blocked.

@@@ The drain hose may be damaged or not securely positioned. The detergent dispenser drawer or recess is clogged. The drainage system  
pipes are blocked. Too little detergent or unsuitable detergent has been used. @@ Stubborn stains have not been treated prior to washing. The correct wash  
programme has not been selected. Too much laundry has been placed in the drum. The internal packing has not been removed. The machine is in contact with  
the wall or furniture. The machine is not stable and level (check diagonally).

The washing load is badly distributed in the drum. Maybe there is very little laundry in the drum. @@ The door lock has not yet released. @@@ The  
laundry is redistributed by reverse rotation of the drum. @@@@ The machine is fitted with a type of motor which makes an unusual noise compared with  
other traditional motors.

This new motor ensures a softer start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine.  
Machines based on modern technology operate very economically using very little water without affecting performance. Spinning starts late or the machine  
does not spin I The machine makes an unusual noise I No water is visible in the drum I If after the above checks, there is still a fault, call your local Service  
Force Centre. Customer Care For general enquiries concerning your Tricity Bendix appliance or for further information on Tricity Bendix products, please  
contact our Customer Care Department by letter or telephone as follows: Customer Care Department Tricity Bendix 55-77 High Street Slough Berkshire SL1  
1DZ Tel 08705 950950\* \*calls to this number may be recorded for training purposes Service & Spare Parts If you require an engineer or wish to purchase  
spare parts contact your local Tricity Bendix Service Force Centre by telephoning: 0870 5 929929 Your telephone call will be routed to the Service Centre  
covering your post code area. The addresses are detailed in this instruction book on the pages headed Tricity Bendix Service Force Centres, and can also be  
found in your local telephone directory under "T".

When you call the Service Force Centre please make sure you give the model and serial number of the appliance. This information can be found on the rating  
plate (see picture) or on the guarantee card. In-guarantee customers should ensure that the above checks have been made as the engineer will make a charge  
if the fault is not a mechanical or electrical breakdown. Please note that proof of purchase is required for any in-guarantee service calls. Mod. ....

..... Prod. No. ...

.....

... Ser. No.

..... Mod.

.....  
Prod. No. ...

.....

... P0042 Ser. No. ....

.... 19 Guarantee Conditions Standard guarantee conditions We, Tricity Bendix undertake that if, within 12 months of the date of the purchase, this Tricity  
Bendix appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option, repair or replace the  
same FREE OF ANY CHARGE for labour, materials or carriage on condition that: G The appliance has been correctly installed and used only on the  
electricity supply stated on the rating plate. G The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's  
instructions. G The appliance has not been serviced, maintained, repaired, taken apart or tampered with, by any person not authorised by us. All service work  
under this guarantee must be undertaken by a Tricity Bendix Service Force Centre. Any appliance or defective part replaced shall become the Company's  
property. This guarantee is in addition to your statutory and other legal rights.

Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged.

Exclusions This guarantee does not cover: G G G Damage or calls resulting from transportation, improper use or neglect, the replacement of any light  
bulbs or removable parts of glass or plastic.

[You're reading an excerpt. Click here to read official TRICITY](#)



[AW1054W user guide](#)

<http://yourpdfguides.com/dref/947076>



Plug all the holes with the plugs which you can find in the envelope containing the instruction booklet. P1088 P0256 P0020 24 If only a cold water supply is available, connect the two hoses to a cold water outlet by means of a «Y» connection piece. Installation should comply with local water authority and building regulations' requirements. The appliance must be given a separate cold water supply and not be connected to a mixer tap, a single outlet water heater or a booster pump. A minimum water pressure of 0.

48 bar is required for safe operation of the appliance. If you cannot make the cold water connection direct from the rising mains, you may be able to operate the appliance from your cold water storage system. There should be a minimum distance of 5.02m (16.5 ft) between the appliance's inlet and the bottom of the water storage tank. There will be sufficient pressure for the hot water supply, providing there is a minimum height of 2.74 metres (9 ft) between the bottom of the cold water storage tank and the bottom of the hot water cylinder. Set the hoses correctly by loosening the ring nuts. @@@@An additional drain hose and joining piece is available from your local Service Force Centre. The joining piece must have an internal diameter of 18mm.

If you intend the drain hose to empty into a sink, make sure that the sink is empty and the plug hole is not blocked. Use the plastic "U-Piece" supplied. P0021 P0022 Water drainage This appliance is designed to be permanently plumbed into your home's water supply and drainage system. The appliance drain hose should hook into a standpipe, the hook in the drain hose is formed using the plastic "U-Piece" supplied. @@30 cm. (12") 25 Min.60 cm. @@@@If you require any further advice please contact your local water authority. P1051 Any necessary adjustment can be made with a spanner. Accurate levelling prevents vibration, noise and displacement of the machine during operation.

Some vibration is inevitable, especially if mounted on a wooden floor. Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder. If possible, always place the machine on a solid floor. SHOWER SINK BATH TOILET BIDET Special conditions If the floor is carpeted or covered with crumbly or soft material, insert a rigid support base under the feet to prevent noise, vibration or displacement. The base should protrude a few centimetres beyond the edges of the machine. Warning The machine should NOT be placed on deep pile carpeting. Note Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown. P0987 WASHING MACHINE RAINWATER 'RUN-OFF' DISHWASHER FOUL DRAIN SURFACE WATER DRAINS & SEWERS FOUL SEWERS SEWAGE TREATMENT WORKS TREATED DISCHARGE RIVER RIVER UNTREATED DISCHARGE 26 Electrical connection Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. WARNING: THIS APPLIANCE MUST BE EARTHED.

The manufacturer declines any liability should this safety measure not be observed. Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. The rating plate is located at the top of the rim of the open door. Mod. ....

.... Prod.  
No. ....  
..... Ser. No. .

..... The wire coloured brown must be connected to the terminal marked «L» or coloured red. Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

WARNING: A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely. Should the appliance power supply cable need to be replaced, this should be carried out by our Service Force Centre. Note When the appliance is installed the power supply cable must be accessible. Mod.

.....  
.... Prod. No. ...

..... P0042 Permanent connection In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations. The switch must not break the yellow and green earth cable at any point.

Ser. No. ...

.....  
. The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1363A) fuse must be used. Should the plug need to be replaced for any reason, proceed as described below. The wires in the mains lead are coloured in accordance with the following code: Green and Yellow - Earth Blue - Neutral Brown - Live GREEN & YELLOW E 13 A N L BROWN BLUE P1041 CORD CLAMP The wire coloured green and yellow must be connected to the terminal marked with the letter «E» or by the earth symbol or coloured green and yellow. The wire coloured blue must be connected to the terminal marked «N» or coloured black. 27 Tricity Bendix, 55-77High Street, Slough, Berkshire SL1 1DZ Consumer care telephone number 08705 950950 © Electrolux Household Appliances Limited 2001 .



[You're reading an excerpt. Click here to read official TRICITY](#)

[AW1054W user guide](#)

<http://yourpdfguides.com/dref/947076>