




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY AW1201W. You'll find the answers to all your questions on the TRICITY AW1201W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY AW1201W
User guide TRICITY AW1201W
Operating instructions TRICITY AW1201W
Instructions for use TRICITY AW1201W
Instruction manual TRICITY AW1201W

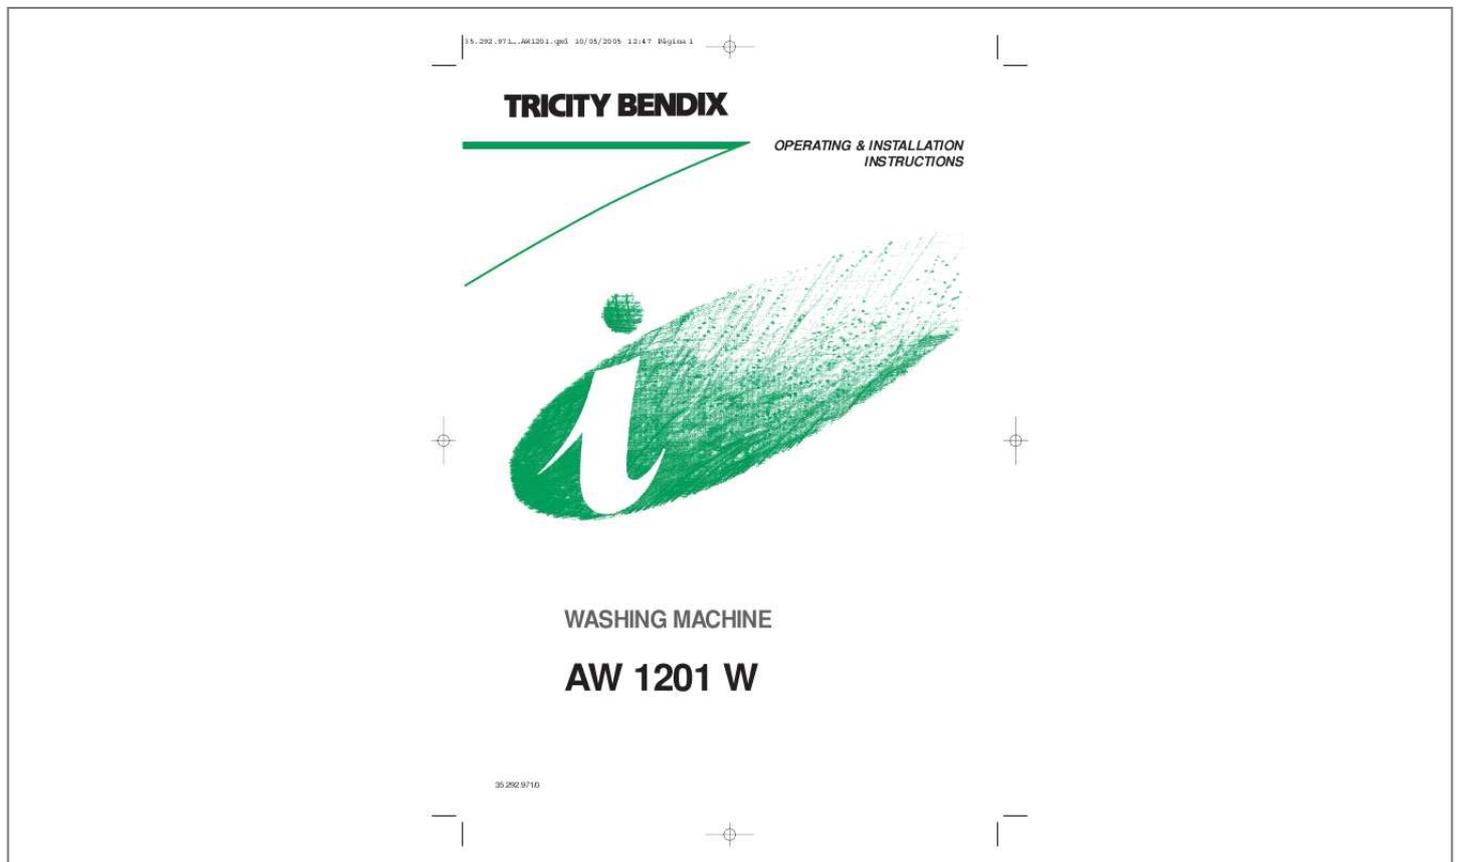

[You're reading an excerpt. Click here to read official TRICITY AW1201W user guide](http://yourpdfguides.com/dref/947081)
<http://yourpdfguides.com/dref/947081>

Manual abstract:

@@Care should be taken when moving it. @@All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in instructions. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. @@@@Pets and children have been known to climb into washing machines. Please check your drum before use. The glass door becomes very hot during the washing cycle.

@@Keep all packaging well away from children. @@Do not overload the appliance. See relevant section in the instruction book. 2 Always look through the glass door to check if water has drained before opening the door. The user should always check that they have not left their gas lighter (disposable or otherwise) in their clothing.

Only wash fabrics which are designed to be machine washed. If in doubt, consult the care label on the clothes. Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed.

Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. Only use the advised quantities of fabric softener. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities. As some duvets and eiderdowns should be washed in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine. Leave the porthole door slightly ajar between washes to preserve the door seal. Under no circumstances should you attempt to repair the machine yourself.

Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Force Centre. Always insist on genuine Tricity Bendix spare parts. 35.292.971....AW1201.

qxd 10/05/2005 12:47 Página 3 Contents For the User Important Safety Information Your New Washing Machine Description of the Appliance Detergent dispenser drawer 2 4 5 5 6-7 8 8-11 8 8 8 8 8 8 9 9 9 9 9 10 10 10 10 10 10 11 Washing Hints Which detergent?... And in which form? 12-13 13 13 14 15-16 17-18 17 17 17 17 17 17 17-18 18 18 18 19-20 20 21 Wash Care Symbols Washing Programmes Maintenance and Cleaning Descaling After each wash

Maintenance Wash External cleaning Cleaning the dispenser drawer Cleaning the drawer recess Cleaning the pump Cleaning the water inlet filter The dangers of freezing Emergency emptying out The Control Panel Programme information Operating Sequence Washing 5 kg of white cotton at 90°C Load the laundry Measure out the detergent and the fabric softener Select the required programme Select the spin speed reduction or no spin option Select the required option Start the programme Altering a programme Interrupting a programme Cancelling a programme Opening the door after the programme has started At the end of the programme Washing 2.

5 kg of mixed fabrics at 50°C Load the laundry Measure out the detergent and the fabric softener Select the required programme Select the spin speed reduction or no spin option Select the required option(s) Start the machine At the end of the programme Something Not Working Service and Spare Parts Guarantee Conditions For the Installer Installation Instructions Technical Specifications Unpacking Positioning Water inlet Water drainage Levelling Special conditions In the interest of the environment Electrical connection 22 22 23 23 24 24-25 25 25 25-26 26 Guide to use the Instruction Book The following symbols will be found in the text to guide you throughout the instructions: Safety instructions Hints and tips Environmental information 3 35.292.971...

.AW1201.qxd 10/05/2005 12:47 Página 4 Your New Washing Machine Your new washing machine meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. q q q q The programme selector dial combines the function of programme and temperature selection, making it easier to set the programme. The programme progress display shows the washing phase and the end of the programme. The special wool programme with its new delicate wash system treats your woollens with extreme care. The ECO VALVE allows total use of detergent and reduces water consumption so saving energy. In the interest of the environment q q q Ecological hints To save water and energy and help protect the environment, we recommend that you follow these hints: q Adjust the quantity of detergent according to the hardness of your water supply, the amount of laundry and the degree of soiling. q A programme without prewash is sufficient for normally soiled laundry. q The machine works more economically if it is fully loaded.

q With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature, so saving energy. q Materials marked with the symbol are recyclable. Check with your local Council or Environmental Health Office to see if there are facilities in your area for re-cycling this appliance. When the appliance is to be scrapped, cut off the power supply cable and make the door lock device unusable to prevent young children from being trapped inside. Help to keep your country tidy - use authorised disposal sites for your old appliance. The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. How do we help to protect the environment? We use recycled paper! Important Your machine is fitted with a balance control device, which ensures the machine is stable during the spin.



[You're reading an excerpt. Click here to read official TRICITY AW1201W user guide](http://yourpdfguides.com/dref/947081)
<http://yourpdfguides.com/dref/947081>

If the wash load appears not to have been spun sufficiently at the end of the wash cycle, because it is not evenly distributed in the drum, the balance control device may have operated. It will therefore be necessary to redistribute the wash load manually and select a spin programme. For more detailed information see the section headed "Something Not Working". 4 35.292.

971....AW1201.

qxd 10/05/2005 12:47 Página 5 Description of the Appliance 1 2 3 4 5 6 Detergent dispenser drawer Programme guide Control panel Door opening handle Drain pump Adjustable feet Detergent dispenser drawer Prewash Main wash Fabric softener C0069 5 35.292.971....AW1201.qxd 10/05/2005 19:33 Página 6 The Control Panel AW 1201W 1 Detergent dispenser drawer Programme Option buttons Depending on the programme, different functions can be combined.

These must be selected after choosing the desired programme and before depressing the Start/Pause button. When these buttons are pressed, the corresponding pilot lights come on.

When they are pressed again, the pilot lights go out. If an incorrect option is selected, the corresponding pilot light flashes for about 2 seconds. The prewash ends with a short spin in programmes for cotton and synthetic fabrics, whereas in the programme for delicate fabrics the water is only drained. 4 "Half Load" button Select this button to reduce water consumption on the rinse phase when washing a smaller load of cottons or linens (maximum load size = 2.5 kg). The machine will perform 2 rinses instead of 3. This function is not available on all programmes. If the corresponding pilot light flashes, this indicates that this option is not available. 2 "spin reduction" button By depressing this button you can reduce the final and the intermediate spin speeds or select the "no spin" option: q "spin reduction": by selecting this option the speed will be reduced as follows: Cotton: from 1200 to 550 r.p.

m. Synthetics, wool and Cold Wash : from 900 to 450 r.p.m. Quick and Cool, Delicates: from 700 to 450 r.

p.m. q "NO spin": by selecting this option all the spinning phases are suppressed. To be used for extremely delicate items. 5 "Rinse Hold" button After having selected the required programme, press this button to start the machine; the corresponding pilot light stops flashing.

To interrupt a programme which is running, depress the Start/Pause button: the corresponding pilot light starts to flash. To restart the programme from the point at which it was interrupted, press the Start/Pause button again. 6 "Start / Pause" button When selecting this option the water of the last rinse is not emptied out, to prevent the fabrics from creasing. At the end of the programme the pilot light "end" illuminates. To drain water, proceed as follows: · turn the programme selector dial to position "O"; · select programme 14 (drain) or 15 (spin). In this case reduce eventually the spin speed by means of the relevant button to adapt it to the fabrics to be spun. · press "start pause" button. 3 "Prewash" button Select this option if you wish your laundry to be prewashed before the main wash (not available for wool). 6 35.292.

971....AW1201.qxd 10/05/2005 12:47 Página 7 7 Programme progress display By selecting the wash programme, the pilot lights corresponding to the various phases making up the programme come on. ATTENTION! If you turn the programme selector dial to another programme when the machine is working, the lights of the programme progress display start to flash. The machine will not perform the new selected programme. Programme information 10 = Wool The wool wash cycle of this machine has been approved by Woolmark for the washing of machine washable Woolmark products provided that the garments are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine. M9604.

12 = Quick and cool This is a complete programme to be used for lightly soiled laundry or for laundry which needs freshening up (not available for wool). 13 = Rinses With this programme it is possible to rinse and spin garments which have been washed by hand. The machine performs 3 rinses, followed by a final short spin at corresponding light starts to flash. Depress the button again to restart the programme. 9.

labelling a programme Turn the selector dial to O to cancel a programme which is running. Now you can select a new programme. 10. Opening the door after the programme has started First set the machine to PAUSE by pressing the Start/Pause button. If the "door" light flashes and after 2 minutes goes off, the door can be opened.

If the "door" light doesn't flash, this means that the machine is already heating, that the water level is above the bottom edge of the door or that the drum is turning. In this case the door can not be opened. If you cannot open the door but you need to open it you have to switch the machine off by turning the selector dial to "O". After about 2 minutes the door can be opened (pay attention to button to adapt it to the fabrics to be spun. The door can only be opened after the relevant pilot light on the control panel has gone out. Release of the lock is also indicated by the coming on of the "end" light and the extinction the "door" light. Turn the programme selector dial to "O" to switch the machine off. Remove the laundry from the drum and carefully check that the drum is empty. If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant smells.

Start/ Pause 11 35.292.971....AW1201.qxd 10/05/2005 12:47 Página 12 Washing Hints Do NOT overload the machine. Weigh the laundry the first few times you use the appliance. The average weights of the most common items are listed below as a guide: 1000g = 1 kg Sheet Pillow case Tablecloth Serviette Tea towel Linen hand towel Towelling hand towel Towelling bath towel Bath robe Man's shirt Apron 700-1000 g 100-200 g 400-500 g 50-100 g 70-120 g 100-150 g 150-250 g 700-1000 g 1000-1500 g 200-300 g 150-200 g q q q q q q q q q q q q q q q q q q Load the laundry loosely alternating large items with small ones.

Sort the laundry according to the type of fabric, colour-fastness and how dirty it is. Avoid washing unhemmed or torn items as they may unravel. Before washing, empty all pockets of small objects which may have been left inside (coins, keys, screws etc.) as these could damage the drain pump. When washing curtains, remove the hooks.

Close poppers and zips and fasten loose buttons. It is essential to wash new coloured items separately when washing for the first time. When washing fabrics requiring different wash temperatures together, always select the lowest temperature. White items should not be washed with coloured items.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/947081)

[AW1201W user guide](http://yourpdfguides.com/dref/947081)

<http://yourpdfguides.com/dref/947081>

q Very small items (handkerchiefs, ribbons, socks etc) should be washed in a washing bag or a pillow case.

Use a good quality detergent suitable for automatic washing machines. Use the correct quantities of detergent. For wool, use gentle detergent only in small quantities. Bleach is very corrosive; it should be used with care and kept out of reach of children. Some stains such as fruit, wine, grass, rust etc. are difficult to remove and should be treated before washing with specific products, which can be found in most household shops. In some cases it may help to soak the stain before washing with a special presoak product or biological detergent. Only wool marked "Pure New Wool - washable, preshrunk" can be washed in the machine using the wool programme; other types of wool should be washed in HANDWASH programme. If you have used the machine to wash, rinse or spin only non-colour fast garments, there may be dye left in the sump. To ensure any subsequent wash is not contaminated with the dye, select and carry out a rinse and spin programme, without any garments, to ensure that any dye is removed from the sump.

Once you have finished using the machine, you are advised to unplug it and turn off the water tap. 12 35.292.971....AW1201.qxd 10/05/2005 12:47 Página 13
Which detergent?..

.. To ensure you obtain the best wash results from your appliance, it is important to use the right detergent in your everyday wash, and only detergents recommended for use in automatic machines. To maintain the appearance of your clothes and household textiles and to make them last longer you should use different types of detergent for different washes, whether for whites, colours or delicates. And in which form? Not only are there different types of detergent, but they are also available in different forms.

Whether you chose a powder or liquid in traditional or compact form is your own personal choice. TRADITIONAL POWDERS Pour the powder directly into the dispenser drawer. Do not sprinkle powder onto clothes in the machine drum. WHITES We recommend the Ariel product range which is biological and designed to provide excellent cleaning and stain removal even at low temperatures. TRADITIONAL LIQUIDS Liquid can be placed in the main wash compartment of the detergent drawer marked with the symbol , start the machine immediately upon placing the detergent in the dispenser drawer.

Alternatively the detergent is measured into the specially designed dosing device* which should be placed on top of the laundry, and at the back of the machine drum. NON BIOLOGICAL If you prefer to use a non biological detergent, which does not contain enzymes we recommend Fairy. Fairy provides good cleaning and stain removal. COMPACT POWDERS AND LIQUIDS Compact detergents (or concentrates as they are also known) are available in liquid or powder form, and generally require a smaller dosage. Follow the manufacturer's instructions to ensure the most economical usage.

@@@@@@@@@@@@@@@@@Bounce conditioning sheets for use in a tumble dryer. @@@@@@@@@@@@@@@@@@Cotton, Linen or Viscose Colourfast at 40°C but not 60°C. Acrylics, Acetate, Triacetate, Wool mixes, Polyester/wool blends. @@@@@@@@@@@@@@Once the dispenser has been filled, close it by pushing it in gently. @@NO SPIN PREWASH HALF LOAD RINSE HOLD SPIN RED.

NO SPIN PREWASH HALF LOAD RINSE HOLD SPIN RED. NO SPIN PREWASH HALF LOAD RINSE HOLD SPIN RED. NO SPIN Max. Progr.

@@@@@@@@@The programme times are intended as a guide only. @@@@@NO SPIN Possible options Max. Progr. time load mins.

@@@@@@@@@@@@@NO SPIN RINSE HOLD SPIN RED. NO SPIN RINSE HOLD SPIN RED.

@@@@@@@@@This will help to prevent the formation of lime deposits. C0072 C0073 Cleaning the drawer recess Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower part of the recess. Replace the drawer and run the rinse programme without any clothes in the drum. After each wash Leave the door open for a while. This helps to prevent mould and stagnant smells forming inside the appliance.

Keeping the door open after a wash will also help to preserve the door seal. Maintenance Wash With the use of low temperature washes it is possible to get a build up of residues inside the drum. We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: q The drum should be empty of laundry. q Select the hottest cotton wash programme.

q Use a normal measure of detergent, must be a powder (such as Ariel Futur). P0038 Cleaning the pump The pump should be inspected regularly and particularly if: · the machine does not empty and/or spin · the machine makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump. Proceed as follows: · Disconnect the appliance. · If necessary wait until the water has cooled down. · Open the pump door. External cleaning Clean the exterior cabinet of the appliance with mild washing up liquid and water only, and then dry thoroughly. Cleaning the dispenser drawer The washing powder and additive dispenser drawer should be cleaned regularly. Remove the drawer by pressing the catch downwards and by pulling it out. Flush it out under a tap, to remove any traces of accumulated powder.

To aid cleaning, the top part of the additive compartment should be removed. P1114 · Place a container close to the pump to collect any spillage. 17

35.292.971....AW1201.qxd 10/05/2005 12:48 Página 18 · When no more water comes out, unscrew the pump cover and remove it.

Always keep a cloth nearby to dry up spillage of water when removing the cover. Clean the filter using a hard bristle brush. Tighten up the inlet hose. P1090 P1115 · Remove any objects from the pump impeller by The dangers of freezing If the machine is exposed to temperatures below 0°C, certain precautions should be taken. q Turn off the water tap.

q Unscrew the inlet hose. q Place the end of the emergency emptying hose and that of the inlet hose in a bowl placed on the floor and let water drain out. q Screw the water inlet hose back on and reposition the emergency emptying hose after having put the cap on again. q When you intend to start the machine up again, make sure that the room temperature is above 0°C. Important! rotating it.

· Put the cap back on the emergency emptying hose and place the latter back in its seat. P1117 Every time you drain the water through the emergency emptying hose you must pour 2 litres of water into the main wash compartment of the detergent drawer and then run the drain programme. This will activate the ECO valve avoiding that part of the detergent remains unused at next washing. · Screw the pump cover fully in. · Close the pump door. Emergency emptying out If the water is not discharged, proceed as follows to empty out the machine: · pull out the plug from the power socket; · close the water tap; · if necessary, wait until the water has cooled down; · open the pump door; · place a bowl on the floor and place the end of the emergency emptying hose into the bowl.



[You're reading an excerpt. Click here to read official TRICITY](#)

[AW1201W user guide](#)

<http://yourpdfguides.com/dref/947081>

Remove its cap. The water should drain by gravity into the bowl. When the bowl is full, put the cap back on the hose. Empty the bowl.

Repeat the procedure until water stops flowing out; · clean the pump if necessary as previously described; · replace the emergency emptying hose in its seat after having plugged it; · screw the pump cover again and close the door. 18 Warning When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty.

When replacing the cover, ensure it is securely retightened so as to stop leaks and young children being able to remove it. Cleaning the water inlet filter If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged. It is therefore a good idea to clean it from time to time.

Turn off the water tap. Unscrew the water inlet hose. 35.292.

971....AW1201.

qxd 10/05/2005 12:48 Página 19 Something Not Working Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Force Centre, please carry out the checks listed below. During machine operation it is possible that the "End" light flashes to indicate that the machine is not working. @@@@The plug is not properly inserted in the power socket.

@@@@Ensure the water tap is open.

The filter in the inlet hose is blocked. The inlet hose may be squashed or kinked. The door has not been closed. The end of the drain hose is too low. The end of the drain hose is submerged in water. There is no vent in the end of the drain hose. The drain hose may be squashed or kinked. The option RINSE HOLD or NO SPIN has been selected. The drain pump may be blocked. The drain hose extension, if fitted, is not correct.

Follow the instructions for connecting to the waste. The drainage system pipes are blocked. @@@@The drain hose may be damaged or not securely positioned. @@The drainage system pipes are blocked. Too little detergent or unsuitable detergent has been used. @@Stubborn stains have not been treated prior to washing The correct wash programme has not been selected. Too much laundry has been placed in the drum. 19 The machine does not fill q q q The machine fills then empties immediately The machine does not empty and/or does not spin q q q q q q There is water on the floor q q q q Unsatisfactory washing results q q q q 35.292.971.

...AW1201.qxd 10/05/2005 12:48 Página 20 Symptom The machine vibrates when spinning Possible causes q q q q The internal packing has not been removed.

The machine is in contact with the wall or furniture. The machine is not stable and level (check diagonally). The washing load is badly distributed in the drum. Maybe there is very little laundry in the drum. The programme is still running.

Water in the tub: the door cannot be opened if water is present in the tub. The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 20 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. In this case, redistribute the load manually and reselect the spin programme. The machine is fitted with a type of motor which makes an unusual noise compared with other traditional motors. This new motor ensures a softer start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine. Machines based on modern technology operate very economically using very little water without affecting performance. The door will not open q q

Spinning starts late or the machine does not spin q The machine makes an unusual noise q No water is visible in the drum q Service & Spare Parts In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Tricity Bendix Service Force Centre by telephoning: 0870 5 929929 Your telephone call will be automatically routed to the Service Force Centre covering your post code area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at www.serviceforce.co.uk. For Customer Service in Ireland please contact us at the address below: Tricity Bendix Electrolux Group (Irl) Ltd Long Mile Road Dublin 12 Republic of Ireland Tel: +353 (0)1 4090751 Email: service.eid@electrolux.ie 20 Before calling out an engineer, please ensure you have read the details under the heading "Something Not Working". When you contact the Service Force Centre you will need to give the following details: 1. Your name, address and post code 2. Your telephone number 3.

Clear and concise details of fault 4. The model and serial number of the appliance (found on the rating plate - see picture) 5. The purchase date. Please note that a valid purchase receipt or guarantee documentation is required for inguarantee service calls. Mo Pro d.

.....
. d. No.

... .. Ser . No.

.....
... Mod.

.....

Prod. No.
... P0042 BD Ser. No.

.....
.... 35.292.971....

AW1201.qxd 19/05/2005 14:04 Página 21 Customer Care Department For general enquiries concerning your Tricity Bendix appliance or for further information on Tricity Bendix products, please contact our Customer Care Department by letter or telephone as follows: Major Appliances Customer Care Tricity Bendix 101 Oakley Road LUTON Beds LU4 9QQ Tel 08705 950 950* * calls to this number may be recorded for training purposes. Guarantee Conditions Standard guarantee conditions We, Tricity Bendix, undertake that if, within 12 months of the date of the purchase, this Tricity Bendix appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that: q The appliance has been correctly installed and used only on the electricity supply stated on the rating plate. q The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions. q The appliance has not been serviced, maintained, repaired, taken apart or tampered with, by any person not authorised by us. q All service work under this guarantee must be undertaken by a Tricity Bendix Service Force Centre. q Any appliance or defective part replaced shall become the Company's property. q This guarantee is in addition to your statutory and other legal rights. Home visits are made between 8.30am and 5.

30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged. q q Appliances found to be in use within a

commercial environment, plus those which are subject to rental agreements.



[You're reading an excerpt. Click here to read official TRICITY
AW1201W user guide](http://yourpdfguides.com/dref/947081)
<http://yourpdfguides.com/dref/947081>

Products of Tricity Bendix manufacture which are NOT marketed by Tricity Bendix. European guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications: q The guarantee starts from the date you first purchased your product.

q The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products. q The guarantee relates to you and cannot be transferred to another user. q Your new home is within the European Community (EC) or European Free Trade Area. q The product is installed and used in accordance with our instructions and is only used domestically, i.e.

a normal household. q The product is installed taking into account regulations in your new country. Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances. France Germany Italy Sweden UK Ireland 21 Senlis Nurnberg Pordenone Stockholm Slough Dublin +33 (0)344 62 29 29 +49 (0)800 234 7378 +39 (0)432 394700 +46 (0)8 6725390 +44 (0)1753 219897 +353 (0)1 40907528 Exclusions This guarantee does not cover: q q Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic. Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom. 35.292.971..

..AW1201.qxd 10/05/2005 19:33 Página 22 Installation Instructions @@Care must be taken to ensure that the appliance does not stand on the electrical supply cable. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Should the appliance power supply cable need to be replaced, this should be carried out by our Service Force Centre. Technical Specifications DIMENSIONS Height Width Depth 85 cm 60 cm 60 cm 230-240 V/50 Hz 2100 W (10 A) Minimum Maximum Cotton, linen Synthetics Delicate fabrics Wool and Handwash Maximum Energy Water Times 0.05 MPa (0.5 bar) 800 kP88888888 0.

80 MPa (8.0 bar) 5 kg 2 kg 2 kg 1 kg 1200 rpm 0.85 kWh 49 litres 135 minutes POWER SUPPLY VOLTAGE TOTAL POWER ABSORBED WATER PRESSURE MAX LOAD CAPACITY SPIN SPEED CONSUMPTION DATA FOR WASHING 5 KG NORMALLY SOILED COTTON ITEMS AT 60°C (PROGR. "2" ECOWASH 60°) This appliance complies with the following E.E.

C. Directives: - 73/23 EEC of 19.2.73 (Low Voltage Directive) and subsequent modifications; - 89/336 EEC of 3.5.

89 (Electromagnetic Compatibility Directive) and subsequent modifications. 22 35.292.971....AW1201.qxd 10/05/2005 12:48 Página 23 Unpacking All transit bolts and packing must be removed before using the appliance You are advised to keep all the packaging for re-use in case the appliance has to be transported again. s s Plug the 3 holes with the plastic plugs which you can find in the envelope containing the instruction booklet.

Unscrew and remove the three rear transit bolts (using a spanner). P0002 P0287 s Lay the machine gently on its back, making sure that the hoses are not squashed. We suggest a polystyrene angle bracket from the packing is placed on the floor before tilting it back to avoid the hoses being squashed. Important !

You are advised to keep all the packaging for re-use in case the machine is to be transported again. In case of moving out the same precautions as per paragraph "The dangers of freezing" must be taken i.e. the residual water in the hoses must be pumped out. Positioning Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units.

Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. Your new washing machine has been designed to be permanently plumbed in to your home's water supply and drainage system. However, if this is not possible, it may be connected to suitable existing tap with the drain hose discharging into a sink. The appliance has one inlet hose, with female 3/4" BSP thread connector. If this connection is not compatible with the plumbing of the existing installation, a variety of connectors are available from good hardware stores and plumbers merchants to suit most domestic plumbing.

Any alteration to your existing plumbing must be carried out by a competent person, or qualified plumber. s Carefully remove the polyethylene bags located at the base of the machine by pulling them toward the centre of the machine. 1 2 P0018 AL009 s Place the machine in an upright position and remove the three plastic spacers. Installation on a Suspended Floor P0001 Suspended wooden floors are particularly susceptible to vibration. To help prevent vibration we recommend you place a waterproof wood panel, at least 15 mm thick under the appliance, secured to at least 2 floor beams with screws.

If possible install the appliance in one of the corners of the room, where the floor is more stable. 23 35.292.971....AW1201.qxd 10/05/2005 12:48 Página 24 Water inlet Connect the hose to a tap with a 3/4" thread. Do not use previously used hoses for water connection.

U piece supplied P1199 P1088 Place the drain hose into your standpipe, which should have an internal diameter of approximately 38mm thus ensuring there is an air break between the drain hose and standpipe. 38 mm (1.2) standpipe diameter 30 cm (12") P1200 Installation should comply with local water authority and building regulations' requirements. The appliance must be connected to a cold water supply. A minimum water pressure of 50 kPa (0.5 bar) is required for safe operation of the appliance. If you cannot make the cold water connection direct from the rising mains, you may be able to operate the appliance from your cold water storage system. @@Set the hose correctly by loosening the ring nut. @@1. Into a drainage standpipe.

@@@The joining piece must have an internal diameter of 18mm. If your drain hose looks like this (see below) you do not require the "U" piece". Just push the hose firmly into the standpipe. P1212 24 Min. 60 cm (23.

6) Max. 90 cm (35.4) 35.292.971.

...AW1201.qxd 10/05/2005 12:48 Página 25 2. Onto a sink outlet spigot. If the outlet spigot has not been used before, remove any blanking plug that may be in place. P1051 P1197 Push the drain hose onto the spigot and secure with a clip if required, ensure a loop is formed in the drain hose (see diagram) to prevent waste from the sink entering the washing machine.



[You're reading an excerpt. Click here to read official TRICITY](#)

[AW1201W user guide](#)

<http://yourpdfguides.com/dref/947081>

Any necessary adjustment can be made with a spanner. Accurate levelling prevents vibration, noise and displacement of the machine during operation.

@@Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder. @@@@Warning The machine should NOT be placed on deep pile carpeting. @@@@The joining piece must have an internal diameter of 18mm. Important q Before connecting the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes. In the interest of the environment Washing machines and dishwashers should be connected to the FOUL drainage system, the water will then be taken to a sewage works for treatment before being discharged safely into a river. It is essential that these appliances are not connected to the surface water drainage system as this water is discharged directly into a river or stream and may cause pollution. If you require any further advice please contact your local water authority. Levelling Level the washing machine by raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine

MUST be level and stable.

25 35.292.971...

.AW1201.qxd 10/05/2005 12:48 Página 26 Electrical connection Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. WARNING: THIS APPLIANCE MUST BE EARTHED. The manufacturer declines any liability should this safety measure not be observed.

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. The rating plate is located at the bottom of the rim of the open door. The wires in the mains lead are coloured in accordance with the following code: Green and Yellow - Earth Blue - Neutral Brown - Live GREEN & YELLOW E 13 A N L BROWN BLUE P1041 CORD CLAMP Mod.

... Prod. No.

.....

. P0042 BD Ser. No. ..

..... The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS 1363/A) fuse must be used. Should the plug need to be replaced for any reason, proceed as described below.

The wire coloured green and yellow must be connected to the terminal marked with the letter «E» or by the earth symbol or coloured green and yellow. The wire coloured blue must be connected to the terminal marked «N» or coloured black. The wire coloured brown must be connected to the terminal marked «L» or coloured red. Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath. WARNING: A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Force Centre. Note When the appliance is installed the power supply cable must be accessible. Mo Pro d. .

.....

d. No. ...

.

.. Ser . No.

... Permanent connection In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations. The switch must not break the yellow and green earth cable at any point.

26 35.292.971...

.AW1201.qxd 10/05/2005 12:48 Página 27 35.292.971....AW1201.qxd 19/05/2005 18:39 Página 28 Tricity Bendix, 101 Oakley Road, LUTON, Beds, LU4 9QQ Consumer care telephone number 08705 950 950 The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use.

More than 55 million Electrolux Group products (such as refrigerators, cookers, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. 14 billion USD in more than 150 countries around the world. Electrolux plc 2005/05 .



[You're reading an excerpt. Click here to read official TRICITY](#)

[AW1201W user guide](#)

<http://yourpdfguides.com/dref/947081>