



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY AW1560W. You'll find the answers to all your questions on the TRICITY AW1560W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY AW1560W
User guide TRICITY AW1560W
Operating instructions TRICITY AW1560W
Instructions for use TRICITY AW1560W
Instruction manual TRICITY AW1560W

TRICITY BENDIX

OPERATING & INSTALLATION
INSTRUCTIONS



WASHING MACHINE
AW 1560 W

132991640



[You're reading an excerpt. Click here to read official TRICITY AW1560W user guide](http://yourpdfguides.com/dref/947091)
<http://yourpdfguides.com/dref/947091>

Manual abstract:

@@Care should be taken when moving it. @@All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in instructions. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. @@@@Pets and children have been known to climb into washing machines. Please check your drum before use. The glass door becomes very hot during the washing cycle.

@@Keep all packaging well away from children. @@Do not overload the appliance. See relevant section in the instruction book. Only wash fabrics which are designed to be machine washed. If in doubt, consult the care label on the clothes.

Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed. Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. Garments which have been in contact with volatile petroleum products should not be machine washed.

If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. Only use the advised quantities of fabric softener. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities. As some duvets and eiderdowns should be washed in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine. Leave the porthole door slightly ajar between washes to preserve the door seal. Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Force Centre.

Always insist on genuine Tricity Bendix spare parts. 2 Contents For the User Important Safety Information Your New Washing Machine Description of the Appliance Detergent dispenser drawer Child Safety Feature 2 4 5 5 5 6-7 7 Maintenance and Cleaning Descaling After each wash Maintenance Wash External cleaning Cleaning the dispenser drawer Cleaning the drawer recess Cleaning the pump Cleaning the water inlet filter The dangers of freezing Emergency emptying out The Control Panel Programme information Operating sequence 8-11 Washing 6 kg of white cotton at 95°C 8 Load the laundry 8 Measure out the detergent 8 Measure out the fabric softener 8 Select the required programme 8 Select spin speed reduction or no spin option 8 Select the required option 8 Start the programme 9 Altering a programme 9 Interrupting a programme 9 Cancelling a programme 9 Opening the door after the programme has started 9 At the end of the programme 9 Washing 3 kg of synthetics at 50°C 10 Load the laundry 10 Measure out the detergent and the fabric softener 10 Select the required programme 10 Select spin speed reduction or no spin option 10 Select the required option(s) 10 Start the programme 10-11 At the end of the programme 11 18-19 18 18 18 18 18 18-19 19 19 20-21 21-22 22 Something Not Working Service and Spare Parts Guarantee Conditions For the Installer Installation Instructions Technical Specifications Unpacking Positioning Installation on a Suspended Floor Water inlet Water drainage Levelling Special conditions In the interest of the environment Electrical connection 23 23 24 24 24 25 25-26 26 26 26 27 Washing Hints Which detergent?.... And in which form? 12-13 13 13 14 15-17 Wash Care Symbols Washing Programmes Guide to use the Instruction Book The following symbols will be found in the text to guide you throughout the instructions: Safety instructions Hints and tips Environmental information 3 Your New Washing Machine Your new washing machine meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. The programme selector dial combines the function of programme and temperature selection, making it easier to set the programme. The programme progress display shows the washing phase, the end of the programme and indicates that the door can be opened. The special wool programme with its new delicate wash system treats your woollens with extreme care. The ECO VALVE allows total use of detergent and reduces water consumption so saving energy. In the interest of the environment Ecological hints To save water and energy and help protect the environment, we recommend that you follow these hints: Adjust the quantity of detergent according to the hardness of your water supply, the amount of laundry and the degree of soiling. A programme without prewash is sufficient for normally soiled laundry. The machine works more economically if it is fully loaded. With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature, so saving energy. Materials marked with the symbol are recyclable. Check with your local Council or Environmental Health Office to see if there are facilities in your area for re-cycling this appliance. When the appliance is to be scrapped, cut off the power supply cable and make the door lock device unusable to prevent young children from being trapped inside. Help to keep your country tidy - use authorised disposal sites for your old appliance. How do we help to protect the environment? We use recycled paper! Important Your machine is fitted with a balance control device, which ensures the machine is stable during the spin. If the wash load appears not to have been spun sufficiently at the end of the wash cycle, because it is not evenly distributed in the drum, the balance control device may have operated. It will therefore be necessary to redistribute the wash load manually and select a spin programme. For more detailed information see the section headed "Something Not Working". 4 Description of the Appliance 1 Detergent dispenser drawer 2 Programme guide 3 Control panel 4 Door opening handle 5 Drain pump 6 Adjustable feet 1 3 PROGRAMME WHITES with prew. FAST COLOURS NON FAST COLOURS SYNTHETICS DELICATES Rinses Spin Drain Softeners 95° 60° 40° 50° 40° 1 2 3 4 5 6 7 8 9 30° HANDWASH 40° WOOL Mini Program SYNTHETICS Easy Iron 40° 30° COLOUR CARE 60° WHITES economy 10 11 12 13 14 15 15 8H 4H prewash/wash rinse hold spin reduction half load start pause rinses spin drain end 1 2 3 4 5 14 13 12 11 10 9 8 7 6 AW 1560 W 6kg load ELECTRONIC 1500 2 4 5 6 Detergent dispenser drawer Prewash Main wash Fabric softener P1141S Child safety feature This machine incorporates a special child safety feature to prevent small children from being trapped inside the machine.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/947091)

[AW1560W user guide](http://yourpdfguides.com/dref/947091)

<http://yourpdfguides.com/dref/947091>

To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin. To disable this device and restore the possibility of closing the door, rotate the button anti-clockwise until the groove is vertical. P1131 5 The Control Panel PROGRAMME WHITES with prewash. FAST COLOURS NON FAST COLOURS SYNTHETICS DELICATES Rinses Spin Drain Softeners 95° 60° 40° 50° 40° 1 2 3 4 5 6 7 8 9 HANDWASH WOOL Mini Program SYNTHETICS Easy Iron COLOUR CARE WHITES economy 30° 40° 40° 30° 60° 10 11 12 13 14 15 15 8H 4H prewash/wash rinse hold spin reduction half load start pause rinses spin drain end 1 2 3 4 5 14 13 12 11 10 9 8 7 6kg load E L E C T R O N I C 1500 6 AW 1560 W 1 2 3 4 5 6 7 8 1 Detergent dispenser drawer Programme Option buttons Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the "start pause" button.

When these buttons are pressed, the corresponding pilot lights come on. When they are pressed again, the pilot lights go out. If an incorrect option is selected, the corresponding pilot light flashes for about 2 seconds. The delay start can not be selected with SPIN and DRAIN programmes. 3 Rinse Hold button When selecting this option the water of the last rinse is not emptied out, to prevent the fabrics from creasing. At the end of the programme the pilot lights "door" and "end" illuminate. To drain water, proceed as follows: turn the programme selector dial to position "O"; select programme 8 (drain) or 7 (spin). In this case reduce the spin speed by means of the relevant button to adapt it to the fabrics to be spun. press "start pause" button. 2 8 H and 4 H button You can press this button to delay the start of the washing programme by 8 or 4 hours.

The delay you have selected is indicated by the illumination of the corresponding light. You must select this option after you have set the programme and before you press the START PAUSE button. You can cancel the delay time at any moment, before you press the START/PAUSE button. If you have already pressed the START/PAUSE button, and you wish to cancel the delay time, proceed as follows: · set the washing machine to PAUSE by pressing the START/PAUSE button; · press the DELAY button once, the light relevant to the selected delay goes off. · press the START/PAUSE button again to start the programme.

Important! The selected delay can be changed only after selecting the washing programme again. The door will be locked throughout the delay time. If you need to open the door, you must first set the washing machine to PAUSE by pressing the START/PAUSE button. After you have closed the door, press the START/PAUSE button again. 4 Spin Reduction button By selecting this option the speed will be reduced as follows: Cotton: from 1500 to 700 r.p.m. and from 1200 to 600 r.p.m. Synthetics, wool and handwash: from 900 to 450 r.p.m. Delicates: from 700 to 450 r.p.

m. 5 Half Load button Select this button to reduce water consumption on the rinse cycle when washing a smaller load of cottons or linens (maximum load size = 3 kg). The machine will perform 2 rinses instead of 3. 6 Start Pause button After having selected the required programme, press this button to start the machine; the corresponding pilot light stops flashing. To interrupt a programme which is running, depress the "start pause" button: the corresponding pilot light starts to flash. To restart the programme from the point at which it was interrupted, press the "start pause" button again. 6 7 Programme progress display By selecting the wash programme, the pilot lights corresponding to the various phases making up the programme come on. prewash/wash rinses spin drain end Programme information 11 = Wool The wool wash cycle of this machine has been approved by Woolmark for the washing of machine washable Woolmark products provided that the garments are washed accordamount used must not exceed the "MAX" mark in the drawer). Close the drawer gently. 5. Select the required option Select "rinse hold" or "spin reduction" option if required, the corresponding light illuminates. rinse hold spin reduction half load P1175 P1174 8 6. Start the programme Before starting up the machine check that: the appliance is plugged in the water supply tap is turned on the drain hose is correctly and securely positioned the door and the detergent dispenser drawer are closed. To start the selected programme, press the "start pause" button; the corresponding light stops flashing. Only the "prewash/wash" light stays on.

The machine starts operating. start pause 8. At the end of the programme The machine stops automatically.

If the "rinse hold" option has been selected, the phase light "end" is on to indicate that the water must be emptied out before opening the door. To do this first turn the programme selector dial to "O" and then to drain programme 8 or spin programme 7. In this case reduce the spin speed by means of the relevant button to adapt it to the fabrics to be spun. The door can only be opened after the relevant pilot light on the control panel has gone out. Release of the lock is also indicated by the illumination of the "end" light. Turn the programme selector dial to "O" to switch the machine off. Remove the laundry from the drum and carefully check that the drum is empty. If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant smells. 11 Washing Hints Do NOT overload the machine.

Weigh the laundry the first few times you use the appliance. The average weights of the most common items are listed below as a guide: 1000g = 1 kg Sheet Pillow case Tablecloth Serviette Tea towel Linen hand towel Towelling hand towel Towelling bath towel Bath robe Man's shirt Apron 700-1000 g 100-200 g 400-500 g 50-100 g 70-120 g 100-150 g 150-250 g 700-1000 g 1000-1500 g 200-300 g 150-200 g For wool, use gentle detergent only in small quantities. Bleach is very corrosive; it should be used with care and kept out of reach of children. Some stains such as fruit, wine, grass, rust etc. are difficult to remove and should be treated before washing with specific products, which can be found in most household shops. In some cases it may help to soak the stain before washing with a special presoak product or biological detergent. Only wool marked "Pure New Wool - washable, preshrunk" can be washed in the machine using the wool programme; other types of wool should be washed in COLD WASH programme (11).



[You're reading an excerpt. Click here to read official TRICITY AW1560W user guide](http://yourpdfguides.com/dref/947091)
<http://yourpdfguides.com/dref/947091>

If you have used the machine to wash, rinse or spin only non-colour fast garments, there may be dye left in the sump. To ensure any subsequent wash is not contaminated with the dye, select and carry out a rinse and spin programme, without any garments, to ensure that any dye is removed from the sump. Once you have finished using the machine, you are advised to unplug it and turn off the water tap.

Load the laundry loosely alternating large items with small ones. Sort the laundry according to the type of fabric, colour-fastness and how dirty it is. Avoid washing unhemmed or torn items as they may unravel. Before washing, empty all pockets of small objects which may have been left inside (coins, keys, screws etc.) as these could damage the drain pump.

When washing curtains, remove the hooks. Close poppers and zips and fasten loose buttons. It is essential to wash new coloured items separately when washing for the first time. When washing fabrics requiring different wash temperatures together, always select the lowest temperature. White items should not be washed with coloured items.

Very small items (handkerchiefs, ribbons, socks etc) should be washed in a washing bag or a pillow case. Use a good quality detergent suitable for automatic washing machines. Use the correct quantities of detergent. 12 Which detergent?... To ensure you obtain the best wash results from your appliance, it is important to use the right detergent in your everyday wash, and only detergents recommended for use in automatic machines. To maintain the appearance of your clothes and household textiles and to make them last longer you should use different types of detergent for different washes, whether for whites, colours or delicates. And in which form? Not only are there different types of detergent, but they are also available in different forms.

Whether you chose a powder or liquid in traditional or compact form is your own personal choice. **TRADITIONAL POWDERS** Pour the powder directly into the dispenser drawer. Do not sprinkle powder onto clothes in the machine drum. **WHITES** We recommend the Ariel product range which is biological and designed to provide excellent cleaning and stain removal even at low temperatures. **TRADITIONAL LIQUIDS** Liquid can be placed in the main wash compartment of the detergent drawer marked with the symbol , start the machine immediately upon placing the detergent in the dispenser drawer.

Alternatively the detergent is measured into the specially designed dosing device* which should be placed on top of the laundry, and at the back of the machine drum. **NON BIOLOGICAL** If you prefer to use a non biological detergent, which does not contain enzymes we recommend Fairy. Fairy provides good cleaning and stain removal. **COMPACT POWDERS AND LIQUIDS** Compact detergents (or concentrates as they are also known) are available in liquid or powder form, and generally require a smaller dosage. Follow the manufacturer's instructions to ensure the most economical usage.

Pour the detergent directly into the dispenser drawer, or alternatively measure the detergent into the specially designed dosing device* which should be placed on top of the laundry, and at the back of the machine drum. * If you use a dosing device in a washer dryer, please ensure the dosing device/ball is removed before carrying out a drying programme. **COLOURED** For coloured items you should use a detergent which is designed to clean while maintaining the original colour. Ariel Color does not contain bleach and therefore helps to preserve colours. **DELICATE ITEMS** When washing delicates such as woollens, you should use a product which is specially designed to care for fine fabrics.

@@@Bounce conditioning sheets for use in a tumble dryer. @@@@Cotton, Linen or Viscose Colourfast at 40°C but not 60°C. Acrylics, Acetate, Triacetate, Wool mixes, Polyester/wool blends. @@@@Once the dispenser has been filled, close it by pushing it in gently. @@@@Progr.

@@@@@HALF LOAD 6 kg 140 RESET / OFF O (*) prew. = prewash (**) SPIN RED. @@The programme times are intended as a guide only. @@@@load Progr. @@@@This programme can be used for softening hand washed garments. @@Progr. @@The actual time will vary depending on incoming water temperature and pressure. 17 Maintenance and Cleaning Before any maintenance or cleaning is carried out you must DISCONNECT the appliance from the electricity supply. Descaling The water we use normally contains lime. It is a good idea to periodically use a water softening powder in the machine.

Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions. This will help to prevent the formation of lime deposits. P1142 P1143 Cleaning the drawer recess Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower part of the recess. Replace the drawer and run the rinse programme without any clothes in the drum. After each wash Leave the door open for a while. This helps to prevent mould and stagnant smells forming inside the appliance. Keeping the door open after a wash will also help to preserve the door seal. Maintenance Wash With the use of low temperature washes it is possible to get a build up of residues inside the drum. We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: The drum should be empty of laundry.

Select the hottest cotton wash programme. Use a normal measure of detergent, must be a powder (such as Ariel Futur). P0038 Cleaning the pump The pump should be inspected regularly and particularly if - the machine does not empty and/or spin - the machine makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump. Proceed as follows: · Disconnect the appliance.

· If necessary wait until the water has cooled down. · Open the pump door. External cleaning Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly. Cleaning the dispenser drawer The washing powder and additive dispenser drawer should be cleaned regularly. Remove the drawer by pressing the catch downwards and by pulling it out.

Flush it out under a tap, to remove any traces of accumulated powder. To aid cleaning, the top part of the additive compartment should be removed. P114 · Place a container close to the pump to collect any spillage. · Pull out the emergency emptying hose, place it in the container and remove its cap. 18 · When no more water comes out, unscrew the pump cover and remove it. Always keep a cloth nearby to dry up spillage of water when removing the cover. Clean the filter using a hard bristle brush. Tighten up the inlet hose. P1090 P1115 · Remove any objects from the pump impeller by The dangers of freezing If the machine is exposed to temperatures below 0°C, certain precautions should be taken.



[You're reading an excerpt. Click here to read official TRICITY](#)

[AW1560W user guide](#)

<http://yourpdfguides.com/dref/947091>

Turn off the water tap.

Unscrew the inlet hose. Place the end of the emergency emptying hose and that of the inlet hose in a bowl placed on the floor and let water drain out. Screw the water inlet hose back on and reposition the emergency emptying hose after having put the cap on again. When you intend to start the machine up again, make sure that the room temperature is above 0°C. Important! rotating it. Put the cap back on the emergency emptying hose and place the latter back in its seat. P1117 Every time you drain the water through the emergency emptying hose you must pour 2 litres of water into the main wash compartment of the detergent drawer and then run the drain programme. This will activate the ECO valve avoiding that part of the detergent remains unused at next washing.

Screw the pump cover fully in. Close the pump door.

Emergency emptying out If the water is not discharged, proceed as follows to empty out the machine: pull out the plug from the power socket; close the water tap; if necessary, wait until the water has cooled down; open the pump door; place a bowl on the floor and place the end of the emergency emptying hose into the bowl. Remove its cap. The water should drain by gravity into the bowl. When the bowl is full, put the cap back on the hose. Empty the bowl.

Repeat the procedure until water stops flowing out; clean the pump if necessary as previously described; replace the emergency emptying hose in its seat after having plugged it; screw the pump cover again and close the door. 19 Warning When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty.

It is therefore a good idea to clean it from time to time. Turn off the water tap.

An acoustic warning signal is also heard. The plug is not properly inserted in the power socket. Ensure the water tap is open. The filter in the inlet hose is blocked. The inlet hose may be squashed or kinked. The door has not been closed. The end of the drain hose is too low. The end of the drain hose is submerged in water. There is no vent in the end of the drain hose. The drain hose may be squashed or kinked.

The "rinse hold" option has been selected. The drain pump may be blocked. The drain hose extension, if fitted, is not correct. Follow the instructions for connecting to the waste. The drainage system pipes are blocked. Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. The drain hose may be damaged or not securely positioned. The detergent dispenser drawer or recess is clogged. The drainage system pipes are blocked.

The cap on the emergency emptying hose has not been replaced after cleaning the filter. Too little detergent or unsuitable detergent has been used. An insufficient amount of detergent leaves the laundry looking grey and causes lime scale to form. Stubborn stains have not been treated prior to washing. The correct wash programme has not been selected. Too much laundry has been placed in the drum.

20 The machine does not fill The machine fills then empties immediately The machine does not empty and/or does not spin There is water on the floor Unsatisfactory washing results Symptom The machine vibrates when spinning Possible causes The internal packing has not been removed. The machine is in contact with the wall or furniture. The machine is not stable and level (check diagonally). The washing load is badly distributed in the drum. Maybe there is very little laundry in the drum.

The programme is still running. The door lock has not yet released (the "door" light is still on). Water in the tub: the door cannot be opened if water is present in the tub. The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 5 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. In this case, redistribute the load manually and reselect the spin programme. The machine is fitted with a type of motor which makes an unusual noise compared with other traditional motors. This new motor ensures a softer start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine.

Machines based on modern technology operate very economically using very little water without affecting performance. For Customer Service in Ireland please contact us at the address below: Tricity Bendix Electrolux Group (Irl) Ltd Long Mile Road Dublin 12 Republic of Ireland Tel: + 353 (0)1 4090752 Email: service.eld@electrolux.ie The door will not open Spinning starts late or the machine does not spin The machine makes an unusual noise No water is visible in the drum Service & Spare Parts In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning: 0870 5 929929 Your telephone call will be automatically routed to the Service Force Centre covering your post code area. For the address of your local Service Force Centre and further information about Service Force, please visit the website at www.serviceforce.co.uk. Before calling out an engineer, please ensure you have read the details under the heading "Something Not Working". When you contact the Service Force

Centre you will need to give the following details: 1.

Your name, address and post code 2. Your telephone number 3. Clear and concise details of fault 4. The model and serial number of the appliance (found on the rating plate - see picture). 5.

The purchase date Mo Pro d.

. d. No

... .. Ser .

No

.

Mod.

. Prod. No.

.... P0042 BD Ser.

No.

..... 21 Customer Care For general enquiries concerning your Tricity Bendix appliance or for further information on Tricity Bendix products, please contact our Customer Care Department by letter or telephone as follows: Customer Care Department Tricity Bendix 55-77 High Street Slough Berkshire SL1 1DZ Tel 08705 950 950* * calls to this number may be recorded for training purposes. Guarantee Conditions Standard guarantee conditions We, Tricity Bendix undertake that if, within 12 months of the date of the purchase, this Tricity Bendix appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option, repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that: The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.

[You're reading an excerpt. Click here to read official TRICITY AW1560W user guide](#)



<http://yourpdfguides.com/dref/947091>

The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions. The appliance has not been serviced, maintained, repaired, taken apart or tampered with, by any person not authorised by us. All service work under this guarantee must be undertaken by a Service Force Centre.

Any appliance or defective part replaced shall become the Company's property. This guarantee is in addition to your statutory and other legal rights. Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged. Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements. Products of Tricity Bendix manufacture which are NOT marketed by Tricity Bendix. European guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications: The guarantee starts from the date you first purchased your product. The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.

The guarantee relates to you and cannot be transferred to another user. Your new home is within the European Community (EC) or European Free Trade Area. The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.

The product is installed taking into account regulations in your new country. Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances. France Senlis +33 (0)344 62 20 13 Germany Nurnberg +49 (0)800 234 7378 Italy Pordenone +39 (0)800 11 75 11 Sweden Stockholm +46 (0)20 78 77 50 UK Slough +44 (0)1753 219898 Ireland Dublin +353 (0)1 4090752 Exclusions This guarantee does not cover: Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic. Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.

22 Installation Instructions @@Care must be taken to ensure that the appliance does not stand on the electrical supply cable. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Should the appliance power supply cable need to be replaced, this should be carried out by our Service Force Centre. Technical Specifications DIMENSIONS Height Width Depth 85 cm 60 cm 59 cm 230-240 V/50 Hz 2050 W (10A) Minimum Maximum Cotton, linen Synthetics Delicate fabrics Wool and COLD WASH Maximum Energy Water 50 kPa 800 kPa 6 kg 3 kg 3 kg 2 kg 1500 rpm 1.14 kWh 54 litres POWER SUPPLY VOLTAGE TOTAL POWER ABSORBED WATER PRESSURE MAX LOAD CAPACITY SPIN SPEED CONSUMPTION DATA FOR WASHING 6 KG NORMALLY SOILED COTTON ITEMS AT 60°C (PROGR. ECO WASH) This appliance complies with the following E.E.C. Directives: - 73/23 EEC of 19.

2.73 (Low Voltage Directive) and subsequent modifications; - 89/336 EEC of 3.5.89 (Electromagnetic Compatibility Directive) and subsequent modifications.

23 Unpacking All transit bolts and packing must be removed before using the appliance. You are advised to keep all the packaging for re-use in case the machine is to be transported again. Using a spanner unscrew and remove the two rear bottom screws. Slide out the two plastic pins. Lay the machine gently on its back, making sure that the hoses are not squashed. Fill all the holes with the plastic plugs supplied with the instruction booklet.

P1128 P0002 Important ! You are advised to keep all the packaging for re-use in case the machine is to be transported again. In case of moving out the same precautions as per paragraph "The dangers of freezing" must be taken i.e. the residual water in the hoses must be pumped out. P1129 P0001 Positioning Install the machine on a flat hard floor.

Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. Your new washing machine has been designed to be permanently plumbed in to your home's water supply and drainage system. However, if this is not possible, it may be connected to suitable existing tap with the drain hose discharging into a sink.

The appliance has one inlet hose, with female 3/4" BSP thread connector. If this connection is not compatible with the plumbing of the existing installation, a variety of connectors are available from good hardware stores and plumbers merchants to suit most domestic plumbing. Any alteration to your existing plumbing must be carried out by a competent person, or qualified plumber. Remove the polystyrene block from the bottom of the machine and release the two plastic bags. Very carefully slide out the left polythene bag, removing it towards the right and then downwards. 1 2 3 P1124 P1126 Repeat the operation for the right polythene bag, removing it towards the left and then upwards. Installation on a Suspended Floor P1127 Remove the polystyrene base. Set the machine upright and unscrew the remaining rear screw. Slide out the relevant pin Suspended wooden floors are particularly susceptible to vibration. To help prevent vibration we recommend you place a waterproof wood panel, at least 15 mm thick under the appliance, secured to at least 2 floor beams with screws.

If possible install the appliance in one of the corners of the room, where the floor is more stable. 24 Water inlet Connect the hose to a tap with a 3/4" thread. Do not use previously used hoses for water connection. Water drainage This appliance is designed to be permanently plumbed into your home's water supply and drainage system. @@The appliance must be connected to a cold water supply. @@@@Set the hose correctly by loosening the ring nut. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks. P1074 The standpipe should have an internal diameter of approximately 38mm (see diagram) thus ensuring there is an air break between the drain hose and standpipe. 1 38 mm.(1/2") diameter standpipe P1040 When discharging into a standpipe ensure that the top of the curve in the hose end is no more than 90cm (35.4") and no less than 60cm (23.6") above floor level. The upright standpipe should have a minimum length of 30cm (12") from the bottom of the elbow to the top of the pipe (see diagram).



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/947091)

[AW1560W user guide](http://yourpdfguides.com/dref/947091)

<http://yourpdfguides.com/dref/947091>

Min. 30 cm.

(12") P0021 3 pin Max. 90 cm. (35.4") P1130 Make sure that it is designed in such a way, that the end of the drain hose cannot be covered with water. The drain hose may be extended to a maximum of 4 metres.

An additional drain hose and joining piece is available from your local Service Force Centre. @@@@Warning The machine should NOT be placed on deep pile carpeting. P0022 The drain hose must not be kinked. Important Note Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown. Before connecting up the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes. For a correct functioning of the machine the drain hose must be hooked on the proper support piece situated on the top of the back side of the appliance. In the interest of the environment Washing machines and dishwashers should be connected to the FOUL drainage system, the water will then be taken to a sewage works for treatment before being discharged safely into a river. It is essential that these appliances are not connected to the surface water drainage system as this water is discharged directly into a river or stream and may cause pollution. If you require any further advice please contact your local water authority. Levelling Level the washing machine by raising or lowering the feet.

The feet may be tight to adjust as they incorporate a self locking nut, but the machine MUST be level and stable. P1051 SHOWER SINK BATH TOILET BIDET Any necessary adjustment can be made with a spanner. Accurate levelling prevents vibration, noise and displacement of the machine during operation. Some vibration is inevitable, especially if mounted on a wooden floor. Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder. If possible, always place the machine on a solid floor. WASHING MACHINE RAINWATER 'RUN-OFF' DISHWASHER FOUL DRAIN SURFACE WATER DRAINS & SEWERS FOUL SEWERS SEWAGE TREATMENT WORKS TREATED DISCHARGE RIVER RIVER UNTREATED DISCHARGE P0987 26 Electrical connection Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. WARNING: THIS APPLIANCE MUST BE EARTHED. The manufacturer declines any liability should this safety measure not be observed. Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. The rating plate is located at the top of the rim of the open door. The wire coloured blue must be connected to the terminal marked «N» or coloured black. The wire coloured brown must be connected to the terminal marked «L» or coloured red. Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

WARNING: A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely. Should the appliance power supply cable need to be replaced, this should be carried out by our Service Force Centre. Note When the appliance is installed the power supply cable must be accessible. Mo Pro d.

..... d. No

.....

... Ser. No .

.....

.... Mod.

..... Prod. No. ...

.....

... P0042 BD Ser. No.

..... The appliance is supplied with a 13amp plug fitted.

In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1363) fuse must be used. Should the plug need to be replaced for any reason, proceed as described below. The wires in the mains lead are coloured in accordance with the following code: Green and Yellow - Earth Blue - Neutral Brown - Live GREEN & YELLOW E 13A Permanent connection In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations. The switch must not break the yellow and green earth cable at any point. N L BROWN BLUE P1041 CORD CLAMP The wire coloured green and yellow must be connected to the terminal marked with the letter «E» or by the earth symbol or coloured green and yellow. 27 Tricity Bendix, 55-77High Street, Slough, Berkshire SL1 1DZ Consumer care telephone number 08705 950950 © Electrolux plc 2003 .



[You're reading an excerpt. Click here to read official TRICITY](#)

[AW1560W user guide](#)

<http://yourpdfguides.com/dref/947091>