




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY AW851. You'll find the answers to all your questions on the TRICITY AW851 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY AW851
User guide TRICITY AW851
Operating instructions TRICITY AW851
Instructions for use TRICITY AW851
Instruction manual TRICITY AW851

TRICITY BENDIX
Better Products. Better Value.

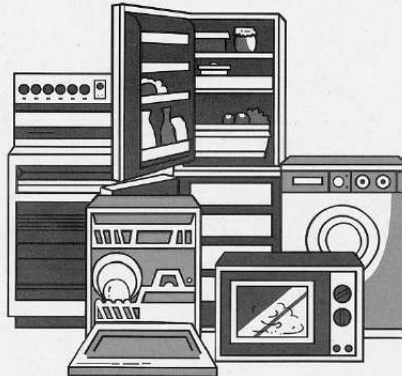

Operating and Installation Instructions

Model No.
AW 851



[You're reading an excerpt. Click here to read official TRICITY AW851 user guide](http://yourpdfguides.com/dref/947149)
<http://yourpdfguides.com/dref/947149>

Manual abstract:

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

. Installation Unpacking

Positioning Water inlet Water drainage Levelling . .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... @@ ..
.....
.....
.....

.....
.....
.....
.....

.....
..... *Getting to know your machine .*

.....
.....

.....
.....
.....
.....

.....
..... *Control panel .*

.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *Programme guide .*

.....
.....
.....
.....

.....
.....
.....
.....

..... *Washing hints .*

.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.. *Wash care symbols*

.....
.....
.....
.....
.....
.....
.....
.....
.....

. *Wich detergent to use?*.....

.....
.....
.....
.....
.....
.....
.....

..... *And in wich form?* ..

.....
.....
.....
.....
.....
.....
.....
.....
.....

... *Use of detergent and additives* ..

.....
.....
.....
.....
.....
.....
.....

... *Using your machine Washing 4.5 kg of white cotton at 60°C.*

.....
.....
.....
.....
.....

.....
... *Washing 2.*
25 kg of synthetic fabrics at 40°C

.....
.....
.....
.....
.....

..... @@

.....
.....
.....

.....
.....
.....
..... @@.....

.....
.....
Cleaning the filter

.....
.....
.....

.....
.....
.....

..... *The water inlet filters* ...

.....
.....
.....

.....
.....
.....

..... *Something not working*

.....
.....
.....

.....
.....
.....

..... *Service and Spare Parts* ...

.....
.....

.....
.....
.....

.....
.....

..... *Guarantee conditions* ...

.....
.....
.....
.....

.....
.....
.....

..... *Tricity Bendix Service Force Addresses*

.....

.....
.....
.....
.....
.....

· @@Power Absorbed Minimum (cold) Minimum (hot) Maximum Cotton, Linen Synthetics & delicate fabrics Wool Maximum 60cm / 23.6 ins 85cm / 33.5 ins 55cm / 22.7 ins 230-240 V 50 Hz ELECTRICAL CONNECTION 2100 W (10A) 5N/cm2 (7psi) 3N/cm2 (4psi) 80N/cm2 (110psi) 4. 5 Kg (10lb) 2.25 Kg (5lb) 1 Kg (2,2lb) 800 r.p.m. WATER PRESSURE CAPACITY RECOMMENDED LOAD SPIN SPEED This appliance carries the "CE" mark and complies with the following directives: -89/336 CEE on electromagnetic compatibility -73/23/CEE low voltage directive How do we help to protect the environment? We use recycled paper! 3 WARNINGS It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the new owner can get to know the functioning of the appliance and the relevant warnings. These warnings have been provided in the interest of safety. You MUST read them carefully before installing or using the appliance. Installation · This appliance is heavy. Care should be taken when moving it.

· It is dangerous to alter the specifications or attempt to modify this product in any way. · Care must be taken to ensure that the appliance does not stand on the electrical cable. · All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant sections. · Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. · Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. · If your machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely. · This product should be serviced by an authorised Tricity Bendix Service Centre, and only genuine Tricity Bendix spare parts should be used. Child Safety · This appliance is designed to be operated by adults.

Children should not be allowed to tamper with the controls or play with the product. · Pets and children have been known to climb into washing machines.

Please check your drum before use. · The glass door becomes very hot during the washing cycle. @@During Use · Do not overload the appliance.

See relevant section in the instruction book. · Only wash fabrics which are designed to be machine washed. If in doubt, consult the care label on the clothes.

@@Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities.

@@@Underwired bras must NOT be machine washed. · Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. · The users should always check that they have not left their gas lighters (disposable or otherwise) in their clothing. · Wash small items such as socks, laces, washable belts, etc. in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. · As some duvets and eiderdowns should be washed in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine. · Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. · Always look through the glass door to check if water has drained before opening the door.

If water is present do not open the door before draining the water. If in doubt, refer to your instruction book. · Always unplug the appliance and turn off the water after use. · Leave the porthole door slightly ajar between washes to preserve the door seal. · Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact you local Tricity Bendix Service Centre.

Always insist on genuine Tricity Bendix spare parts. 4 INSTALLATION Unpacking Before starting the machine up, the transport security bolts must be removed as follows: You are advised to keep all the packaging for re-use in case the appliance has to be transported again. 1.

Unscrew and remove the three rear transit bolts (using a spanner). Positioning Your new Tricity Bendix washing machine has been designed to be permanently plumbed in to you home's water supply and drainage system. However, if this is not possible, it may be connected to suitable existing taps, with the drain hose discharging into the sink.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/947149)

[AW851 user guide](http://yourpdfguides.com/dref/947149)

<http://yourpdfguides.com/dref/947149>

The appliance has two inlet hoses, hot and cold, with female 3/4" BSP thread connectors. @@@@2.

@@There will be sufficient pressure for the hot water supply from the hot water cylinder if the height between the appliance's inlet and the bottom of the cold water storage cistern (not between the appliance and the hot water cylinder) is at least 2.74m (9ft). Set the hoses correctly by loosening the ring nuts. After positioning the inlet hoses, be sure to tighten the ring nuts again to prevent leaks. 3.

Carefully remove the polythene bags located at the base of the machine by pulling them toward the centre of the machine. 4. Place the machine in an upright position and remove the three plastic bolts. Water drainage If you intend the drain hose from the machine to empty into a sink, make sure that the sink is empty and that the plug hole is not blocked. If the machine is permanently plumbed in, hook the end of the hose into a standpipe installed for the purpose. The standpipe must have an internal diameter of at least 40mm (1 1/2") in order that there is an air gap between the drain hose and the standpipe. Make sure, that it is designed in such a way, that the end of the drain hose cannot be covered with water. 5. Plug the 3 holes with the plastic plugs which you can find in the envelope containing the instruction booklet. 5 Important Before connecting up the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes.

Whether discharging into a sink or a standpipe, check that the end of the drain hose is neither too high nor too low. The top of the curve in the hose's end should be no more than 85 cm (34") and no less than 50 cm (20") above floor level. Special conditions If the floor is carpeted with a deep-pile carpet or covered with crumbly or soft material, insert a rigid support base under the feet to prevent noise, vibrob anticlockwise, instead, continue turning clockwise until the desired programme has been selected. To start the programme, pull the dial outwards, and the pilot light will illuminate. At the end of the programme, push the dial inwards, and the pilot light will go out. Fabric softener indicates the compartment for the fabric conditioner. This compartment is fitted with a removable filter. To open the dispenser, pull the handle gently. 2. On/off pit detergents (or concentrates as they are also known) are available in liquid or powder form, and generally require a smaller dosage.

Follow the manufacturer's instructions to ensure the most economical usage. Pour the detergent directly into the dispenser drawer, or alternatively measure the detergent into the specially designed dosing device* which should be placed on top of the laundry, and at the back of the machine drum. * If you use a dosing device in a washer dryer, please ensure the dosing device/ball is removed before carrying out a drying programme. Fabric Conditioners These are ideal for improving "softness", and also reduce static cling on synthetics and make ironing easier. They are available in two types: For example Lenor liquid fabric softener, for use in the washing machine/washer dryer.

The liquid fabric softener should be poured into the compartment marked with the symbol . Follow the manufacturer's dosage instructions and never exceed the MAX level. Bounce conditioning sheets for use in a tumble dryer. We recommend the conditioning sheets are pinned (using a safety pin) to an article of laundry and placed in the tumble dryer. 12 USING YOUR MACHINE WASHING 4.

5 KG OF COLOUR FAST COTTON AT 60°C Suppose you have 4.5 kg normally soiled laundry to wash. It is cotton and is colour fast at 60°C. 5 Select the required wash programme Turn the programme selector dial clockwise to the required programme. 4 90 1 Load the laundry Open the door by pulling the catch outward. Load the items one at a time and close the door. P0345 6 Start the machine Before starting up the machine, check that: · the appliance is plugged in P0004 · the water supply taps are turned on · the drain hose is correctly and securely positioned · the door and the detergent dispenser drawer are closed. Pull the programme selector dial outwards. @@@@@@@@@@Before opening the door ensure there is no water in the drum. Switch the machine off by depressing the programme selector dial.

@@@Do not exceed the MAX. @@@@@@@@@@Pull the programme selector dial outwards. @@ 6 At the end of the programme After the last rinse, the machine will stop with water left in the drum. @@Turn the selector dial to DRAIN (12) or SPIN (6) to drain the water. @@Before attempting to open the door you must ensure there is no water in the drum. Switch the machine off by depressing the programme selector dial. When the programme has finished, you are advised to unplug the appliance and turn off the water taps. WARNING: To prevent any water spillage, you must select a draining programme, and ensure there is no water in the drum, before opening the door. 3 Add the fabric softener if required Pour the fabric softener, if required, into the compartment marked . Do not exceed the MAX.

level and then close the drawer gently. 14 MAINTENANCE AND CLEANING Before any maintenance or cleaning is carried out you must DISCONNECT the appliance from the electricity supply. Cleaning the filter The water drain filter A clean filter is important for the correct functioning of the machine, and should therefore be cleaned after every wash. Open the filter door and place a container underneath to catch any spillage. @@@@The water should drain by gravity into the bowl.

When the bowl is full, hook the hose back up and empty the bowl. Repeat the procedure until water stops flowing out. Unscrew and remove the filter.

@@@@@Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions. This will help to prevent the formation of lime deposits.

After each wash Leave the door ajar for a while. This helps to prevent mould and stagnant smells forming inside the appliance. Keeping the door open after a wash will also help to preserve the door seal. External cleaning Clean the exterior cabinet of the appliance with soapy water only, then dry thoroughly.

Cleaning the dispenser drawer Warning When the appliance is in use and depending on the programme selected there can be hot water in the filter. Never remove the filter during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the filter, ensure it is securely retightened so as to stop leaks and young children being able to remove it. Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower part of the recess. @@It is therefore a good idea to clean them from time to time.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/947149)

[AW851 user guide](http://yourpdfguides.com/dref/947149)

<http://yourpdfguides.com/dref/947149>

Turn off the water taps.

Unscrew the water inlet hoses. Remove and clean the filters using a hard bristle brush. @@ Turn off the water taps. Select a wash programme and run for a few seconds. Unscrew the inlet hoses. @@ Run the draining programme for a few seconds. @@ In-guarantee customer should ensure that the above checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown. Please note that proof of purchase is required for any-guarantee service calls. The machine does not drain or spin You have selected a gentle wash cycle The drain filter is clogged The drain hose is kinked The drainage system pipes are blocked The drain hose extension is incorrect SERVICE AND SPARE PARTS If you require an engineer or you wish to purchase spare parts contact your local Tricity Bendix Service Force Centre by telephoning: 0990 929929 Your call will be routed to the Service Centre covering your post code area. When you contact the Service Centre you will need to give the following details: 1.

2. 3. 4. 5. Your name, address and post code Your telephone number Clear and concise details of the fault The model and serial number of the appliance (found on the rating plate) The purchase date CUSTOMER CARE For general enquiries or for further information on Tricity Bendix products, please contact our Customer Care Department: Tricity Bendix Customer Care Department PO Box 47 Newbury Berkshire RG14 5XL Tel: 01635 525542 16 GUARANTEE CONDITIONS Standard guarantee conditions We, Tricity Bendix, undertake that if within 12 months of the date of the purchase this Tricity Bendix appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that: The appliance has been correctly installed and used only on the electricity supply stated on the rating plate The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions The appliance has not been serviced, maintained repaired, taken apart or tampered with by any person not authorised by us All service work under this guarantee must be undertaken by a Tricity Bendix Service Force Centre.

Any appliance or defective part replaced shall become the Company's property This guarantee is in addition to your statutory and other legal rights Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged.

Exclusions This guarantee does not cover: Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements Products of Tricity Bendix manufacture which are not marketed by Tricity Bendix European Guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications: The guarantee starts from the date you first purchased your product The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products This guarantee relates to you and cannot be transferred to another user Your new home is within the European Community (EC) or European Free Trade Area The product is installed and used in accordance with our instructions and is only used domestically, i.

e. a normal household The product is installed taking into account regulations in your new country Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances. France Germany Italy Sweden UK Senlis Nurnberg Pordenone Stockholm Newbury +33 +49 +39 +46 +44 (0)3 44 62 28 28 (0)911 323 2600 (0) 1678 47053 (0)20 78 77 50 (0)1635 525 542 17 18 19.



[You're reading an excerpt. Click here to read official TRICITY](#)

[AW851 user guide](#)

<http://yourpdfguides.com/dref/947149>