



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY AW900W. You'll find the answers to all your questions on the TRICITY AW900W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY AW900W
User guide TRICITY AW900W
Operating instructions TRICITY AW900W
Instructions for use TRICITY AW900W
Instruction manual TRICITY AW900W

TRICITY BENDIX

OPERATING & INSTALLATION
INSTRUCTIONS



WASHING MACHINE

AW 900 W
AW 1100 W
AW 1100 S

132992130



[You're reading an excerpt. Click here to read official TRICITY AW900W user guide](http://yourpdfguides.com/dref/947159)
<http://yourpdfguides.com/dref/947159>

Manual abstract:

@@Care should be taken when moving it. @@All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in instructions. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. @@@@Pets and children have been known to climb into washing machines. Please check your drum before use. The glass door becomes very hot during the washing cycle.

@@Keep all packaging well away from children. @@Do not overload the appliance. See relevant section in the instruction book. Only wash fabrics which are designed to be machine washed. If in doubt, consult the care label on the clothes.

Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed. Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. Garments which have been in contact with volatile petroleum products should not be machine washed.

If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. Only use the advised quantities of fabric softener. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities. As some duvets and eiderdowns should be washed in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine. Leave the porthole door slightly ajar between washes to preserve the door seal. Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Tricity Bendix Service Force Centre.

Always insist on genuine Tricity Bendix spare parts. Contents For the User Important Safety Information Your New Washing Machine Description of the Appliance Detergent dispenser drawer 2 4 5 5 6 7-10 7 7 7 7 8 8 8 9 9 9 9 10 10 10 11-12 12 12 13 14-15 Maintenance and Cleaning Descaling After each wash Maintenance Wash External cleaning Cleaning the dispenser drawer Cleaning the drawer recess Cleaning the filter The dangers of freezing The Control Panel Operating sequence Washing 4.5 kg of white cotton at 95°C Load the laundry Measure out the detergent Measure out the fabric softener Select the required option Select the required programme Start the machine At the end of the programme Washing 2 kg of mixed fabrics at 50°C Load the laundry Measure out the detergent Measure out the fabric softener Select the required option Select the required programme Start the machine At the end of the programme 16-17 16 16 16 16 16 16 17 18-19 19 20 Something Not Working Service and Spare Parts Guarantee Conditions For the Installer Installation Instructions Technical Specifications Unpacking Positioning Installation on a Suspended Floor Water inlet Water drainage Levelling Special conditions In the interest of the environment Electrical connection 21 21 22 22 22 23 23 24 24 24 25 Washing Hints Which detergent?... And in which form? Wash Care Symbols Washing Programmes Guide to use the Instruction Book The following symbols will be found in the text to guide you throughout the instructions: Safety instructions Hints and tips Environmental information 3 Your New Washing Machine Your new washing machine meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. Automatic cooling of the wash water to 60°C before draining, with the 95°C programme. This reduces thermal shock to fabrics, helping to prevent creasing. The special wool programme with its new delicate wash system treats your woollens with extreme care.

In the interest of the environment Ecological hints To save water and energy and help protect the environment, we recommend that you follow these hints: The machine works more economically if it is fully loaded. With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature. Adjust the quantity of detergent according to the hardness of your water supply, the amount of laundry and the degree of soiling. Select the "quick" option for lightly soiled laundry. A programme without prewash is sufficient for normally soiled laundry.

Materials marked with the symbol are recyclable. Check with your local Council or Environmental Health Office to see if there are facilities in your area for re-cycling this appliance. When the appliance is to be scrapped, cut off the power supply cable and make the door lock device unusable to prevent young children from being trapped inside. Help to keep your country tidy - use authorised disposal sites for your old appliance. How do we help to protect the environment? We use recycled paper! Important Your machine is fitted with a balance control device, which ensures the machine is stable during the spin. If the wash load appears not to have been spun sufficiently at the end of the wash cycle, because it is not evenly distributed in the drum, the balance control device may have operated. It will therefore be necessary to redistribute the wash load manually and select a spin programme. For more detailed information see the section headed "Something Not Working". 4 Description of the Appliance 1 Detergent dispenser drawer 2 Programme guide 3 ON/OFF button 4 "Mains-on" light 5 "Quick Wash" button 6 Programme selector dial 7 Door opening handle 8 Filter 9 Adjustable feet 2 4 5 6 1100 rpm ELECTRONIC PROGRAMME 95° 1 95° 2 60° 3 40° 4 Rinses Softeners Short Spin DELICATES WOOL WASH DELICATE WASH Softeners Drain COTTONS-LINENS WHITES With Prewash WHITES FAST COLOURED NON FAST COLOURED LONG SPIN SYNTHETICS MIXED FABRICS WORN ONCE 8 9 10 40° 11 40° 12 5 MAINS ON QUICK WASH ADVANCED SHOWER SYSTEM ECO 50° 6 30° 7 13 14 AW 1100 W 1 3 7 8 9 Detergent dispenser drawer Prewash Main wash Fabric softener C0022 5 The Control Panel 1100 rpm ELECTRONIC PROGRAMME 95° 95° 60° 40° COTTONS-LINENS WHITES With Prewash WHITES FAST COLOURED NON FAST COLOURED LONG SPIN SYNTHETICS MIXED FABRICS WORN ONCE 1 2 3 4 5 50° 6 30° 7 Rinses Softeners Short Spin DELICATES WOOL WASH DELICATE WASH Softeners Drain 8 9 10 40° 11 40° 12 MAINS ON QUICK WASH ADVANCED SHOWER SYSTEM ECO 13 14 AW 1100 W 1 2 3 4 1 Mains-on light This light illuminates when the machine starts working and goes out when the ON/OFF button is released.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/947159)

[AW900W user guide](http://yourpdfguides.com/dref/947159)

<http://yourpdfguides.com/dref/947159>

It is not always easy to see this as the water runs down the hose; check to see if it is damp.

The drain hose may be damaged or not securely positioned. The detergent dispenser drawer or recess is clogged. The drainage system pipes are blocked. Too little detergent or unsuitable detergent has been used. An insufficient amount of detergent leaves the laundry looking grey and causes lime scale to form. Stubborn stains have not been treated prior to washing. The correct wash programme has not been selected. Too much laundry has been placed in the drum. The internal packing has not been removed. The machine is in contact with the wall or furniture. The machine is not stable and level (check diagonally). The washing load is badly distributed in the drum. Maybe there is very little laundry in the drum. The machine does not fill. The machine fills then empties immediately. The machine does not empty and/or does not spin. There is water on the floor. Unsatisfactory washing results. The machine vibrates when spinning. 18 Symptom. The door will not open. Possible causes. The programme is still running. The door lock has not yet released. Water in the tub: the door cannot be opened if water is present in the tub.

The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 20 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. In this case, redistribute the load manually and reselect the spin programme. The machine is fitted with a type of motor which makes an unusual noise compared with other traditional motors. This new motor ensures a softer start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine. Machines based on modern technology operate very economically using very little water without affecting performance. Spinning starts late or the machine does not spin. The machine makes an unusual noise. No water is visible in the drum. Service & Spare Parts. In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Tricity Bendix Service Force Centre by telephoning: Mod. .

.....
.... Prod.
No.

.. Ser. No.

... 0870 5 929929 Your telephone call will be automatically routed to the Service Force Centre covering your post code area. For the address of your local Service Force Centre and further information about Service Force, please visit the website at www.serviceforce.co.uk. Before calling out an engineer, please ensure you have read the details under the heading "Something Not Working". When you contact

the Service Force Centre you will need to give the following details: 1.

Your name, address and post code 2. Your telephone number 3. Clear and concise details of fault 4. The model and serial number of the appliance (found on the rating plate - see picture). 5. The purchase date Mod.

..... Prod. No. ..
.....
.... P0042 Ser.
No.

Customer Care For general enquiries concerning your Tricity Bendix appliance or for further information on Tricity Bendix products, please contact our Customer Care Department by letter or telephone as follows: Customer Care Department Tricity Bendix 55-77 High Street Slough Berkshire SL1 1DZ Tel 08705 950950 * calls to this number may be recorded for training purposes. 19 Guarantee Conditions Standard guarantee conditions We, Tricity Bendix, undertake that if, within 12 months of the date of the purchase, this Tricity Bendix appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option, repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that: The appliance has been correctly installed and used only on the electricity supply stated on the rating plate. @@@@Home visits are made between 8.30am and 5.30pm Monday to Friday. @@@@ Your new home is within the European Community (EC) or European Free Trade Area. The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household. The product is installed taking into account regulations in your new country.*

Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances. France Germany Italy Sweden UK Senlis Nurnberg Pordenone Stockholm Slough +33 (0)344 62 20 13 +49 (0)800 234 7378 +39 (0)800 11 75 11 +46 (0)20 78 77 50 +44 (0)1753 219 898 20 Installation Instructions @@Care must be taken to ensure that the appliance does not stand on the electrical supply cable. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person.

Technical Specifications DIMENSIONS Height Width Depth 85 cm 60 cm 54 cm 230 - 240 V/50 Hz 2050 W (10A) Minimum Maximum Cotton, linen Synthetics Delicate fabrics Wool Maximum 50 kPa 800 kPa 4.5 kg 2 kg 2 kg 1 kg 900 rpm (AW 900 W) 1100 rpm (AW 1100 W) 1100 rpm (AW 1100 S) 0.85 kWh 57 litres 135 mins POWER SUPPLY VOLTAGE TOTAL POWER ABSORBED WATER PRESSURE MAX LOAD CAPACITY SPIN SPEED CONSUMPTION DATA FOR WASHING 4.5 KG NORMALLY SOILED COTTON ITEMS AT 60°C (PROGR. 3) Energy Water Time This appliance complies with the following E.

E.C. Directives: - 73/23 EEC of 19.2.73 (Low Voltage Directive) and subsequent modifications; - 89/336 EEC of 3.5.89 (Electromagnetic Compatibility Directive) and subsequent modifications. 21 Unpacking All transit bolts and packing must be removed before using the appliance. You are advised to keep all the packaging for re-use in case the machine is to be transported again. Using a spanner unscrew and remove the two rear bottom screws.

Slide out the two plastic pins. Lay the machine gently on its back, making sure that the hoses are not squashed. Set the machine upright and unscrew the remaining rear screw. Slide out the relevant pin. Fill all the holes with the plastic plugs supplied with the instruction booklet. P1128 P0002 P1129 P0001 Important ! You are advised to keep all the packaging for re-use in case the machine is to be transported again. In case of moving out the same precautions as per paragraph "The dangers of freezing" must be taken i.e. the residual water in the hoses must be pumped out. Remove the polystyrene block from the bottom of the machine and release the two plastic bags.

Very carefully slide out the left polythene bag, removing it towards the right and then downwards.

[You're reading an excerpt. Click here to read official TRICITY](#)



[AW900W user guide](#)

<http://yourpdfguides.com/dref/947159>

1 2 3 Positioning Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor.

Your new washing machine has been designed to be permanently plumbed in to your home's water supply and drainage system. However, if this is not possible, it may be connected to a suitable existing tap with the drain hose discharging into a sink. The appliance has an inlet hose, with female 3/4" BSP thread connector. If this connection is not compatible with the plumbing of the existing installation, a variety of connectors are available from good hardware stores and plumbers merchants to suit most domestic plumbing. Any alteration to your existing plumbing must be carried out by a competent person, or qualified plumber.

P1124 P1126 Repeat the operation for the right polythene bag, removing it towards the left and then upwards. P1127 Remove the polystyrene base. Installation on a Suspended Floor Suspended wooden floors are particularly susceptible to vibration. To help prevent vibration we recommend you place a waterproof wood panel, at least 15 mm thick under the appliance, secured to at least 2 floor beams with screws. If possible install the appliance in one of 22 Water inlet Connect the hose to a tap with a 3/4" thread. Do not use previously used hoses for water connection. Water drainage This appliance is designed to be permanently plumbed into your home's water supply and drainage system. The appliance drain hose should hook into a standpipe, the hook in the drain hose is formed using the plastic "U-Piece" supplied. P1088 Installation should comply with local water authority and building regulations' requirements. The appliance must be connected to a cold water supply.

A minimum water pressure of 50 kPa (0.5 bar) is required for safe operation of the appliance. @@@@Set the hose correctly by loosening the ring nut. @@@@30 cm.(12") 1 38 mm.(1/2") diameter standpipe 3 pin Max. 90 cm.(35.4") P1039 Make sure that it is designed in such a way, that the end of the drain hose cannot be covered with water. The drain hose may be extended to a maximum of 4 metres.

An additional drain hose and joining piece is available from your local Service Force Centre. The joining piece must have an internal diameter of 18mm. 23 Min.60 cm. @@@@It is essential that these appliances are not connected to the surface water drainage system as this water is discharged directly into a river or stream and may cause pollution.

If you require any further advice please contact your local water authority. Levelling Level the washer-dryer by raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine MUST be level and stable. P1051 Any necessary adjustment can be made with a spanner. Accurate levelling prevents vibration, noise and displacement of the machine during operation.

Some vibration is inevitable, especially if mounted on a wooden floor. Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder. If possible, always place the machine on a solid floor. RAINWATER 'RUN-OFF' SHOWER SINK BATH TOILET BIDET WASHING MACHINE DISHWASHER FOUL DRAIN SURFACE WATER DRAINS & SEWERS FOUL SEWERS SEWAGE TREATMENT WORKS TREATED DISCHARGE RIVER RIVER UNTREATED DISCHARGE P0987 24 Electrical connection Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. WARNING: THIS APPLIANCE MUST BE EARTHED. The manufacturer declines any liability should this safety measure not be observed. Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. The rating plate is located at the top of the rim of the open door. Mod.

.....
Prod. No. ...

.....
... Ser. No.

.... The wire coloured blue must be connected to the terminal marked «N» or coloured black. The wire coloured brown must be connected to the terminal marked «L» or coloured red. Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

WARNING: A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely. Should the appliance power supply cable need to be replaced, this should be carried out by our Service Force Centre.

Note When the appliance is installed the power supply cable must be accessible. Mod. ...

.....
.. Prod. No.

..... P0042 Ser. No. ...

. Permanent connection In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations. The switch must not break the yellow and green earth cable at any point. The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1363) fuse must be used.

Should the plug need to be replaced for any reason, proceed as described below. The wires in the mains lead are coloured in accordance with the following code: Green and Yellow - Earth Blue - Neutral Brown - Live GREEN & YELLOW E 13 A N L BROWN BLUE P1041 CORD CLAMP The wire coloured green and yellow must be connected to the terminal marked with the letter «E» or by the earth symbol or coloured green and yellow. 25 Tricity Bendix, 55-77High Street, Slough, Berkshire SL1 1DZ Consumer care telephone number 08705 950950 © Electrolux plc 2003 .



[You're reading an excerpt. Click here to read official TRICITY](#)

[AW900W user guide](#)

<http://yourpdfguides.com/dref/947159>