



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY BF423W. You'll find the answers to all your questions on the TRICITY BF423W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY BF423W
User guide TRICITY BF423W
Operating instructions TRICITY BF423W
Instructions for use TRICITY BF423W
Instruction manual TRICITY BF423W

Operating and Installation Instructions

2022 270-01

BF 423 W



[You're reading an excerpt. Click here to read official TRICITY BF423W user guide](http://yourpdfguides.com/dref/946656)
<http://yourpdfguides.com/dref/946656>

Manual abstract:

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... @@Installation .

Positioning Before using . . . The electrical connections . Location . .

.....
..... Door reversibility Fitting a decorative door panel.
Your appliance . Operation

.....
.....
.....

. The controls . Frozen food storage . Ice making Thawing

.. @@Starting

.....
.....

.. Normal sound . Health and safety guidelines . Maintenance and cleaning Internal cleaning @@.

Guarantee conditions

.. Tricity Bendix Service Centres . TECHNICAL SPECIFICATIONS POWER SUPPLY VOLTAGE AND FREQUENCY TOTAL POWER ABSORBED
AVERAGE DAILY UNITS ELECTRICITY GROSS CAPACITY NET CAPACITY STAR RATING 220-240 V / 50 Hz; 120 W 1.30 kWh 120 l 101 l 2 WARNINGS
IT IS MOST IMPORTANT THAT THIS INSTRUCTION BOOK SHOULD BE RETAINED WITH THE APPLIANCE FOR FUTURE REFERENCE.
SHOULD THE APPLIANCE BE SOLD OR TRANSFERRED TO ANOTHER OWNER, OR SHOULD YOU MOVE HOUSE AND LEAVE THE APPLIANCE,
ALWAYS ENSURE THAT THE BOOK IS SUPPLIED WITH THE APPLIANCE IN ORDER THAT THE NEW OWNER CAN GET TO KNOW THE
FUNCTIONING OF THE APPLIANCE AND THE RELEVANT WARNINGS. THESE WARNINGS ARE PROVIDED IN THE INTEREST OF SAFETY. YOU

MUST READ THEM CAREFULLY BEFORE INSTALLING OR USING THE APPLIANCE. This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the product.

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. This product should be serviced by an authorised Tricity Bendix Service Centre, and only genuine spare parts should be used. It is dangerous to alter the specifications or modify this product in any way. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. Tricity Bendix domestic refrigerators, freezers and fridge/freezers are designed to be used specifically for the storage of edible foodstuffs only. There are working parts in this product which heat up. Always ensure that there is adequate ventilation as a failure to do this will result in possible food loss. See installation instructions. Parts which heat up should not be exposed. Wherever possible, the back of the appliance should be close to a wall but leaving the required distance for ventilation as stated in the installation instructions.

Before defrosting, cleaning or maintenance work is carried out, be sure to switch off the appliance and unplug it. Frozen food must NOT be re-frozen once it has thawed out. Do not place carbonated or fizzy drinks in the freezer as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance. The cooling plate or refrigerated freezer shelves in this appliance contain channels through which the refrigerant passes. **DO NOT USE SHARP INSTRUMENTS** to scrape off frost or ice. **Solid ice** should be allowed to thaw, when defrosting the appliance. See Defrost instructions.

This appliance is heavy. Care should be taken when moving it. Ice lollies can cause "frost/freezer burns" if consumed straight from the freezer. Manufacturers' storage recommendations should be strictly adhered to. Refer to relevant instructions. Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Refer to your local Tricity Bendix Service Centre and always insist on genuine spare parts.

01/96 2222 270-05 3 CONSERVATION In the interests of the Environment: When disposing of your old fridge, freezer or fridge/freezer. Help to keep your country tidy use authorised disposal sites for your old appliances. For maximum efficiency: Make sure that the appliance is cleaned properly. Make sure that the door is closed properly. Do not position the appliance near to sources of heat.

Do not over-fill your appliance, air MUST be allowed to circulate. **INSTALLATION Warning IF YOU ARE DISCARDING AN OLD APPLIANCE THAT HAS A LOCK OR CATCH ON THE DOOR, YOU MUST ENSURE THAT IT IS MADE UNUSABLE TO PREVENT YOUNG CHILDREN BEING TRAPPED INSIDE.** Before using Remove all securing tapes. Wash inside the appliance with lukewarm water and bicarbonate of soda (5 ml to 0.5 litre of water). Do not use soap or detergent as the smell may linger. Dry thoroughly. Positioning The appliance should be installed well away from sources of heat such as radiators, boilers, direct sunlight etc.; best performance is obtained with ambient temperature between +16°C and +32°C. For building-in and door reversibility, if necessary, refer to the relevant instructions in the following pages.

4 The electrical connections **WARNING: THIS APPLIANCE MUST BE EARTHED.** The manufacturer declines any liability should this safety measure not be observed. If the plug that is fitted to your appliance is not suitable for your socket outlet, it must be cut off and the appropriate plug fitted. Remove the fuse from the cut off plug. **Directive No. 1 GREEN & YELLOW 13 AMP. 2. 820 59 6 D506 100-170 13 AMP 870 Fig. The plug moulded onto the lead incorporates a fuse. For replacement, use a 13amp BS1362 fuse.**

Only ASTA or BSI approved fuses should be used. The plug must not be used if the fuse cover/carrier is lost. The cover/carrier is indicated by the coloured insert at the base of the plug. A replacement cover/carrier must be obtained from your local Tricity Bendix Service Centre whose address is listed in the Customer Care Booklet which accompanies your instruction manual. D507 The height of the appliance can be altered if required by means of adjustable feet situated at its base (Fig.

3). 5 Door reversibility Remove the two screws which fix the upper hinge to the door. Carefully lean the appliance on its back and remove the plastic insert (Fig. 4). Fig.

4 Fitting a decorative door panel Important: The components needed to fit the decorative panel have been pre-fitted on the appliance. The brackets are secured to the panel by means of the 7 Ø 3.5x13 screws supplied. Before starting to fit the panel, remove the large top bracket by unscrewing the screws and adjusting pins pre-fitted on the appliance door. The small bottom bracket need not be removed. Place the appliance in the position where it is to be built in (Fig. 6). The appliance is fitted with adjustable feet; screw the front and rear feet in or out to adjust the height of the appliance to that of the recess.



[You're reading an excerpt. Click here to read official TRICITY BF423W user guide](http://yourpdfguides.com/dref/946656)
<http://yourpdfguides.com/dref/946656>

Keeping the appliance central in the recess, slide it in until its back touches the wall. D447 Fig.

6 Remove the two screws which fix the lower hinge to the door. Remove the four screws which fix the lower hinge to the base of the appliance and remove the hinge itself; be very careful to recover all the screws. Remove the four screws that fix the upper hinge to the appliance and remove the hinge itself. Take the hinge removed from the upper part of the appliance on the opposite side (see Fig. 5), and, using the screws removed from the lower part, fix it to the base of the appliance itself. Remove and refit the other hinge on the upper part of the appliance on the opposite side. Fig. 5 A = = With a tape measure (or similar instrument), measure distance (A) between the top edge of the door and the top edge of the decorative panel, placing it next to the recess. Fig. 7 D467

Fix the two front screws into the upper and lower hinges (Fig.

@@@7). @Secure the bracket with the screws supplied. @8 B Insert the adjusting pins (B-Fig. @9 Fig. @@@9).

Fig. @The plate can be adjusted backwards or forwards in the holes (Fig. @To release the ice cubes, twist the ice tray along its length and the cubes will come out. @@@@2.

@3. Avoid buying frozen food if you cannot store it straight away. The use of insulated containers is advisable. @@@@DO... @* Leave the door ajar when the freezer is not in use. DO NOT...

* Use a SHARP INSTRUMENT to remove ice and frost. Note 1. @2. @@@@Then turn the mains on indicator light switch OFF.

@@@@@Run for 3 - 4 hours before loading with food. After 24 hours the food will be fully frozen. Note Aim to check dates on packets and rotate food regularly. @@@@ (See "The controls"). You will hear the compressor to the fixed freezer shelves. When the compressor is on, the refrigerant is being pumped round, and you will hear a whirring or pulsating noise from the compressor.

A thermostat controls the compressor, and you will hear a faint "click" when the thermostat cuts in and out. Other points to check... Check that: Have you turned the thermostat to the correct setting? Has the door been left open causing the temperature to rise? Sometimes the freezer door will be difficult to open shortly after you have closed it.

@@@@@Before contacting your local Tricity Bendix Service Force Centre, make a note of the make, model and date of purchase of your machine: the Service Department require this information. 12 PEACE OF MIND FOR TWENTYFOUR MONTHS Guarantee conditions We, Tricity Bendix, undertake that if, within twentyfour months of the date of the purchase, this Tricity Bendix appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option, repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that: The appliance has been correctly installed and used only on the electricity supply stated on the rating plate. The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions. The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us. All service work under this guarantee must be undertaken by a Tricity Bendix service representative or authorised agent.

Any appliance or defective part replaced shall become the property of Tricity Bendix. This guarantee is in addition to your statutory and other legal rights.

Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a charge will be made.

Exclusions This guarantee does not cover: Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic. @@@@Proof of purchase may be required. Tricity Bendix Aftersales Service in the country concerned, with whom Tricity Bendix have an arrangement, will be pleased to advise further. 13 Tricity Bendix After Sales Service Service Centres Addresses CENTRE ABERDEEN POSTAL DISTRICTS AB SERVICE APPTS.

01224-696569 ADDRESS Tricity Bendix After Sales Service Northeast Appliance Service, 8 Cornhill Arcade, Cornhill Arcade, Aberdeen, AB2 5UT Tricity Bendix After Sales Service T.D.C. Refrigeration, Briar Hill, 7 Hill Street, Dunoon, Argyll, PA23 7AL Tricity Bendix After Sales Service Mc Bain Refrigeration, Unit 4 Upcott Avenue, Pottington Industrial Estate, Barnstaple, N. Devon, EX31 1HN Tricity Bendix After Sales Service James Stewart & Son, 2-8 Wood Market, Kelso, Borders, TD5 7AX Tricity Bendix After Sales Service Unit BE46, PO Box 372, Bristol, BS 99 1UD Tricity Bendix After Sales Service 2-4 Sandhurst, Kings Road, Canvey Island, SS8 0QY ARGYLL BARNSTAPLE PA24-61 EX18-23, 31-39 01369-703161 01271-328826 BORDERS TD 01573-224411 BRISTOL CANVEY BA BS TA SP E EC EN N NW W WC AL CB HA HP LU MK SG UB WD CM CO IG RM SS IP NR PE14-19, 30-38 CF NP1-4, 6, 9-44 SA1-18 SA21-32 CA 0117-9211876 0181-443-3464 0181-965-9699 0181-965-9699 01268-694144 01603-667017 01222-460131 CARDIFF Tricity Bendix After Sales Service Guardian Industrial Estate, Clydesmuir Road, Tremorfa, Cardiff, CF2 2QS Tricity Bendix After Sales Service ETB Services, Carlisle Enterprise Centre, James Street, Carlisle, CA2 5AP Tricity Bendix After Sales Service Allan Crossan (service), 93 Irish Street, Dumfries, Scotland, DG1 2PQ Tricity Bendix After Sales Service Tayside Refrigeration, 3-7 Blackness Street, Dundee, DD1 5LR Tricity Bendix After Sales Service I Brogan Domestic, 41 Leslie Street, Blairgowrie, Perthshire, PH10 6AT Tricity Bendix After Sales Service 20 Cunningham Road, Clyde Estate, Rutherglen, Glasgow, G73 1PP Guernsey Electricity PO Box 4, Vale Guernsey, Channel Islands Tricity Bendix After Sales Service C Butherway, 1 Church Road, Roch, Haverfordwest, Dyfed, SA62 6AG Tricity Bendix After Sales Service Domestic Repair Centre, Unit 3 Bank Buildings, Cattle Market, Hereford, HR4 9HX Tricity Bendix After Sales Service John Sizer, Unit 1 Boulevard Unit, Factory Estate, Hull, HU3 4AY Tricity Bendix After Sales Service Highland Appliances, Unit 3B3 Smithton Industrial Estate, Smithton, Inverness Tricity Bendix After Sales Service George Ross Electrical, Forrestry Workshop, Inchree, Onich, Inverness-shire, PH33 6SE Tricity Bendix After Sales Service Wyatts Electrical Service, 4 Forelands Road, Bembridge, I O W, PO35 5XW Tricity Bendix After Sales Service Arran Domestic, Unit 4 The Douglas Centre, Brodick, Isle of Arran, KA27 8AJ Tricity Bendix After Sales Service Manx Electricity, Service Workshop, North Quay, Douglas, Isle of Man Tricity Bendix After Sales Service B Hogg, Braeside, Raeric Road, Tobermory, Isle of Mull, PA75 6PU Jersey Electricity Company PO Box 45 Queens Road, St Helier JE4 8NY, Jersey, Channel Islands Tricity Bendix After Sales Service Lampeter Domestic Appliance Service, Unit 16 Lampeter Industrial Estate, Lampeter, SA48 7DY 05/95 CUMBRIA 01228-594747 DUMFRIES & GALLOWAY DUNDEE DG1-14 Parkinson Cowan Gas Only 01387-265166 01382-642828 DUNDEE DD1-14 PH8-18 EH FK G KA KY1-16 ML PA1-23 PH1-7 All Codes SA33-39 SA41-44 SA61-73 HR1-9 LD1-8 SY7,18 NP5 NP7-8 YO4 YO11-18 YO25 HU1-19 DN14 IV1-28, 30-36, 52-56 PH19-26, 42-44 KWI-14 PH30-41 IV40-51 01250-876285 GLASGOW GUERNSEY HAVERFORDWEST 0141-647-4381 01481-46931 01437-710914 HEREFORD 01432-340334 HULL INVERNESS 01482-585678 01463-792952 INVERNESS 01855-821315 ISLE OF WIGHT PO30-41 01983-872552 ISLE OF ARRAN KA27 01770-302909 ISLE OF MAN IM 01624-663455 ISLE OF MULL PA62-75 01688-302262 JERSEY ALL CODES 01534-505050 LAMPETER SA19,20 SA40 SA45-48 SY23-25 01570-423020 14 Tricity Bendix After Sales Service Service Centres Addresses CENTRE LANCASTER POSTAL DISTRICTS LA1-23 SERVICE APPTS.



[You're reading an excerpt. Click here to read official TRICITY](#)

[BF423W user guide](#)

<http://yourpdfguides.com/dref/946656>

01772-316175 ADDRESS Tricity Bendix After Sales Service NL Services, Unit 333 Ranglet Road, Walton Summit, Bamber Bridge, Preston, Lancs, PR5 8AR
Tricity Bendix After Sales Service 64-66 Cross Gates Road, Leeds, LS15 7NN Tricity Bendix After Sales Service Brian Hudson, Unit 8 Stonefield Park, Clifton
Street, Lincoln, LN5 8AA Tricity Bendix After Sales Service Unit 1 Honeys Green Precinct, Honeys Green Lane, West Derby, Liverpool, L12 9JH Tricity
Bendix After Sales Service Unit 30 Oakhill Trading Estate, Devonshire Road, Worsley, Manchester, M28 3PT Tricity Bendix After Sales Service South West
Domestic Service, Unit 2 Zealley Industrial Estate, Kingsteignton, Newton Abbott, South Devon, TQ12 3SJ Tricity Bendix After Sales Service GMS (Cymru),
Unit 2 Coed - Parc, Abergele Road, Rhuddlan, Clwyd, Wales, LL18 5UG Tricity Bendix After Sales Service PO Box 40 Preston Road, Aycliffe Industrial
Estate, Newton Aycliffe, Co. Durham, DL5 6XA Tricity Bendix After Sales Service Unit C3, Edenderry Industrial Estate, 326, Crumlin Road, Belfast, BT14
7EE Tricity Bendix After Sales Service G & O (Armagh) Service, Owenmore House, Kilwee Business Park, Upper Dunmurray Lane, Belfast, BT17 OHD
Tricity Bendix After Sales Service Unit 23-24 Alliance Business Park, Townsend Drive, Nuneaton, Warwickshire, CV11 6RX Tricity Bendix After Sales
Service Refrigeration Sales and Services, Hatson Ind. Estate, Kirkwall, Orkney Tricity Bendix After Sales Service Heming Road, Washford, Redditch,
Worcestershire, B98 0DH Tricity Bendix After Sales Service Cornwall Domestic Service, Unit 7D Pool Industrial Estate, Wilson Way, Redruth, Cornwall,
TR15 3QW Tricity Bendix After Sales Service D McGlashan Walker, Walker Engineering, Glenmhor, Upper Serpentine, Rothesay, PA20 Tricity Bendix After
Sales Service Tait Electronic Systems Ltd, Holmsgarth Road, Lerwick, Shetland, ZE1 0PW Tricity Bendix After Sales Service Bolts Shetland Ltd, 26 North
Road, Lerwick, Shetland, ZE1 0PE Tricity Bendix After Sales Service Leask Electrical, Harsdale, Symbister, Shetland, ZE2 9AA Tricity Bendix After Sales
Service BLI Service, 6 Harlescott Bam, Harlescott Lane, Shrewsbury, SY1 3SY Tricity Bendix After Sales Service Limberline Road, Hilsea, Portsmouth,
Hampshire, PO3 5JJ Tricity Bendix After Sales Service John Robinson (Electrical), Unit 74 New Enterprise Centre, King Edward Street, Gt. Grimsby, DN31
3JP Tricity Bendix After Sales Service Unit 30, Deacon Trading Estate, Morley Road, Tonbridge, Kent, TN9 1RA LEEDS BD DN1-7, 10-12 HD HG HX LS S
WF YO1-3, 5-8 DE NG-1-22 & 25 0113-2608511 LINCOLN DN21 sub codes 1,2 & 5 only 01522-514603 LN 1,2,4-6 LN3 sub codes 4,5 only LN8-10
NG23,24 31-34 PE1-13, 20-25 FY PR L WN CH CW WA (Not WA14/15) BB BL OL M SK WA14 & 15 only EX1-17 TQ PL1-9,16,19-21 LL 0151-2541724
LIVERPOOL MANCHESTER 0161-477758 NEWTON ABBOTT 01626-65909 NORTH WALES 01745-591616 NORTHERN DL TS DH YO21,22 DH NE SR
BT1-30, 36-57, 63-67 01325-301400 0191-493-2025 01232-746591 NORTHERN IRELAND EAST NORTHERN IRELAND WEST NUNEATON BT31-35,
60-62, 68-82, 92-94 01861-510400 B1-48 62-79, 90-94, DY ST WS WV NN CV LE KW15-17 0121-358-7076 0121-358-5051 01993-704411 01203-350420
01856-875457 ORKNEY REDDITCH REDRUTH GL OX WR SN B49, 50, 60, 61, 80, 95-98.
, TR1-20,26,27 PL10-15,17,18, 22-35 PA20 01527-512919 01209-314407 ROTHSA Y 01700-504777 SHETLAND Own Sales 01595-692225 SHETLAND
SHETLAND SHREWSBURY SOUTH COAST Own Sales ZE2 SY1-6 SY8-17 SY19-22 TF BN16-18, GU27-35 PO1-22. BH DT SO TR21-25 01595-692855
01806-566546 01743-450279 01705-667411 01705-667411 0117-9211876 01472-267978 SOUTH HUMBERSIDE DN8,9 DN15-20 DN21 Sub codes 3,4 only
DN31-40 - LN (3 sub code 6 only), 7 LN11-13 TONBRIDGE SL GU1-26.RG CT DA ME TN BN1-15 20-27 RH TW BR CR SE SW SM KT 01252-24505
01732-357722 01273-694341 0181-658-9069 05/95 15 3 Tricity Bendix, 99 OAKLEY ROAD, Luton, Beds LU4 9QQ Model No. A DIVISION OF EMACO
LIMITED REGISTERED IN ENGLAND NO. 176547 Part No.
BF 423 W 2222 270-05 .



[You're reading an excerpt. Click here to read official TRICITY](#)

[BF423W user guide](#)

<http://yourpdfguides.com/dref/946656>