



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY BIW80. You'll find the answers to all your questions on the TRICITY BIW80 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY BIW80
User guide TRICITY BIW80
Operating instructions TRICITY BIW80
Instructions for use TRICITY BIW80
Instruction manual TRICITY BIW80



[You're reading an excerpt. Click here to read official TRICITY BIW80 user guide](http://yourpdfguides.com/dref/947154)
<http://yourpdfguides.com/dref/947154>

Manual abstract:

@@Care should be taken when moving it. @@All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in instructions. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. @@@@ Pets and children have been known to climb into washing machines. Please check your drum before use. The glass door becomes very hot during the washing cycle. Keep children away from the vicinity of the appliance whilst it is in operation. Keep all packaging well away from children. Keep all detergents in a safe place out of children's reach. s s s Always unplug the appliance and turn off the water after use. Do not overload the appliance. See relevant section in instruction book. Always look through the glass door to check if water has drained before opening the door. The user should always check that they have not left their gas lighter (disposable or otherwise) in their clothing Only wash fabrics which are designed to be machine washed. If in doubt, consult the care label on the clothes. Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed. Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. Only use the advised quantities of fabric softener. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities. As some duvets and eiderdowns should be washed in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine. Leave the porthole door slightly ajar between washes to preserve the door seal. Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Bendix Service Centre. Always insist on genuine Bendix spare parts. 3 Contents For the User Important Safety Information Your New Washing Machine Description of the Appliance The Control Panel Operating sequence Washing 4,5 kg of white cotton at 90 °C Load the laundry Measure out the detergent Measure out the additive Select the required option(s) Select the required programme Start the machine At the end of the programme Washing 2 kg of mixed fabrics at 50 °C Load the laundry Measure out the detergent Measure out the additive Select the required programme Start the machine At the end of the programme 3 5 6 7 8-11 8 8 8 8 9 9 9 10 10 10 10 11 11 11 12-14 13 14 14 14 15 16-17 18-19 18 18 18 18 18 19 19 19 20-21 21 21 22 23-24 For the Installer Installation Instructions Technical Specifications Unpacking Positioning Water inlet Water drainage Levelling Special conditions In the interest of the environment Electrical connections Permanent connection 25 25 26 27 27 28 29 29 29 30 30 Washing Hints Which detergent to use?.... And in which form? How much detergent and fabric softener? Using a water softening agent Wash Care Symbols Washing Programmes Maintenance and Cleaning Descaling After each wash External cleaning Cleaning the dispenser drawer Cleaning the drawer recess Cleaning the filter The dangers of freezing Maintenance Wash Something Not Working Service & Spare Parts Customer Care Guarantee conditions Bendix Service Force Addresses Guide to use the Instruction Book The following symbols will be found in the text to guide you throughout the instructions: Safety instructions i Hints and tips 4 i Your New Washing Machine Your new washing machine, meets all modern needs for effective treatment of laundry with low water, energy and detergent consumption. s s s Automatic cooling of the wash water to 60°C before draining, with the 90°C programme. This reduces thermal shock to fabrics, helping to prevent any creasing. The special wool programme with its new delicate wash system treats your woollens with extreme gentleness. The anti-unbalance device ensures that the washing machine remains stable when spinning. In the interest of the environment s s s Ecological hints To save water and energy and help protect the environment, we recommend that you follow these hints: s Adjust the quantity of detergent according to the hardness of your water supply, the amount of laundry and the degree of soiling. s Select an "ECO" programme for normally soiled laundry. s A programme without prewash is sufficient for normally soiled laundry. s Materials marked with the symbol are recyclable. Check with your local Council or Environmental Health Office to see if there are facilities in your area for re-cycling this appliance. When the appliance is to be scrapped, cut off the power supply cable and make the door closing device unusable to prevent young children from being trapped inside. Help to keep your country tidy - use authorised disposal sites for your old appliance. How do we help to protect the environment? We use recycled paper! 5 Description of the Appliance 1 2 3 4 5 6 7 8 Detergent dispenser drawer "Mains-on" light "Options" buttons Programme guide Program selector dial & ON/OFF switch Door opening handle Filter Adjustable feet Detergent dispenser drawer Prewash Main Wash Fabric softener AL035 6 The Control Panel 1 Detergent dispenser drawer 2 Mains-on light This light illuminates when the appliance is operating. 4 HALF LOAD button Available for programmes 1 to 5. Pressing this button before starting the programme there will be one rinse less which saves energy and water. 3 ECO WASH button By pushing in this button prior to selecting wash programmes "2" and "3", you will obtain a reduction of the temperature from 90°C to 60°C and from 60°C to 40°C. This will ensure a substantial saving in electricity consumption. Use ECO WASH when washing fabrics which are lightly soiled. 5 Programme Guide 6 Programme Selector To select the required programme turn the control clockwise until the marker on the top coincides with the number of the required programme.



[You're reading an excerpt. Click here to read official TRICITY BIW80 user guide](http://yourpdfguides.com/dref/947154)
<http://yourpdfguides.com/dref/947154>

If you pass the required number NEVER TURN THE CONTROL ANTICLOCKWISE just continue clockwise until the required number is reached again. 7
Operating Sequence Before your first wash, we recommend that you run a cotton cycle at 60°C, without any laundry in the machine, to remove any
manufacturing residue from the drum and tub.

Pour 1/2 a measure of detergent into the dispenser drawer and start the machine. WASHING 4.5 KG OF WHITE COTTON AT 90°C Suppose you have 4.5 kg
of heavily soiled laundry to wash. It is white cotton and is suitable for high temperature washing 1. Load the laundry Open the door. Place the laundry in the
drum, one item at a time, shaking out as much as possible. Close the door. P0004 2. Measure out the detergent Pull out the dispenser drawer until it stops.
Measure out the amount of detergent recommended by the manufacturer in a graduated cup and pour it into the main wash compartment . If you wish to carry
out a prewash(*), pour detergent into the compartment marked (*) Prewash is available in programme "1". AL025 3. Add the fabric softener (if required) If
required, pour fabric softener into the compartment marked (the amount used must not exceed the «MAX» mark in the drawer). Close the drawer gently
AL023 4.

Select the required option(S) Depress HALF LOAD button and/or ECO WASH if required. 8 5. Select the required programme Turn the programme selector
dial CLOCKWISE to the required programme. 1 AL040 6. Start the machine Before starting up the machine check that: s the appliance is plugged in s the
water supply taps are turned on s the door and the detergent dispenser drawer are closed.

Pull the programme selector dial outwards The operating pilot light will illuminate and the machine will start operating 1 AL041 7. At the end of the
programme The machine stops automatically and the mains-on light goes out. The door is controlled by a safety device which releases 3 minutes after the end
of the programme. Before opening the door ensure there is no water in the drum. Switch the machine off by pushing in the programme selector dial. When the
programme has finished, you are advised to unplug the appliance and turn off the water taps. Leave the door open to prevent the formation of mildew and
unpleasant smells. 9 WASHING 2 KG OF MIXED FABRICS AT 50 °C Suppose you have 2 kg of MIXED FABRICS to wash. They are rather delicate fabrics
and should not be washed at a high temperature. 1.

Load the laundry Open the door. Place the laundry in the drum, one item at a time, shaking out as much as possible. Close the door. P0004 2. Measure out
the detergent Pull out the dispenser drawer until it stops. Measure out the amount of detergent recommended by the manufacturer in a graduated cup and
pour it into the main wash compartment . AL025 3. Add the fabric softener (if required) If required, pour fabric softener into the compartment marked (the
amount used must not exceed the «MAX» mark in the drawer). Close the drawer gently. AL023 10 4.

Select the required programme Turn the programme selector dial CLOCKWISE to the required programme 7 AL040 5. Start the machine Before starting up
the machine check that: s the appliance is plugged in s the water supply taps are turned on s the door and the detergent dispenser drawer are closed. Pull the
programme selector dial outwards The mains-on light will illuminate and the machine will start operating 7 AL041 6. At the end of the programme The
machine stops automatically and the mains-on light goes out. After the last rinse, the machine will stop with the water left in the tub, to prevent the fabric from
creasing.

@@Before opening the door ensure there is no water in the drum. Switch the machine off by pushing in the programme selector dial. @@Weigh the laundry
the first few times you use the appliance. @@@@Alternatively r example lightly soiled garments, sheets, household linen, underwear, towels.
@@@@@Separate rinse cycle for hand washed garments.

@@Water 67 litres Energy 1.2 kWh Time 110 minutes Water filling: Programmes Programmes Programmes 30°-40°C 50°-60°C 90°C cold water filling hot
and cold water filling hot water filling 16 Washing Programmes Programmes for synthetics, delicates and wool Wash programme Degree of soil and type of
laundry Synthetic or mixed fabrics, underwear, coloured garments, nonshrink shirts, blouses. @@Possible options Max.

@@@@@Clean the control panel using a damp cloth only. @@@@@@The water should drain by gravity into
the bowl. When the bowl is full, hook the hose back up and empty the bowl. Repeat the procedure until water stops flowing out. Unscrew and remove the filter.
Clean carefully under a fast running tap. @@@@@@It is therefore a good idea to clean it from time to time.

Turn off the water taps. Unscrew the water inlet hoses. Remove and clean the filters using a hard bristle brush. @@@s Turn off the water taps. s Unscrew the
inlet hoses. @@Run the draining programme. s Disconnect the appliance. s Screw the inlet hoses and reposition the drain hose. @@We recommend that a
maintenance wash be performed on a regular basis. To run a maintenance wash: * The drum should be empty of laundry.

* Select the hottest cotton wash program. * Use a normal measure of detergent, must be a powder (such as Ariel Futur). 19 Something Not Working Certain
problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your Bendix
Service Force Centre, please carry out the checks listed below. Important: If you call out an engineer to a fault listed below or to repair a fault caused by
incorrect use or installation a charge will be made even if the appliance is in guarantee.

Symptom The machine does not start Possible causes s s s s s s The door has not been closed. The plug is not properly inserted in the power socket. There is
no current at the socket The main fuse has blown. The selector dial is not correctly positioned and pulled out No water is entering the machine (see: the
machine does not fill) Ensure the water taps are open and the water supply has not been disconnected The filter in the inlet hoses are blocked. The inlet hoses
may be squashed or kinked.

The water pressure is too low The end of the drain hose is too low. The end of the drain hose is submerged in water. There is no vent in the end of the drain
hose. The drain hose may be squashed or kinked You have selected a gentle wash cycle. The drain filter may be blocked The drain hose extension is not
correct. Follow the instructions for connecting to the waste. The drainage system pipes are blocked. Too much detergent or unsuitable detergent has been
used (creates too much foam). Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the
hose; check to see if it is damp.



[You're reading an excerpt. Click here to read official TRICITY
BIW80 user guide
http://yourpdfguides.com/dref/947154](http://yourpdfguides.com/dref/947154)

The drain hose may be damaged or not securely positioned. The detergent dispenser drawer or recess is clogged. The drainage system pipes are blocked. Too little detergent or unsuitable detergent has been used. An insufficient amount of detergent leaves the laundry looking grey and causes lime scale to form. Stubborn stains have not been treated prior to washing. The correct temperature to suit the wash programme has not been selected. Too much laundry has been placed in the drum. The internal packing has not been removed. The machine is in contact with the wall or furniture. The machine is not level. The washing load is badly distributed in the drum. There is very little laundry in the drum. The machine is overloaded. The machine does not fill. The machine fills then empties immediately. The machine does not empty and/or does not spin. There is water on the floor. Unsatisfactory washing results. The machine vibrates or is noisy. 20 Symptom The door will not open. Possible causes. The programme is still running. The door lock has not yet released. The water level in the drum is too high or the machine is heating. The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum.

The laundry is redistributed by reverse rotation of the drum. This may happen several times before the load is evenly distributed and spinning can resume eventually at a lower speed, if the wash load is still not sufficiently balanced distributed, after 10 minutes, the machine will not spin. In this case, redistribute the load manually and reselect the spin programme. The noise produced when spinning may differ from your previous washing machine, which is due to the modern drive system. This new motor ensures a softer start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine.

Machines based on modern technology operate very economically using very little water without affecting performance. Spinning starts late or the machine does not spin. The machine makes an unusual noise. No water is visible in the drum. If after the above checks, there is still a fault, call your local Bendix Service Force Centre. Customer care. For general enquiries concerning your Bendix appliance or for further information on Bendix products, please contact our Customer Care Department by letter or telephone as follows: Customer Care Department Bendix 55-77 High Street Slough Berkshire SL1 1DZ Tel 08705 950950. * * Calls to this number may be recorded for training purposes. Service & Spare Parts. If you require an engineer or wish to purchase spare parts contact your local Bendix Service Force Centre by telephoning: 08705 929929. Your telephone call will be routed to the Service Centre covering your post code area. When you call the Service Force centre please make sure you give the model and serial number of the appliance. This information can be found on the rating plate (see picture). In-guarantee customers should ensure that the above checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown. Please note that proof of purchase is required for any in-guarantee service calls. Mod. ..

..... Ser. Mod.

.....

.....

Prod. No.

... P0042 Ser. No. @@@@ Home visits are made between 8.30am and 5.30pm Monday to Friday. @@@@ France Germany Italy Sweden UK Senlis Nurnberg Pordenone Stockholm Slough +33 (0)3 44 62 28 28 +49 (0)911 323 2600 +39 (0) 1678 47053 +46 (0)20 78 77 50 +44 (0)1753 219 898 22 Bendix Service Force To contact your local Bendix Service Centre telephone 08705 929929 CHANNEL ISLANDS GUERNSEY Guernsey Electricity PO Box 4 Vale, Guernsey Channel Islands Jersey Electricity Company PO Box 45 Queens Road St Helier Jersey Channel Islands JE4 8NY ORKNEY (M65) Corsie Domestic 7 King Street Kirkwall Orkney KW15 Hydro Electrical Inveralmond House Rutherventfield Road Perth PHI 3AQ Graham Begg Unit 4 Airport Ind Estate Wick KW1 4QS Tait Electronic Systems Ltd Holmsgarth Road Lerwick Shetland ZE1 0PW Bolts Shetland Ltd. 26 North Road Lerwick Shetland ZE1 0PE Leask Electrical Harisdale Symbister, Whalsay Shetland ZE2 9AA NORTH EAST GATESHEAD (M39) Unit 356a Dukesway Court Dukesway Team Valley Gateshead NE11 0BH 15 Hainton Avenue Grimsby South Humberside DN32 9AS Unit 1 Boulevard Industrial Estate Hull HU3 4AY 64-66 Cross Gates Road Leeds LS15 7NN PERTH JERSEY PERTH GRIMSBY (M42) (OWN SALES) SHETLAND HULL (M41) SCOTLAND ABERDEEN (M05) AUCHTERMUCHY (M03) 54 Claremont Street Aberdeen AB10 6RA 33a Burnside Auchtermuchy Fife KY14 7AJ Unit 5 Block 2 Auchentraith Ind. Estate Rosendale Way Blantyre G72 0NJ 93 Irish Street Dumfries Scotland DG1 2 PQ Brair Hill 7 Hill Street Dunoon Argyll PA23 7AL 20 Cunningham Road Clyde Estate Rutherglen Glasgow G73 1PP Unit 3B Smithton Ind. Estate Smithton Inverness IV1 AJ Arran Domestic Unit 4 The Douglas Centre Brodick Isle of Arran KA27 8AJ J Zerfah 244 Bruernish Isle of Barra Western Islands HS9 5QY Walker Engineering Glenmhor Upper Serpentine Road Rothesay Isle of Bute PA20 9EH ND Macleod 16 James Street Stornoway Isle of Lewis PA87 2QW BELFAST (M27) (OWN SALES) SHETLAND LEEDS (M37) (OWN SALES) WHALSAY BLANTYRE (M07) NEWTON AYCLIFFE Unit 16 (M45) Gurney Way Aycliffe Industrial Estate Newton Aycliffe DL5 6UJ SHEFFIELD (M38) Pennine House Roman Ridge Ind. Roman Ridge Road Sheffield S9 1GB (OWN SALES) DUMFRIES (M01) NORTHERN IRELAND Owenmore House Kilwee Business Park Upper Dunmury Lane Belfast BT17 0HD DUNOON (M67) NORTH WEST BIRKENHEAD (M11) 1 Kelvin Park Dock Road Birkenhead L41 1LT Unit 7 James Street Workshops James Street Carlisle Cumbria CA2 5AH South Quay Ind. Estate Douglas Isle of Man IM1 5AT Unit 1 Honeys Green Precinct Honeys Green Lane Liverpool L12 9JH Unit B Central Industrial Estate St Marks Street Bolton BL3 6NR Unit 250 Dawson Place Walton Summit Bamber Bridge Preston Lancashire PR5 8AL Unit 20 Haigh Park Haigh Avenue Stockport SK4 1QR GLASGOW (M04) WALES CARDIFF (M28) Guardian Industrial Estate Clydesmuir Road Tremorfa Cardiff CF2 2QS Unit 6-7 Coed Parc Abergele Road Rhuddlan Clwyd Wales LL18 5UG Maes Y Coed High Mead Llanybydder Carmarthenshire SA40 9UL Cromlech Lodge Ambleston Haverfordwest Pembrokeshire SA62 5DS Plas Ffynnon Warehouse Middleton Road Oswestry SY11 2PP CARLISLE (M10) INVERNESS (M06) ISLE OF ARRAN CLYWD (M14) ISLE OF MAN (M64) (OWN SALES) ISLE OF BARRA LIVERPOOL (M15) (OWN SALES) ISLES OF BUTE DYFED (M77) MANCHESTER (M09) HAVERFORDWEST (M75) ISLE OF LEWIS PRESTON (M13) OSWESTRY (M17) KELSO (M08) 2-8 Wood Market Kelso Borders TD5 7AX STOCKPORT (M16) 23 Bendix Service Force To contact your local Bendix Service Centre telephone 08705 929929 Unit 1a The Summit Hanworth Road Hanworth Ind.



[You're reading an excerpt. Click here to read official TRICITY](#)

[BIW80 user guide](#)

<http://yourpdfguides.com/dref/947154>

Estate Sunbury on Thames TW16 5D MIDLANDS BIRMINGHAM (M18) 66 Birch Road East Wyrley Road Ind.

Estate Witton Birmingham B6 6DB Manning Road Ind. Estate Pinfold Road Bourne PE10 9HT 68 St. Mary's Street Bridgnorth Shropshire WV16 4DR 101 Rycroft Street Gloucester GL1 4NB Unit 3 Bank Buildings Cattle market Hareford HE4 9HX 30 High Street Higham Ferrers Northants NN10 8BB Unit 2 Furnace Road Ilkeston DE7 5EP Unit 7 Oaks Ind. Estate Coventry Road Narborough Leicestershire LE0 5GF Unit 8 Stonefield Park Clifton Street Lincoln LN5 8AA 18-21 Croft Road Brampton Ind. Estate Newcastle under Lyme Staffordshire ST5 0TW LONDON & EAST ANGLIA BECKENHAM (M79) 11a Gardener Ind.

Estate Kent House Lane Beckenham Kent BR3 1QZ Hanbury Road Widford Ind. Estate Chelmsford Essex CM12 3AE Unit 14 Capitol Park Capitol Way Colindale London NW9 0EQ 194 Court Road Mottingham Eltham London SE9 4EW 284 Alma Road Enfield London EN3 7BB Unit B4 Imperial Business Estate Gravesend Kent DA11 0DL Unit 4 Riverside Estate Coldharbour Lane Harpenden AL5 4UN 16-17 Woodside Ind. Estate Works Road Letchworth Herts SG6 1LA 2/4 Royal Lane Yiewsley West Drayton Middlesex UB7 8DL Reform Road Maidenhead Berkshire SL6 8BY 10 Island Farm Avenue West Molesey Surrey KT8 2UZ 9 Pipers Court Berkshire Drive Thatcham Berkshire RG19 4ER SUNBURY (M63) BOURNE (M44) CHELMSFORD (M47) SOUTH EAST ASHFORD (M58) Unit 2 Bridge Road Business Est. Bridge Road Ashford Kent TN2 1BB Unit 1 Redfield Ind. Estate Church Crookham Fleet Hampshire GU13 0RD 21-25 Bridge Road Haywards Heath Sussex RH16 1UA BRIDGNORTH (M72) COLINDALE (M53) FLEET (M59) GLOUCESTER (M23) ELTHAM (M78) HEREFORD (M31) ENFIELD (M49) HAYWARDS HEATH (M55) SOUTH WEST BARNSTAPLE (M30) Main Road Fremington Barnstaple North Devon EX31 2NT 63-65 Curzon Road Bournemouth Dorset BH1 4PW 6 Hamp Ind. Estate Bridgewater Somerset TA6 3NT 11 Eldon Way Eldonwall Trading Bristol Avon BS4 3QQ 266 Main Road Southbourne Emsworth PO10 8JL Unit 8 Enterprise Court Ryde Business Park Ryde Isle of Wight PO33 1DB Unit 2 Zealley Ind. Estate Kingsteignton Newton Abbot S. Devon TQ12 3TD HIGHAM FERRERS (M51) GRAVESEND (M57) ILKESTON (M43) HARPENDEN (M46) BOURNEMOUTH (M26) LEICESTER (M22) BRIDGEWATER (M35) LETCHWORTH (M50) LINCOLN (M40) BRISTOL (M25) LONDON (M76) EMSWORTH (M33) NEWCASTLE UNDER LYME (M12) MAIDENHEAD (M60) ISLE OF WIGHT (M34) REDDITCH (M20) 13 Thornhill Road North Moons Moat Redditch Worcestershire B98 9ND Unit 3 Sterling Park Claymore Tamworth B77 5DO MOLESEY (M61) NEWTON ABBOT T (M29) TAMWORTH (M19) NEWBURY (M24) REDRUTH (M36) WORCESTER (M73) Units 1 & 2 Northbrook Close Gregorys Mill Ind. Estate Worcester WR3 8BP IPSWICH (M48) Unit 6C Elton Park Business Centre Hadleigh Road Ipswich IP2 0DD 2b Trafalgar Street Norwich NR1 3HN Unit 7D Pool Ind. Estate Wilson Way Redruth Cornwall TR15 3QW NORWICH (M52) 24 Installation Instructions @@ Care must be taken to ensure that the appliance does not stand on the electrical supply cable.

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Technical Specifications DIMENSIONS Height Width Depth 85 cm (33.5") 60 cm (23.6") 55 cm (22.7") 230-240 V/50 Hz 2600 W (13A) Minimum (cold) Minimum (hot) Maximum Cotton, linen Synthetics Delicate fabrics Wool Maximum 50 kPa (7 psi) 30 kPa (4 psi) 800 kPa (110 psi) 4.5 kg (10 lbs) 2 kg (4.5 lbs) 2 kg (4.5 lbs) 1 kg (2.2 lbs) 800 rpm POWER SUPPLY VOLTAGE MAX.

POWER ABSORBED WATER PRESSURE MAXIMUM RECOMMENDED LOAD SPIN SPEED This appliance complies with the following E.E.C. Directives: - 73/23 EEC of 19.2.

73 (Low Voltage Directive) and subsequent modifications; - 89/336 EEC of 3.5.89 (Electromagnetic Compatibility Directive) and subsequent modifications.

25 Unpacking All transit bolts and packing must be removed before using the appliance You are advised to keep all the packaging for re-use in case the appliance has to be transported again. s Unscrew and remove the three rear transit bolts (using a spanner).

P0287 s Lay the machine gently on its back, making sure that the hoses are not squashed. We suggest a polystyrene angle bracket from the packing is placed on the floor before tilting it back to avoid the hoses being squashed. P0018 s Carefully remove the polyethylene bags located at the base of the machine by pulling them toward the centre of the machine. 1 2 AL009 s Place the machine in an upright position and remove the three plastic bolts. P0001 s Plug the 3 holes with the plastic plugs which you can find in the envelope containing the instruction booklet. P0002 26 Positioning Your new Bendix washing machine has been designed to be permanently plumbed in to your home's water supply and drainage system. However, if this is not possible, it may be connected to suitable existing taps, with the drain hose discharging into the sink. The appliance has two inlet hoses, hot and cold, with female 3/4" BSP thread connectors.

If this connection is not compatible with the plumbing of the existing installation, a variety of connectors are available from good hardware stores and plumbers merchants to suit most domestic plumbing. Any alterations to your existing plumbing must be carried out by a competent person, or qualified plumber.

HOT WATER SUPPLY COLD WATER SUPPLY Water inlet The inlets on the back of the appliance are colour coded, blue for cold and red for hot. Before connecting the hoses, be sure to fit the black washers supplied as per diagram. If only a cold water supply is available, connect the two hoses to a cold water outlet by means of a Y' connection piece. Installation should comply with local water authority and building regulation requirements. The appliance must be given a separate cold water supply and not be connected to a mixer tap, a single outlet water heater or a booster pump. A minimum water pressure of 7psi is required for safe operation of the appliance. @@@@ Set the hoses correctly by loosening the ring nuts. @@90 cm.(35.4") P1039 When discharging into a standpipe ensure that the top of the curve in the hose end is no more than 90cm (35.

4") and no less than 60cm (23.6") above floor level. The upright standpipe should have a minimum length of 30cm (12") from the bottom of the elbow to the top of the pipe (see diagram). P1040 Min. 30 cm.

(12") 1 38 mm.(1/2") diameter standpipe Make sure that it is designed in such a way, that the end of the drain hose cannot be covered with water. The drain hose may be extended to a maximum of 3 metres. An additional drain hose and joining piece is available from your local Service Force Centre.

@@@@@@ Accurate levelling prevents vibration, noise and displacement of the machine during operation.



[You're reading an excerpt. Click here to read official TRICITY](#)

[BIW80 user guide](#)

<http://yourpdfguides.com/dref/947154>

After levelling the machine, secure the feet by tightening the ring nuts with the aid of a screwdriver. Some vibration is inevitable, especially if mounted on a wooden floor. Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder. If possible, always place the machine on a solid floor. P0254 P0509 Special conditions If the floor is carpeted with a deep-pile carpet or covered with crumbly or soft material, insert a rigid support base under the feet to prevent noise, vibration or displacement. The base should protrude a few centimetres beyond the edges of the machine. Warning The machine should NOT be placed on deep pile carpeting. Note Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown. In the interest of the environment Washing machines and dishwashers should be connected to the FOUL drainage system, the water will then be taken to a sewage works for treatment before being discharged safely into a river.

It is essential that these appliances are not connected to the surface water drainage system as this water is discharged directly into a river or stream and may cause pollution. If you require any further advice please contact your local authority drainage department. RAINWATER 'RUN-OFF' SHOWER SINK BATH TOILET BIDET WASHING MACHINE DISHWASHER FOUL DRAIN SURFACE WATER DRAINS & SEWERS FOUL SEWERS UNTREATED DISCHARGE SEWAGE TREATMENT WORKS TREATED DISCHARGE RIVER RIVER P0987 29 Electrical connections Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person WARNING: THIS APPLIANCE MUST BE EARTHED. The manufacturer declines any liability should this safety measure not be observed. Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance rating plate (the plate is stuck to the rear of the appliance). The appliance is supplied with a 13 amp plug fitted. In the event of having to change the fuse in the plug supplied, use a 13 Amp BS1362 fuse. Only ASTA or BSI approved fuses must be used. Should the plug need to be replaced for any reason, proceed as described below.

The wires in the mains lead are coloured in accordance with the following code: Green and Yellow - Earth Blue - Neutral Brown - Live Connect the green and yellow (earth) wire to the terminal in the plug which is marked with the letter «E» or the earth symbol or coloured green and yellow. Connect the blue (neutral) wire to the terminal in the plug which is marked with the letter «N» or coloured black. Connect the brown (live) wire to the terminal in the plug which is marked with the letter «L» or coloured red. The plug must not be used if the fuse cover/carrier is lost. The cover/carrier is indicated by the coloured insert at the base of the plug.

A replacement cover/carrier must be obtained from your local Bendix Service Centre, whose address are listed at the back of this instruction manual.

WARNING: a cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely. GREEN & YELLOW E 13 A N L BROWN BLUE P1041 CORD CLAMP Permanent connection In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3 mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations. The switch must not break the yellow and green earth cable at any point.

30 Bendix, 55-77 High Street, Slough, Berkshire SL1 1DZ Consumer care telephone number 08705 950 950 © Electrolux Household Appliances Limited 2000/04 .



[You're reading an excerpt. Click here to read official TRICITY](#)

[BIW80 user guide](#)

<http://yourpdfguides.com/dref/947154>