

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY BL602W. You'll find the answers to all your questions on the TRICITY BL602W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY BL602W
User guide TRICITY BL602W
Operating instructions TRICITY BL602W
Instructions for use TRICITY BL602W
Instruction manual TRICITY BL602W

Operating and Installation Instructions BL 602 W	



You're reading an excerpt. Click here to read official TRICITY BL602W user guide http://yourpdfguides.com/dref/946923

Manual abstract:	

••••	

••••	
•••••	
••••	
•••••	
••••	
•••••	
•••••	
•••••	

••••	

••••	
•••••	
•••••	
•••••	
••••	
••••	
•••••	

••••
•••••
•••••
page .page .page .page .page .page .page .
page .page .page .page .
page .page .page .page .
page .page .page .page 3 4 5 5 5 6 7 7 8 11 12 12 13 14 14 15 15 15 16 17 18 Conservation . Installation . Positioning Before using .
The electrical connections . Location
Door reversibility Fitting a decorative door panel. Your appliance . Operation .
Setting the temperature . Health and safety guidelines .
Fresh food refrigeration . Defrosting
Maintenance and cleaning Internal cleaning
When the appliance is not in use . Changing the light bulb
What happens if something goes wrong? . Guarantee conditions
Tricity Bendix Service Centres . TECHNICAL SPECIFICATIONS POWER SUPPLY VOLTAGE AND FREQUENCY TOTAL POWER ABSORBED
AVERAGE DAILY UNITS ELECTRICITY GROSS CAPACITY NET CAPACITY 220-240 V / 50 Hz 110 W 0.80 kWh 155 l 153 l 2 WARNINGS IT IS MOST
IMPORTANT THAT THIS INSTRUCTION BOOK SHOULD BE RETAINED WITH THE APPLIANCE FOR FUTURE REFERENCE SHOULD THE

..... Tricity Bendix Service Centres. TECHNICAL SPECIFICATIONS POWER SUPPLY VOLTAGE AND FREQUENCY TOTAL POWER ABSORBED AVERAGE DAILY UNITS ELECTRICITY GROSS CAPACITY NET CAPACITY 220-240 V / 50 Hz, 110 W 0.80 kWh 155 l 153 l 2 WARNINGS IT IS MOST IMPORTANT THAT THIS INSTRUCTION BOOK SHOULD BE RETAINED WITH THE APPLIANCE FOR FUTURE REFERENCE. SHOULD THE APPLIANCE BE SOLD OR TRANSFERRED TO ANOTHER OWNER, OR SHOULD YOU MOVE HOUSE AND LEAVE THE APPLIANCE, ALWAYS ENSURE THAT THE BOOK IS SUPPLIED WITH THE APPLIANCE IN ORDER THAT THE NEW OWNER CAN GET TO KNOW THE FUNCTIONING OF THE APPLIANCE AND THE RELEVANT WARNINGS. THESE WARNINGS ARE PROVIDED IN THE INTEREST OF SAFETY.

YOU MUST READ THEM CAREFULLY BEFORE INSTALLING OR USING THE APPLIANCE. This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the product. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. This product should be serviced by an authorised Tricity Bendix Service Centre, and only genuine spare parts should be used.

It is dangerous to alter the specifications or modify this product in any way. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. Tricity Bendix domestic refrigerators, freezers and fridge/freezers are designed to be used specifically for the storage of edible foodstuffs only.

There are working parts in this product which heat up. @@See installation instructions.

Parts which heat up should not be exposed. @@@@Frozen food must NOT be re-frozen once it has thawed out. @@The cooling plate or refrigerated freezer shelves in this appliance contain channels through which the refrigerant passes. If these are punctured this would cause substantial damage to the appliance and result in food loss. DO NOT USE SHARP INSTRUMENTS to scrape off frost or ice. @@Solid ice should be allowed to thaw, when defrosting the appliance. See Defrost instructions. @@This appliance is heavy. Care should be taken when moving it. Do not remove items from the freezer if your hands are damp/wet, as this could cause skin abrasions or "frost/freezer burns".

Ice lollies can cause "frost/freezer burns" if consumed straight from the freezer. Manufacturers' storage recommendations should be strictly adhered to. Refer to relevant instructions. Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Refer to your local Tricity Bendix Service Centre and always insist on genuine spare parts. 12/95 2222 268-04 3

CONSERVATION In the interests of the Environment: When disposing of your old fridge, freezer or fridge/freezer. Help to keep your country tidy use authorised disposal sites for your old appliances. For maximum efficiency: Make sure that the appliance is cleaned properly. Make sure that the door is closed properly.

Do not position the appliance near to sources of heat. Do not over-fill your appliance, air MUST be allowed to circulate. 4 INSTALLATION Warning IF YOU ARE DISCARDING AN OLD APPLIANCE THAT HAS A LOCK OR CATCH ON THE DOOR, YOU MUST ENSURE THAT IT IS MADE UNUSABLE TO

PREVENT YOUNG CHILDREN BEING TRAPPED INSIDE. Before using Remove all securing tapes. @@Do not use soap or detergent as the smell may linger.

@@@@@@@Remove the fuse from the cut off plug. @@@@This appliance complies with the E.E.C. Directive No.

87/308 of 2.6.87 relative to radio interference suppression. This appliance complies with the following E.E.C. Directives: - 73/23 EEC of 19.2.73 (Low

Voltage Directive) and subsequent modifications; - 89/336 EEC of 3.5.

89 (Electromagnetic Compatibility Directive) and subsequent modifications. Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown. If you fit your own plug, the colours of the wires in the mains lead of your appliance may not correspond with the markings identifying the terminals in your plug, proceed as follows: Fig. 1 GREEN & YELLOW 13 AMP. FUSE 13 AMP BROWN BLUE D207 CORD CLAMP Connect the Green and Yellow (earth) wire to the terminal in the plug which is marked with the letter «E» or the earth symbol, or coloured green and yellow. Connect the blue (neutral) wire to the terminal in the plug which is marked with the letter «N» or coloured black. Connect the brown (live) wire to the terminal in the plug which is marked with the letter «L» or coloured red. The plug moulded onto the lead incorporates a fuse. For replacement, use a 13amp BS1362 fuse. Only ASTA or BSI approved fuses should be used.

The plug must not be used if the fuse cover/carrier is lost. The cover/carrier is indicated by the coloured insert at the base of the plug. 6 Location This appliance is designed to be built-in to a space having the dimensions given in Fig. 2. Fig.

2 820 870 Door reversibility Remove the two screws which fix the upper hinge to the door. Carefully lean the appliance on its back and remove the plastic insert (Fig. 4). Fig. 4 600 547 550 820-870 59 6 100-170 The height of the appliance can be altered if required by means of adjustable feet situated at its base (Fig.

3). Fig. 3 D447 Remove the two screws which fix the lower hinge to the door. Remove the four screws which fix the lower hinge to the base of the appliance and remove the hinge itself; be very careful to recover all the screws. Remove the four screws that fix the upper hinge to the appliance and remove the hinge itself, @@@@@@Fix the two front screws into the upper and lower hinges (Fig. 5). Fig. @@@@@@@The small bottom bracket need not be removed.



You're reading an excerpt. Click here to read official TRICITY BL602W user guide

http://yourpdfguides.com/dref/946923

Place the appliance in the position where it is to be built in (Fig.

6). @@@@@@6 Insert the adjusting pins (B-Fig. 8) into their locations in the door and screw them in. Fig. @@9). @@9). Fig. 9 A = = 1 B C D467 Lay the panel face down (Fig. 7). @@Secure the bracket with the screws supplied.

@@@@10). Fig. @@12). Fig. @@@@@@@The plate can be adjusted backwards or forwards in the holes (Fig.

13). Fig. @ @ @ @ @ @ @ @ @ @ @ @ @ @ @ @ @ Important To avoid defrost water overflowing into the fridge, periodically clean the water discharge hole in the centre of the V shaped drip collector at the back of the refrigerator compartment behind the fruit and vegetable drawers. Use the defrost cleaner provided which you will find already inserted into the discharge hole (Fig. 17).

Fig. 17 D037 Remember to wash the defrost cleaner in hot soapy water at regular intervals. Dry thoroughly before replacing. D040 14 MAINTENANCE AND CLEANING Before any maintenance or cleaning work is carried out, DISCONNECT the appliance from the ELECTRICITY supply. Changing the light bulb Should the interior light fail to work, first switch off the appliance and disconnect from the electricity supply, then replace the bulb as follows, see Fig. 18.

Fig. 18 Internal cleaning Clean the inside and accessories with warm water and bicarbonate of soda (5ml to 0.5 litre of water). Rinse and dry thoroughly.

NEVER USE DETERGENTS, ABRASIVE POWDERS, HIGHLY PERFUMED CLEANING PRODUCTS OR WAX POLISHES, TO CLEAN THE INTERIOR AS THESE WILL DAMAGE THE SURFACE AND LEAVE A STRONG SMELL. @@@@Replace the light cover by sliding it into its original position and replacing the screw. 15 WHAT HAPPENS IF SOMETHING GOES WRONG? Before contacting your local Tricity Bendix Service Centre, check the following points: The appliance does not work... Check that: There is power at the socket. Ensure that there is not a power cut by checking the household lights. The fuse has not blown. The air circulation passages are not covered. The thermostat dial is in the correct position.

Vibration or abnormal noises... You may hear faint gurgling or bubbling sounds when the refrigerant is pumped through the coils of tubing at the rear, to the cooling plate/evaporator. When the compressor is on, the refrigerant is being pumped round, ter, M28 3PT Tricity Bendix After Sales Service South West Domestic Service, Unit 2 Zealley Industrial Estate, Kingsteignton, Newton Abbott, South Devon, TQ12 3SJ Tricity Bendix After Sales Service GMS (Cymru), Unit 2 Coed - Parc, Abergele Road, Rhuddlan, Clwyd, Wales, LL18 5UG Tricity Bendix After Sales Service PO Box 40 Preston Road, Aycliffe Industrial Estate, Newton Aycliffe, Co.

Durham, DL5 6XA Tricity Bendix After Sales Service Unit C3, Edenderry Industrial Estate, 326, Crumlin Road, Belfast, BT14 7EE Tricity Bendix After Sales Service G & O (Armagh) Service, Owenmore House, Kilwee Business Park, Upper Dunmurray Lane, Belfast, BT17 OHD Tricity Bendix After Sales Service Unit 23-24 Alliance Business Park, Townsend Drive, Nuneaton, Warwickshire, CV11 6RX Tricity Bendix After Sales Service Refrigeration Sales and Services Hatson Ind. Estate, Kirkwall, Orkney Tricity Bendix After Sales Service Heming Road, Washford, Redditch, Worcestershire, B98 0DH Tricity Bendix After Sales Service Cornwall Domestic Service, Unit 7D Pool Industrial Estate, Wilson Way, Redruth, Cornwall, TR15 3QW Tricity Bendix After Sales Service D McGlashan Walker, Walker Enginering, Glenmhor, Upper Serpentine, Rothesay, PA20 Tricity Bendix After Sales Service Tait Electronic Systems Ltd, Holmsgarth Road, Lerwick, Shetland, ZE1 0PW Tricity Bendix After Sales Service Bolts Shetland Ltd, 26 North Road, Lerwick, Shetland, ZE1 0PE Tricity Bendix After Sales Service Leask Electrical, Harsdale, Symbister, Shetland, ZE2 9AA Tricity Bendix After Sales Service BLI Service, 6 Harlescott Bam, Harlescott Lane, Shrewsbury, SY1 3SY Tricity Bendix After Sales Service Limberline Road, Hilsea, Portsmouth, Hampshire, PO3 5JJ Tricity Bendix After Sales Service John Robinson (Electrical), Unit 74 New Enterprise Centre, King Edward Street, Gt. Grimsby, DN31 3JP Tricity Bendix After Sales Service Unit 30, Deacon Trading Estate, Morley Road, Tonbridge, Kent, TN9 1RA LEEDS BD DN1-7, 10-12 HD HG HX LS S WF YO1-3, 5-8 DE NG-1-22 & 25 0113-2608511 LINCOLN DN21 sub codes 1,2 & 5 only 01522-514603 LN 1,2,4-6 LN3 sub codes 4,5 only LN8-10 NG23,24 31-34 PE1-13, 20-25 FY PR L WN CH CW WA (Not WA14/15) BB BL OL M SK WA14 & 15 only EX1-17 TQ PL1-9,16,19-21 LL 0151-2541724 LIVERPOOL MANCHESTER 0161-4777758 NEWTON ABBOTT 01626-65909 NORTH WALES 01745-591616 NORTHERN DL TS DH YO21,22 DH NE SR BT1-30, 36-57, 63-67 01325-301400 0191-493-2025 01232-746591 NORTHERN IRELAND EAST NORTHERN IRELAND WEST NUNEATON BT31-35, 60-62, 68-82, 92-94 $01861-510400\ B1-48\ 62-79,\ 90-94,\ DY\ ST\ WS\ WV\ NN\ CV\ LE\ KW15-17\ 0121-358-7076\ 0121-358-5051\ 01993-704411\ 01203-350420\ 01856-875457$ ORKNEY REDDITCH REDRUTH GL OX WR SN B49, 50, 60, 61, 80, 95-98., TR1-20,26,27 PL10-15,17,18, 22-35 PA20 01527-512919 01209-314407 ROTHSAY 01700-504777 SHETLAND Own Sales 01595-692225 SHETLAND SHETLAND SHREWSBURY SOUTH COAST Own Sales ZE2 SY1-6 SY8-17 SY19-22 TF BN16-18, GU27-35 PO1-22. BH DT SO TR21-25 01595-692855 01806-566546 01743-450279 01705-667411 01705-667411 0117-9211876 01472-267978 SOUTH HUMBERSIDE DN8,9 DN15-20 DN21 Sub codes 3,4 only DN31-40 - LN (3 sub code 6 only), 7 LN11-13 TONBRIDGE SL GU1-26. RG CT DA ME TN BN1-15 20-27 RH TW BR CR SE SW SM KT 01252-24505 01732-357722 01273-694341 0181-658-9069 05/95 19 3 Tricity Bendix, 99 OAKLEY ROAD, Luton, Beds LU4 9QQ Model No. A DIVISION OF EMACO LIMITED REGISTERED IN ENGLAND NO. 176547 Part No. BL 602 W 2222 268-04.



You're reading an excerpt. Click here to read official TRICITY BL602W user guide

http://vourpdfguides.com/dref/946923