



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY BTD600. You'll find the answers to all your questions on the TRICITY BTD600 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual TRICITY BTD600**  
**User guide TRICITY BTD600**  
**Operating instructions TRICITY BTD600**  
**Instructions for use TRICITY BTD600**  
**Instruction manual TRICITY BTD600**

C6241 A4 80671 Bendix Bklet 8/11/02 10:41 AM Page 1

**⚠ IMPORTANT SAFETY INFORMATION**

This information is provided in the interest of safety. You must read it carefully before installing or using the appliance.

**Installation**

- Any electrical work required to install the appliance must be carried out by a competent qualified person.
- Do not use a two-way adaptor or extension lead. The dryer must be connected to its own socket.
- Ensure the appliance does not stand on the electrical supply cable.
- It is dangerous to alter the specifications or modify this product in any way.

**Child Safety**

- Check your drum before use. Pets and children have been known to climb into tumble dryers.
- This appliance should be operated by adults. Do not allow children to tamper with the controls or play with the product.
- Keep children away from the appliance when it is in operation.

**During Use**

- This tumble dryer is intended for normal domestic use only.
- Clean the lint filter after each drying cycle.
- The appliance should be unplugged after use.
- Do not block the air inlets at the front and back of your dryer.
- Do not allow fluff to accumulate around the tumble dryer.
- Do not overload the appliance.

- Do not exceed the recommended maximum load.
- Clothes which are dripping wet must not be placed in the dryer. Only load well spun clothes.
- Do not dry items containing foam rubber or rubber like materials.
- Under no circumstances should anything other than articles recommended for tumble drying be placed in the tumble dryer.
- Do not dry items that have been in contact with flammable chemicals such as dry cleaning fluid.
- Never switch the tumble dryer off and leave a hot load in the drum.

**Service**

- Do not attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunction.
- Repairs should be carried out by Tricity Bendix Service Force.

Please read this instruction book before using the appliance, and retain for future reference

1



[You're reading an excerpt. Click here to read official TRICITY BTD600 user guide](http://yourpdfguides.com/dref/946320)  
<http://yourpdfguides.com/dref/946320>

**Manual abstract:**

You must read it carefully before installing or using the appliance. Installation . . . . . Any electrical work required to install the appliance must be carried out by a competent qualified person. Do not use a two-way adaptor or extension lead. The dryer must be connected to its own socket. Ensure the appliance does not stand on the electrical supply cable. It is dangerous to alter the specifications or modify this product in any way. Do not exceed the recommended maximum load. Clothes which are dripping wet must not be placed in the dryer. Only load well spun clothes. Do not dry items containing foam rubber or rubber like materials.

Under no circumstances should anything other than articles recommended for tumble drying be placed in the tumble dryer. Do not dry items that have been in contact with flammable chemicals such as dry cleaning fluid. Never switch the tumble dryer off and leave a hot load in the drum. · Child Safety · · · Check your drum before use. Pets and children have been known to climb into tumble dryers.

This appliance should be operated by adults. Do not allow children to tamper with the controls or play with the product. Keep children away from the appliance when it is in operation. · Service · Do not attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunction.

Repairs should be carried out by Tricity Bendix Service Force. · During Use · · · · · This tumble dryer is intended for normal domestic use only. Clean the lint filter after each drying cycle. The appliance should be unplugged after use. Do not block the air inlets at the front and back of your dryer. Do not allow fluff to accumulate around the tumble dryer. Do not overload the appliance. @@@@Type 1: Prise out the fuse cover (A) with fuse (B). @@The BLUE wire must be connected to the terminal marked with the letter 'N' or coloured black. Important - The fuse cover must be refitted when changing a fuse.

If the fuse cover is lost, the plug should not be used until a correct replacement is fitted. Replacements are identified by the colour insert or the colour embossed in words on the base of the plug. They are available from most electrical retail shops. Type 2: Prise up the hinged fuse cover (A) as shown. Replace the fuse and press the cover back into place. A Air Inlet The BROWN wire must be connected to the terminal that is marked with the letter 'L' or coloured red. A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely. Temperature Button Depress the button for the high temperature. Press the button again to release it for the low temperature.

Use the high temperature for drying cottons and linens, and the low temperature for drying synthetics and delicates. Programme Guide This is a guide to help you select the correct temperature and drying time. Filter This must be removed and cleaned after every drying cycle. Time Selector Dial The time selector dial is marked in minutes up to a maximum of 140 minutes. To select a drying time, turn the dial clockwise until the time you require is in line with the marker.

To reduce the drying time turn the dial clockwise past the OFF position until the correct time is reached. DO NOT ATTEMPT TO TURN THE DIAL ANTI-CLOCKWISE. Anti-crease Button This function allows the clothes to be tumbled intermittently at the end of a programme to reduce creasing. If selected, this will continue until the appliance is switched off. Dryer On Indicator This illuminates when the appliance is operating.

This will extinguish when the appliance is switched off. Air Inlet Do not cover or block the air inlet. 14 3 C6241 A4 80671 Bendix Bklet 8/11/02 10:41 AM Page 5 PROGRAMME GUIDE Cotton and Polyester Cotton Degree of Spin Given 500rpm 800/1000rpm 2800 rpm (spin dryer) 500rpm 800/1000rpm 2800 rpm (spin dryer) 500rpm 800/1000rpm 2800 rpm (spin dryer) 500rpm 800/1000rpm 2800 rpm (spin dryer) Quantity Selector Dial Setting 140 mins 110 mins 80 mins 100 mins 80 mins 60 mins 100 mins 80 mins 60 mins 80 mins 60 mins 40 mins INSTALLATION INSTRUCTIONS Technical Information Dimensions: Height Width Depth 85 cm 59.5 cm 58 cm 6.0kg Store Dry Maximum Dry Weight Loads: Cotton 'Easycare' polyester/cotton (for minimum creasing) Delicates 6 kg 6 kg 2 kg 2 kg 2.0kg 6.0kg Iron Dry Electrical Ratings Voltage Frequency Power rating 220-240v 50Hz 2700w 2.0kg Synthetics Degree of Spin Given 500rpm 800/1000rpm 2800 rpm (spin dryer) 500rpm 800/1000rpm 2800 rpm (spin dryer) Quantity Selector Dial Setting 60 mins 50 mins 40 mins 40 mins 30 mins 20 mins POSITIONING Site Preparation · · · The installation surface must be clean and dry. Do not install on a deep pile carpet. Do not install the appliance where the temperature may fall below freezing or rise above 35°C.

Do not use a two way electrical adaptor or extension lead. The dryer must be connected to its own socket. Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown. Hot air emitted by the tumble dryer can reach temperatures of up to 60°C. The flooring on which the tumble dryer is installed must therefore be heat resistant to a minimum of 60°C. The plug must be accessible after installation. Venting - This appliance contains a retractable vent hose which must be extended to an open door or window during use. 2.0kg Store Dry 1.0kg If the laundry is spin-dried in a washing machine at less than 500 rpm, the residual dampness will be higher and consequently the drying time should be increased.

This applies particularly to laundry consisting primarily of towels. If the laundry is spin-dried at more than 1200 rpm, the residual dampness will be lower and consequently the drying time should be decreased. · · · 4 13 C6241 A4 80671 Bendix Bklet 8/11/02 10:41 AM Page 7 GUARANTEE CONDITIONS Standard guarantee conditions We, Tricity Bendix, undertake that if within 12 months of the date of the purchase this Tricity Bendix appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that: · The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.

@@@Home visits are made between 8.30am and 5.

30pm Monday to Friday. @@@@DO NOT load dripping wet laundry into the dryer. Roll the article in a towel or spin to remove excess water.

Close poppers and zips and fasten any buttons. Sort the laundry.

Separate synthetics from cottons/linens, and dry separately.



[You're reading an excerpt. Click here to read official TRICITY](#)

[BTD600 user guide](#)

<http://yourpdfguides.com/dref/946320>

@@ Use a fabric conditioning sheet to reduce static. @@ Mix the load i.e. large and small articles. @@ petrol, cleaning solvents, cooking oil, fats or hair lacquer. @@ Very delicate articles such as silk Very large and bulky items such as duvets or sleeping bags. Exclusions This guarantee does not cover: - Damage or calls resulting from td will periodically rotate anti-clockwise for approximately 20 seconds, which helps to prevent tangling. Never switch the dryer off and leave a hot load in the drum. @@@@ Est.

@@@@@ The filter collects fluff which accumulates during drying and it must therefore be removed and cleaned at the end of each programme. To remove the filter: HEREFORD (M31) ENFIELD (M49) HAYWARDS HEATH 21-25 Bridge Road (M55) Haywards Heath Sussex RH16 1UA SOUTH WEST BARNSTAPLE (M30) Main Road Fremington Barnstaple North Devon EX31 2NT 63-65 Curzon Road Bournemouth Dorset BH1 4PW 6 Hamp Industrial Estate Bridgewater Somerset TA6 3NT 11 Eldon Way Eldonwall Trading Bristol Avon BS4 3QQ 266 Main Road Southbourne Emsworth PO10 8JL Unit 8 Enterprise Court Ryde Business Park Ryde Isle of Wight PO33 1DB Unit 2 Zealley Ind. Estate Kingsteignton Newton Abbot S. Devon TQ12 3TD Unit 7D Pool Industrial Estate Wilson Way, Redruth, Cornwall TR15 3QW Cleaning the Door Wipe the interior part of the door to remove any fluff. The condenser and ducting should be cleaned 3 or 4 times a year or more frequently if the dryer is in constant use. HIGHAM FERRERS 30 High Street (M51) Higham Ferrers Northants NN10 8BB ILKESTON (M43) Unit 2 Furnace Road Ilkeston DE7 5EP Unit 7 Oaks Industrial Estate Coventry Road Narborough Leicestershire LE0 5GF Unit 8 Stonefield Park Clifton Street Lincoln LN5 8AA 18-21 Croft Road Brampton Ind. Estate Newcastle under Lyme Staffordshire ST5 0TW 13 Thornhill Road North Moons Moat Redditch Worcestershire B98 9ND Unit 3 Sterling Park Claymore Tamworth B77 5DO Units 1 & 2 Northbrook Close Gregorys Mill Ind Estate Worcester WR3 8BP GRAVESEND (M57) HARPENDEN (M46) . . . LEICESTER (M22) BOURNEMOUTH (M26) Pull the filter upwards and away from the appliance. Remove any threads of fluff by hand or with a soft brush Slide the filter back into position. Wash the filter occasionally in detergent solution using a soft brush to remove any small particles. i The condenser will discolour through use. This will not affect the performance of the appliance. For maximum efficiency, the plates are made from very thin aluminium and are easily damaged. Do not try to poke anything between the plates or use a hard object or toll for cleaning. At all times, handle the condenser carefully and avoid crushing the plates. LETCHWORTH (M50) BRIDGEWATER (M35) LINCOLN (M40) BRISTOL (M25) i LONDON (M76) NEWCASTLE UNDER LYME (M12) EMSWORTH (M33) MAIDENHEAD (M60) ISLE OF WIGHT (M34) REDDITCH (M20) MOLESEY (M61) NEWTON ABBOT (M29) TAMWORTH (M19) NEWBURY (M24) REDRUTH (M36) WORCESTER (M73) IPSWICH (M48) The lint filter must be cleaned after every drying cycle.

10 7 C6241 A4 80671 Bendix Bklet 8/11/02 10:41 AM Page 13 SOMETHING NOT WORKING Before contacting your local Tricity Bendix Service Force please carry out the following checks. SERVICE AND SPARE PARTS In the event of your appliance requiring service, or if you wish to purchase spare parts please contact your local Tricity Bendix Service Force Centre by telephoning: SYMPTOM The machine does not work SOLUTION Check that there is a supply of electricity Check the plug fuse Check the door is closed Check the machine is switched on Check the time selector dial is set correctly 0870 5 929929 (UK) 0752 01 409 0770 (EIRE) Your telephone call will be automatically transferred to your local Service Centre. The addresses can be found on the pages headed Tricity Bendix Service Force Centres. When you contact Service Force, they will need to know: 1. Your name, address and post code 2. Your telephone number 3. Clear and concise details of the fault 4. The model and serial number 5. The date of purchase Before calling out an engineer, please ensure you have read the details under the heading 'Something Not Working'. The clothes are not dry after normal drying time Check you have used the correct temperature setting) Check the timer has not been set within a cool down period The heater cut-out has operated. See below Heater Cut-Out This cut-out operates if the airflow is severely restricted. Before resetting it check: In-guarantee customers should ensure that the checks under the heading 'Something Not Working' have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown. Please note that it will be necessary to provide proof of purchase for any in-guarantee service calls. All enquiries concerning service should be addressed to your local Service Centre. The filter is clean.

The air inlets at the back are not blocked. @@@@ To change the direction of the opening. @@@@ 2 Operating Sequence.....

....  
....  
.....

..6 Loading the Laundry Selecting the programme When drying is complete Maintenance and Cleaning .....

....  
.....

...7 External Cleaning Cleaning the Lint Filter Cleaning the Door Fig. 3 Something Not Working.

.....  
.....

.8 Symptoms and Solutions Service and Spare Parts....

....  
.....

.....9 Customer Care .....

....  
.....

9 Tricity Bendix Service Centre Addresses.....

.....  
.....

.....10 - 11 Guarantee Conditions ...

.....  
.....  
.....

.12 2 15 C6241 A4 80671 Bendix Bklet 8/11/02 10:41 AM Page 17 Tricity Bendix, 55-77 High Street, Slough, Berkshire SL1 1DZ Consumer care telephone number... 08705 950 950 (UK) 0752 01 409 0770 (EIRE) OPERATING & INSTALLATION INSTRUCTIONS DELUXE TUMBLE DRYER BTD 600 MODEL NO. PNC - 919222112 © Electrolux Household Appliances Limited 2000 PART NO. 4213 094 80671 C6241 A4 80671 Bendix Bklet 8/11/02 10:41 AM Page 19 10 11 .



[You're reading an excerpt. Click here to read official TRICITY](#)

[BT600 user guide](#)

<http://yourpdfguides.com/dref/946320>