



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY CAW 1210. You'll find the answers to all your questions on the TRICITY CAW 1210 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual TRICITY CAW 1210**  
**User guide TRICITY CAW 1210**  
**Operating instructions TRICITY CAW 1210**  
**Instructions for use TRICITY CAW 1210**  
**Instruction manual TRICITY CAW 1210**

**TRICITY BENDIX**

OPERATING & INSTALLATION  
INSTRUCTIONS



WASHING MACHINE

**CAW 1210**

124978222



[You're reading an excerpt. Click here to read official TRICITY CAW 1210 user guide](http://yourpdfguides.com/dref/947103)

<http://yourpdfguides.com/dref/947103>

*Manual abstract:*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... @@..  
Positioning ... Water inlet ..  
Water drainage .. Levelling ..  
.. @@.....

Washing hints ..... Wash care symbols .

.....  
.. Programmes for cotton and linen ...  
.. @@Using your machine .....

.. Washing 4.5 kg of white cotton at 95°C . Washing 2 kg of synthetic fabrics at 40°C Maintenance and cleaning ... Descaling, after each wash, external cleaning ...

.....  
... Cleaning the dispenser drawer, cleaning the drawer recess, the dangers of freezing Cleaning the filter ..

..... The water inlet filters ...

.....  
.....  
..... Servicing .....

.....  
.....  
.....  
.....

.....  
.. Tricity Bendix guarantee conditions Tricity Bendix service centres .. TECHNICAL SPECIFICATIONS DIMENSIONS Height Width Depth 85 cm (33.5") 60 cm (23.6") 57 cm (22.4") 230-240 V/50 Hz 2550 W (13A) Minimum (hot) Minimum (cold) Maximum Cotton, linen Synthetics, delicate fabrics Wool Maximum 005 psi (3.5 N/cm2) 007 psi (4.8 N/cm2) 110 psi (76 N/cm2) 4. 5 kg (10 lb) 2 kg (4.5 lb) 1 kg (2.2 lb) 1200 rpm POWER SUPPLY VOLTAGE TOTAL POWER ABSORBED WATER PRESSURE MAXIMUM RECOMMENDED LOAD SPIN SPEED This appliance complies with the following E.E.C. Directives: - 73/23 EEC of 19.2.73 (Low Voltage Directive) and subsequent modifications; - 89/336 EEC of 3.5.89 (Electromagnetic Compatibility Directive) and subsequent modifications.

**2 IMPORTANT INFORMATION** It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant warnings. These warnings have been provided in the interest of safety. You **MUST** read them carefully before installing or using the appliance. **INSTALLATION** n n Only use the advised quantities of fabric softener. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities. As some duvets and eiderdowns should be washed in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine. The users should always check that they have not left their gas lighters (disposable or otherwise) in their clothing. Leave the porthole door slightly ajar between washes to preserve the door seal.

n n n This appliance is heavy. Care should be taken when moving it. All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in instructions.

Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. @@@@@Contact your local Tricity Bendix Service Centre.

@@This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the product.

Pets and children have been known to climb into washing machines. Please check your drum before use. The glass door becomes very hot during the washing cycle. Keep children away from the vicinity of the appliance whilst it is in operation. When disposing of your old washing machine, the electric cable must be cut off and the door catch must be made unusable. n n n **USE** n n Always unplug the appliance and turn off the water after use. Do not overload the appliance. See relevant section in instruction book. Only wash fabrics which are designed to be machine washed. If in doubt, consult the care label on the clothes.

Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must **NOT** be machine washed. Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. n n n **Important** Your machine is fitted with a balance control device, which ensures the machine is stable during the spin. If the wash load appears not to have been spun sufficiently at the end of the wash cycle, because it is not evenly distributed in the drum, the balance control device may have operated. It will therefore be necessary to redistribute the wash load manually and select a spin programme.

For more detailed information see the section headed "Servicing". n n n **3 INSTALLATION** Unpacking Before starting the machine up, the packing must be removed as follows. You are advised to keep all the packaging for re-use in case the machine is to be transported again. Using a spanner unscrew and remove the rear right bolt. Lay the machine gently on its back, making sure that the hoses are not squashed.

**Positioning** Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. Your new washing machine has been designed to be permanently plumbed in to your home's water supply and drainage system.

However, if this is not possible, it may be connected to suitable existing taps with the drain hose discharging into a sink. The appliance has two inlet hoses, hot and cold, with female 3/4" BSP thread connectors. @@@@There should be a minimum distance of 5.02 m (16.5 ft) between the appliance's inlet and the bottom of the tank. There will be sufficient pressure for the hot water supply from the hot water cylinder if the height between the appliance's inlet and the bottom of the cold water storage cistern (not between the appliance and hot water cylinder) is at least 2.74m (9ft). Set the hoses correctly by loosening the ring nuts. After positioning the inlet hoses, be sure to tighten the ring nuts again to prevent leaks.



[You're reading an excerpt. Click here to read official TRICITY CAW 1210 user guide](http://yourpdfguides.com/dref/947103)  
<http://yourpdfguides.com/dref/947103>

### Levelling Level the washing machine by raising or lowering the feet.

The feet may be tight to adjust as they incorporate a self locking nut, but the machine MUST be level. Any necessary adjustment can be made with a spanner. Accurate levelling prevents vibration, noise and displacement of the machine during operation. Some vibration is inevitable, especially if mounted on a wooden floor. Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder. If possible, always place the machine on a solid floor. Special conditions If the floor is carpeted with a deep-pile carpet or covered with crumbly or soft material, insert a rigid support base under the feet to prevent noise, vibration or displacement. The base should protrude a few centimetres beyond the edges of the machine. Warning The machine should NOT be placed on deep pile carpeting.

Note Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown. All plumbing and electrical work required to install this appliance must be carried out by competent persons or qualified plumbers or electricians. P0021 Water drainage If you intend the drain hose from the machine to empty into a sink, make sure that the sink is empty and that the plug hole is not blocked. If the machine is permanently plumbed in, hook the end of the hose into a standpipe installed for the purpose. The standpipe must have an internal diameter of at least 40 mm (1 1/2") in order that there is an air gap between the drain hose and the standpipe.

Make sure, that it is designed in such a way, that the end of the drain hose cannot be covered with water. 3 pin Joining piece 40 mm inside dia min 600 mm min 900 mm max P0376 Important Before connecting up the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes. Whether discharging into a sink or a standpipe check that the end of the drain hose is neither too high nor too low. The top of the curve in the hose's end should be no more than 90 cm (35.4"), and no less than 60cm (23.6") above floor level. 5 . are difficult to remove and should be treated before washing with specific products, which can be found in most household shops. In some cases it may help to soak the stain before washing with a special pre-soak product or biological detergent. Only wool marked «Pure New Wool - washable, preshrunk» can be washed in the machine using the wool programme; other types of wool should be washed by hand or dry cleaned. If you have used the machine to wash, rinse or spin only non-colwash, pour the amount of detergent required into the «prewash» compartment. T0006 7 At the end of the programme The machine stops automatically. @@Switch the machine off by depressing the ON/OFF button again. The mains-on light goes out. @@Do not exceed the MAX level and then close the drawer gently.

C0020 4 Select the required options Depress Half load and/or Quick wash, if desired. 13 WASHING 2 KG OF SYNTHETIC FABRICS AT 40°C Suppose you have 2 kg of synthetic fabric laundry to wash. They are rather delicate fabrics and should not be washed at a high temperature. 4 Select the required wash programme Turn the programme selector dial clockwise to the required programme. 7 1 Load the laundry Open the door by pulling the catch outward. @@@@To drain the water select programme 13 or 14. @@Switch the machine off by depressing the ON/OFF button again. The mains-on light goes out. @@@@n Turn off the water taps. n Select a wash programme and run for a few seconds.

n Unscrew the inlet hoses. @@Run the draining programme for a few seconds. @@@@This will help to prevent the formation of lime deposits. After each wash Leave the door open for a while. This helps to prevent mould and stagnant smells forming inside the appliance. Keeping the door open after a wash will also help to preserve the door seal. External cleaning Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly. Cleaning the dispenser drawer From time to time the washing powder and additive dispenser drawer should be cleaned.

Remove the drawer by pressing the catch downwards and by pulling it out. Flush it out under a tap, to remove any traces of accumulated powder. C0019 C0018 Cleaning the drawer recess Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower part of the recess. Replace the drawer and run the rinse programme for a few minutes without P0038 any clothes in the drum. 15 Cleaning the filter The water drain filter A clean filter is important for the correct functioning of the machine, and should therefore be cleaned after every wash. Open the filter door and place a container underneath to catch any spillage. If the filter is blocked and the machine is unable to drain you will need to drain the water manually from the machine at this stage. To do this, unhook P0011 the drain hose from the standpipe or sink and hold the end of the hose over a bowl on the floor. The water should drain by gravity into the bowl. When the bowl is full, hook the hose back up and empty the bowl. Repeat the procedure until water stops flowing out. Unscrew and remove the filter.

The water inlet filters If your water is very hard or contains traces of lime deposit, the water inlet filters may become clogged. It is therefore a good idea to clean them from time to time. Turn off the water taps. Unscrew the water inlet hoses. Remove and clean the filters using a hard bristle brush. Replace the filters and tighten up the inlet hoses. P0041 P0132 P0133 Clean carefully under a fast running tap. P0040 Warning When the appliance is in use and depending on the programme selected there can be hot water in the filter. Never remove the filter during a wash cycle, always wait until the appliance has finished the cycle, and is empty. @@@@When you call the Service Force Centre please make sure you give the model and serial number of the appliance.

Mod. ....

.....

Ser. The water taps are not turned on The water supply has been disconnected The inlet hoses are kinked The water pressure is too low The water inlet filters are clogged The door is not closed properly The machine empties as it fills n n n The end of the drain hose is too low The end of the drain hose is submerged in water Drain pipe has no vent-hole This information can be found on the rating plate (see picture) or on the guarantee card. The machine does not drain or spin n n n n n You have selected a gentle wash cycle The drain filter is clogged The drain hose is kinked The drainage system pipes are blocked The drain hose extension is incorrect The wash load is unbalanced: redistribute the clothes inside the drum to allow the machine to spin Mod.



[You're reading an excerpt. Click here to read official TRICITY CAW 1210 user guide](http://yourpdfguides.com/dref/947103)  
<http://yourpdfguides.com/dref/947103>

.....

.... Prod. No. ....

.....

.. P0042 Ser. No. .

..... Customer Care For general enquiries concerning your Tricity Bendix appliance or for further information on Tricity Bendix products, please contact our Customer Care Department by letter or telephone as follows: Customer Care Department Tricity Bendix 55-77 High Street Slough Berkshire SL1 1DZ Tel 08705 950950 The machine leaks or overflows n n n n n Too much detergent Unsuitable detergent The inlet hose(s) is (are) loose The detergent dispenser drawer or recess is clogged The end of the drain hose is not securely positioned The drainage system pipes are blocked The machine vibrates or is noisy n n n n The internal packing has not been removed The machine is not level The machine is in contact with the wall or furniture The washing load is badly distributed The machine is overloaded The door does not open n n The safety device has locked it Water in the tub: the door cannot be opened if water is present in the tub 17 GUARANTEE CONDITIONS Standard guarantee conditions We, Tricity Bendix, undertake that if, within 12 months of the date of the purchase, this TRICITY BENDIX appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option, repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that: n The appliance has been correctly installed and used only on the electricity supply stated on the rating plate. n The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.

n The appliance has not been serviced, maintained, repaired, taken apart or tampered with, by any person not authorised by us. All service work under this guarantee must be undertaken by a Tricity Bendix Service Force Centre. Any appliance or defective part replaced shall become the Company's property. @@Home visits are made between 8.30am and 5.30pm Monday to Friday. @@@@ Products of Tricity Bendix manufacture which are NOT marketed by Tricity Bendix. European guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications: n The guarantee starts from the date you first purchased your product. n The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products. n The guarantee relates to you and cannot be transferred to another user.

n Your new home is within the European Community (EC) or European Free Trade Area. n The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household. n The product is installed taking into account regulations in your new country. Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances. France Senlis +33 (0)344 62 28 28 Germany Nurnberg +49 (0)911 323 2600 Italy Pordenone +39 (0)1678 47053 Sweden Stockholm +46 (0)20 78 77 50 UK Newbury +44 (0)1635 525 542 18 19 20 21 Tricity Bendix, 55-77High Street, Slough, Berkshire SL1 1DZ Consumer care telephone number 08705 950950 .



[You're reading an excerpt. Click here to read official TRICITY CAW 1210 user guide](http://yourpdfguides.com/dref/947103)  
<http://yourpdfguides.com/dref/947103>